

Farm King

OPERATOR AND PARTS MANUAL

Backsaver Auger

Models 1684, 16104, 16124



TABLE OF CONTENTS

Manufacturer's Statement: For technical reasons, Buhler Industries Inc. reserves the right to modify machinery design and specifications provided herein without any preliminary notice. Information provided herein is of descriptive nature. Performance quality may depend on soil fertility, applied agricultural techniques, weather conditions and other factors.

INTRODUCTION	7
SAFETY	13
ASSEMBLY	27
OPERATION	133
MAINTENANCE	159
PARTS IDENTIFICATION	177
SPECIFICATIONS	271
WARRANTY	285
ALPHABETICAL INDEX	289

Farm King



WARRANTY REGISTRATION FORM

This form must be filled out by the dealer and signed by both the dealer and the customer at the time of delivery.

Customer Name:

Dealer Name:

Customer Address:

Dealer Address:

City:

Prov / State:

City:

Prov / State:

Postal / Zip Code:

Phone:

Postal / Zip Code:

Phone:

Auger Model:

Serial Number:

Delivery Date:

I have thoroughly instructed the buyer on the above described equipment which review included the Operator Manual content, equipment care, adjustments, safe operation and applicable warranty policy.

Dealer Inspection Report

- ☐ Bearings Turn Freely
- ☐ Belt Tension Checked
- ☐ Check Oil Level In Auger Drive Gear Box
- ☐ Pulleys Aligned
- ☐ Fasteners Tight
- ☐ Lubricate Machine
- ☐ Check Tire Pressure
- ☐ Unloading Auger Folds / Extends Freely

Safety

- ☐ All Lights And Reflectors Installed
- ☐ All Lights And Reflectors Cleaned And Working
- ☐ Safety Chain On Hitch
- ☐ All Decals Installed
- ☐ Guards And Shields Installed And Secure
- ☐ Review Operating And Safety Instructions
- ☐ Check For Hydraulic Leaks

Date:

Dealer Rep. Signature:

The above equipment and Operator And Parts Manual have been received by me and I have been thoroughly instructed as to care, adjustments, safe operation and applicable warranty policy.

Date:

Customer / Owner's Signature:

Remove this Warranty Registration Form from the Operator And Parts Manual. Make two copies of the form. Send original Warranty Registration Form to Farm King. Give one copy to the customer and the dealer will keep one copy.

Farm King



INTRODUCTION

This Operator and Parts Manual was written to give the owner / operator instructions on the safe operation, maintenance and part identification of the Farm King equipment. READ AND UNDERSTAND THIS OPERATOR AND PARTS MANUAL BEFORE OPERATING YOUR FARM KING EQUIPMENT. If you have any questions, see your Farm King dealer. This manual may illustrate options and accessories not installed on your Farm King equipment.

OWNER’S INFORMATION 9

 Serial Number Location 9

 Manual Storage 9

EQUIPMENT IDENTIFICATION10

 1684, 16104 Component Location10

 16124 Component Location11

Farm King



OWNER'S INFORMATION

Thank you for your decision to purchase a Farm King Backsaver Auger. To ensure maximum performance of your equipment, it is mandatory that you thoroughly study the Operator and Parts Manual and follow the recommendations. Proper operation and maintenance are essential to maximize equipment life and prevent personal injury.


Operate and maintain this equipment in a safe manner and in accordance with all applicable local, state, and federal codes, regulations and / or laws. Follow all on-product labeling and instructions.

Make sure that all personnel have read this Operator and Parts Manual and thoroughly understand safe and correct operating, installation and maintenance procedures.

Farm King is continually working to improve its products. Farm King reserves the right to make any improvements or changes as deemed practical and possible without incurring any responsibility or obligation to make any changes or additions to equipment sold previously.

Although great care has been taken to ensure the accuracy of this publication, Farm King, makes no warranty or guarantee of any kind, written or expressed, implied or otherwise with regard to the information contained within this manual. Farm King assumes no responsibility for any errors that may appear in this manual and shall not be liable under any circumstances for incidental, consequential or punitive damages in connection with, or arising from the use of this manual.

Keep this manual available for frequent reference. All new operators or owners must review the manual before using the equipment and annually thereafter. Contact your Farm King Dealer if you need assistance, information, or additional copies of the manual. Visit our website at www.farm-king.com for a complete list of dealers in your area.

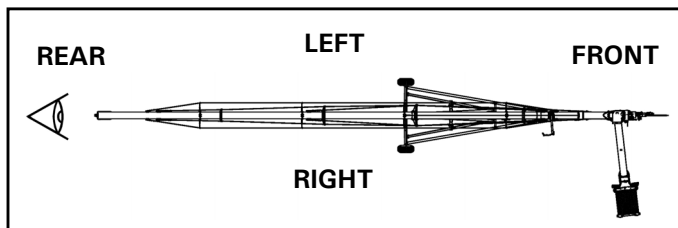


The directions left, right, front and rear, as mentioned throughout this manual, are as viewed from the rear of the equipment.

Serial Number Location

Please enter the model and serial number in the space provided for easy reference.

Figure 1

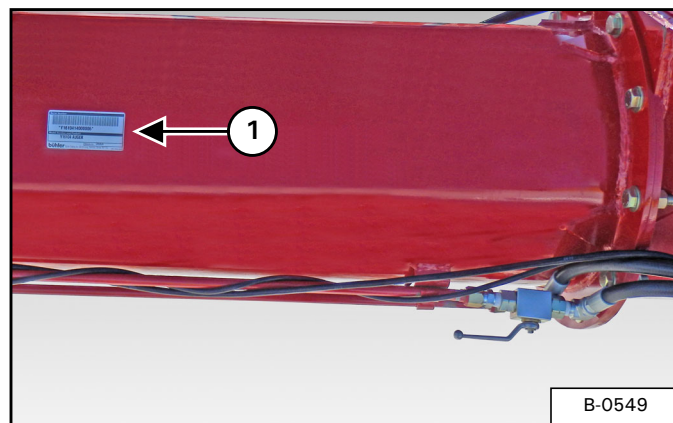

Model Number: _____

Serial Number: _____


The serial number plate (Item 1) [Figure 1] is located on the front right side of tube #1.

NOTE: Tube #1 is connected to the input box.

Always use your serial number when requesting information or when ordering parts.

Manual Storage


Figure 2

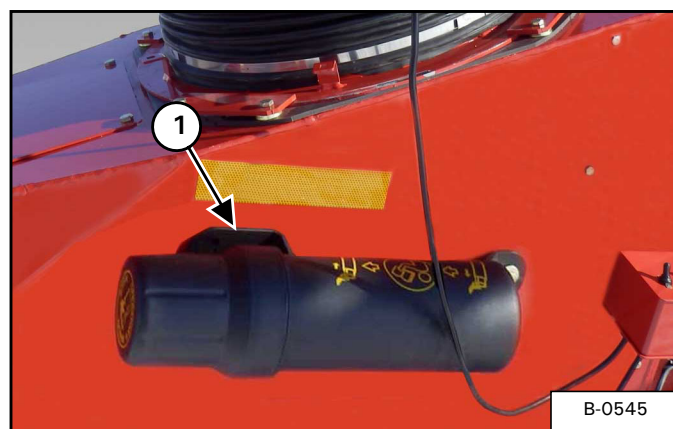


The operator and parts manual and other documents can be stored in the canister (Item 1) [Figure 2] located on the right side of the input box.

EQUIPMENT IDENTIFICATION

1684, 16104 Component Location

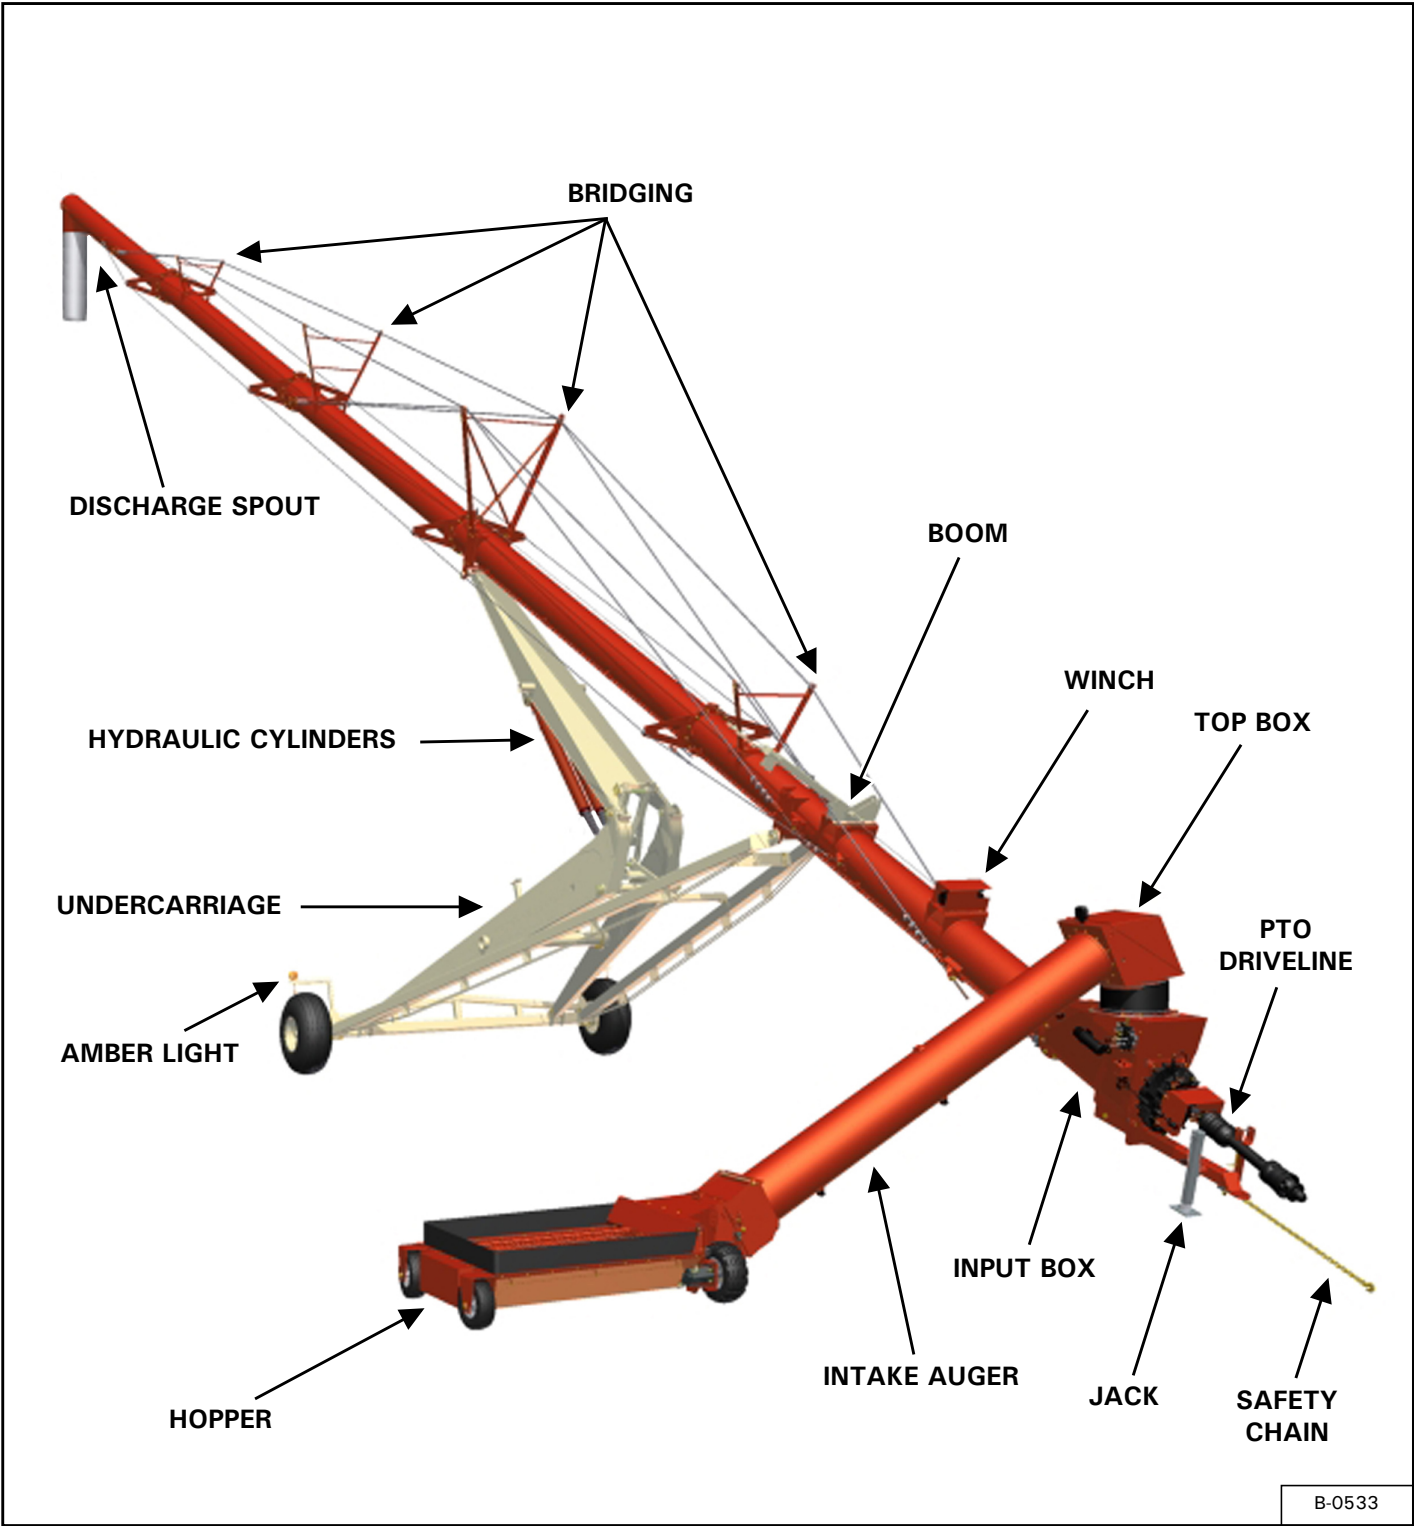

16124 Component Location

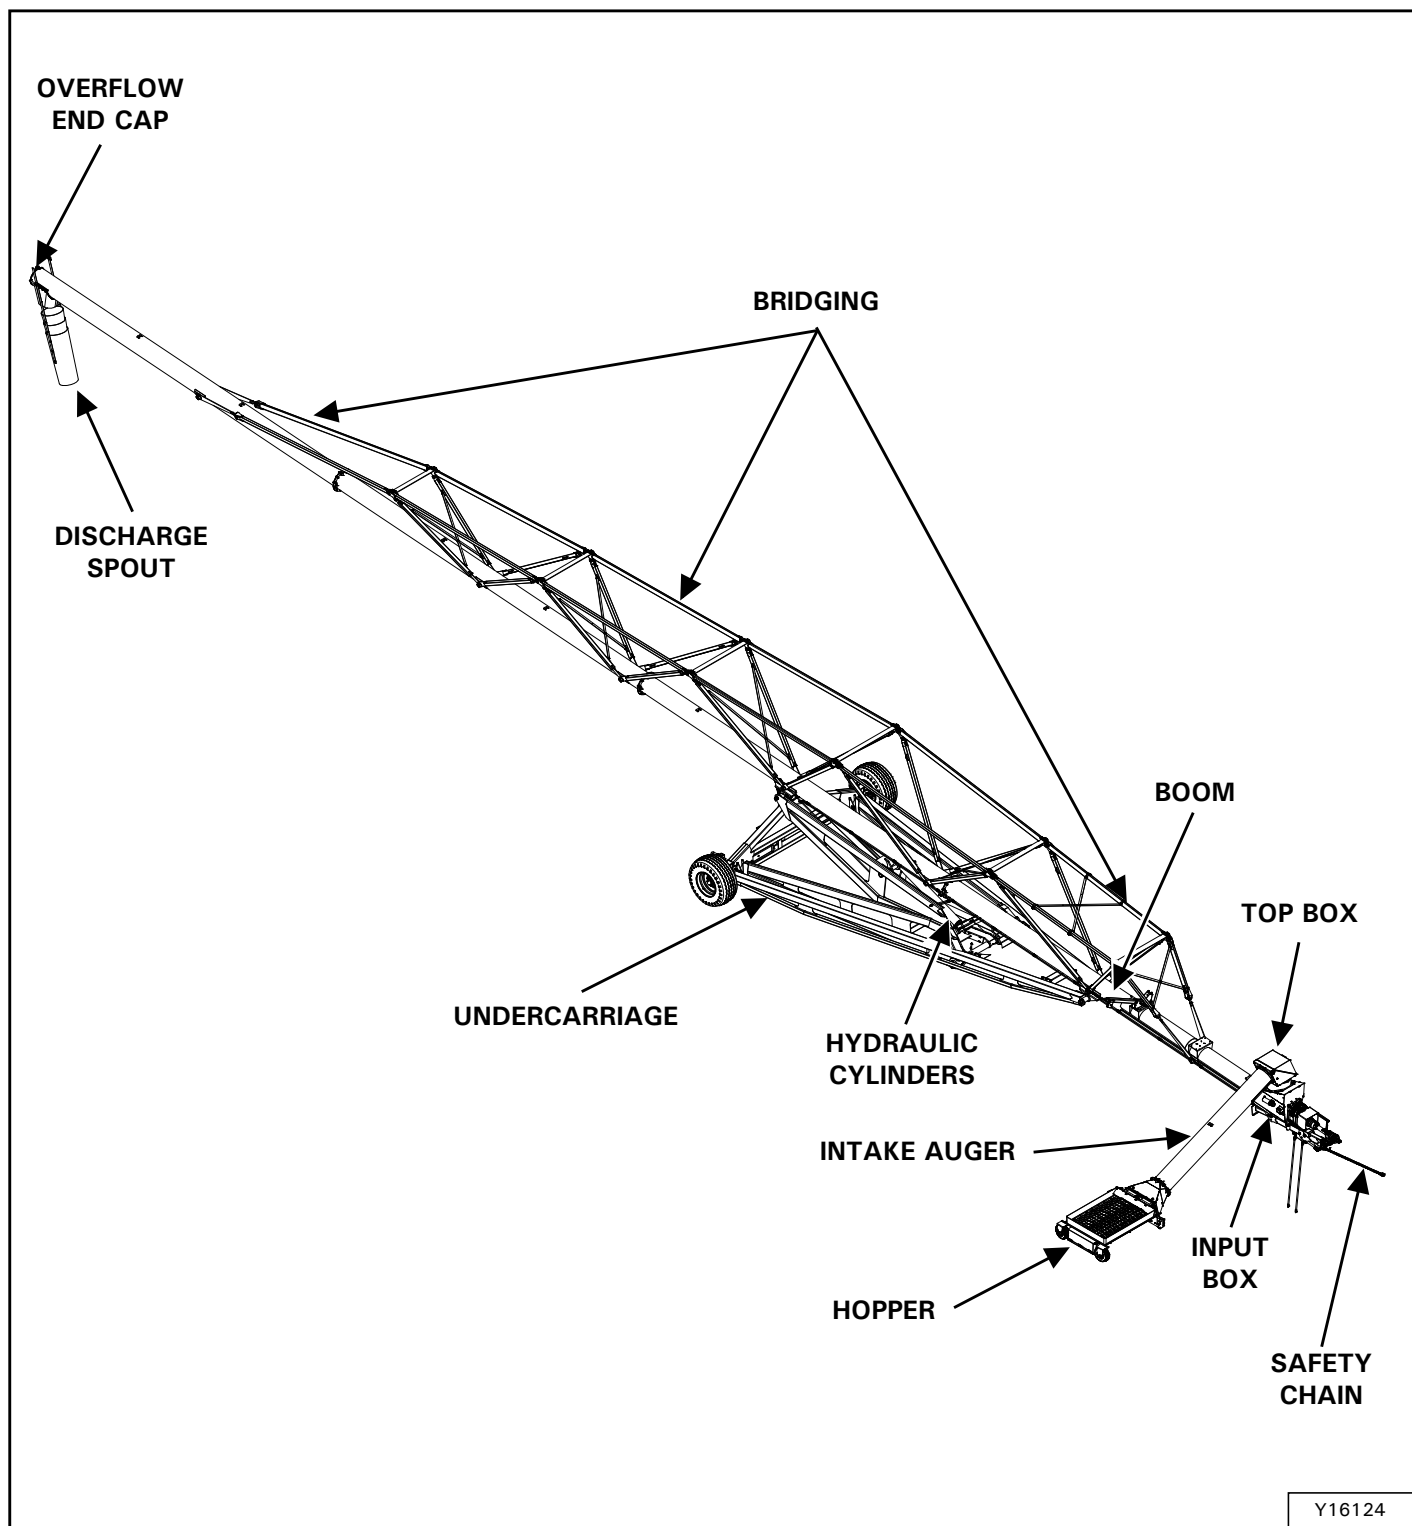

Farm King



SAFETY

SAFETY INSTRUCTIONS	15
Safe Operation Is The Operator's Responsibility	15
Safe Operation Needs A Qualified Operator	15
Use Safety Rules	16
Transport Safety	16
Operation Safety	17
Service And Maintenance Safety	17
Safety Rules For Power Take-Off (PTO) Driven Equipment	17
Machine Requirements And Capabilities	18
FIRE PREVENTION	19
Maintenance	19
Operation	19
Starting	19
Electrical	19
Hydraulic System	19
Fueling	19
Spark Arrester Exhaust System	19
Welding And Grinding	20
Fire Extinguishers	20
OPERATING SAFETY ZONE	21
Safety Zone Identification	21
SAFETY SIGNS (DECALS)	22
EQUIPMENT DECALS AND SIGNS	25
SAFETY SIGN-OFF FORM	26

Farm King



SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

	Safety Alert Symbol
This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.	


CAUTION

The signal word **CAUTION** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.


DANGER

The signal word **DANGER** on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.


WARNING

The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

Safe Operation Needs A Qualified Operator


WARNING

Operators must have instructions before operating the machine. Untrained operators can cause injury or death.

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the equipment.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Farm King include the Warranty Registration, Dealer Inspection Report, Operator and Parts Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by the machine owner prior to operation.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine safely under all conditions of the work area. Always fasten seat belt before operating.

Know the Work Conditions

- Clear working area of all bystanders, especially small children and all obstacles that might be hooked or snagged, causing injury or damage.
- Know the location of any overhead or underground power lines. Call local utilities and have all underground power lines marked prior to operation.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service.

SAFETY INSTRUCTIONS (CONT'D)**Use Safety Rules**

- Read and follow instructions in this manual and the tractor's Operators Manual before operating.
- Under no circumstances should young children be allowed to work with this equipment.
- This equipment is dangerous to children and persons unfamiliar with its operation.
- If the elderly are assisting with work, their physical limitations need to be recognized and accommodated.
- Stay clear of overhead power lines. Electrocutation can occur without direct contact.
- Check for overhead and / or underground lines before operating equipment (if applicable).
- In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.
- Check that the equipment is securely fastened to the tractor / towing vehicle.
- Make sure all the machine controls are in the NEUTRAL position before starting the machine.
- Operate the equipment according to the Operator and Parts Manual.
- When learning to operate the equipment, do it at a slow rate in an area clear of bystanders, especially small children.
- DO NOT permit personnel to be in the work area when operating the equipment.
- The equipment must be used ONLY on approved tractors / transport vehicles.
- DO NOT modify the equipment in any way. Unauthorized modification may impair the function and / or safety and could affect the life of the equipment.
- DO NOT make any adjustments or repairs on the equipment while the machine is running.
- Keep shields and guards in place. Replace if damaged.

Transport Safety

- Review Transport Safety instructions in tractor manual before moving.
- The equipment should never be towed without the safety chain securely attached to the auger and the towing vehicle.
- Empty the auger before moving to prevent unspooling.
- Always transport the auger in the down position, with the weight of the auger on the undercarriage, not the hydraulic cylinder.
- Raise the intake auger and hopper to the transport position.
- Inflate transport tires to recommended pressure.
- Remove the implement driveline from the tractor when moving the auger.
- Always install transport locks, pins or brackets before transporting.
- Do not tow equipment at speeds over 20 mph (32 kph). Reduce speed on rough roads and surfaces.
- Comply with state and local laws governing highway safety and movement of machinery on public roads.
- Take extreme caution in maneuvering on or around tight corners so as not to catch the end of the auger on trees, buildings, power lines, etc.
- The use of flashing amber lights is acceptable in most localities. However, some localities prohibit their use. Local laws should be checked for all highway lighting and marking requirements.
- When moving the auger on the road, always use a red flag, or if moving at night, use accessory lights to warn operators of other vehicles.
- Always yield to oncoming traffic in all situations and move to the side of the road so any following traffic may pass.
- Always enter curves or drive up or down hills at a low speed and at a gradual steering angle.
- Never allow riders on either tractor or equipment.
- Keep tractor / towing vehicle in a lower gear at all times when traveling down steep grades.
- Maintain proper brake settings at all times (if equipped).

SAFETY INSTRUCTIONS (CONT'D)**Operation Safety**

- Ensure bystanders are clear of the area before operating.
- The auger must be attached to the drawbar of the tractor at all times during operation.
- Never stand under the auger while raising or lowering.
- Be sure all shields are in place and in good condition before operating.
- The auger must be on a level surface and wheels free to move when raising and lowering.
- Do not operate the intake auger when it is folded or in the transport position.
- Stay clear of PTO driveline when engaging and during operation.
- When filling tall bins, tanks, or granaries, it is advised to anchor the auger to the bin or building to prevent it from being tipped over by sudden movement or wind.
- Do not allow anyone other than the operator close to the auger when in operation.

Service And Maintenance Safety

- Stop engine, set brake, remove ignition key, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
- Wear appropriate protective gear.
- Support the equipment with blocks or safety stands before working underneath.
- Use tools, jacks, and lifting equipment of sufficient capacity.
- Relieve hydraulic pressure on hydraulic system before repairing or adjusting.
- Check hydraulic system for leaks. Use cardboard to look for leaks and use hand and eye protection.
- Use heavy leather gloves to handle sharp objects.
- Replace and secure all shields removed during servicing before operating equipment.

Safety Rules For Power Take-Off (PTO) Driven Equipment

- Keep PTO shields and all guards in place. Replace damaged or missing shields and guards before operating.
- Follow warnings and instructions on machine signs (decals). Replace damaged or missing decals.
- Do not wear loose or bulky clothing around the PTO or other moving parts.
- Keep bystanders away from PTO driven equipment, and never allow children near machines.
- Read and understand the manuals for the PTO driven equipment and be aware of safe operating procedures and hazards that may not be readily apparent.
- Always walk around equipment to avoid coming near a turning PTO driveline. Stepping over, leaning across or crawling under a turning PTO driveline can cause entanglement.
- Position the machine and equipment hitch correctly to prevent driveline stress and separation.
- Use caution when turning. Turning too sharp can cause driveline damage.
- Use caution when raising PTO driven attachment. Excessive driveline angle can cause driveline damage. Use stops if needed.

SAFETY INSTRUCTIONS (CONT'D)**Machine Requirements And Capabilities**

- Fasten seat belt securely. If equipped with a foldable Roll-Over Protective Structure (ROPS), only fasten seat belt when ROPS is up and locked. DO NOT wear seat belt if ROPS is down.
- Machine's three-point hitch must be equipped with sway bars or chains.
- Stop the machine and engage the parking brake. Install blocks in front of and behind the rear tires of the machine. Install blocks underneath and support the equipment securely before working under raised equipment.
- Keep bystanders clear of moving parts and the work area. Keep children away.
- Use increased caution on slopes and near banks and ditches to prevent overturn.
- Make certain that the Slow Moving Vehicle (SMV) emblem is installed so that it is visible and legible. When transporting the equipment, use the flashing warning lights (if equipped) and follow all local regulations.
- Operate this equipment with a machine equipped with an approved Roll-Over Protective Structure (ROPS). Always wear seat belt when the ROPS is up. Serious injury or death could result from falling off the machine.
- Before leaving the operator's position:
 1. Always park on a flat level surface.
 2. Place all controls in neutral.
 3. Engage the parking brake.
 4. Stop engine.
 5. Wait for all moving parts to stop.
- Carry passengers only in designated seating areas. Never allow riders on the machine or equipment. Falling off can result in serious injury or death.
- Start the equipment only when properly seated in the operator's seat. Starting a machine in gear can result in serious injury or death.
- Operate the machine and equipment from the operator's position only.
- The parking brake must be engaged before leaving the operator's seat. Rollaway can occur because the transmission may not prevent machine movement.

FIRE PREVENTION



Maintenance

The machine and some equipment have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolant mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

The Farm King machine must be in good operating condition before use.

Check all of the items listed on the service schedule under the 8 hour column. (See "SERVICE SCHEDULE" on page 162.)

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the tractor's operator's manual for connecting the battery and for jump starting.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas / acid can explode and cause serious injury. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the machine's Operator's Manual for cleaning the spark arrester muffler (if equipped).

FIRE PREVENTION (CONT'D)**Welding And Grinding**

Always clean the machine and equipment, disconnect the battery, and disconnect the wiring from the machine controls before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

OPERATING SAFETY ZONE
Safety Zone Identification

WARNING
AVOID INJURY OR DEATH


- Do not allow small children, bystanders or unauthorized persons in the work area during operation.
- Never stand or work under the auger and undercarriage when in the raised position or during operation.
- Always keep PTO shields and all guards in place during operation.
- Keep away from moving parts.
- Keep everyone clear when operating the hopper mover.


DANGER
ELECTROCUTION HAZARD

Keep away from power lines, electrocution can occur without direct contact.


CAUTION


- Owners and operators should allow only authorized personnel and grain transport vehicles near the auger or inside the work area.
- Allow adequate space for grain transport vehicles to operate safely.
- Make certain everyone is clear of the equipment before applying power or moving the machine.
- While in operation, always support the discharge end or provide adequate anchorage of the intake end to prevent sudden tipping.

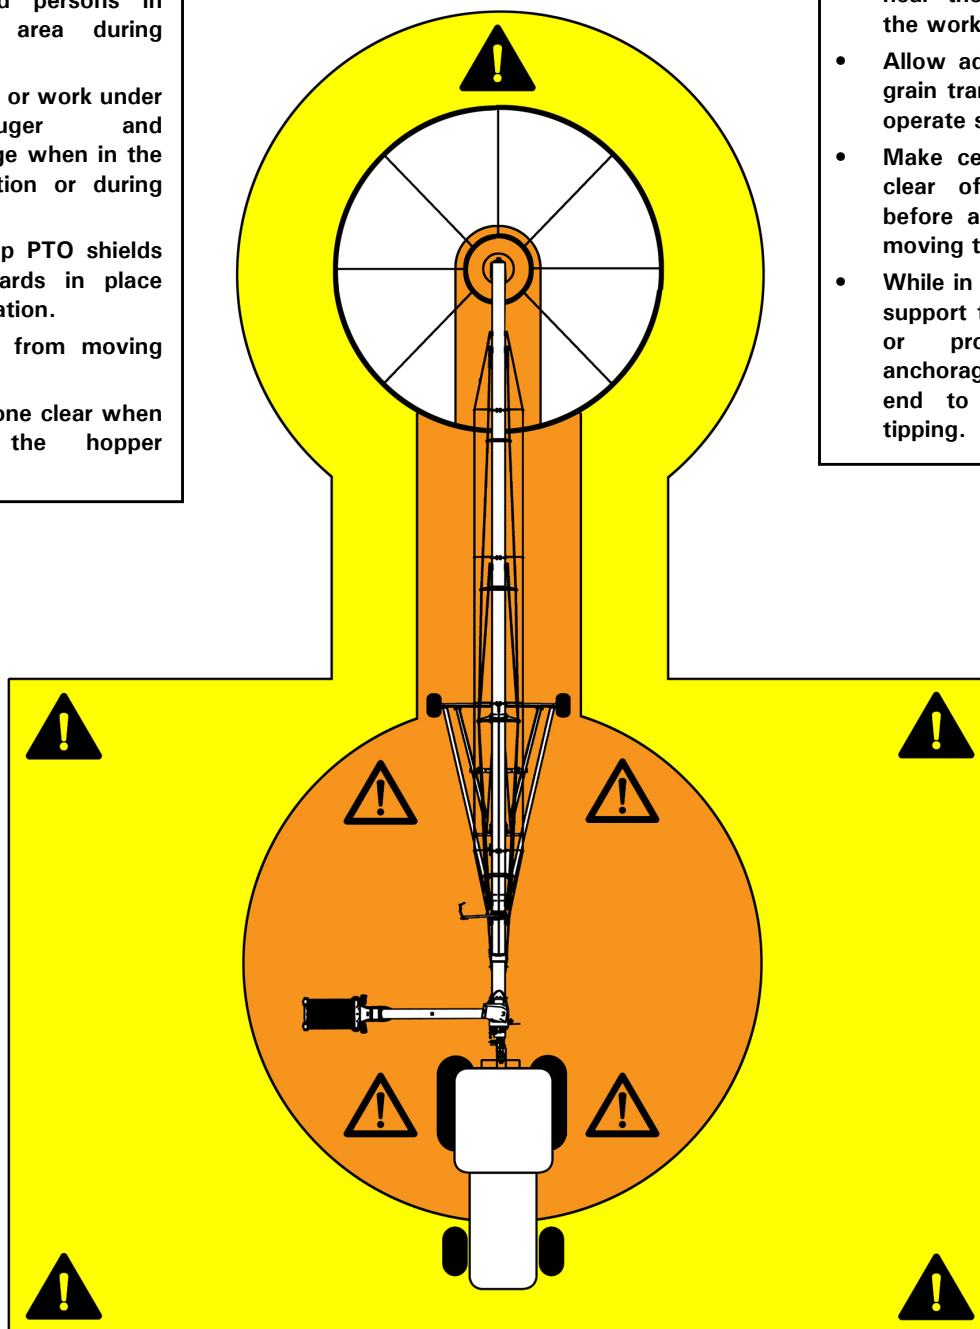

SAFETY SIGNS (DECALS)

Follow the instructions on all the Signs (Decals) that are on the equipment. Replace any damaged signs (decals) and be sure they are in the correct locations. Equipment signs are available from your Farm King equipment dealer.

Input Box

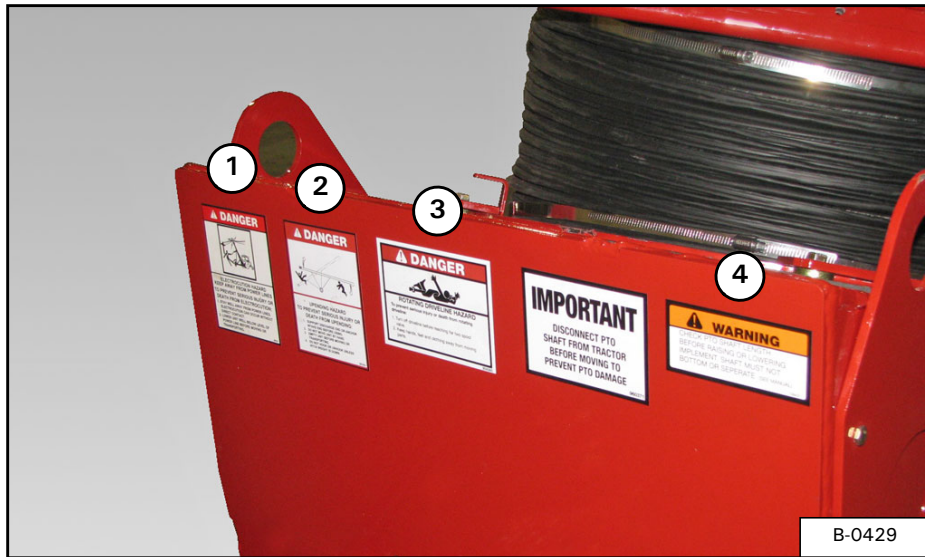

1



p/n 909745

2



p/n 960569

3



p/n 904585

4



p/n 108431

SAFETY SIGNS (DECALS) (CONT'D)

Input Box Elbow



1



p/n 963206

Intake Auger



1



p/n 961016

SAFETY SIGNS (DECALS) (CONT'D)

Intake Auger



2



p/n 917765

1

**CAUTION**

1. Do not operate the unit before reading and understanding the Operator's Manual.
2. Keep all safety devices in place.
3. Keep off of the equipment at all times.
4. Keep hands, feet, and clothing away from moving parts while in operation.
5. Make certain everyone is clear of the equipment before applying power or moving the machine.
6. Do not adjust, service, lubricate, clean, unclog or move the mechanism until all power is shut off.
7. While in operation, always support the discharge end or provide adequate anchorage of the intake end to prevent sudden tipping.
8. Disconnect power of electrical driven units before resetting motor over loads.
9. To avoid tipping, make sure unit is empty before attempting to move.
10. Keep wheels of undercarriage level and on firm ground.
11. Lower unit to the recommended transport position before transporting.
12. Do not operate electric motor equipped units until they are properly grounded.
13. Keep children, visitors, and all untrained personnel away from machine while in operation.
14. Lower unit when moving close to overhead power lines.

961017

p/n 961017

EQUIPMENT DECALS AND SIGNS

NOTE: All safety related decals are shown in the Safety Signs Section. (See "SAFETY SIGNS (DECALS)" on page 22.)

Check and replace any worn, torn, hard to read or missing decals on your equipment.

Part Number 912849

1684

Part Number 910579

16104

Part Number 930644

16124

 
Part Number 910582 (1684 / 16104)

Part Number 930722 & 910601 (16124)

Farm King

Part Number 52773-000 (Amber)

Part Number 967055 (Amber - 2" x 9")




Part Number 52774-000 (Red)


Part Number 967053 (Red - 2" x 9")



Part Number 966699

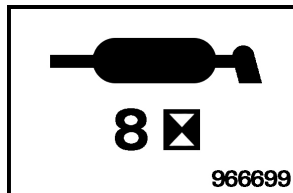

Part Number 960372

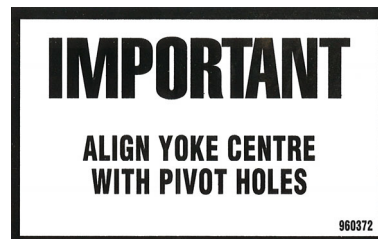

Part Number 961015



Part Number 967388



Part Number 960371



WARNING

The following sign-off sheet is provided for your record and to show that all personnel who will be working with the equipment have read and understand the information in this Operator and Parts Manual and have been instructed in the operation of the equipment.

[illegible]

ASSEMBLY

GENERAL ASSEMBLY INFORMATION	29
Component Unloading And Identification	29
1684, 16104 & 16124 BASE GROUP	30
1684 Undercarriage Assembly	30
16104 Undercarriage Assembly	40
16124 Undercarriage Assembly	52
1684 & 16104 Tube Assembly	63
16124 Tube Assembly	77
16124 Bridging Assembly	82
16124 Bridging Identification	92
16124 Cross Brace Plate / Truss Support Bracket Identification	94
1684 Installing Tube On Undercarriage	96
16104 Installing Tube On Undercarriage	100
16124 Installing Tube On Undercarriage	104
1684, 16104 & 16124 Installing The Intake Auger	107
1684 & 16104 Hopper Assembly And Installation	108
1684 & 16104 Installing The Winch	112
16124 Hydraulic Hitch Installation	114
16124 Hydraulic Hitch Cylinder Installation	114
16124 Auger Stand Installation	115
1684, 16104 & 16124 Hydraulic Hose Holder Installation	115
1684 & 16104 Hitch Adjustment	115
1684 & 16104 Safety Chain Installation	116
16124 Safety Chain Installation	116
1684 & 16104 Jack Installation	116
1684, 16104 & 16124 PTO Driveline Installation	116
1684 & 16104 PTO Holder Installation	117
16124 PTO Holder Installation	117
HYDRAULIC ASSEMBLY	118
1684 Hydraulic Cylinder Hose Assembly	118
16104 & 16124 Hydraulic Cylinder Hose Assembly	120
1684, 16104 & 16124 Hydraulic Control Valve Assembly And Installation	125
1684, 16104 & 16124 Hydraulic Winch Hose Installation And Routing	126
1684, 16104 & 16124 Hydraulic Motor Hose Installation And Routing	127
1684, 6104 & 16124 Control Valve Return And Supply Hose Installation	129
1684, 16104 & 16124 ELECTRICAL ASSEMBLY	129
Intake Auger Work Light Installation	129
Amber Light Installation And Harness Routing	129
Light Switch Box Installation	131

Farm King



GENERAL ASSEMBLY INFORMATION

Component Unloading And Identification



ELECTROCUTION HAZARD

To prevent serious injury or death from electrocution:

- Be aware of overhead power lines.
- Keep away from power lines when unloading and assembling the auger.
- Electrocution can occur without direct contact.



- DO NOT permit bystanders to be in the work area when unloading and assembling the auger components.
- DO NOT work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.

Unload the crate(s) and components in flat level area of adequate size to assemble the 1684 and 16104 Backsaver Auger.



Unload crate(s) and auger components carefully, not to cause damage to any of the components.

NOTE: If any components are damaged, missing or replacement parts are required, contact your Farm King Dealer.

Assemble the 1684, 16104 & 16124 Backsaver Augers in the following order:

1. Undercarriage (See "1684 Undercarriage Assembly" on page 30.) or (See "16104 Undercarriage Assembly" on page 40.)

Using the packing list, locate and place all undercarriage components and hardware in one area. Count the individual components and verify that you have received the correct number of components to fully assemble the undercarriage.

2. Tube (See "1684 & 16104 Tube Assembly" on page 63.) or (See "16124 Tube Assembly" on page 77.)

Using the packing list, locate and place all tube components and hardware in one area. Count the individual components and verify that you have received the correct number of components to fully assemble the tube.


3. Intake Auger (See "1684, 16104 & 16124 Installing The Intake Auger" on page 107.)

Using the packing list, locate and place all intake auger components and hardware in one area. Count the individual components and verify that you have received the correct number of components to fully assemble the intake auger.

4. Hydraulic (See "HYDRAULIC ASSEMBLY" on page 118.)

Using the packing list, locate and place all hydraulic components in one area. Count the individual components and verify that you have received the correct number of components to fully assemble the hydraulics.

Figure 3

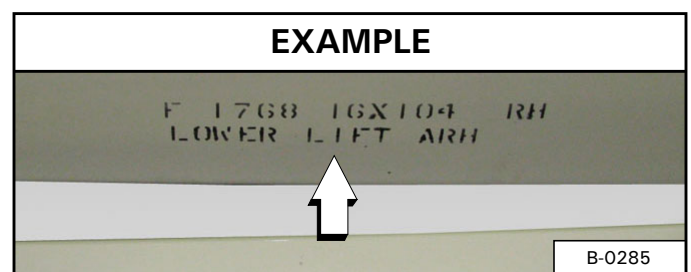

Larger components are marked for identification [Figure 3].

1684, 16104 & 16124 BASE GROUP

1684 Undercarriage Assembly

Assemble the undercarriage on flat level surface.

⚠ WARNING



- **DO NOT** permit bystanders to be in the work area when unloading and assembling the auger components.
- **DO NOT** work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


⚠ WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 4

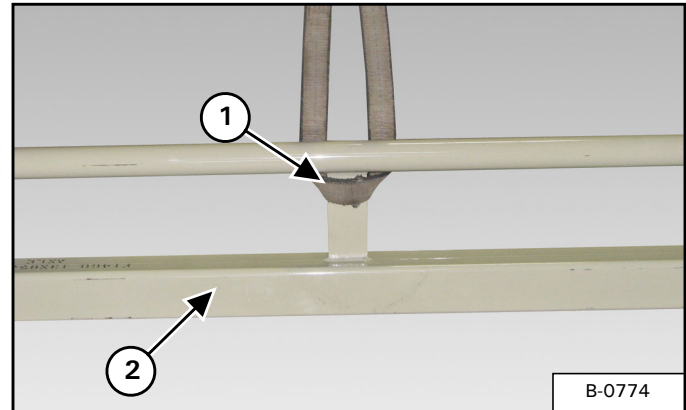


Install a strap (Item 1) around the center of the axle (Item 2) [Figure 4].

Connect the strap to an approved lifting device.

Raise and move the axle to the assembly area.

Lower the axle to the ground and remove strap.

Figure 5

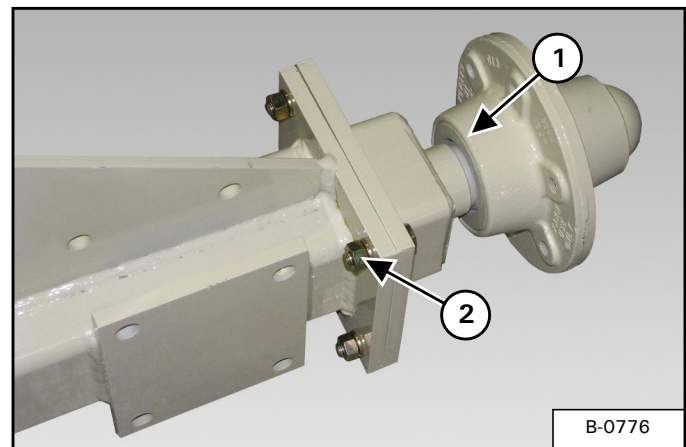

Align the hub (Item 1) [Figure 5] with the axle.


Stub Axle Mounting Bolt Size

1/2" x 1-3/4"

Install and tighten the four bolts (Item 2) [Figure 5] and lock nuts.

Repeat procedure [Figure 5] and install the opposite hub onto the axle.

Figure 6

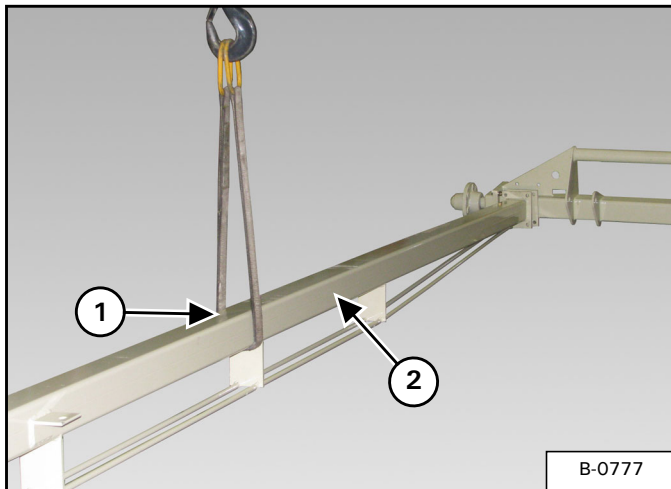


Install a strap (Item 1) around the center of the right undercarriage arm (Item 2) [Figure 6].

Connect the strap to an approved lifting device.

Raise and move the right undercarriage arm towards the axle.

Figure 7

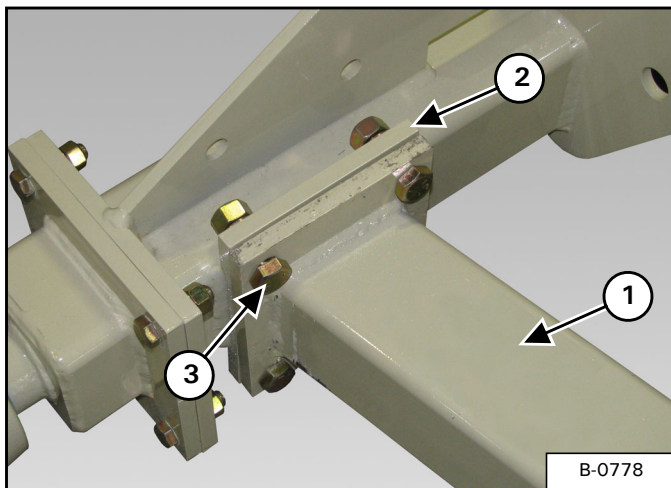


Align the right undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle [Figure 7].

Undercarriage Arm Mounting Bolt Size

5/8" x 2"

Install four bolts (Item 3) [Figure 7] and lock nuts. Do not tighten bolts and nuts at this time.

Figure 8

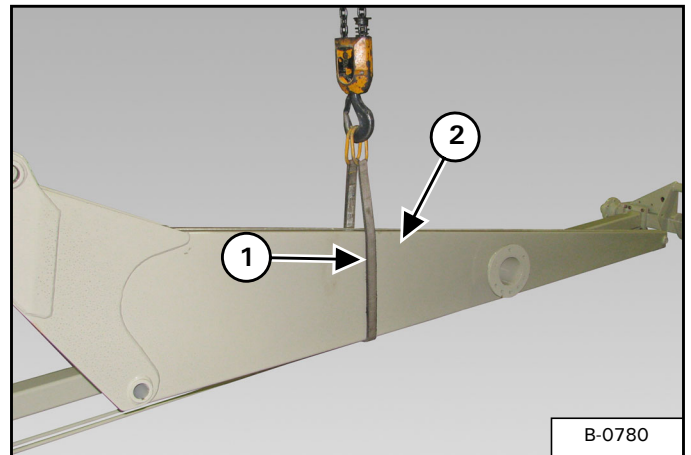


Install a strap (Item 1) around the RH lower lift arm (Item 2) [Figure 8]. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the RH lower lift arm to the assembly area.

Figure 9

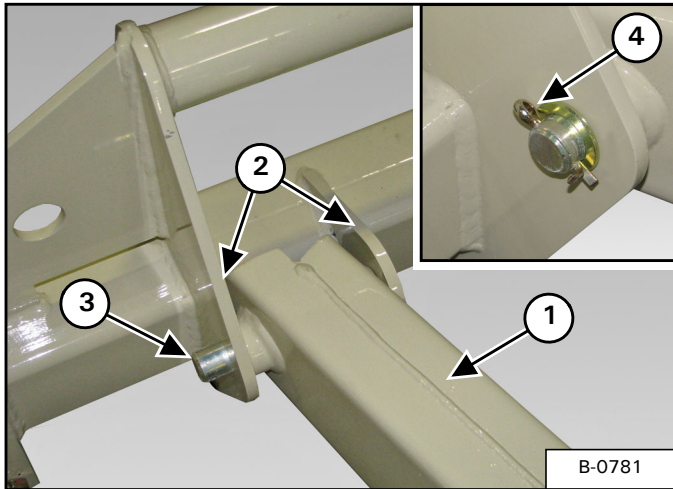

Locate the two lift arm axle pins.

Lift Arm Axle Pin Size

1" x 6.38"

Align the RH lower lift arm (Item 1) with the two mounts (Item 2) [Figure 9] on the axle.

Install one axle pin (Item 3) [Figure 9] through the axle mounts and RH lower lift arm.


Install one 1-1/4" narrow rim washer and 1/4" x 2" cotter pin (Item 4) [Figure 9] onto the axle pin, securing the RH lower lift arm to the axle.

Install a strap around the LH lower lift arm. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the LH lower lift arm to the assembly area.

Figure 10

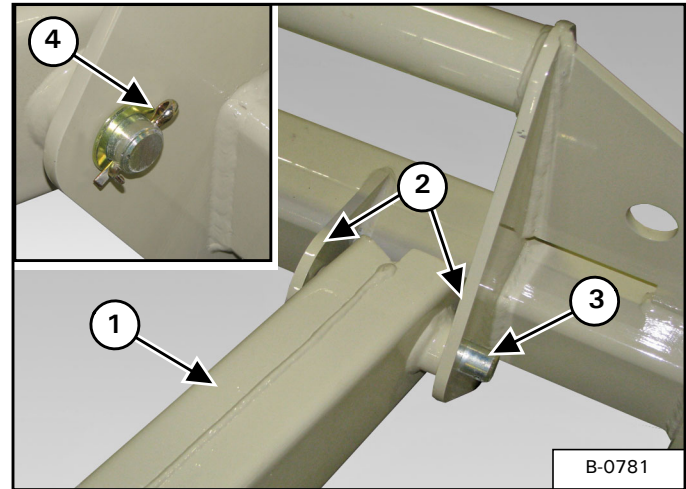


Align the LH lower lift arm (Item 1) with the two mounts (Item 2) [Figure 10] on the axle.

Install one axle pin (Item 3) [Figure 10] through the axle mounts and LH lower lift arm.


Install one 1-1/4" narrow rim washer and 1/4" x 2" cotter pin (Item 4) [Figure 10] onto the axle pin, securing the LH lower lift arm to the axle.

Figure 11

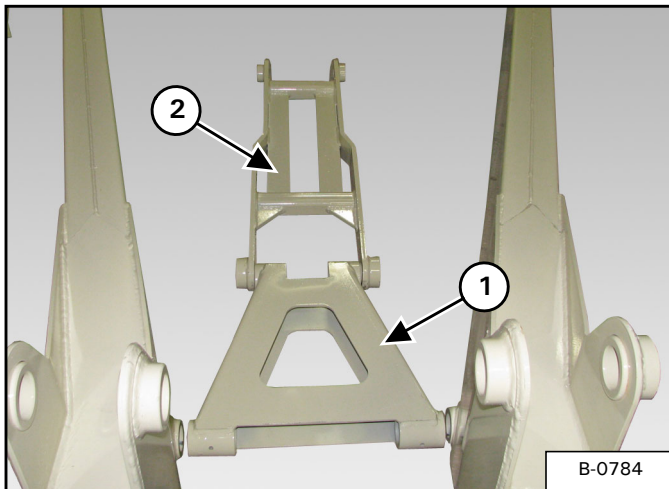

Place the connecting link (Item 1) and pivot yoke (Item 2) [Figure 11] on the ground, between the LH & RH lower lift arms.

Figure 12

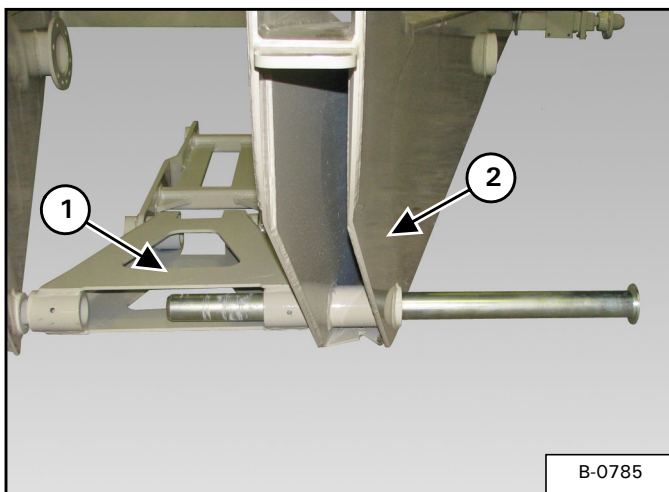


Align the connecting link (Item 1) with LH lower lift arm (Item 2) [Figure 12].

Connecting Link Pin Size

2" x 34 - 3/16"

Install the connecting link pin through the LH lower lift arm and connecting link.


Figure 13

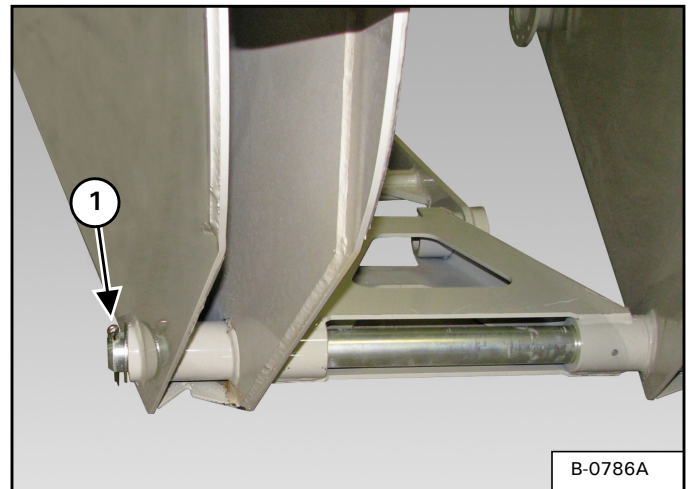

Continue installing the connecting link pin through the connecting link and RH lower lift arm.

Install one 2" x 10 ga. narrow rim washer and one 15/16" x 3" cotter pin (Item 1) [Figure 13] onto the connecting link pin and secure.

Figure 14

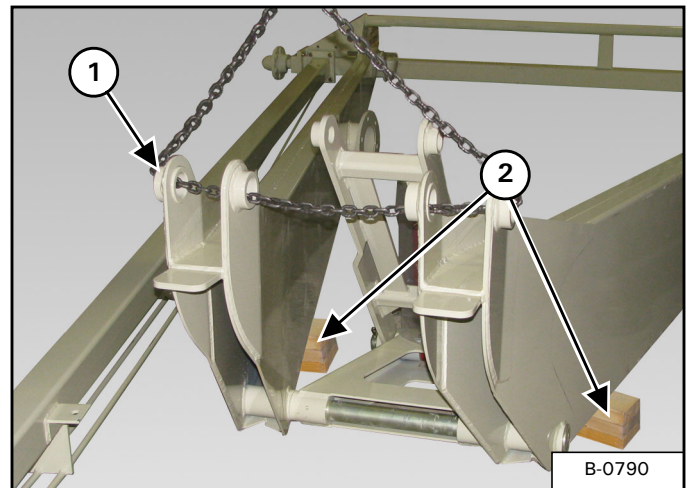


Install a chain (Item 1) [Figure 14] through the upper LH & RH lower lift arm mounts. Connect the chain to an approved lifting device.

Lift the LH & RH lower lift arms. Install blocks (Item 2) [Figure 14] under the LH & RH lower lift arms.

NOTE: Verify that there is adequate space under the LH & RH lower lift arms for installing the bottom cylinder pin.

Lower the LH & RH lower lift arms onto the blocks.

Figure 15

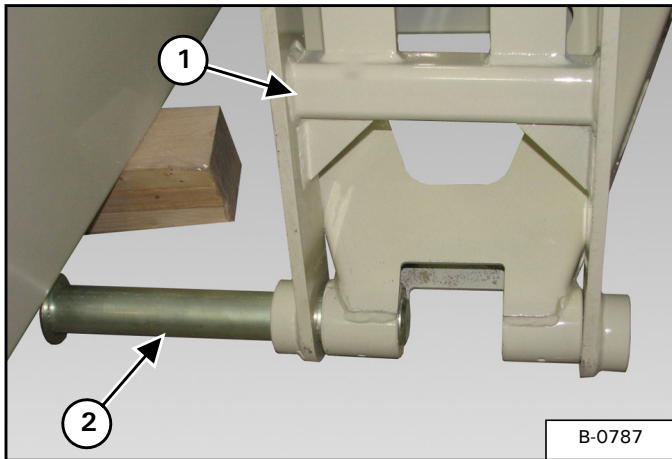

Rotate the pivot yoke (Item 1) [Figure 15] up.

Bottom Cylinder Pin Size

2" x 14-13/16"

Align the pivot yoke and connecting link. Install the bottom cylinder pin (Item 2) [Figure 15] through the connecting link and first side of the pivot yoke.

Figure 16




NOTE: It is recommended to leave the plastic on the hydraulic cylinders during assembly. This will help to prevent damage to the paint and minimize touch-up painting.

Install a chain or strap (Item 1) [Figure 16] through the base end of the hydraulic cylinder. Connect the chain or strap to an approved lifting device.

Raise and move the hydraulic cylinder to the assembly area.

Figure 17

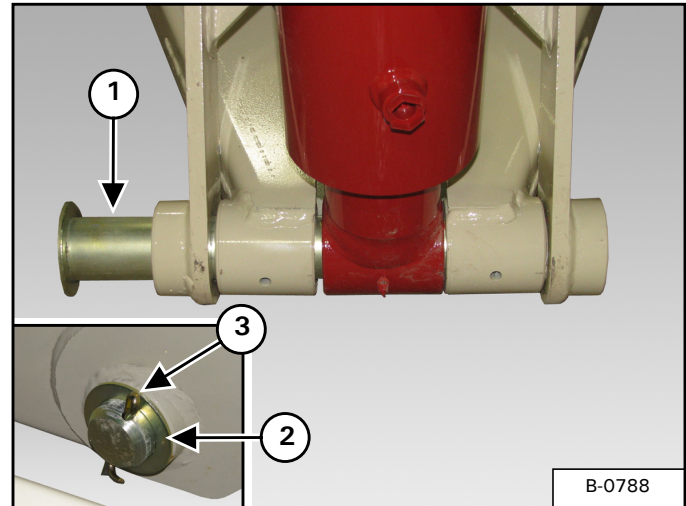

Lower the hydraulic cylinder and align the rod end of the cylinder with the pivot yoke [Figure 17] (with grease zerks facing as shown).

Continue installing the bottom cylinder pin (Item 1) [Figure 17] through the connecting link and opposite side of the pivot yoke.

Narrow Rim Washer Size

2" x 10 Ga.


Cotter Pin Size

5/16" x 3"

Install one 2" narrow rim washer (Item 2) and one cotter pin (Item 3) [Figure 17] onto the bottom cylinder pin.

NOTE: Do not remove chain from base end of the cylinder.


Figure 18

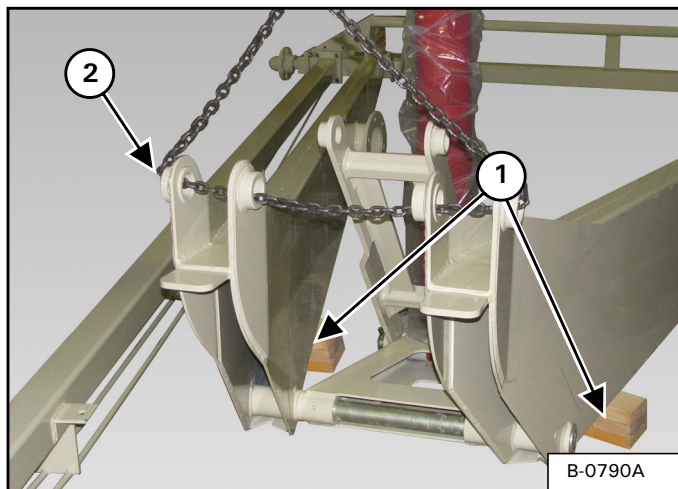

Lift the LH & RH lower lift arms. Remove blocks (Item 1) [Figure 18]. Lower LH & RH lower lift arms to the ground.

Remove chain (Item 2) [Figure 18].

Figure 19

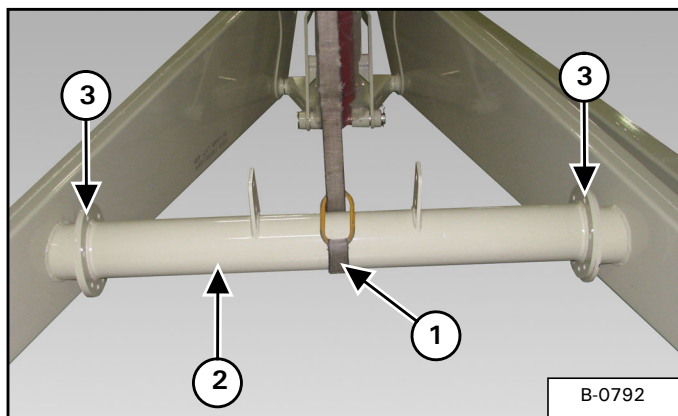


Install a strap (Item 1) around the lift arm torque tube (Item 2) [Figure 19]. Connect the strap to a second approved lifting device.

Raise and move the lift arm torque tube to the assembly area.

Align the lift arm torque tube with the LH & RH lower lift arm mounting plates. Install one 1/2" flat washer on two 1/2" x 2" bolts (Item 3) [Figure 19], install the two bolts through the top holes (both ends). Install one 1/2" flat washer and 1/2" lock nut on the bolts.


Figure 20

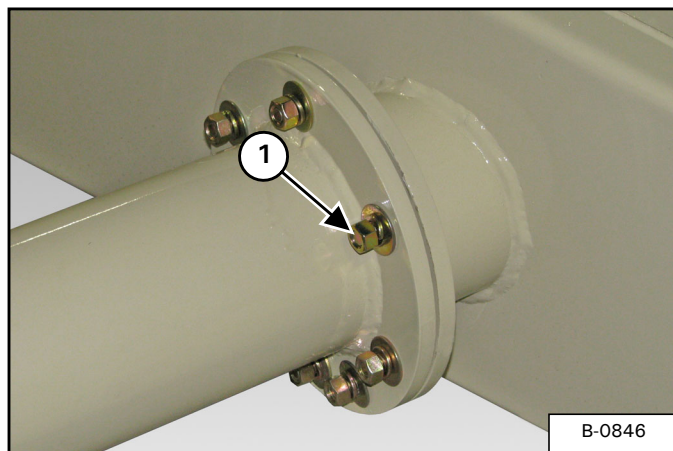

Install one 1/2" flat washer on the remaining 1/2" x 2" bolts (Item 1) [Figure 20], install bolts through the lift arm torque tube and LH & RH lower lift arm mounting plates. Install 1/2" flat washers and 1/2" lock nuts (both sides). Do not tighten bolts and lock nuts at this time.

Remove the strap.

Figure 21

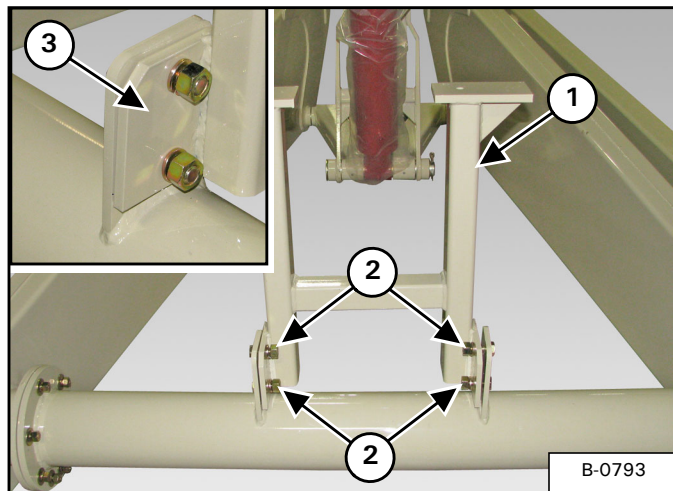


Align the cradle rest (Item 1) [Figure 21] with the two mounting plates on the lift arm torque tube.

Install the four 5/8" x 3-1/2" bolts (Item 2) [Figure 21] and 5/8" lock nuts.

NOTE: Install the cradle rest with the tabs (Item 3) [Figure 21] towards the axle.


Figure 22

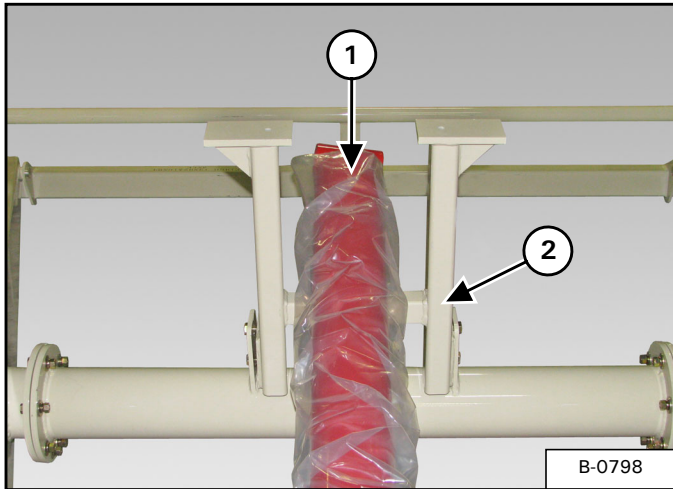

Lower the hydraulic cylinder (Item 1) onto the cradle rest (Item 2) [Figure 22].

Rotate the cylinder 180° or until the hydraulic fitting ports are facing down.


Figure 23

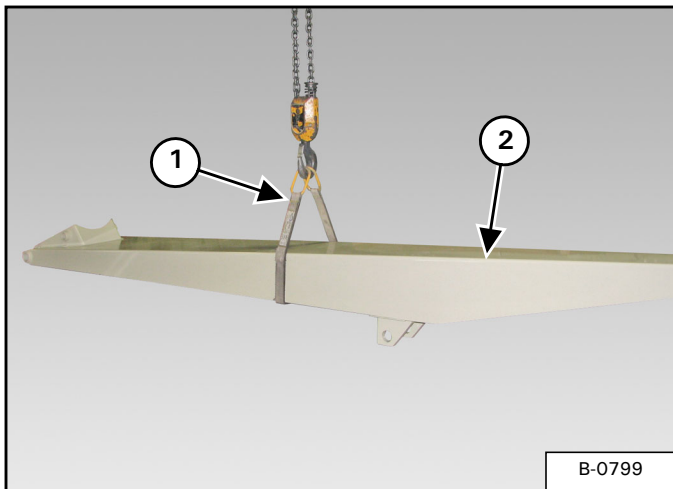

Install a strap (Item 1) around the upper lift arm (Item 2) [Figure 23]. Connect the strap to an approved lifting device.

Raise and move the upper lift arm to the assembly area.

Figure 24

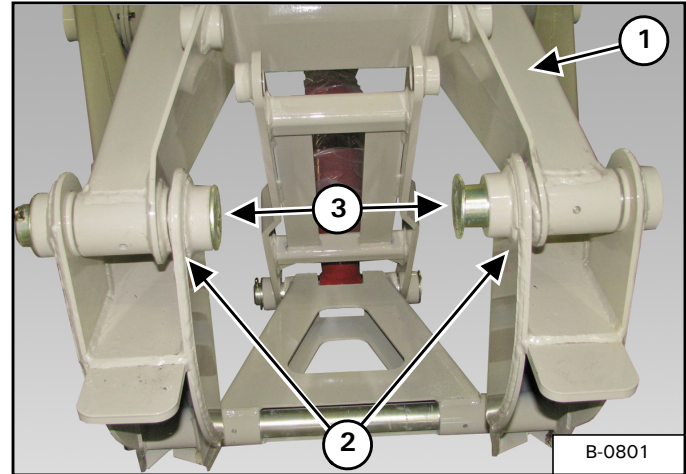

Align and lower the upper lift arm (Item 1) until the upper lift arm is inside the two mounts (Item 2) [Figure 24] on the lower lift arms.

Lower Lift Arm Pin Size

2" x 9-1/16"

Narrow Rim Washer Size


2" x 10 Ga.

Cotter Pin Size

5/16" - 3"

Install the two lift arm pins (Item 3) [Figure 24] (from the inside).


Figure 25

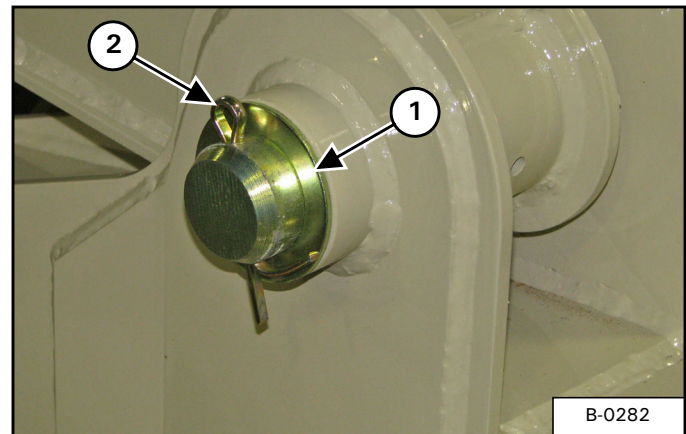

Install one 2" narrow rim washer (Item 1) and cotter pin (Item 2) [Figure 25] on the lift arm pin (both pins).

Lower the upper lift arm onto the cradle rest.


Figure 26

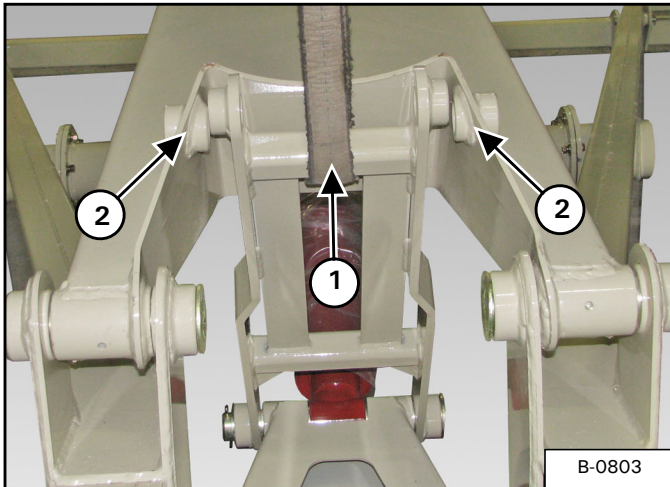

Install a strap (Item 1) [Figure 26] on the upper cross member of the connecting link.

Lift and align the connecting link with the mounts (Item 2) [Figure 26] on the upper lift arm.

Figure 27

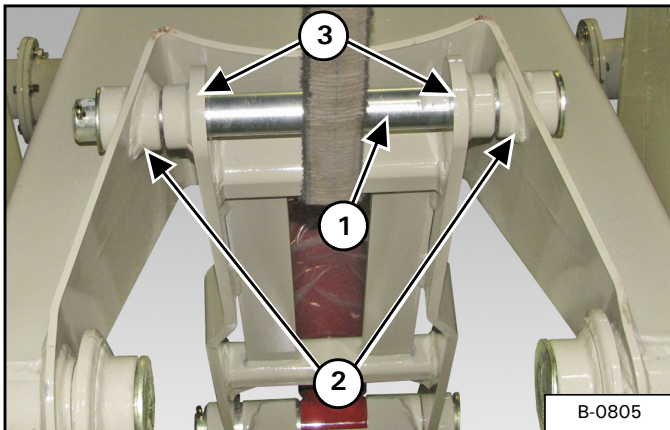


Install the top yoke pin (Item 1) through the upper lift arm mounting holes (Item 2) and pivot yoke mounting holes (Item 3) [Figure 27].

Top Yoke Pin Size

1-1/2" x 16-11/16"

Remove the strap from the pivot yoke.

Figure 28

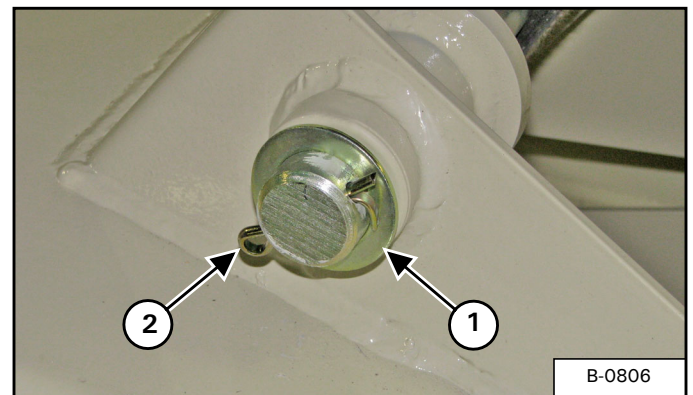

Install one narrow rim washer (Item 1) and cotter pin (Item 2) [Figure 28] onto the top yoke pin.


Narrow Rim Washer Size

1-1/2" x 10 Ga.

Cotter Pin Size

1/4" x 2"

Figure 29

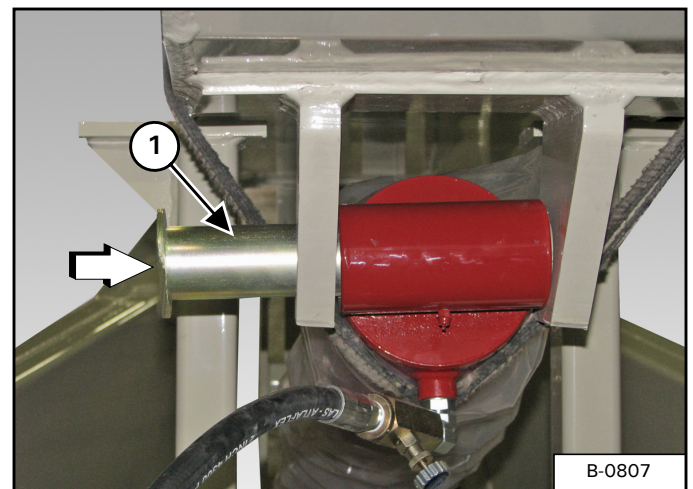

Align the base end of the hydraulic cylinder with the mounting holes of the upper lift arm.

Top Cylinder Pin Size

2" x 9"

Install the cylinder pin (Item 1) [Figure 29] through the upper lift arm and cylinder.


Narrow Rim Washer Size

2" x 10 Ga.

Cotter Pin Size


5/16" x 3"

Figure 30

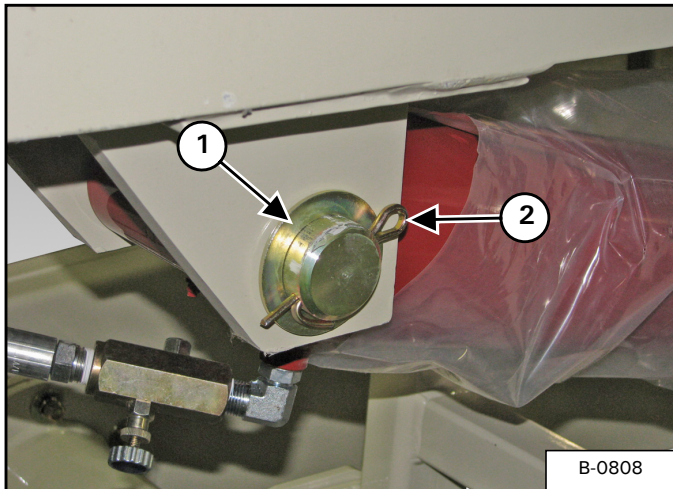

Install one narrow rim washer (Item 1) and cotter pin (Item 2) [Figure 30] onto the cylinder pin, securing the cylinder to the upper lift arm.


Figure 31

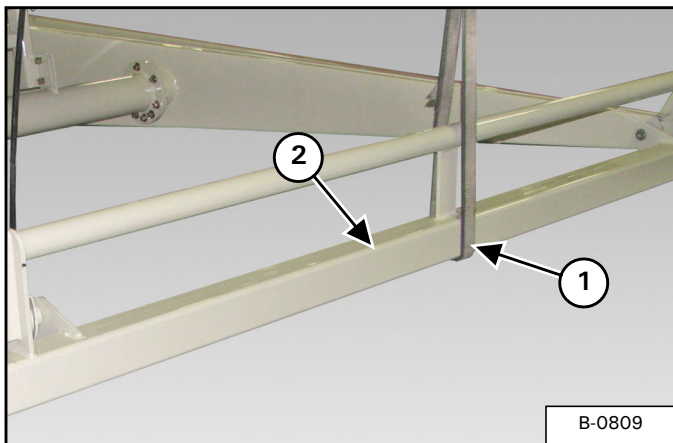

Install a strap (Item 1) around the center brace (Item 2) [Figure 31] on the axle. Connect the strap to an approved lifting device. Raise the axle high enough to install the wheels.

Install the wheels. See page 53.

Figure 32

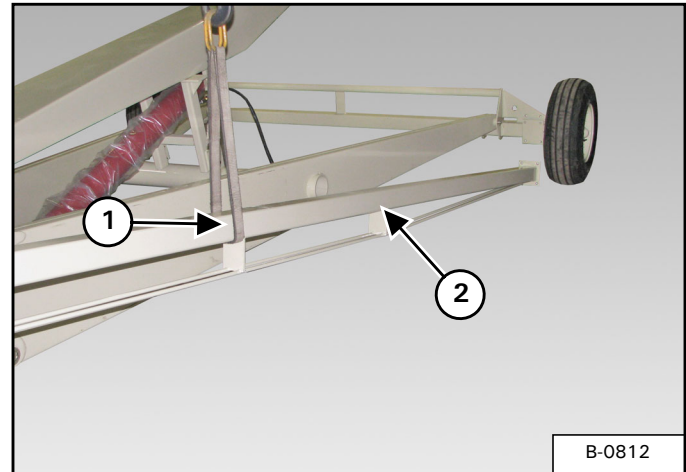


Install a strap (Item 1) around the center of the left undercarriage arm (Item 2) [Figure 32].

Connect the strap to an approved lifting device.

Raise and move the left undercarriage arm towards the axle.


Figure 33

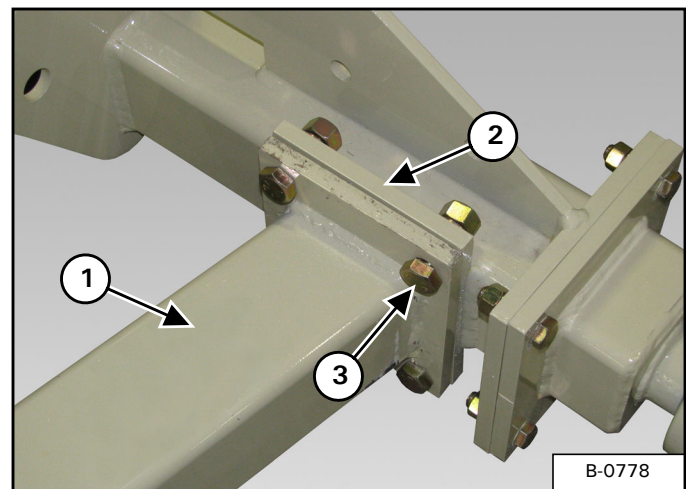

Align the left undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle [Figure 33].

Install four 5/8" x 2" bolts (Item 3) [Figure 33] and 5/8" lock nuts. Do not tighten bolts and nuts at this time.


Figure 34

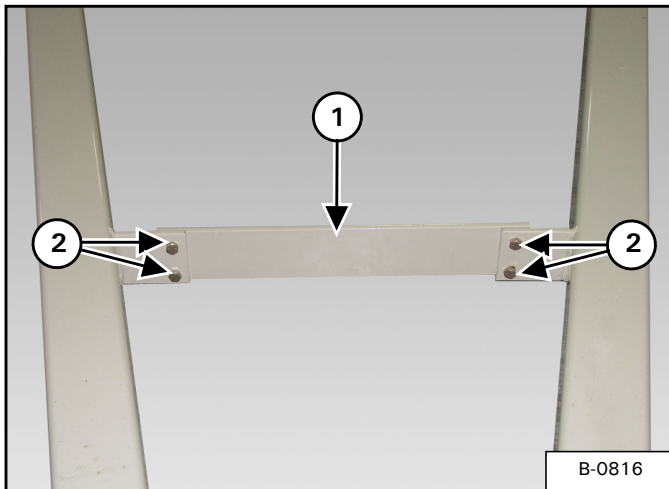

Align the brace plate (Item 1) [Figure 34] with the mounting plates on the LH & RH undercarriage arms.

Install four 7/16" flat washers onto four 7/16" x 1-1/2" bolts (Item 2) [Figure 34]. Install the bolts, then install 7/16" lock nuts on each bolt. Do not tighten at this time.

Figure 35

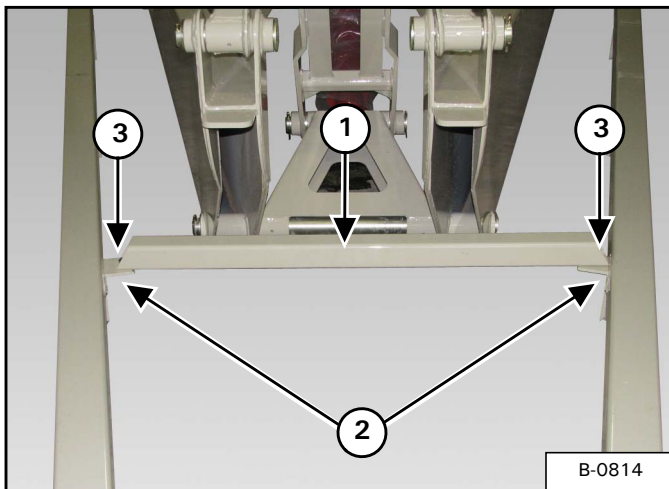


NOTE: Lift arm rest tube mounts on top of the tabs on the LH & RH undercarriage arms.

Place the lift arm rest tube (Item 1) on top of the mounts (Item 2) [Figure 35] on the LH & RH undercarriage arms.

Install one 5/8" x 1-3/4" bolt (Item 3) [Figure 35] down through the lift arm rest tube and undercarriage arm mount. Install one 5/8" flat washer and 5/8" lock

nut on the bolt (both sides). Do not tighten at this time.

Figure 36

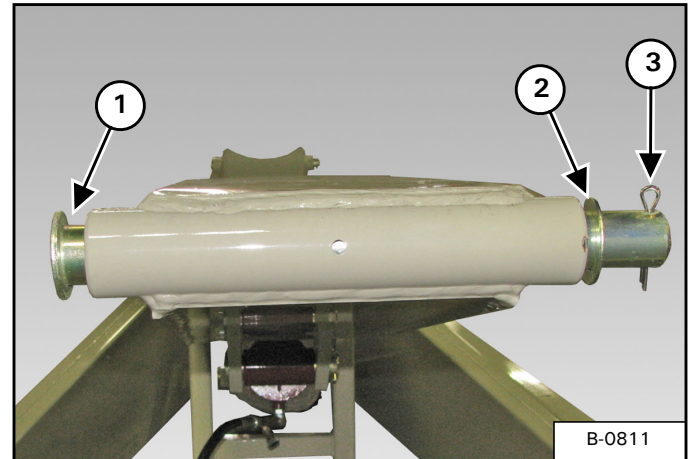

Locate and install the 1-1/2" x 15-5/16" lift arm pivot pin (Item 1), one 1-1/2" x 10 Ga. narrow rim washer (Item 2) and one 1/4" x 2" cotter pin (Item 3) [Figure 36].

NOTE: The upper lift arm pin, narrow rim washer and cotter pin are installed at this time, so these components are available when connecting to the tube.

16104 Undercarriage Assembly

Assemble the undercarriage on flat level surface.

WARNING



- **DO NOT** permit bystanders to be in the work area when unloading and assembling the auger components.
- **DO NOT** work under suspended parts.
- **Keep away** from moving parts.
- **Always use** lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 37

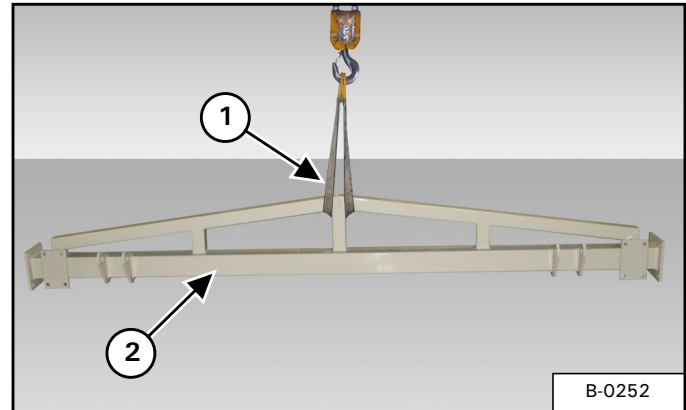


Install a strap (Item 1) around the center of the axle (Item 2) [Figure 37].

Connect the strap to an approved lifting device.

Raise and move the axle to the assembly area.

Lower the axle to the ground and remove strap.


Figure 38

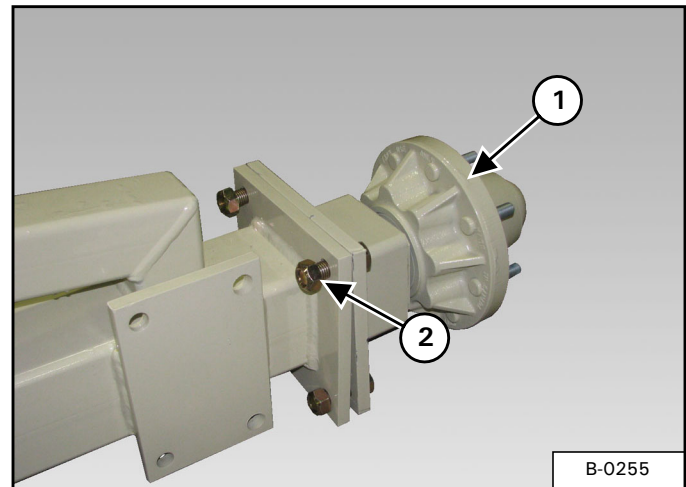

Align the hub (Item 1) [Figure 38] with the axle.

Install the four 3/4" x 2-1/2" bolts (Item 2) [Figure 38] and 3/4" lock nuts. Do not tighten bolts and nuts at this time.

Figure 39

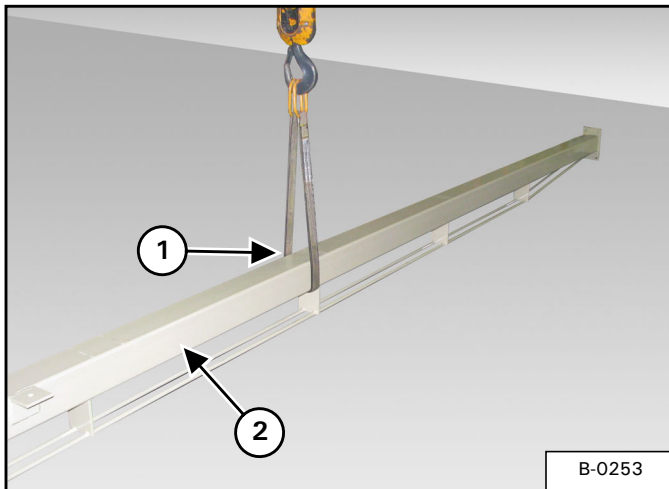


Install a strap (Item 1) around the center of the right undercarriage arm (Item 2) [Figure 39].

Connect the strap to an approved lifting device.

Raise and move the right undercarriage arm towards the axle.

Figure 40

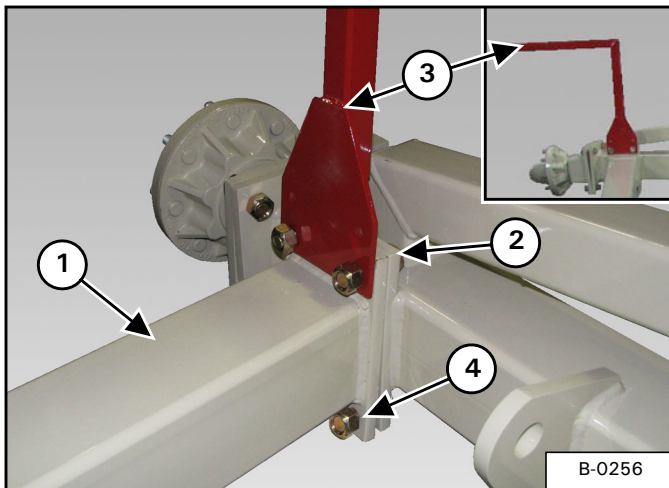


Align the right undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle [Figure 40].

Place the RH blinker mount (Item 3) [Figure 40] onto the right undercarriage arm mounting plate (with the blinker mount facing to the outside).


Install four 3/4" x 2-1/2" bolts (Item 4) [Figure 40] and 3/4" lock nuts. Do not tighten bolts and nuts at this time.

Figure 41

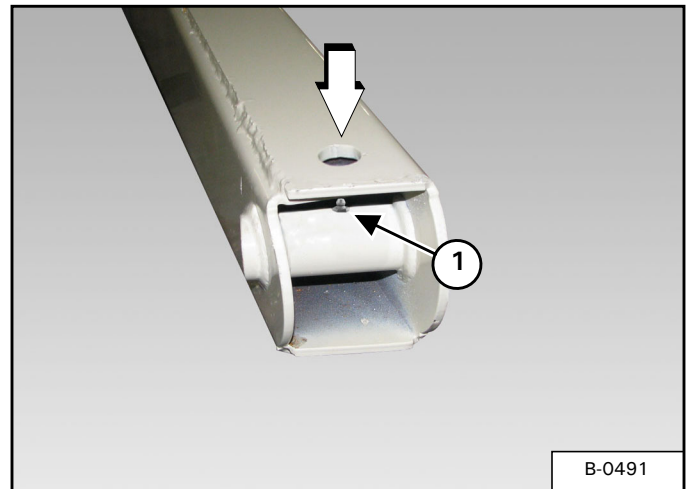

Install the grease zerk (Item 1) [Figure 41] into the right and left lower lift arms.

Figure 42

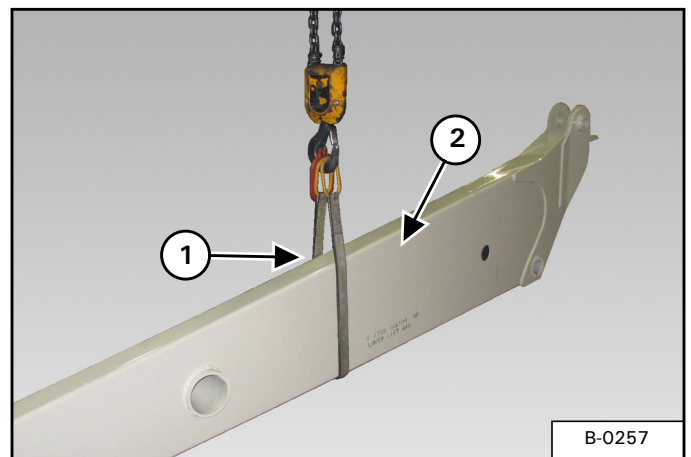


Install a strap (Item 1) around the RH lower lift arm (Item 2) [Figure 42]. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the RH lower lift arm to the assembly area.

Figure 43

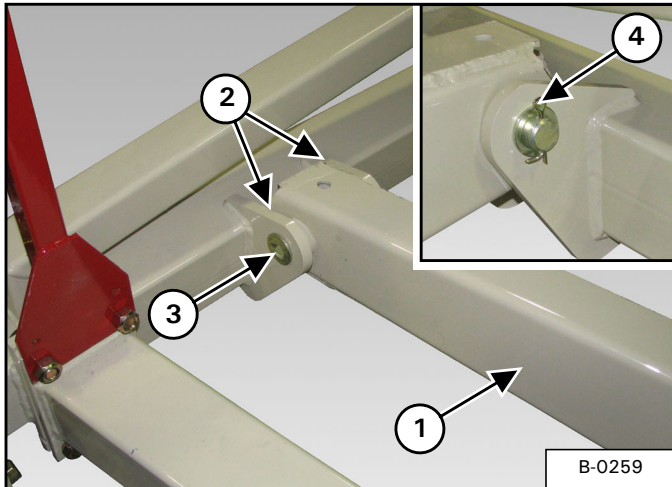


Align the RH lower lift arm (Item 1) with the two mounts (Item 2) [Figure 43] on the axle.

Install one 1-1/4" x 7-1/8" axle pin (Item 3) [Figure 43] through the axle mounts and RH lower lift arm.


Install one 1-1/4" narrow rim washer and 1/4" x 2" cotter pin (Item 4) [Figure 43] onto the axle pin, securing the RH lower lift arm to the axle.

Figure 44

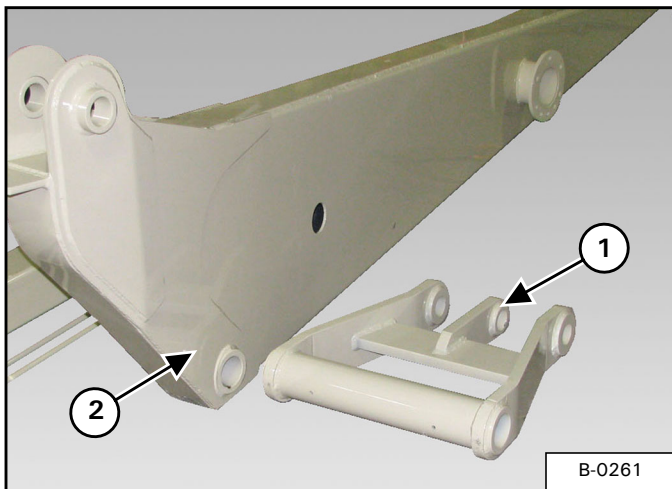

Place the link (Item 1) on the ground, at the front of the RH lower lift arm (Item 2) [Figure 44].

Figure 45

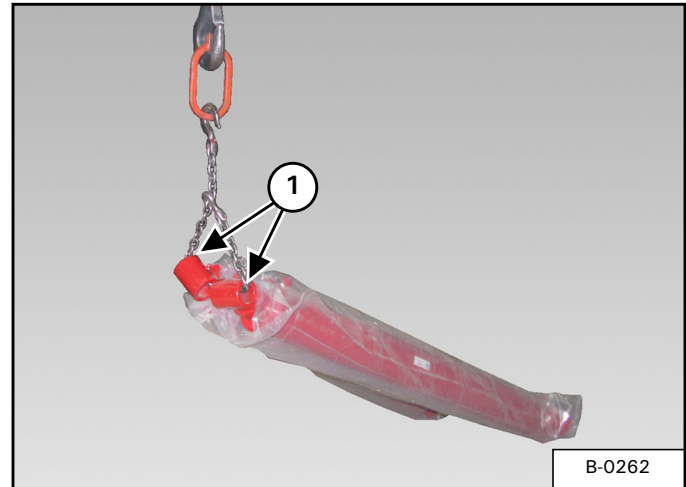


NOTE: It is recommended to leave the plastic on the hydraulic cylinders during assembly. This will help to prevent damage to the paint and minimize touch-up painting.

Install a chain or strap (Item 1) [Figure 45] through the rod end of the two hydraulic cylinders. Connect the strap to an approved lifting device.

Raise and move the two hydraulic cylinders to the assembly area.


Figure 46

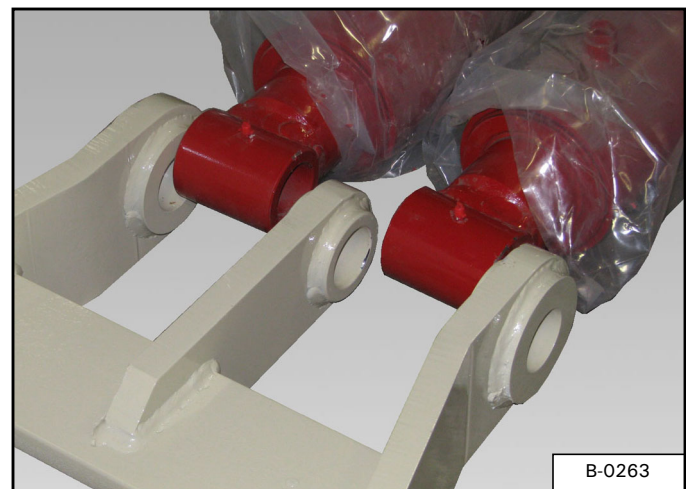

Raise the hydraulic cylinders and move the two cylinders on the back side of the link. Lower the cylinders to the ground and remove the chain or strap.


Align the two rod ends of the cylinders with the link [Figure 46] (with grease zerks facing up).

Figure 47

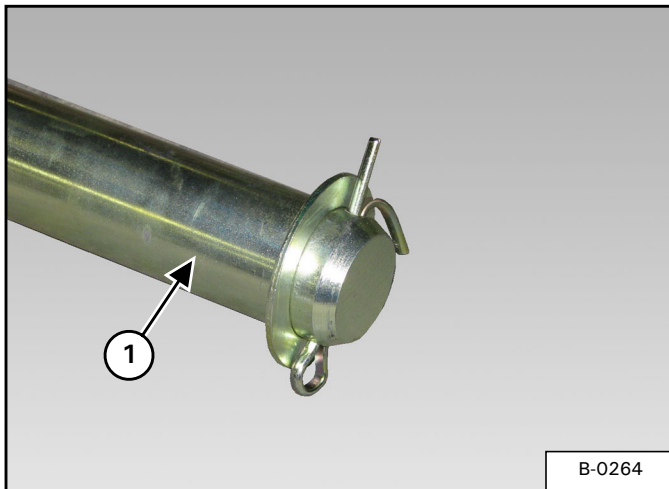

Install one 2" narrow rim washer and one 5/16" x 3" cotter pin onto the 2" x 18-7/8" lift pin rod (Item 1) [Figure 47].


Figure 48

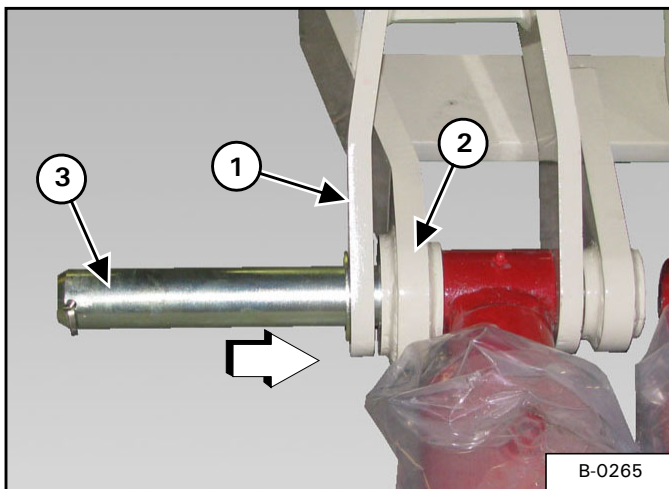

Place the left yoke arm (Item 1) on the outside of the link (Item 2) [Figure 48]. Position cylinder inside the link and opposite side of the yoke arm.

Install the lift pin rod (Item 3) [Figure 48] through the left yoke arm, link and cylinder (stop when the pin enters the center mount of the link).

Figure 49

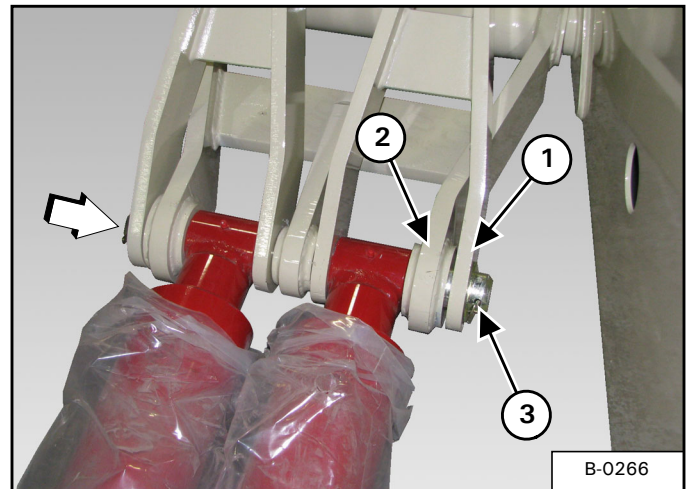


Place the right yoke arm (Item 1) on the outside of the link (Item 2) [Figure 49]. Position cylinder inside the link and opposite side of the yoke arm.

Continue installing the lift pin rod through the right yoke arm, cylinder and link [Figure 49].

Install one 2" narrow rim washer and one 5/16" x 3" cotter pin (Item 3) [Figure 49] to secure the yoke arms, cylinders and link together.

Figure 50

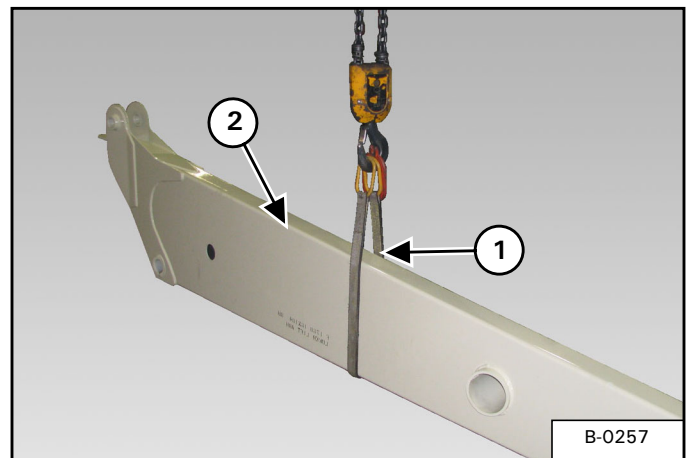


Install a strap (Item 1) around the LH lower lift arm (Item 2) [Figure 50]. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the LH lower lift arm to the assembly area.

Figure 51

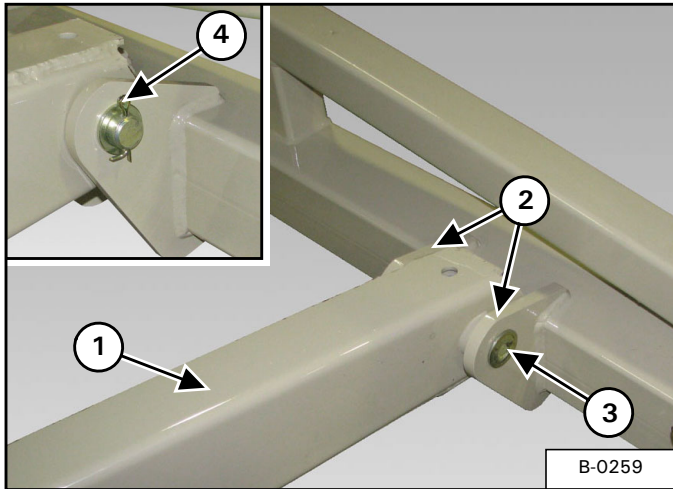


Align the LH lower lift arm (Item 1) with the two mounts (Item 2) **[Figure 51]** on the axle.

Install one 1-1/4" x 7-1/8" axle pin (Item 3) **[Figure 51]** through the axle mounts and LH lower lift arm.

Install one 1-1/4" narrow rim washer and 1/4" x 2" cotter pin (Item 4) **[Figure 51]** onto the axle pin, securing the LH lower lift arm to the axle.


Figure 52

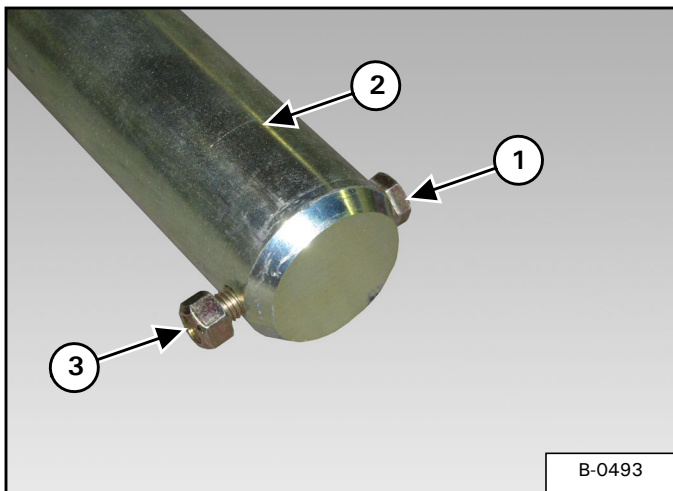

Install one 1/2" x 3-1/2" bolt (Item 1) through one end of the 2 3/4" x 39" connecting yoke pin (Item 2), then install one 1/2" lock nut (Item 3) **[Figure 52]** onto the bolt.

Slide a flat washer (not shown) onto the connecting link pin before installing.


Figure 53

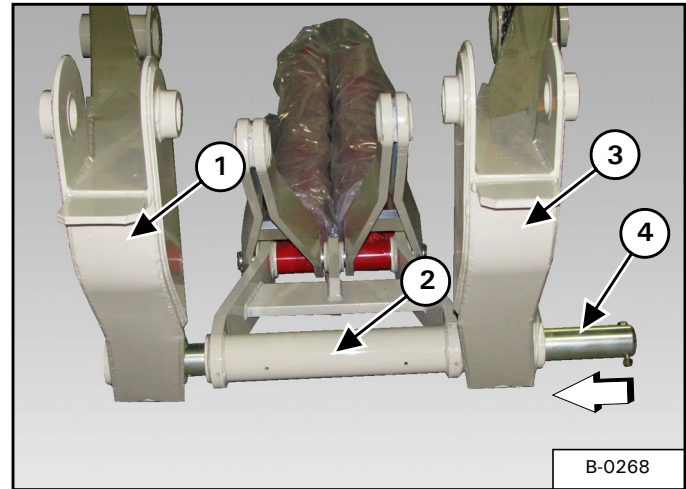

Align the RH lower lift arm (Item 1), link (Item 2) and LH lower lift arm (Item 3) **[Figure 53]**.


Install the 2-3/4" x 39" connecting yoke pin (Item 4) **[Figure 53]** through the LH lower lift arm, link and RH lower lift arm.

Figure 54

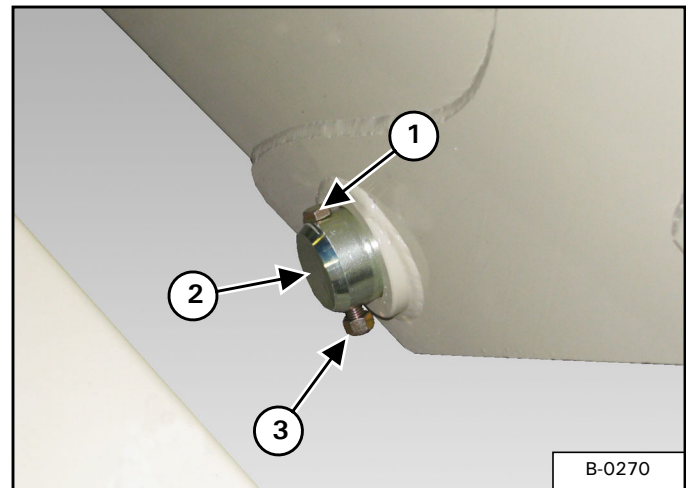

Install one 1/2" x 3-1/2" bolt (Item 1) through one end of the 2-3/4" x 39" connecting yoke pin (Item 2), then install one 1/2" lock nut (Item 3) **[Figure 54]** onto the bolt.

Figure 55

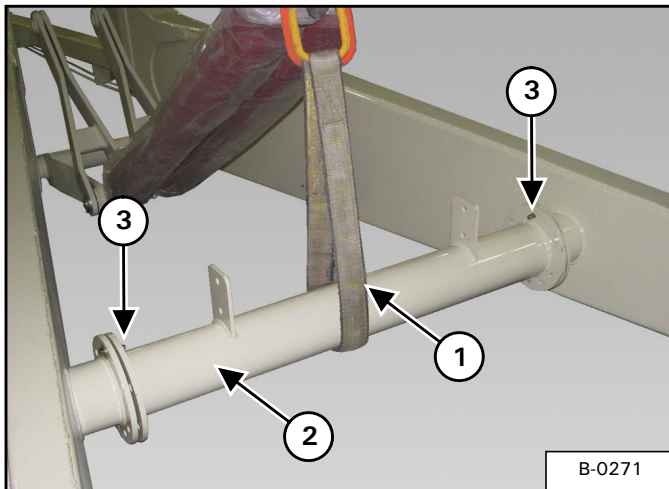


NOTE: Install a chain or strap through the base ends of the hydraulic cylinders. Connect the chain or strap to an approved lifting device. Raise the hydraulic cylinders above the RH & LH lower lift arms before installing the lift arm torque tube.

Install a strap (Item 1) around the lift arm torque tube (Item 2) [Figure 55]. Connect the strap to a second approved lifting device.

Raise and move the lift arm torque tube to the assembly area.

Align the lift arm torque tube with the LH & RH lower lift arm mounting plates. Install one 1/2" x 2" bolt (Item 3) [Figure 55] through the top holes (both ends). Install one 1/2" flat washer and 1/2" lock nut on the bolts.


Figure 56

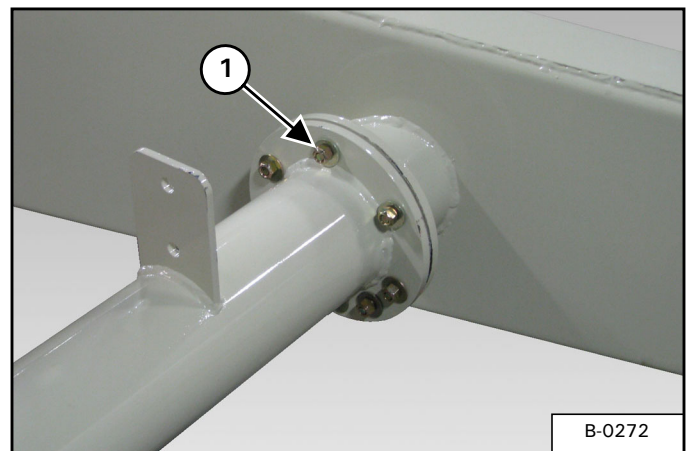

Install the remaining 1/2" x 2" bolts (Item 1) [Figure 56], 1/2" flat washers and 1/2" lock nuts (both sides). Do not tighten bolts and lock nuts at this time.

Remove the strap.


Figure 57

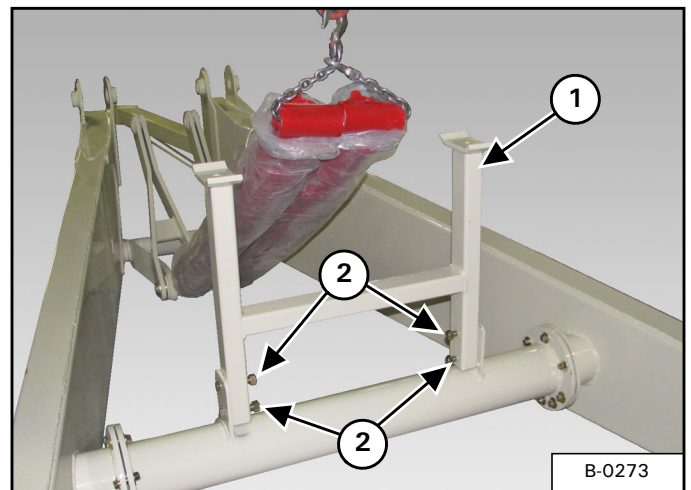

Align the cradle rest (Item 1) [Figure 57] with the two mounting plates on the lift arm torque tube.

Install the four 5/8" x 3-1/2" bolts (Item 2) [Figure 57] and 5/8" lock nuts.


Figure 58

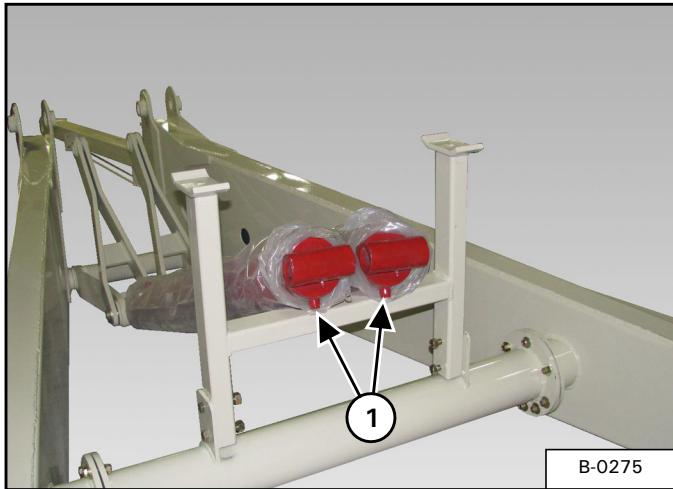

Lower the two hydraulic cylinders onto the cradle rest [Figure 58].

Rotate each cylinder 180° or until the hydraulic fitting ports (Item 1) [Figure 58] are facing down.

Figure 59

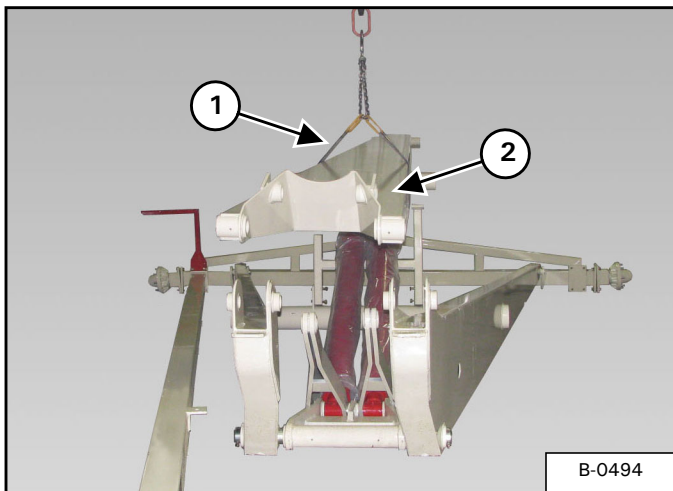


Install a strap (Item 1) around the upper lift arm (Item 2) [Figure 59]. Connect the strap to an approved lifting device.

Raise and move the upper lift arm to the assembly area.

Move the upper lift arm over the lower lift arms [Figure 59].


Figure 60

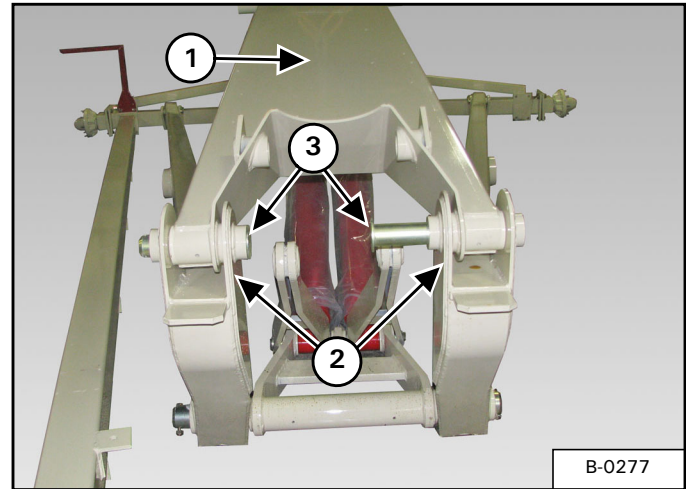

Align and lower the upper lift arm (Item 1) until the upper lift arm is inside the two mounts (Item 2) [Figure 60] on the lower lift arms.

Install the two 2" x 9-1/16" lift arm pins (Item 3) [Figure 60] (from the inside).


Figure 61

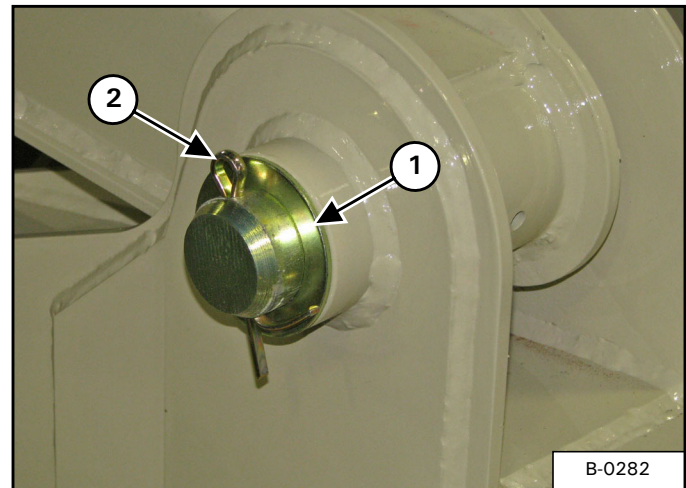

Install one 2" narrow rim washer (Item 1) and 5/16" x 3" cotter pin (Item 2) [Figure 61] on the lift arm pin (both pins).


Lower the upper lift arm onto the cradle rest.

Figure 62

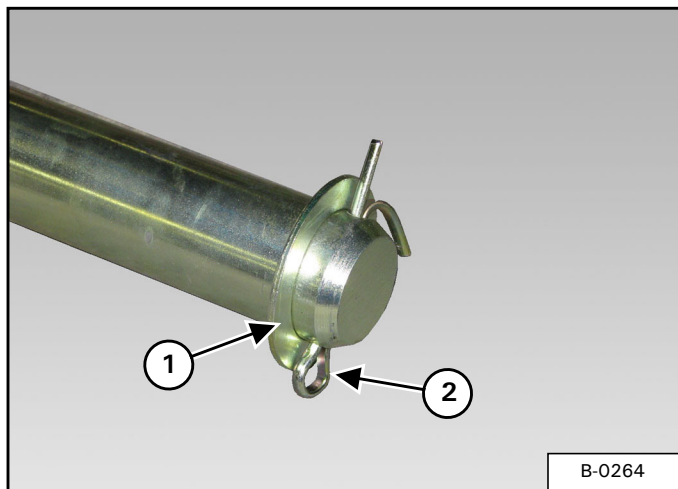

Install one 2" narrow rim washer (Item 1) and 5/16 x 3" cotter pin (Item 2) [Figure 62] onto the 2" x 20-1/2" upper lift arm pin rod.

Figure 63

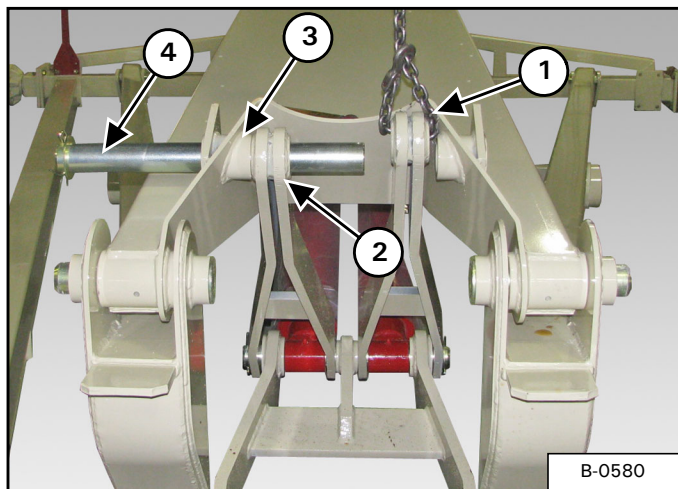


Install a chain through the mounting hole of the left yoke arm (Item 1). Lift the left yoke arm until the right yoke arm (Item 2) (lift right yoke arm by hand) is aligned with the upper lift arm mounting hole (Item 3) [Figure 63].

Install the upper lift arm pin rod (Item 4) [Figure 63] through the upper lift arm mounting hole and right yoke arm.


Remove the chain from the left yoke arm. Lift the left yoke arm and install the upper lift arm pin rod through the left yoke arm and upper lift arm mounting hole.

Figure 64

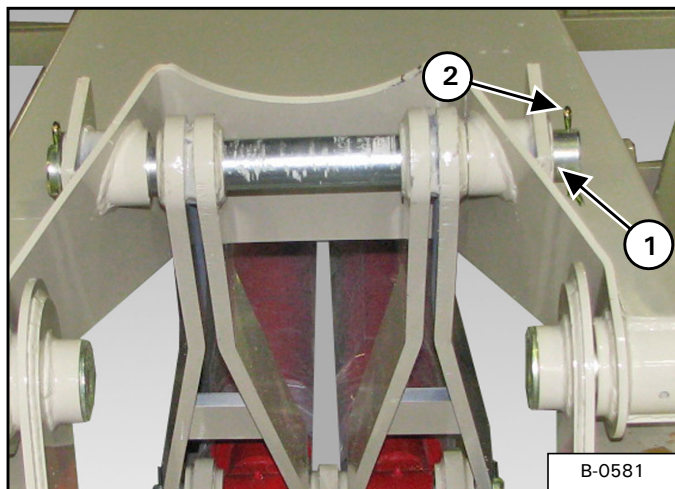


Install one 2" narrow rim washer (Item 1) and 5/16 x 3" cotter pin (Item 2) [Figure 64] onto the 2" x 20-1/2" upper lift arm pin rod.

Figure 65

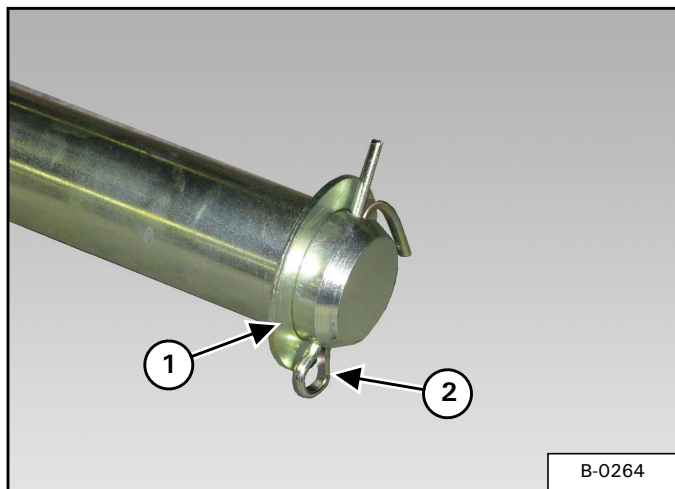

Install one 2" narrow rim washer (Item 1) and 5/16 x 3" cotter pin (Item 2) [Figure 65] onto the 2" x 17-1/4" cylinder pin rod.


Figure 66

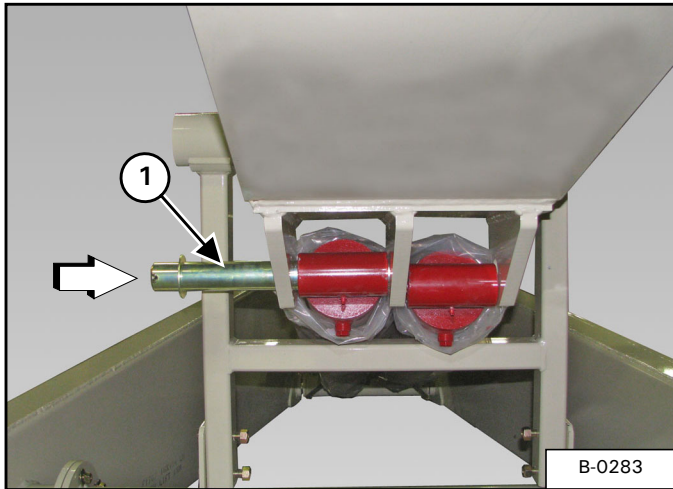

Align the left cylinder mounting holes of the upper lift arm.

Install the cylinder pin rod (Item 1) [Figure 66] through the upper lift arm and left cylinder (stop when the pin enters the center mount of the upper lift arm).


Figure 67

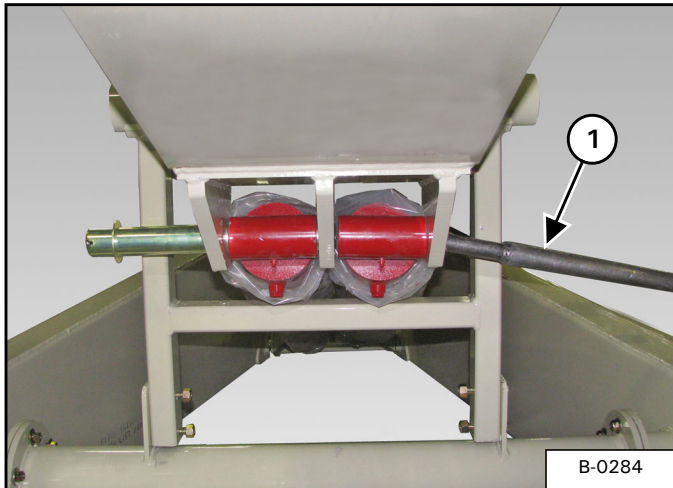

Using a bar (Item 1) [Figure 67], align the right cylinder with the mounting holes of the upper lift arm.


Continue installing the cylinder pin rod through the upper lift arm and right cylinder.

Figure 68

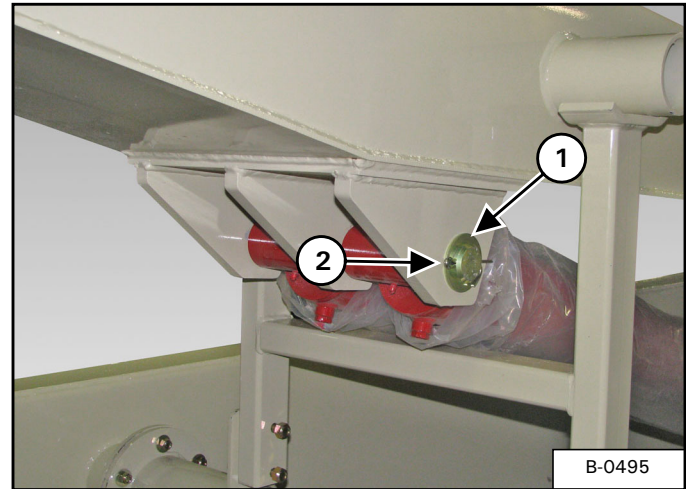

Install one 2" narrow rim washer (Item 1) and 5/16" x 3" cotter pin (Item 2) [Figure 68] onto the cylinder pin rod, securing the cylinders to the upper lift arm.

Figure 69

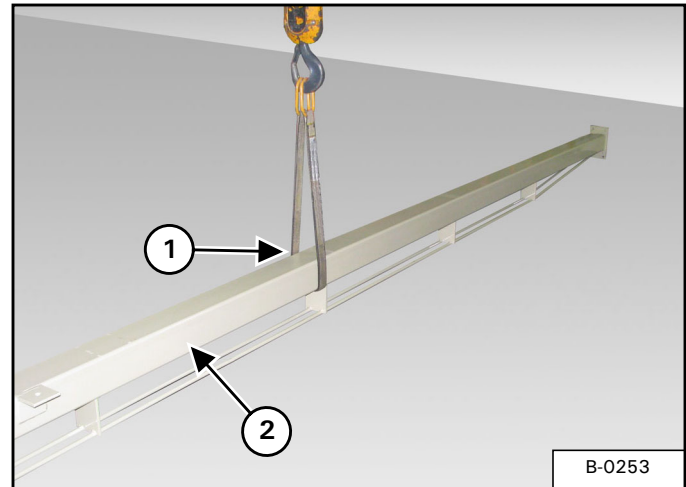


Install a strap (Item 1) around the center of the left undercarriage arm (Item 2) [Figure 69].

Connect the strap to an approved lifting device.

Raise and move the left undercarriage arm towards the axle.

Figure 70

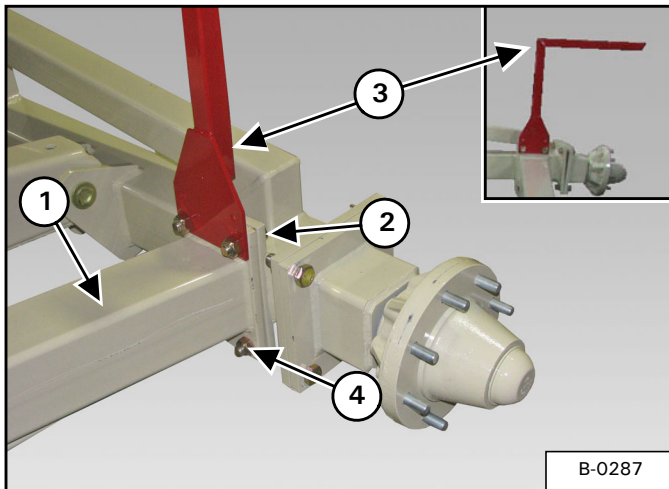


Align the left undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle **[Figure 70]**.

Place the LH blinker mount (Item 3) **[Figure 70]** onto the left undercarriage arm mounting plate (with the blinker mount facing to the outside).


Install the four 3/4" x 2-1/2" bolts (Item 4) **[Figure 70]** and 3/4" lock nuts. Tighten the bolts until snug, do not fully tighten bolts and nuts at this time.

Figure 71

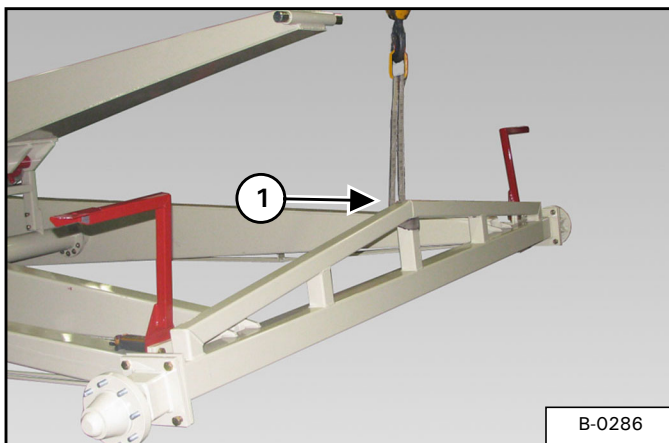

Install a strap (Item 1) around the center brace (Item 2) **[Figure 71]** on the axle. Connect the strap to an approved lifting device. Raise the axle high enough to install the tires.

Figure 72

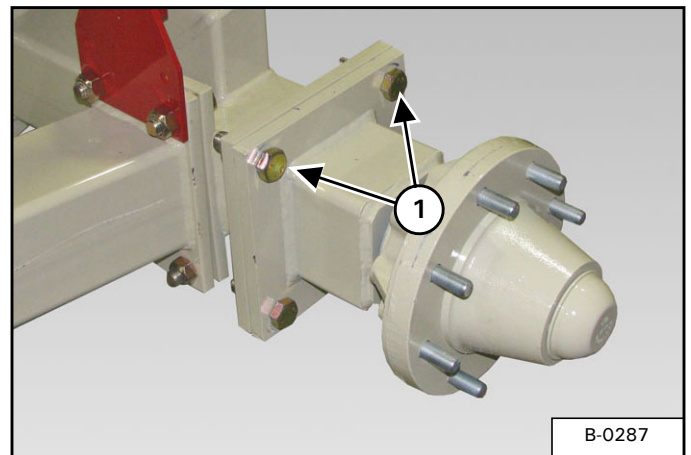

Tighten the bottom two bolts (Item 1) **[Figure 72]** first. Tighten the bottom bolts until the two mounting plates are touching (no gap).


NOTE: If the top bolts cannot be tightened to close the gap between the two mounting plates, tighten the bolts as much as possible, then after the tube has been installed (adding additional weight and down pressure), finish tightening the top bolts until the two mounting plates are touching (no gap).

Tighten the top two bolts. Tighten the bolts until the two mounting plates are touching (no gap).

Repeat the procedure for tightening the opposite hub assembly.

Install the wheels. See page 53.


Figure 73

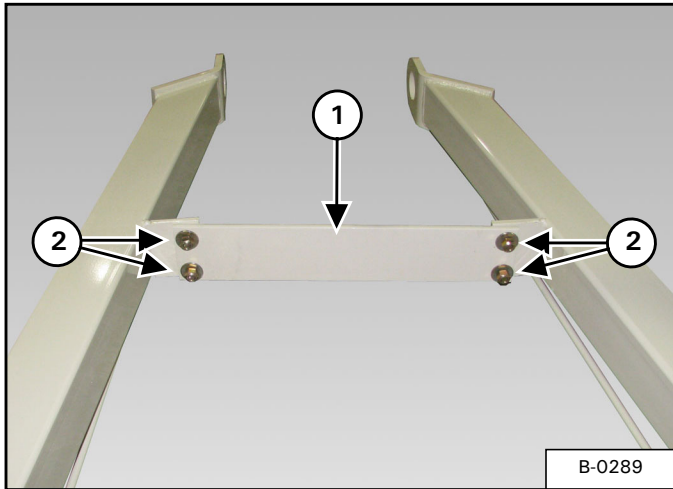

Align the brace plate (Item 1) [Figure 73] with the mounting plates on the LH & RH undercarriage arms.

Install four 5/8" flat washers onto four 5/8" x 2" bolts (Item 2) [Figure 73]. Install the bolts, then install 5/8" lock nuts on each bolt. Do not tighten at this time.


Figure 74

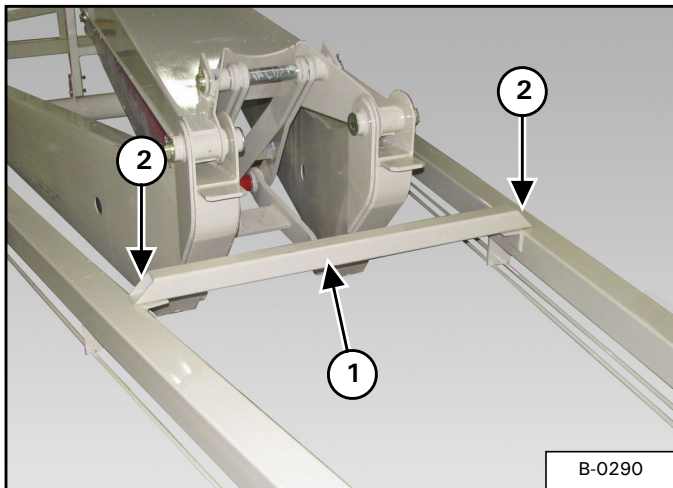

Align the lift arm rest tube (Item 1) [Figure 74] with the mounts on the LH & RH undercarriage arms.

Install two 5/8" x 2" bolts (Item 2) [Figure 74] and 5/8" lock nuts. Do not tighten at this time.


Figure 75

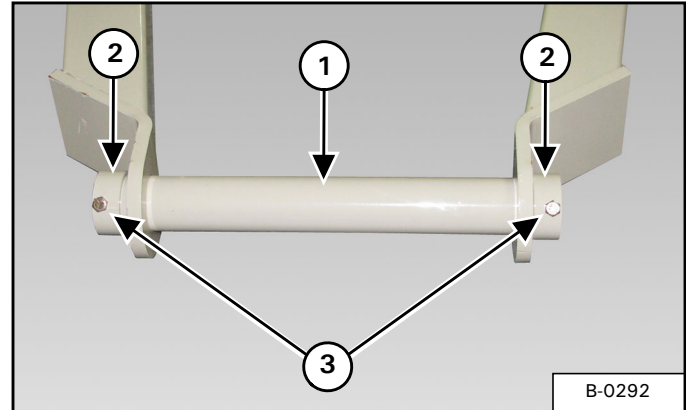

Locate and install the undercarriage lift arm pin (Item 1), undercarriage lift arm pin collars (Item 2), 1/2" x 3-1/2" bolts (Item 3) [Figure 75] and 1/2" lock nuts. Do not tighten bolts and nuts at this time.

NOTE: The undercarriage lift arm pin, collars, bolts and lock nuts are installed at this time, so these components are available when connecting to the tube.


Figure 76

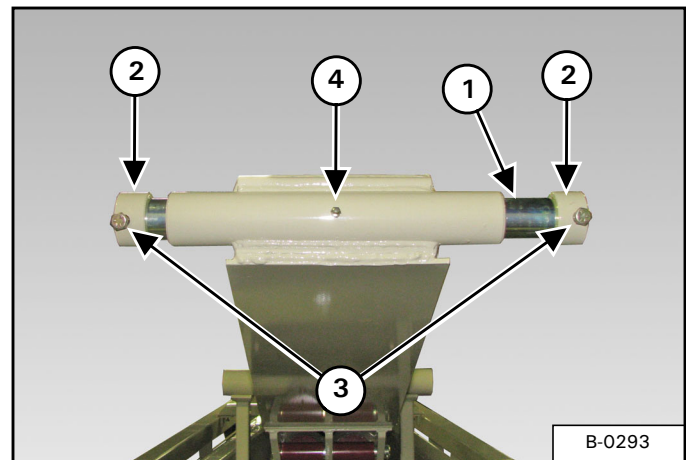

Locate and install the upper lift arm pin (Item 1), upper lift arm pin collars (Item 2), 1/2" x 3-1/2" bolts (Item 3) [Figure 76] and 1/2" lock nuts. Do not tighten bolts and nuts at this time.

NOTE: The upper lift arm pin, collars, bolts and lock nuts are installed at this time, so these components are available when connecting to the tube.

Install grease zerk (Item 4) [Figure 76].

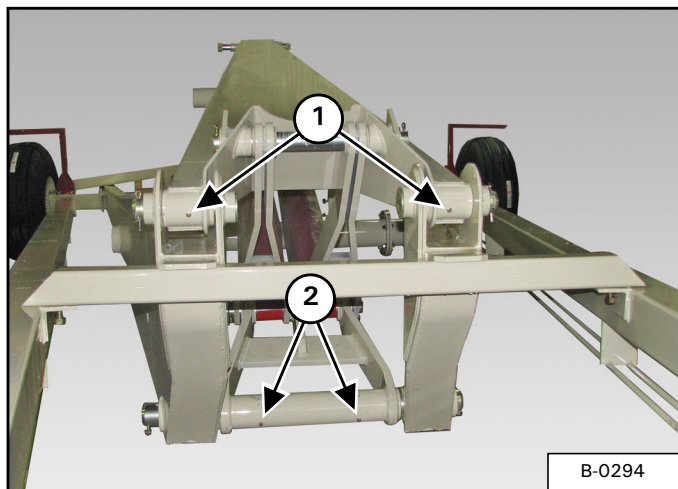Figure 77


Install the two grease zerks (Item 1) into the upper lift arm. Install the two grease zerks (Item 2) [Figure 77] into the link.

16124 Undercarriage Assembly

Assemble the undercarriage on flat level surface.

WARNING



- **DO NOT** permit bystanders to be in the work area when unloading and assembling the auger components.
- **DO NOT** work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 78

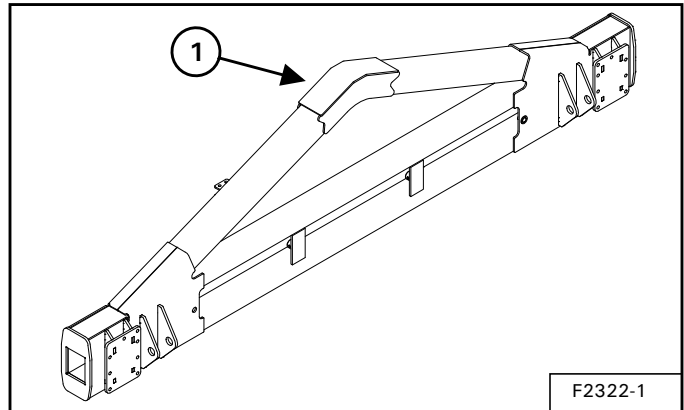

Install a strap around the center of the axle (Item 1) [Figure 78].


Connect the strap to an approved lifting device.

Raise and move the axle to the assembly area.

Place blocks under the axle on each side and lower the axle unto the blocks.

Keep the axle supported with strap and lifting device.

Figure 79

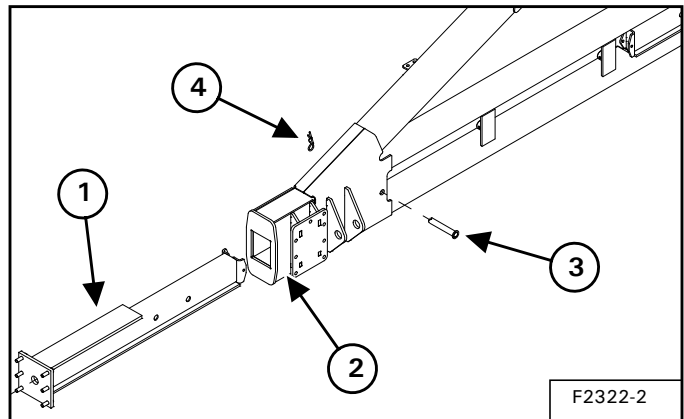

Apply a light coat of grease to the axle extension (Item 1) [Figure 79].

Position the axle extension as shown and slide the axle extension into the axle (Item 2) [Figure 79].


Align the desired hole in the axle extension with the hole in the axle.

Install the 1-1/4" x 7-3/4" pin (Item 3) through the axle and axle extension and secure with hair pin clip (Item 4) [Figure 79].

Repeat procedure for the opposite side.

NOTE: Align axle extensions evenly on both sides.

Figure 80

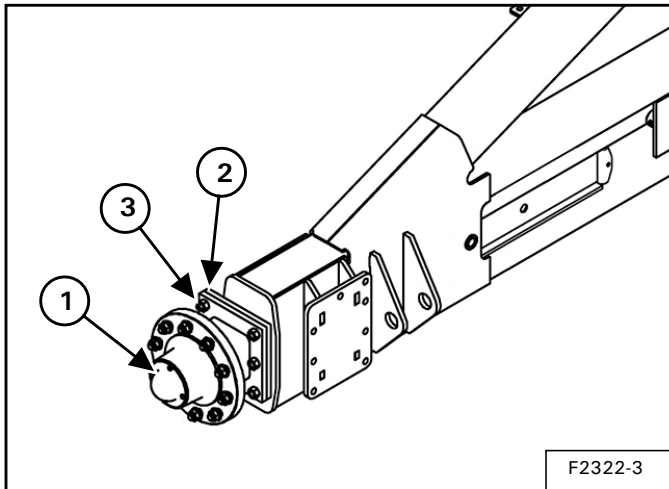


Align the hub (Item 1) [Figure 80] with the axle.

Install the six 3/4" x 2-1/2" bolts (Item 2) [Figure 80] and 3/4" lock nuts. Tighten bolts and nuts.

Repeat procedure on the opposite side.

Figure 81

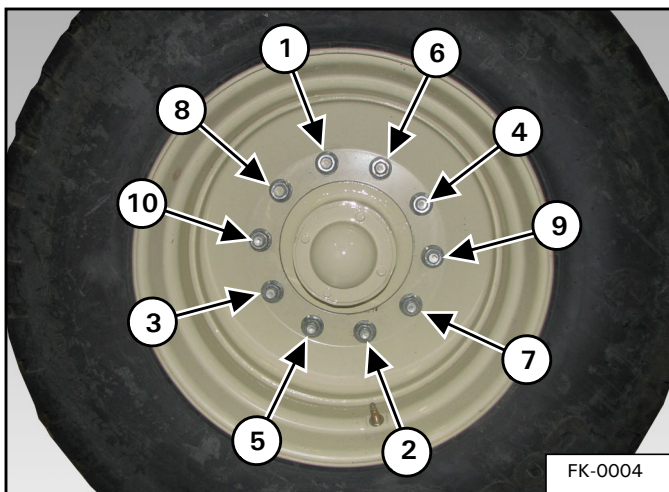

NOTE: Ten bolt hub shown.

Install the tire with the valve stem facing out (both sides). Install the wheel nuts (both sides) [Figure 81].

Tighten wheel nuts in a criss-cross pattern.

Ten Bolt Hub - Tighten wheel nuts to 462 lb. ft. (626 N•m) of torque.


Eight Bolt Hub - Tighten wheel nuts to 264 lb. ft. (358 N•m) of torque.

Six Bolt Hub - Tighten wheel nuts to 133 lb. ft. (180 N•m) of torque.

Lower the axle and tires to the ground.

Check tire pressure.

Figure 82

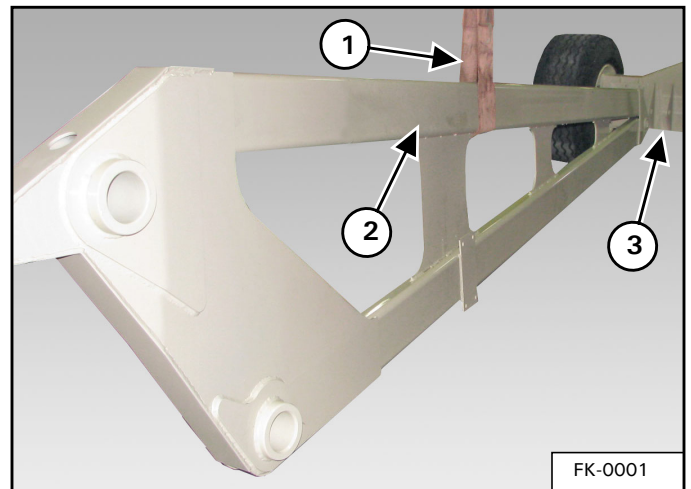


Install a strap (Item 1) around the RH lower lift arm (Item 2) [Figure 82]. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the RH lower lift arm to the assembly area.

Figure 83

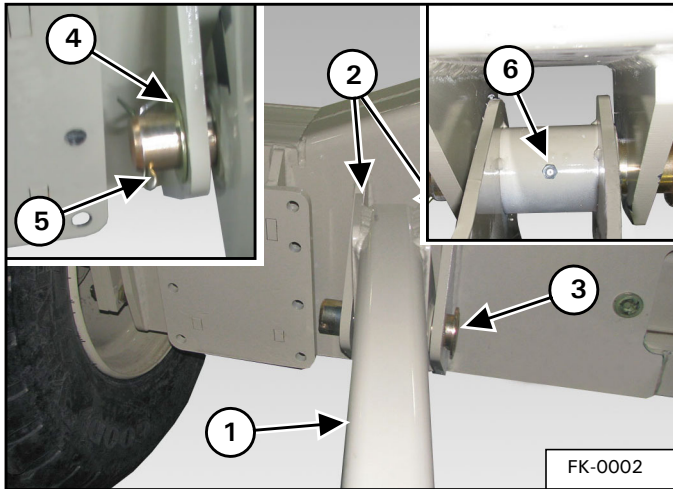


Align the RH lower lift arm (Item 1) with the two mounts (Item 2) [Figure 83] on the axle.

Install one 2 x 9" pin (Item 3) [Figure 83] through the axle mounts and RH lower lift arm.

Install one 2" narrow rim washer (Item 4) onto the pin and 5/16" x 3" cotter pin (Item 5) [Figure 83].

Install the grease zerk (Item 6) [Figure 83].

Figure 84

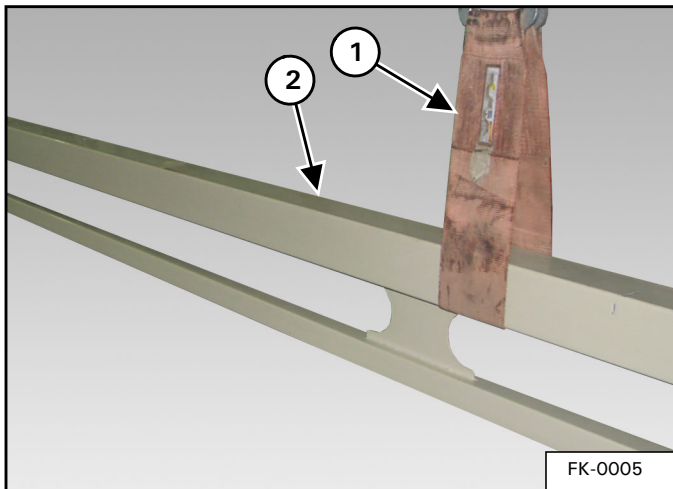


Install a strap (Item 1) around the center of the LH undercarriage arm (Item 2) [Figure 84].

Connect the strap to an approved lifting device.

Raise and move the LH undercarriage arm towards the axle.

NOTE: The RH undercarriage arm will be installed later, this allows room for pin installation into lower and upper lift link assembly.


Figure 85

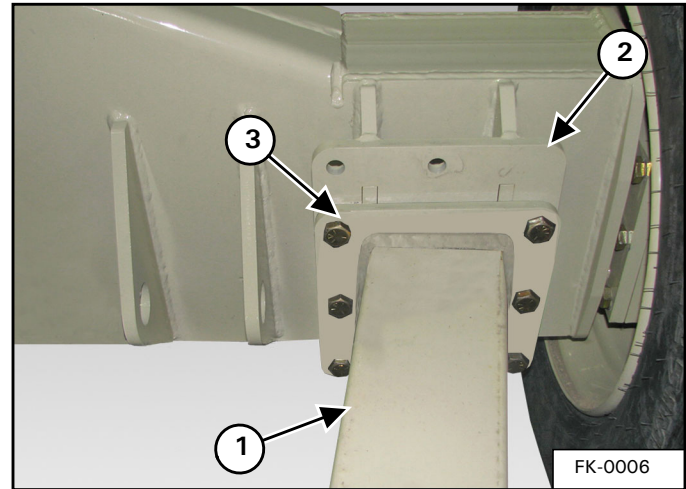

Align the LH undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle [Figure 85].

Install the six 3/4" x 2-1/2" bolts (Item 3) [Figure 85] and 3/4" lock nuts. Do not tighten bolts and nuts at this time.

Figure 86

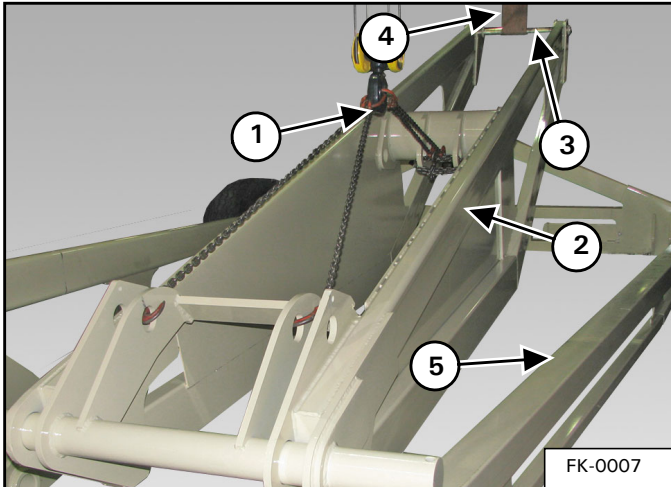

Install straps or chains (Item 1) around the upper lift link (Item 2) [Figure 86]. Connect to an approved lifting device.

Install the 2" diameter upper lift arm pin (Item 3) through the LH and RH upper link, install the collar and 1/2" x 3-1/2" bolt, 1/2" lock nut (both sides). Do not tighten.


Install a strap (Item 4) onto the 2' diameter pin and connect the strap to a second lifting device. [Figure 86].

NOTE: The 2" diameter pin is installed temporarily for lifting purposes.

Raise and move the upper lift link to the assembly area.

Move the upper lift link over the LH undercarriage arm (Item 5) [Figure 86].

Figure 87

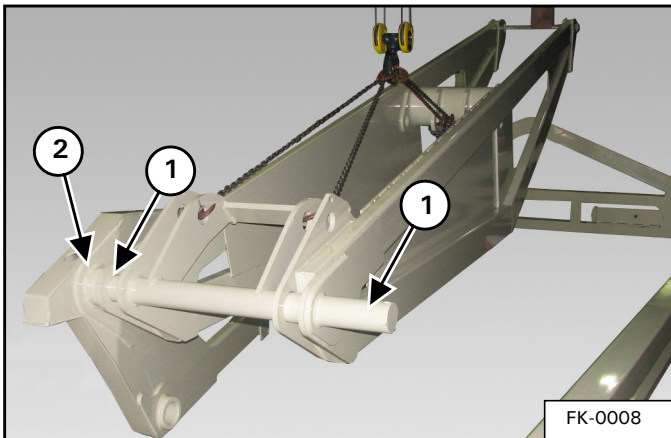


Apply a light coat of grease to the upper link shaft (Item 1) [Figure 87] (both sides).

Align the upper lift link to the RH lower lift arm (Item 2) [Figure 87].

Slide the upper lift link shaft into the top hole on the RH lower lift arm until the shaft is fully installed.


Figure 88

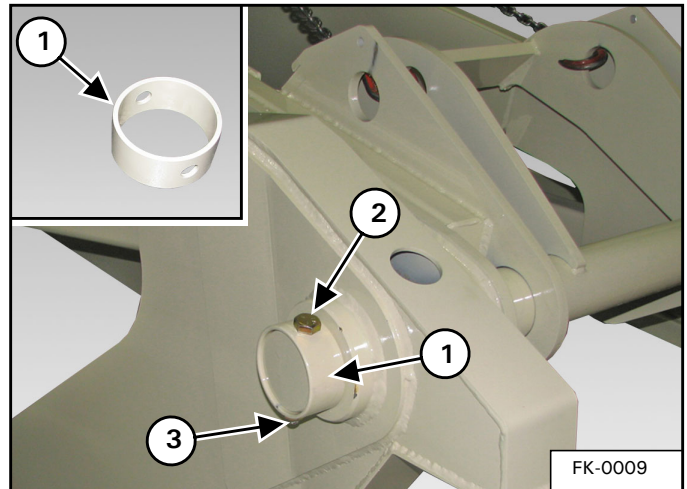

Install the pin sleeve (Item 1) [Figure 88] onto the upper lift link shaft.

Install the 3/4" x 5-1/2" bolt (Item 2) and 3/4" lock nut (Item 3) [Figure 88] and tighten.

Figure 89

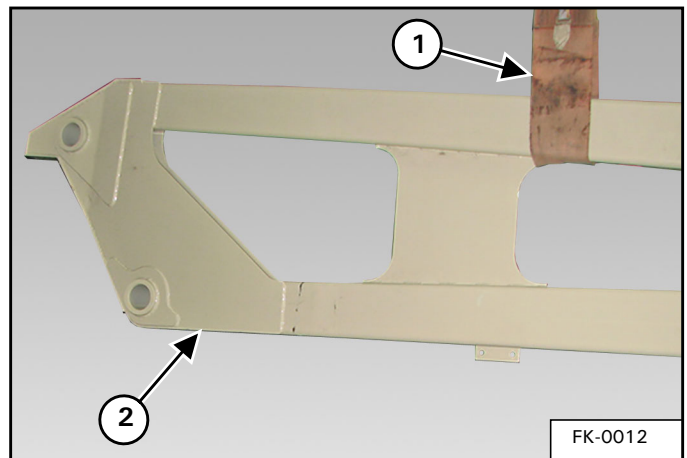


Install a strap (Item 1) around the LH lower lift arm (Item 2) [Figure 89]. Connect the strap to an approved lifting device.

NOTE: Move strap forward or backward until the component hangs level when raised off the ground.

Raise and move the LH lower lift arm to the assembly area.

Figure 90

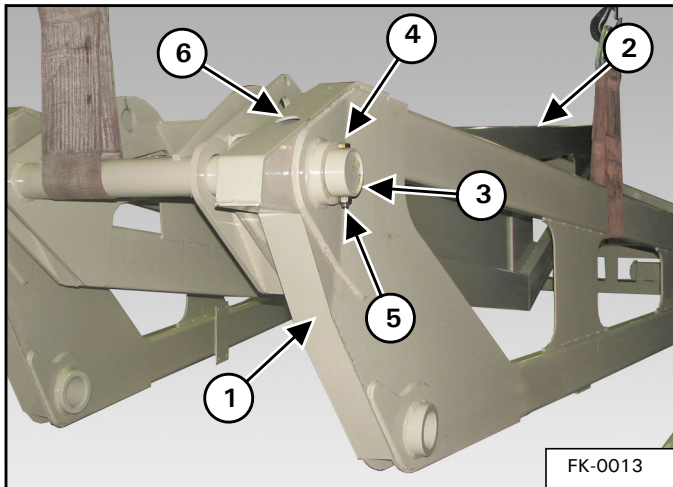

Align the LH lower lift arm (Item 1) to the upper lift link (Item 2) **[Figure 90]**.


Slide the LH lower lift arm onto the upper lift link shaft until it is fully installed on the shaft.

Install the pin sleeve (Item 3) **[Figure 90]** onto the upper link arm shaft.

Install the 3/4" x 5-1/2" bolt (Item 4) and 3/4" lock nut (Item 5) **[Figure 90]** and tighten.

Install the grease zerk (Item 6) **[Figure 90]** (both sides).

Figure 91

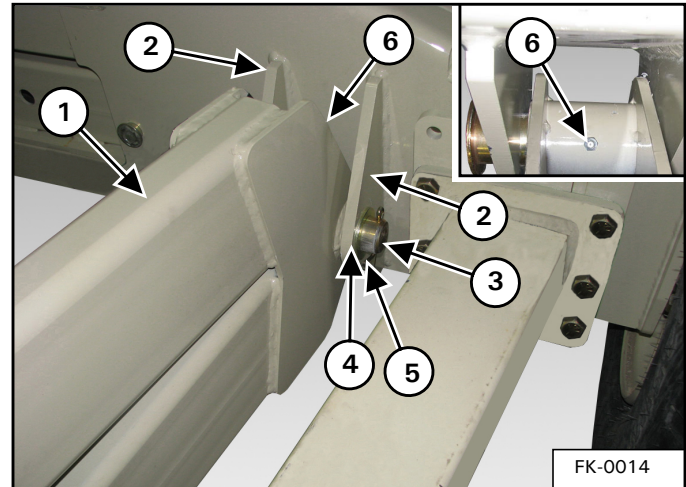


Align the LH lower lift arm (Item 1) with the two mounts (Item 2) **[Figure 91]** on the axle.

Install one 2" diameter pin (Item 3) **[Figure 91]** through the axle mounts and LH lower lift arm.

Install one 2" narrow rim washer (Item 4) onto the pin and 5/16" x 3" cotter pin (Item 5) **[Figure 91]**.

Install the grease zerk (Item 6) **[Figure 91]**.

Figure 92

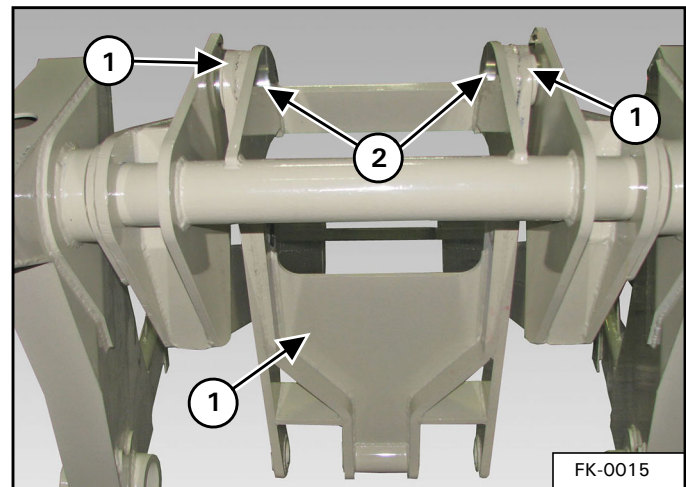


Install straps to the upper pivot yoke (Item 1) **[Figure 92]**.

Connect the straps to an approved lifting device.

Raise and position the upper pivot yoke as shown. Align the upper pivot yoke with the upper lift link holes (Item 2) **[Figure 92]**.


Figure 93

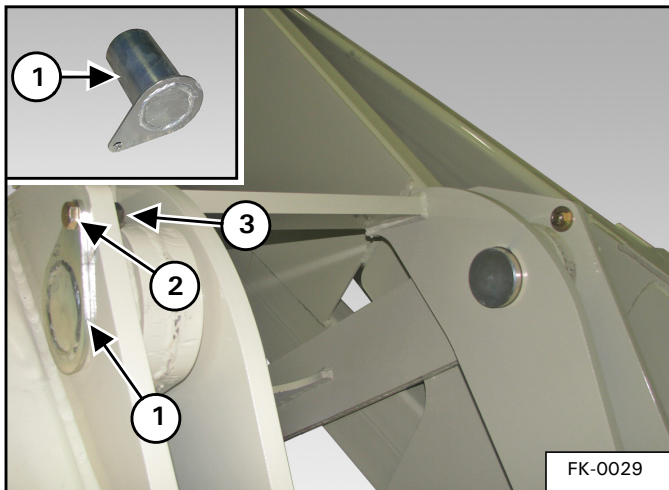

Apply a light coat of grease to the 3" diameter pin (Item 1) [Figure 93] and install the 3" diameter pin through the upper lift link and upper pivot yoke (both sides).

Align the 3" diameter pin bolt hole and install the 1/2" x 2" bolt (Item 2), 1/2" washer and 1/2" lock nut (Item 3) (both sides) [Figure 93]. Tighten bolts.

Figure 94

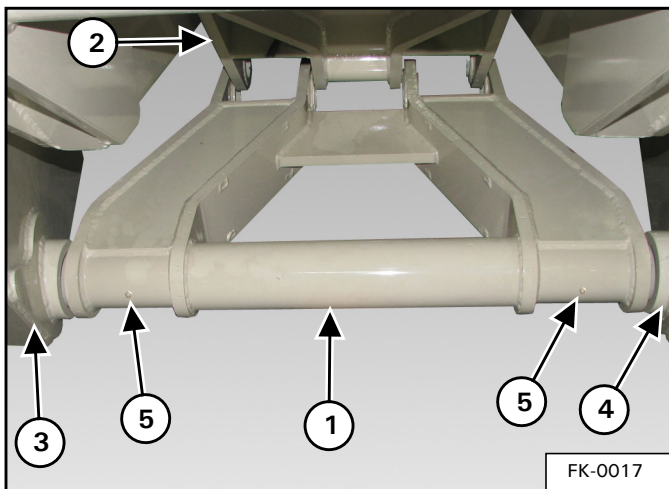

Install straps to the lower pivot yoke (Item 1) [Figure 94].


Connect the straps to an approved lifting device.

Position the lower pivot yoke as shown onto the upper pivot yoke (Item 2) [Figure 94].

Align the lower pivot yoke with the RH lower lift arm (Item 3) and LH lower lift arm (Item 4) [Figure 94].


Install the two grease zercks (Item 5) [Figure 94].

Figure 95

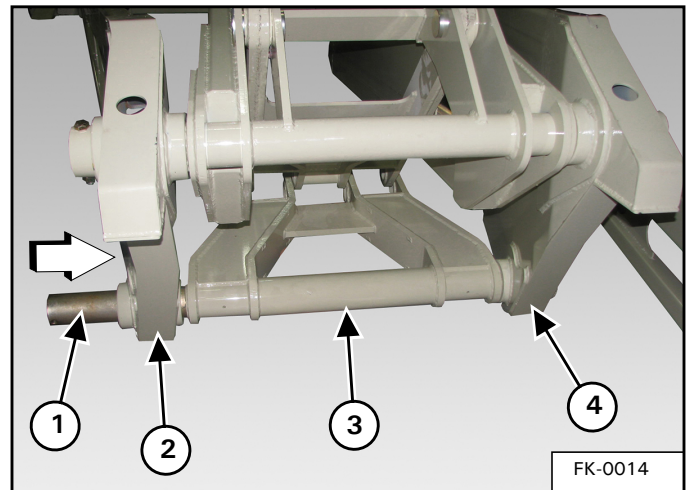

Apply a light coat of grease to the 4" diameter pin (Item 1) and install the 4" diameter pin into the RH lower lift arm (Item 2) through the lower pivot yoke (Item 3) and LH lower lift arm (Item 4) [Figure 95].


Figure 96

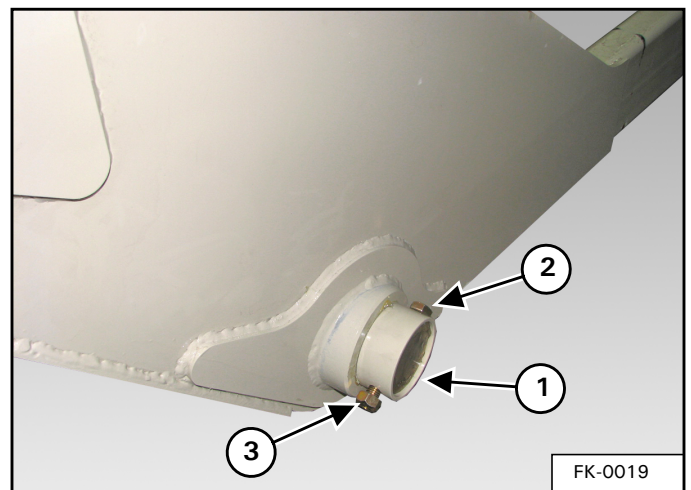

Install the pin sleeve (Item 1) [Figure 96] onto the 4" pin.

Install the 3/4" x 5-1/2" bolt (Item 2) and 3/4" lock nut (Item 3) [Figure 96] and tighten.

Figure 97

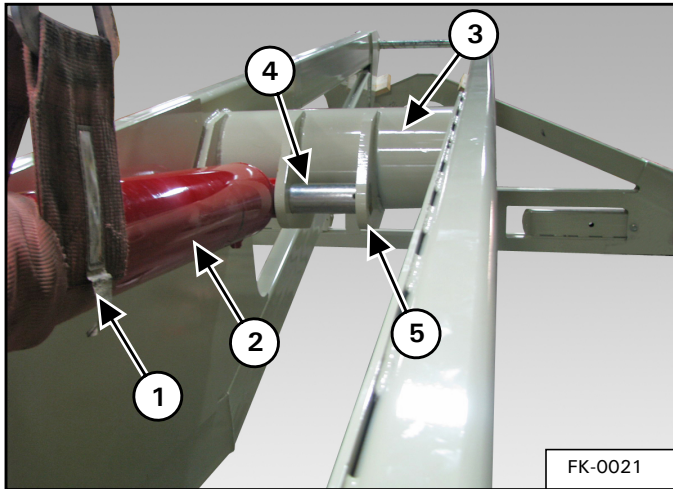

Install a strap (Item 1) around the hydraulic cylinder (Item 2) [Figure 97].

NOTE: The hydraulic cylinder ports must face down when installed.

Connect the strap to an approved lifting device.


Raise and move the hydraulic cylinder (base end) toward the upper lift link cylinder mount (Item 3) [Figure 97].

Align the hydraulic cylinder in the mount.

Apply a light coat of grease to the 3" diameter pin (Item 4) [Figure 97].

Install the pin through the mount holes and hydraulic cylinder until the 3" diameter pin is in the other cylinder mount (Item 5) [Figure 97].

Figure 98

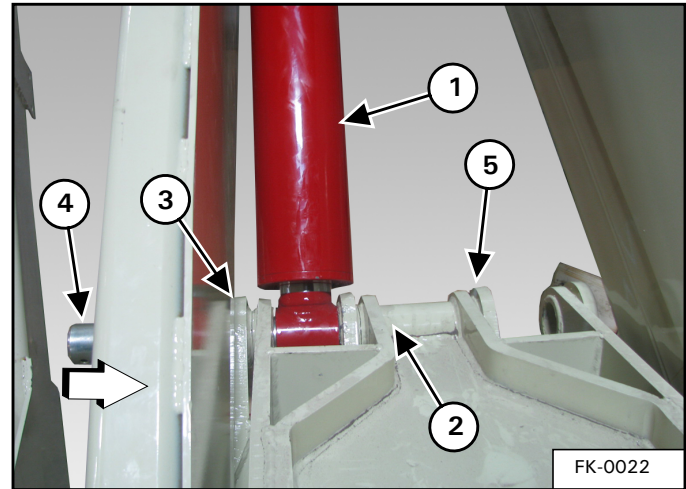


NOTE: The hydraulic cylinder rod ends must be installed with grease zerks face down.

Lower the hydraulic cylinder (Item 1) and align the hydraulic cylinder (rod end) with the upper pivot yoke (Item 2) and lower pivot yoke (Item 3) [Figure 98].

Apply a light coat of grease to the 3" diameter pin (Item 4) [Figure 98].

Install the pin through the hydraulic cylinder until the pin is at the next hydraulic cylinder location (Item 5) [Figure 98].

Figure 99

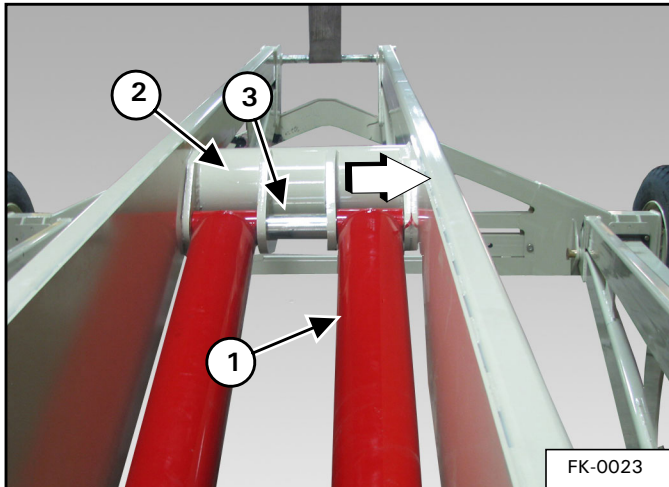


Install a strap around the hydraulic cylinder (Item 1) [Figure 99].

Connect the strap to an approved lifting device.

Raise and move the hydraulic cylinder (base end) toward the upper lift link cylinder mount (Item 2) [Figure 99].


Align the hydraulic cylinder in the mount and install the 3" diameter pin (Item 3) [Figure 99] through the hydraulic cylinder and mount holes.

Figure 100

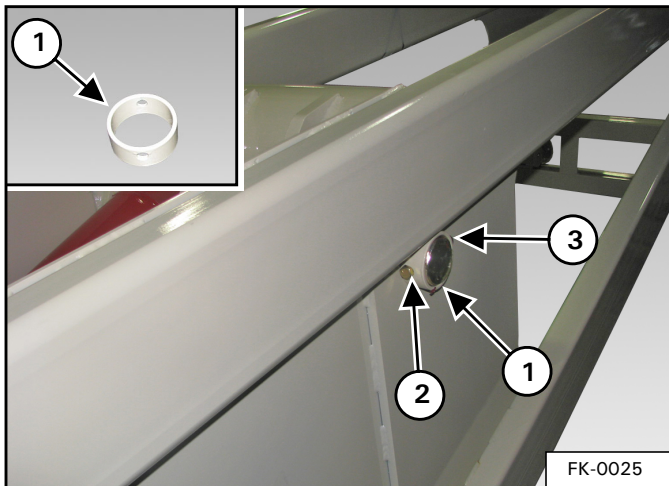

Install the pin sleeve (Item 1), 1/2" x 4-1/2" bolt (Item 2) and 1/2" lock nut (Item 3) [Figure 100] (both sides).


Figure 101

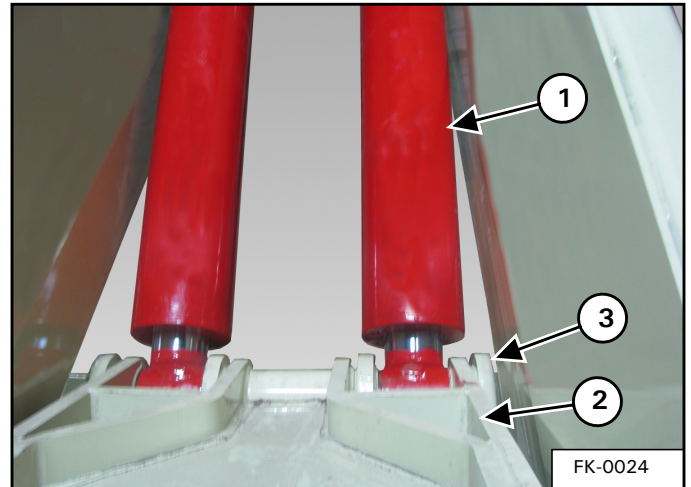

Lower the hydraulic cylinder (Item 1) and align the hydraulic cylinder (rod end) with the upper pivot yoke (Item 2) and lower pivot yoke (Item 3) [Figure 101].


Install the 3" diameter pin.

Figure 102

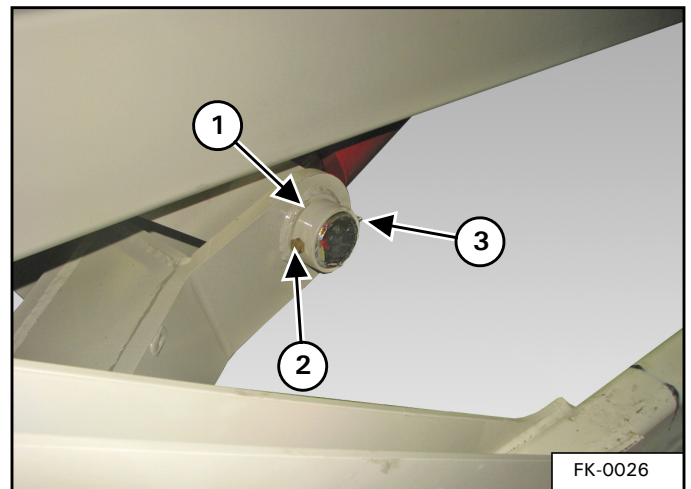

Install the pin sleeve (Item 1), 1/2" x 4-1/2" bolt (Item 2) and 1/2" lock nut (Item 3) [Figure 102] (both sides).

Figure 103

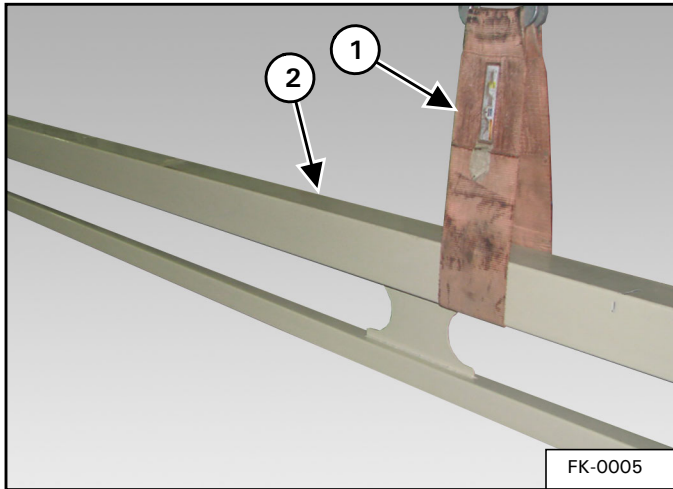


Install a strap (Item 1) around the center of the RH undercarriage arm (Item 2) [Figure 103].

Connect the strap to an approved lifting device.

Raise and move the RH undercarriage arm towards the axle.


Figure 104

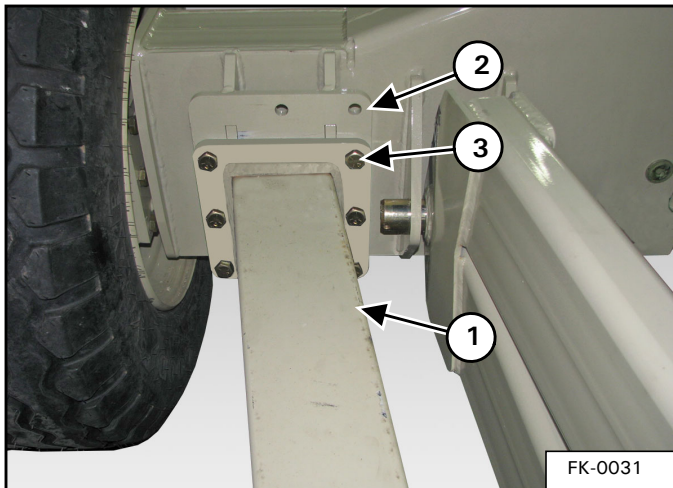

Align the RH undercarriage arm (Item 1) with the mounting flange (Item 2) on the axle [Figure 104].

Install the six 3/4" x 2-1/2" bolts (Item 3) [Figure 104] and 3/4" lock nuts. Do not tighten bolts and nuts at this time.


Figure 105

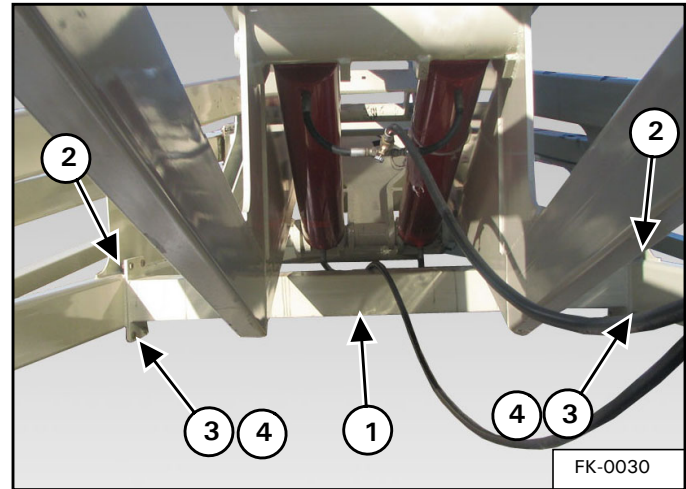

Install the support brace (Item 1) between the support arm mounts (Item 2) [Figure 105] located on the RH lower lift arm and LH lower lift arm.

Align the support brace to the mounts and install four 5/8 x 1-1/2" bolts (Item 3) and 5/8" lock nuts (Item 4) [Figure 105] (both sides). Do not tighten bolts and nuts at this time.

Figure 106

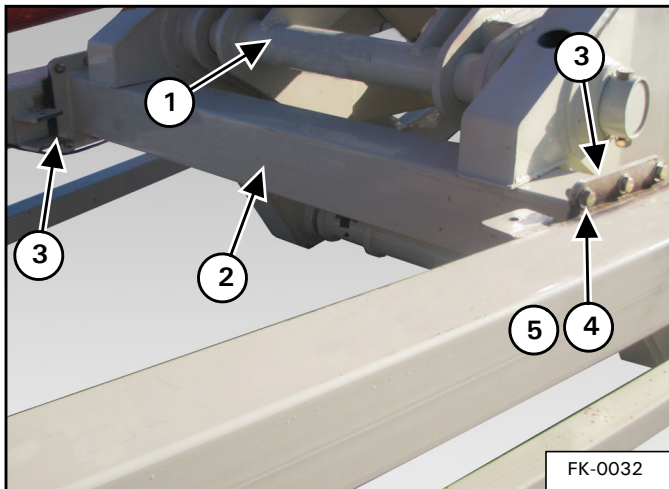

Using a strap and proper lifting device, raise the upper link arm (Item 1) [Figure 106].

Install a strap(s) around the cross brace support (Item 2) [Figure 106].


Connect the strap to an approved lifting device.

Raise and move the cross brace support between the RH and LH undercarriage arms cross brace mounts (Item 3) [Figure 106].

Install the six 5/8" x 1-1/2" bolts (Item 4) and 5/8" lock nuts (Item 5) [Figure 106] (both sides). Do not tighten bolts at this time.

Remove strap and lifting device from the cross brace support, lower the upper link arm onto the cross brace support. Remove strap and lifting device.

Figure 107

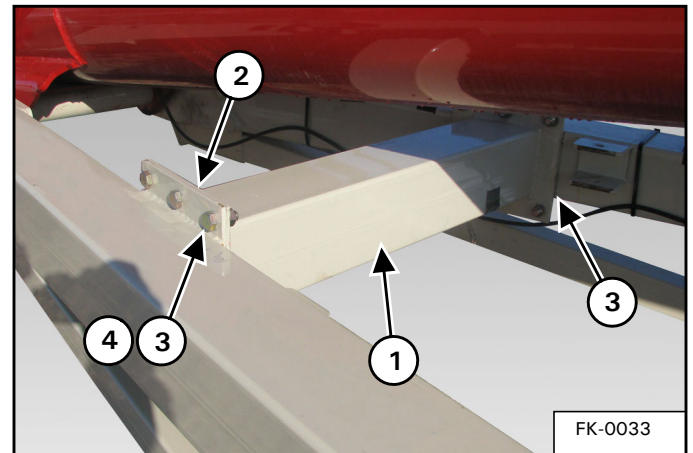


Install a strap(s) around the cross brace support (Item 1) [Figure 107].

Connect the strap to an approved lifting device.

Raise and move the cross brace support (Item 1) between the RH and LH undercarriage arms cross brace mounts (Item 2) [Figure 107].

Install the six 5/8" x 1-1/2" bolts (Item 3) and 5/8" lock nuts (Item 4) [Figure 107] (both sides). Do not tighten bolts at this time.

Figure 108

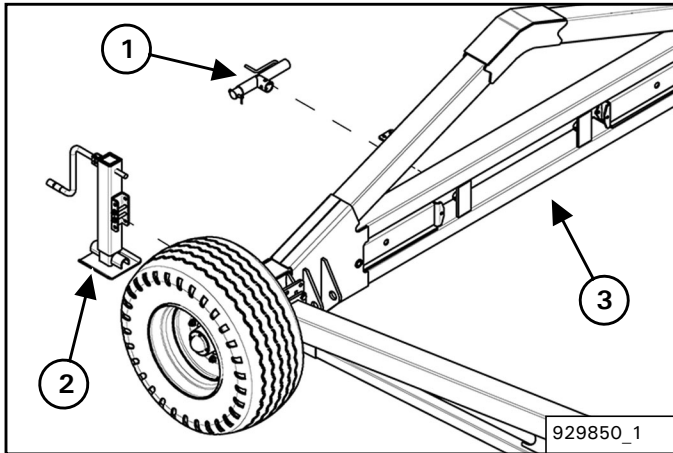


Install the axle adjust jack (Item 1) [Figure 108] as shown to the mount on the axle and secure with the 1/2" x 3-1/2" clevis pin and hair pin clip.

Repeat procedure for opposite side.

Place the jack stand (Item 2) [Figure 108] into mount on the axle, install two bolts and lock nuts. Tighten bolts.

Repeat procedure for opposite side.

Figure 109

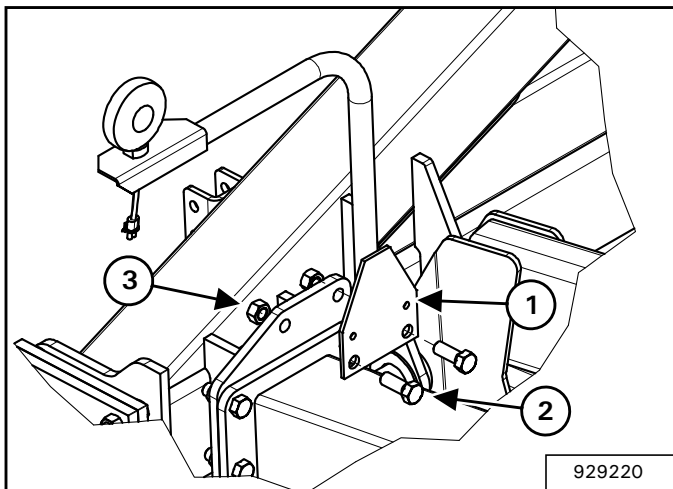

Install the RH blinker mount (Item 1), on the RH side of the axle.

Install the two 3/4" x 2" bolts (Item 2) and two 3/4" lock nuts (Item 3) [Figure 109].

Repeat procedure for the LH blinker mount.

1684 & 16104 Tube Assembly

Assemble the tube on flat level surface.




- DO NOT permit bystanders to be in the work area when unloading and assembling the auger components.
- DO NOT work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 110

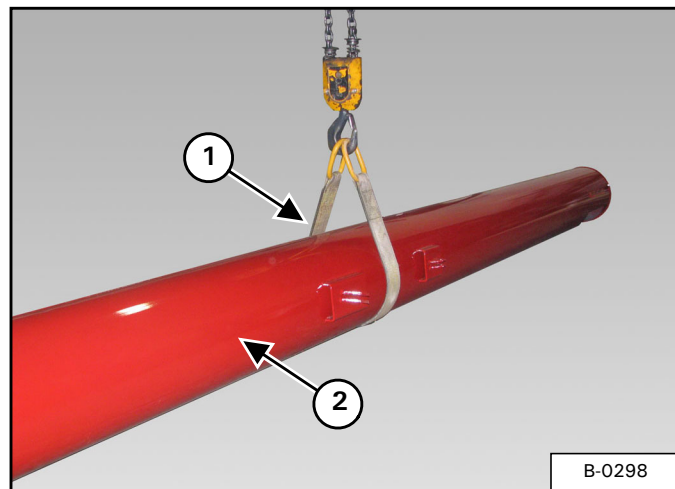

Install a strap (Item 1) around #4 tube (1684) or #5 tube (16104) (Item 2) [Figure 110].


Raise and move the #4 tube (1684) or #5 tube (16104) to the assembly area.

Figure 111




Place a block (Item 1) [Figure 111] under the discharge spout end of the tube. Lower the tube onto the block. Remove strap.

Figure 112

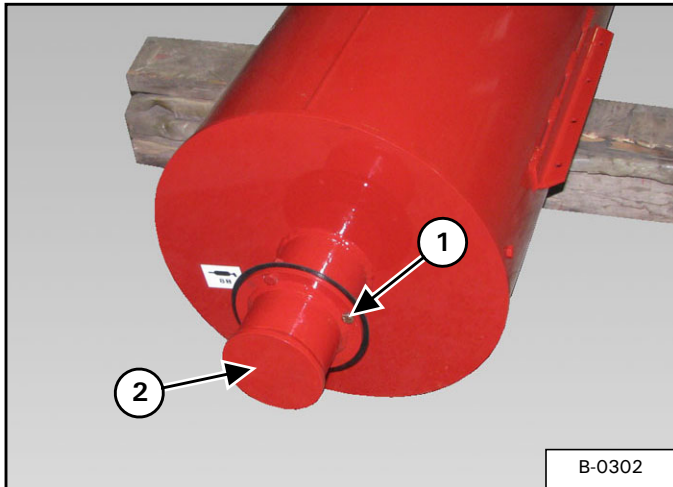

Remove the four bolts (Item 1) and remove the dust cap (Item 2) [Figure 112].


Figure 113

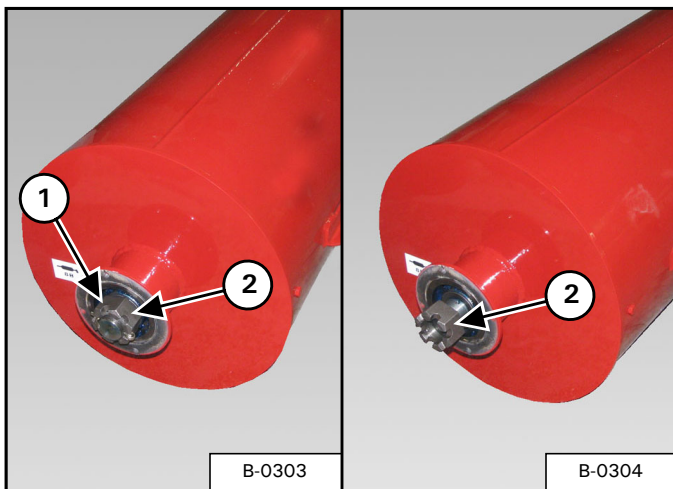

Remove the cotter pin (Item 1) and loosen the castle nut (Item 2) [Figure 113]. Do not remove the castle nut.

NOTE: Loosening the castle nut will allow the flighting to move in the tube for connecting additional tubes.

Figure 114

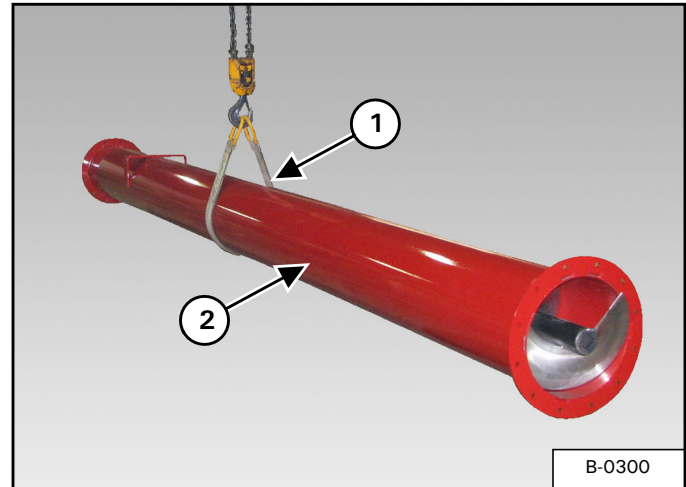

Model 1684


Install a strap (Item 1) around #3 tube (Item 2) [Figure 114].

Model 16104

Install a strap (Item 1) around #4 tube (Item 2) [Figure 114].

Raise and move the #3 tube (1684) or #4 tube (16104) tube to the assembly area.

Figure 115

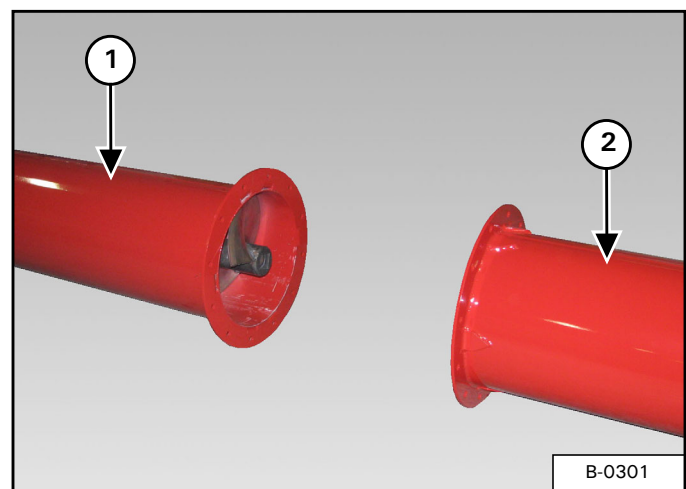


Model 1684

Align the mounting flanges of the #4 tube (Item 1) and #3 tube (Item 2) [Figure 115].

Model 16104


Align the mounting flanges of the #5 tube (Item 1) and #4 tube (Item 2) [Figure 115].

Figure 116

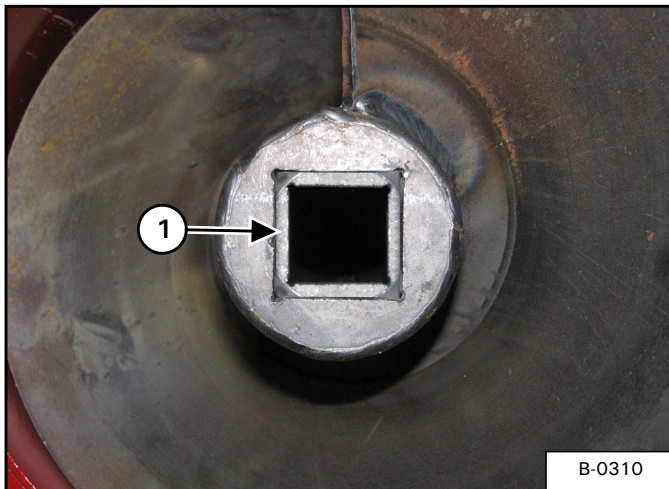

When installing the connecting shaft, the shaft will need to be aligned with and inserted into the inner collar (Item 1) [Figure 116] of flying tube.

Figure 117

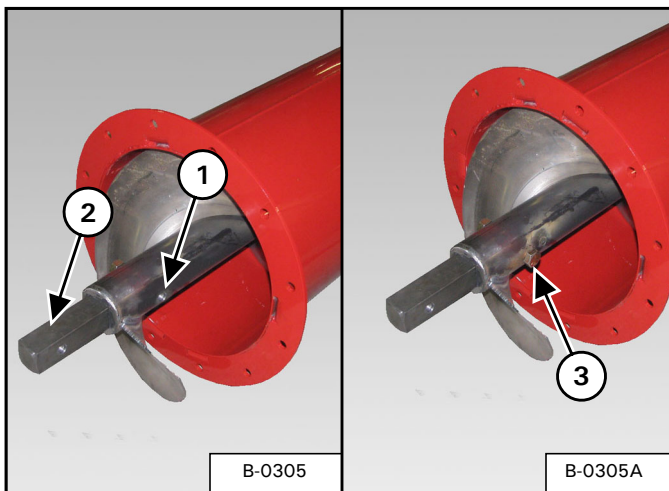


Slide the flying out of the #4 tube (1684) or #5 tube (16104) until the bolt hole (Item 1) [Figure 117] is clear of the mounting flange.

Align the bolt holes and install the connecting shaft (Item 2) [Figure 117].


Install and tighten one 3/4" x 4-1/2" bolt (Item 3) [Figure 117] and 3/4" lock nut.

Figure 118

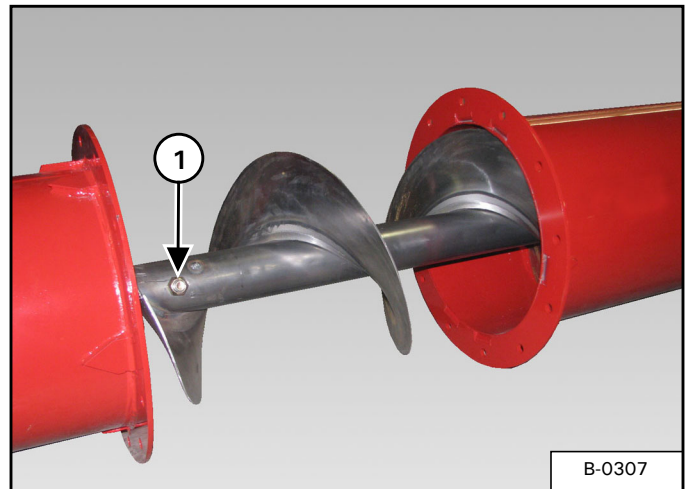

Slide the flying from the #3 tube (1684) or #4 tube (16104) forward onto the connecting shaft and install one 3/4" x 4-1/2" bolt (Item 1) [Figure 118] and 3/4" lock nut. Tighten bolt and lock nut.

Figure 119

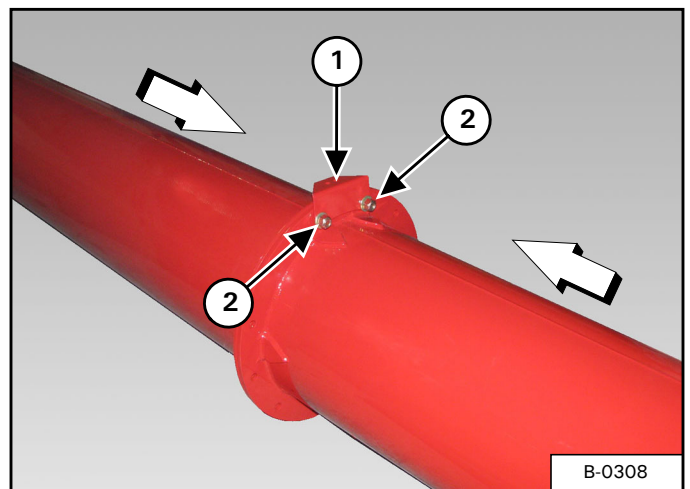


Slide the #4 tube and #3 tube (1684) or #5 tube and #4 tube (16104) together until the mounting flanges contact each other [Figure 119].

Align and install the mounting bracket (Item 1) (with the angled flange (top) towards the discharge spout).

NOTE: Place one 5/8" flat washer on each (Grade 8) 5/8" x 2" bolt before installing.

Install two (Grade 8) 5/8" x 2" bolts (Item 2) [Figure 119] (with flat washers) through the tube flanges and mounting bracket. Install one 5/8" flat washer and 5/8" lock nut on each bolt. Do not tighten bolts and lock nuts at this time.

Figure 120

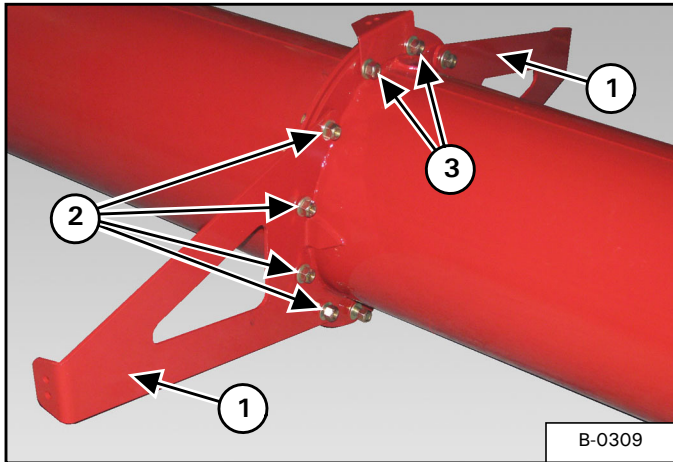

Align and install two side bridging brackets (Item 1) [Figure 120].

NOTE: Place one 5/8" flat washer on each (Grade 8) 5/8" x 2" bolt before installing.

Install four (Grade 8) 5/8" x 2" bolts (Item 2) [Figure 120] (with flat washers) through the tube flanges and side bridging brackets (both sides). Install one 5/8" flat washer and 5/8" lock nut on each bolt.


Install the bottom two (Grade 8) 5/8" x 2" bolts (with flat washers) through the tube mounting flanges. Install one 5/8" flat washer and 5/8" lock nut on each bolt.

Raise the opposite end of #3 tube (1684) or #4 tube (16104) until the mounting flanges make contact.

Tighten the top two bolts (Item 3) [Figure 120] and lock nuts first.

Lower #3 tube (1684) or #4 tube (16104) and tighten bottom two bolts and lock nuts.

Figure 121

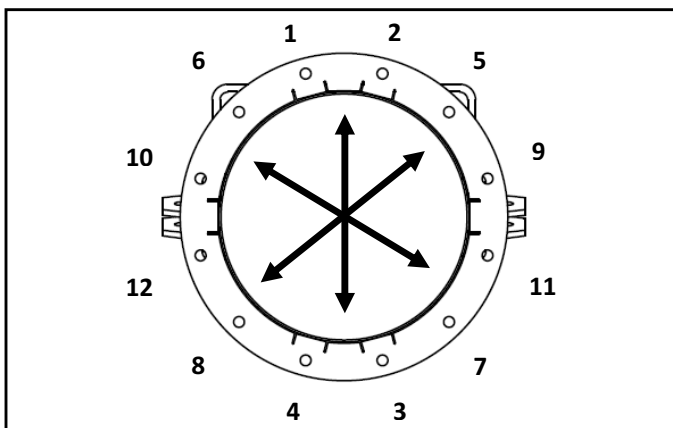

Install remaining bolts and tighten bolts in a criss-cross pattern [Figure 121], working around the mounting flanges.

Repeat [Figure 117] thru [Figure 121] for the remaining tubes.


Locate and uncoil the four 3/4" cables.

Locate and uncoil the two 1/2" cables.

Place one long and one short 3/4" cable on each side of the tube assembly (longest 3/4" cable towards the outside).

Place one 1/2" cable outside of the 3/4" cables.


Figure 122

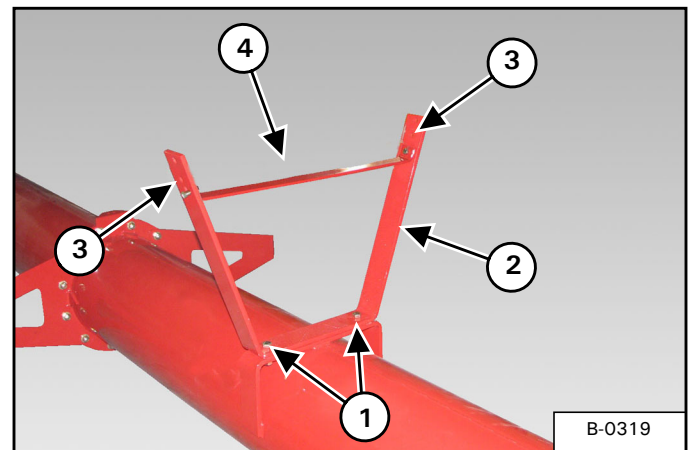

Using two 5/8" x 2" bolts (Item 1) and 5/8" lock nuts, align and install the 1/2" x 3" x 60" #3 tube (1684) or #4 tube (16104) bridging yoke (Item 2) [Figure 122] (onto the #3 tube (1684) or #4 tube (16104)). Tighten bolts and lock nuts.

Using two 1/2" x 1-3/4" bolts (Item 3) and 1/2" lock nuts, install the 3/8" x 2" x 27-3/4" bridging brace (Item 4) [Figure 122] (use bottom holes). Tighten bolts and lock nuts.

Figure 123

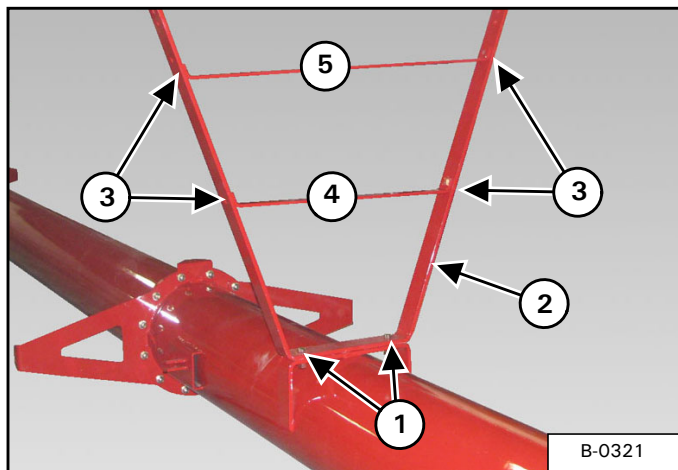


Model 16104 Only

Using two 5/8" x 2" bolts (Item 1) and 5/8" lock nuts, align and install the 1/2" x 3" x 103" #3 tube bridging yoke (Item 2) [Figure 123] (onto the #3 tube). Tighten bolts and lock nuts.

Using four 1/2" x 1-3/4" bolts (Item 3) and 1/2" lock nuts, install the 3/8" x 2" x 31-5/8" lower bridging brace (Item 4) and 3/8" x 2" x 43" upper bridging brace (Item 5) [Figure 123] (use bottom holes for upper brace). Tighten bolts and lock nuts.

Figure 124

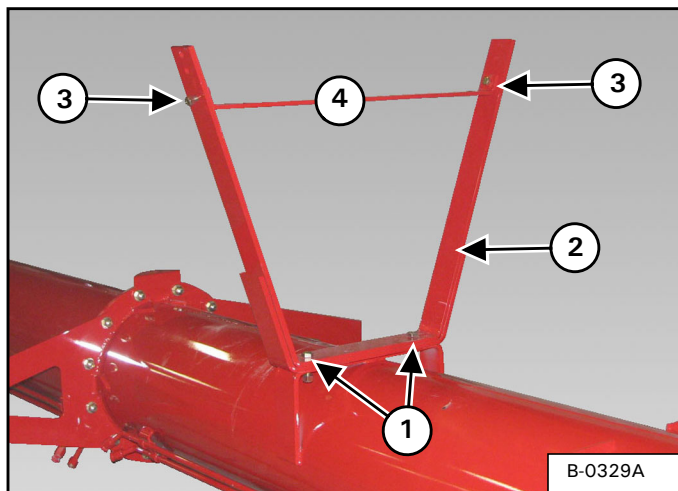


Using two 5/8" x 2-1/2" bolts (Item 1) and 5/8" lock nuts, align and install the 3" x 35-5/8" x 28-1/4" bridging yoke (Item 2) [Figure 124] (onto the #1 tube). Tighten bolts and lock nuts.

Using two 1/2" x 1-3/4" bolts (Item 3) and 1/2" lock nuts, install the 3/8" x 34" bridging brace (Item 4)


[Figure 124] (use bottom holes). Tighten bolts and lock nuts.

Figure 125

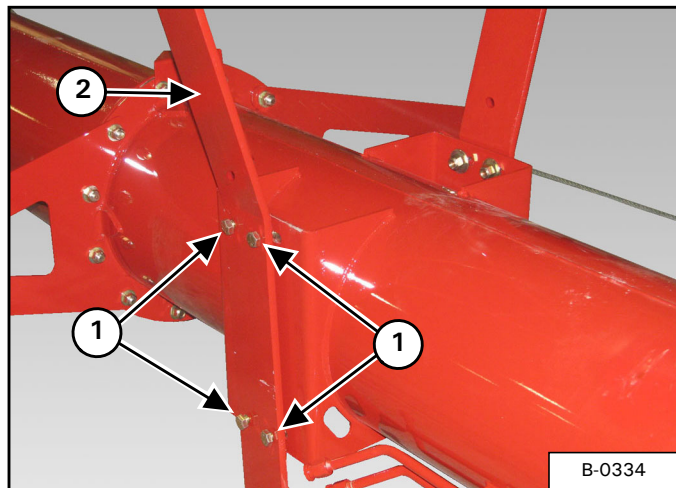

Using four 5/8" x 2" bolts (Item 1), four 11/16" flat washers and 5/8" lock nuts, align and install one bridging plate (Item 2) [Figure 125] (onto the #2 tube) (both sides). Snug up bolts so bridging and tube plate are together but not tight.


Figure 126

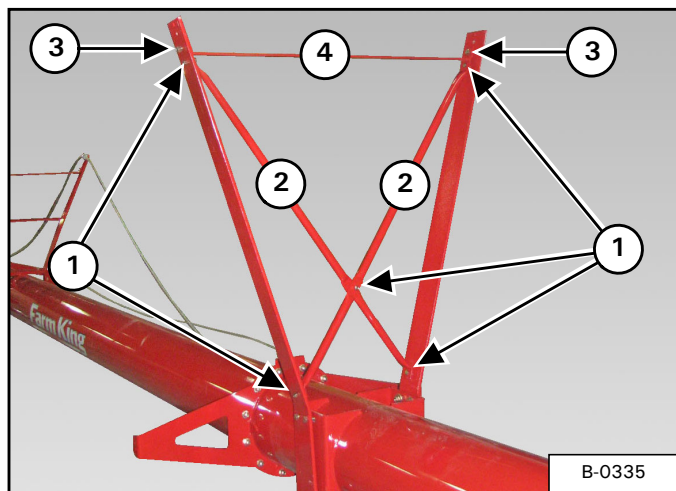

Using five 1/2" x 1-3/4" bolts (Item 1) and 1/2" lock nuts, align and install the two bridging cross braces (Item 2) [Figure 126].

Using two 5/8" x 2" bolts (Item 3) and 5/8" lock nuts, align and install the upper bridging brace (Item 4) [Figure 126]. Tighten bolts and lock nuts.

Figure 127

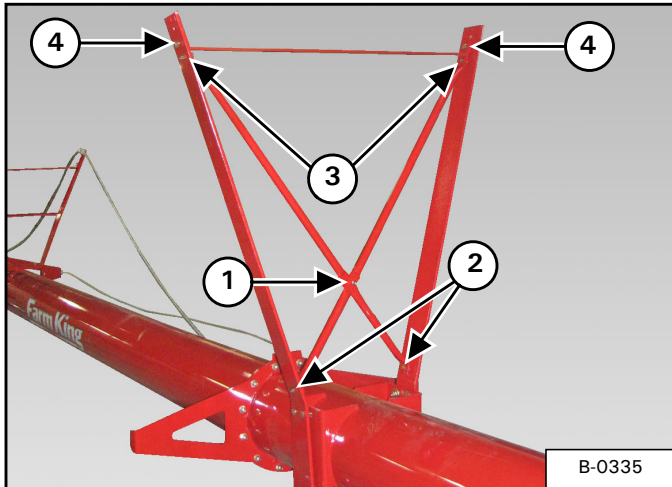


Tighten center cross brace bolt (Item 1) [Figure 127] and lock nut first.

Tighten the bottom cross brace bolts (Item 2) and lock nuts, then tighten upper cross brace bolts (Item 3) [Figure 127] and lock nuts.

Tighten the two upper bridging brace bolts (Item 4) [Figure 127] and lock nuts


Figure 128

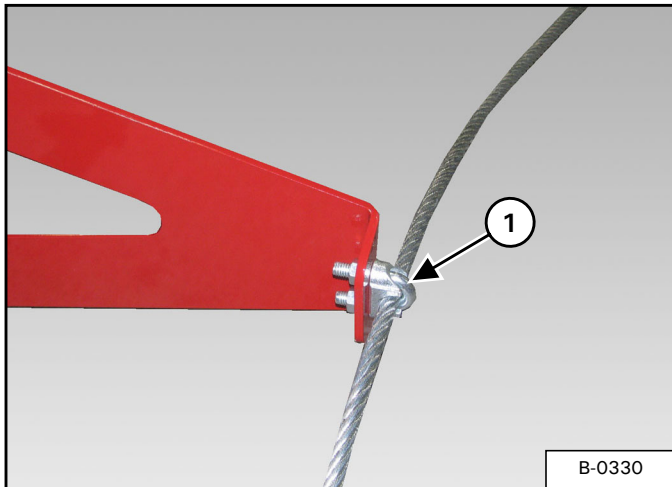

Install one 1/2" cable clamp (Item 1) [Figure 128] around the 1/2" cable, then install into the side bridging bracket. Do not tighten cable clamp at this time.

Install one 1/2" cable clamp on each side bridging bracket (both sides). Do not tighten the 1/2" cable clamps at this time.


Figure 129

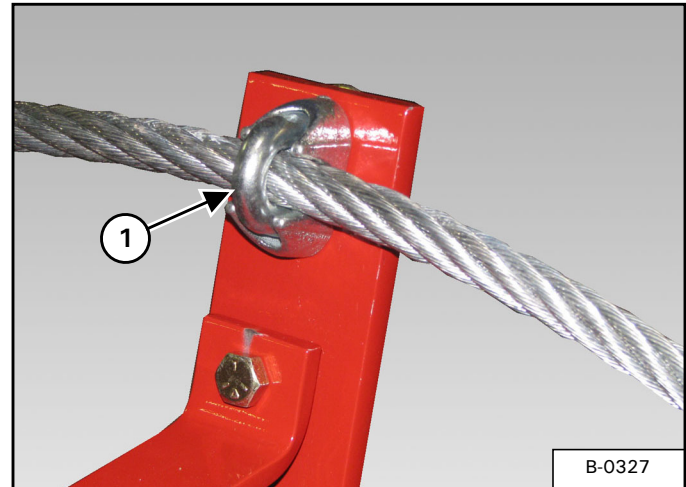

Install one 3/4" cable clamp (Item 1) [Figure 129] around the long 3/4" cable, then install into the upper bridging yoke (on the #3 & #1 tubes). Do not tighten cable clamp at this time.

Install one 3/4" cable clamp on two shorter bridging yokes (on the #4 tube) side bridging bracket (both sides). Do not tighten the 3/4" cable clamps at this time.

Figure 130

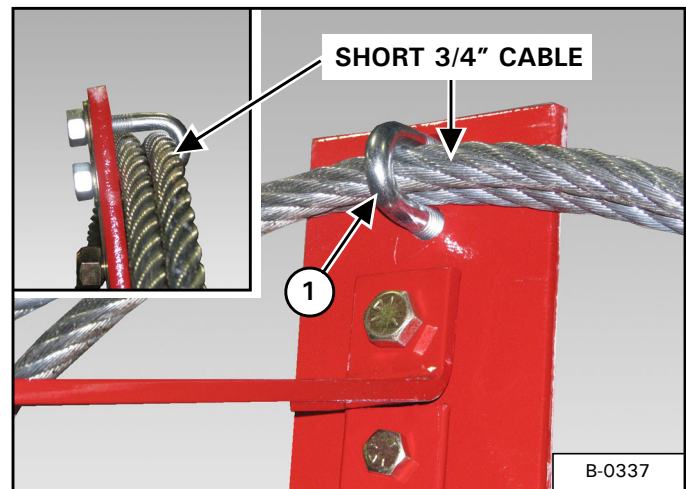


NOTE: Remove clamp section of two 3/4" cable clamps. Use only the u-bolts and nuts.

NOTE: When installing the u-bolt around the two 3/4" cables, place the short 3/4" cable into the u-bolt first (both sides).

Install one 3/4" cable clamp (Item 1) [Figure 130] around both the long and short 3/4" cables, then install into the bridging plate (on the #2 tube) (both sides). Do not tighten cable clamp at this time.

Figure 131

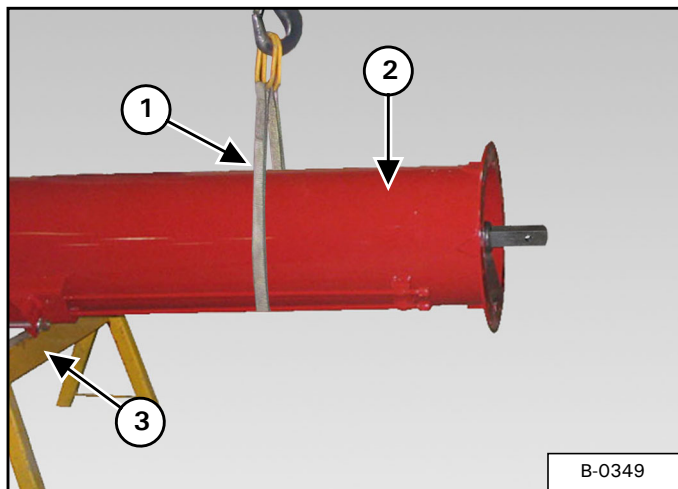


Install a strap (Item 1) around the end of #1 tube (Item 2) [Figure 131].

Raise and place a support stand (Item 3) [Figure 131] under the tube, lower the tube onto the support stand.


Remove strap.

Figure 132

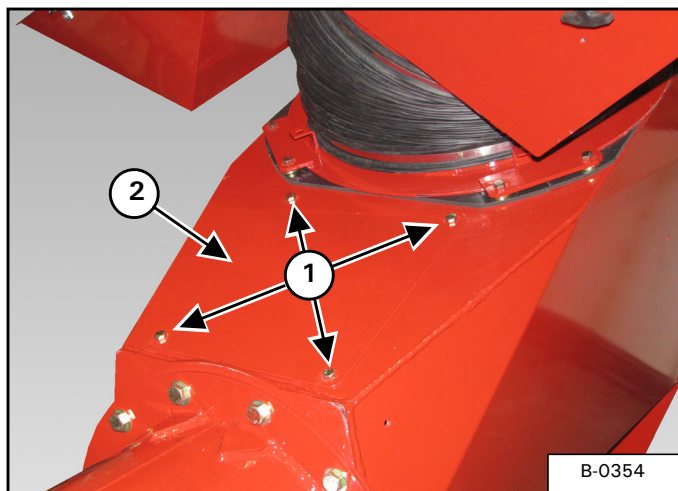

Remove the four bolts (Item 1) and cover (Item 2) [Figure 132] from the intake auger.


Figure 133

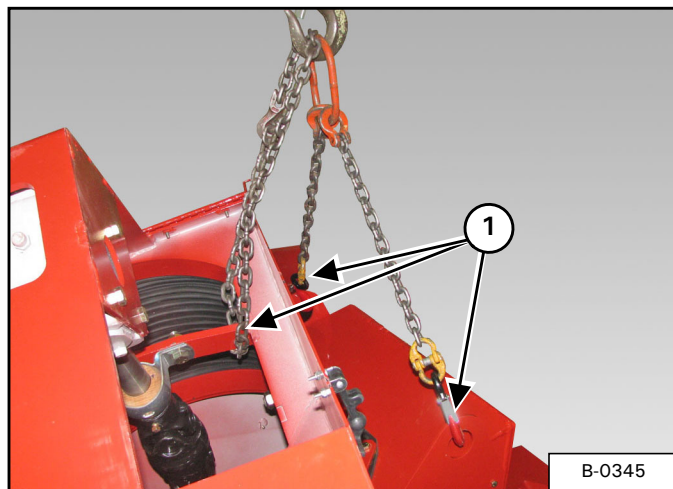

Install chains on the intake auger in the positions (Item 1) [Figure 133] shown.


Raise the intake auger and move to the end of the #1 tube.

Figure 134

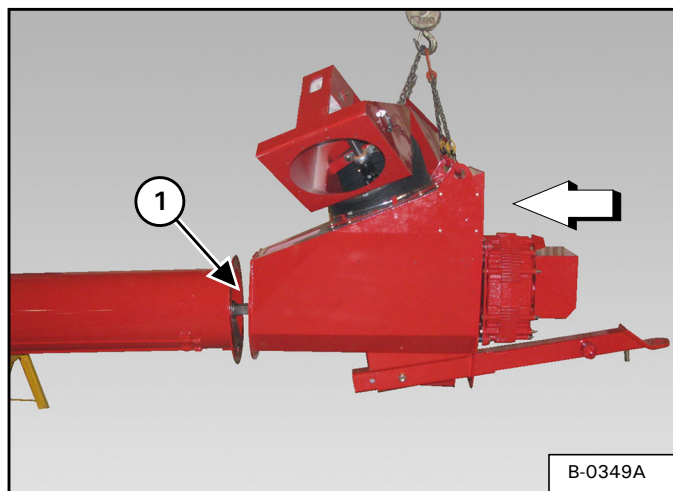

Align and install the intake auger onto the connecting shaft (Item 1) [Figure 134] of the #1 tube.

Figure 135

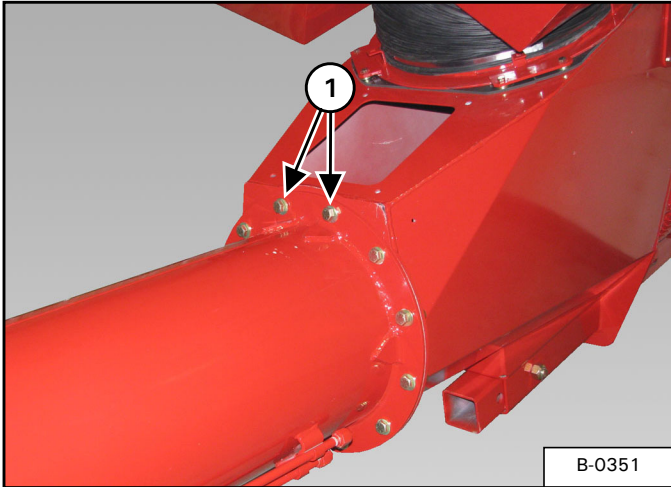


Install the 12 (Grade 8) 5/8" x 2" bolts and 5/8" lock nuts around the mounting flanges of the #1 tube and intake auger.

Tighten the top two bolts (Item 1) [Figure 135] and lock nuts first.


Starting at the left or right of the top two bolts, tighten bolts and lock nuts across from each other, while working around the mounting flanges.

Figure 136

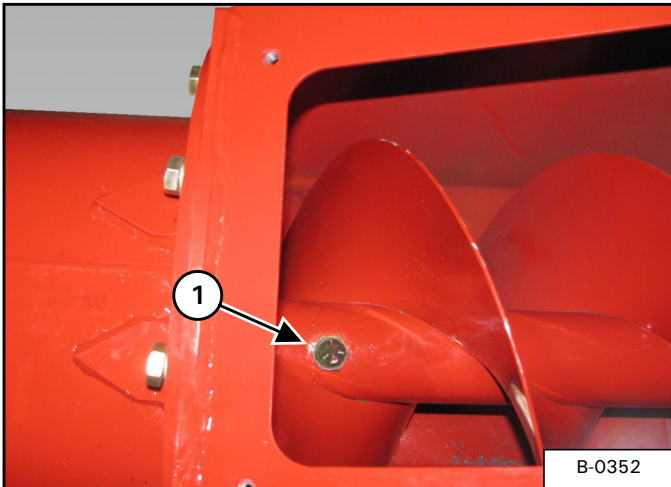


Install one 3/4" x 4-1/2" bolt (Item 1) [Figure 136] and 3/4" lock nut.

Figure 137

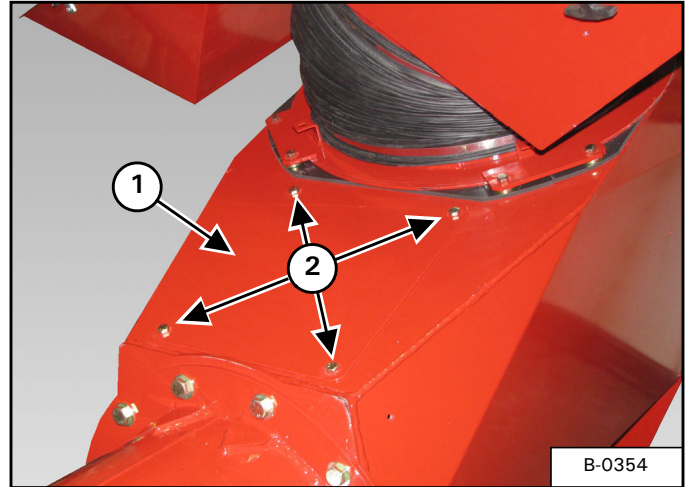


Install the cover (Item 1) and four bolts (Item 2) [Figure 137] on the intake auger.

Figure 138

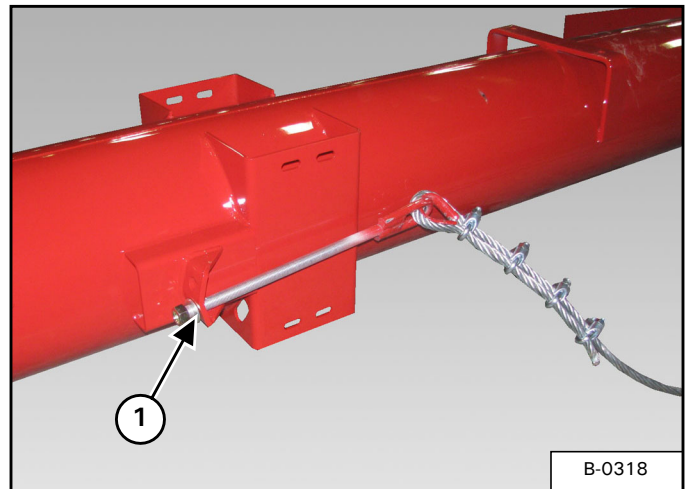


Install the eyebolt (Item 1) [Figure 138] of the short 3/4" cable into the center hole of the mounting bracket on the #1 tube (both sides).

Figure 139

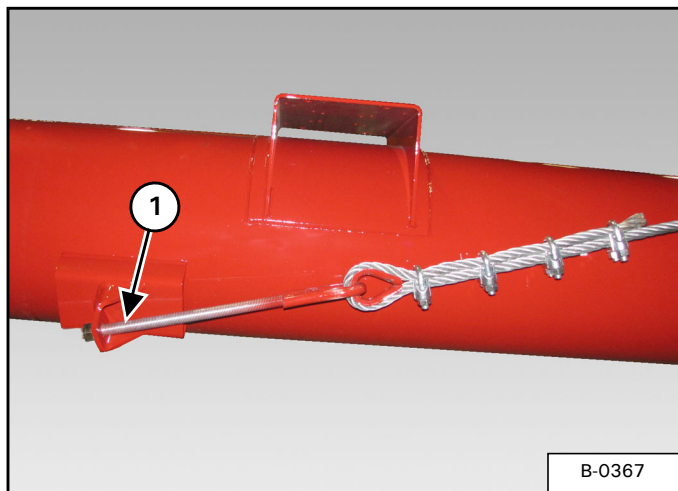

Install the eyebolt (Item 1) [Figure 139] of the long 3/4" cable into the forward mounting bracket on the #1 tube (both sides).

Figure 140

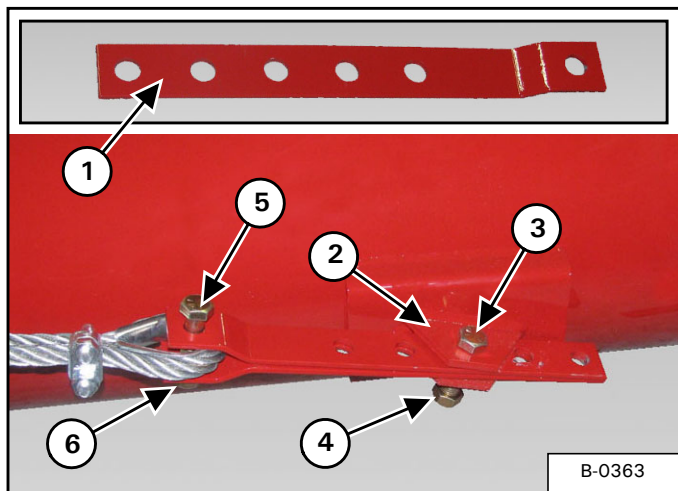

Locate two cable yoke brackets (Item 1) [Figure 140] (3/4" cables).

Install the 3/4" cable loop into the end of the cable yoke bracket.


Install one 3/4" x 3" bolt (Item 3) through the mounting bracket and cable yoke bracket. Install one 3/4" lock nut (Item 4) [Figure 140] on the bolt. Do not tighten at this time.

Pull the 3/4" cable assembly as tight as possible. Align the closest hole of the cable yoke bracket with the mounting bracket (Item 2) [Figure 140] (angled up) on the #5 tube.

Install one 3/4" x 3" bolt (Item 5) through the cable yoke bracket and cable loop (long 3/4" cable). Install one 3/4" lock nut (Item 6) [Figure 140]. Do not tighten at this time.

Repeat the above procedure for the remaining three 3/4" cable connections.

Figure 141

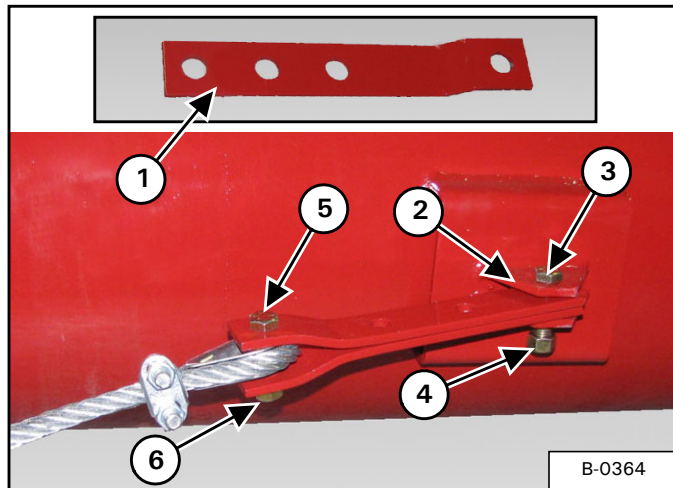

Locate two cable yoke brackets (Item 1) [Figure 141] (1/2" cables).

Install the 1/2" cable loop into the end of the cable yoke bracket.


Install one 1/2" x 2" bolt (Item 3) through the mounting bracket and cable yoke bracket. Install one 1/2" lock nut (Item 4) [Figure 141] on the bolt. Do not tighten at this time.

Align the end hole of the cable yoke bracket with the mounting bracket (Item 2) [Figure 141] (parallel with tube) on the #5 tube.

Install one 1/2" x 2" bolt (Item 5) through the cable yoke bracket and cable loop (1/2" cable). Install one 1/2" lock nut (Item 6) [Figure 141]. Do not tighten at this time.

Repeat the above procedure for the second 1/2" cable.

Figure 142

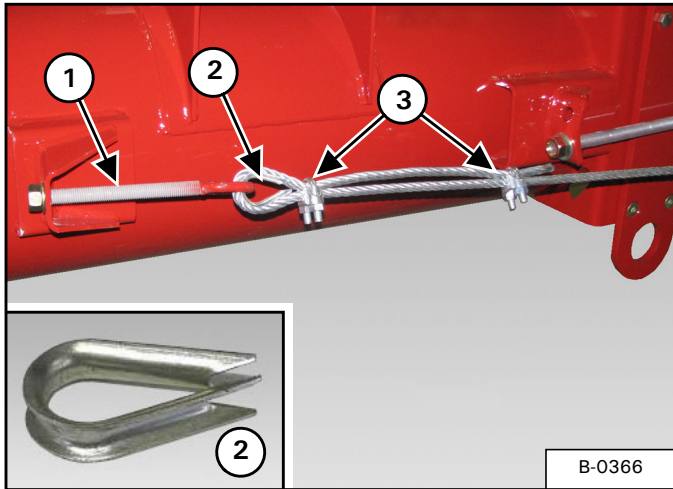

Install the eyebolt of the 1/2" cable into the mounting bracket (Item 1) [Figure 142] on the #1 tube (both sides).

Install the thimble (Item 2) onto the eyebolt (both sides).

Thread the 1/2" cable through the eyebolt (both sides). Pull cable as tight as possible.


! IMPORTANT

Always insert the tail of the cable into the clamp first when forming a loop in a cable.

Install the two 1/2" cable clamps (Item 3) [Figure 142] onto the cable. Slide the first cable clamp (loop end) as close to the thimble as possible and tighten (both sides).

Slide the second cable clamp approximately 2 inches (51 mm) from the end of the tail and tighten (both sides).


Figure 143

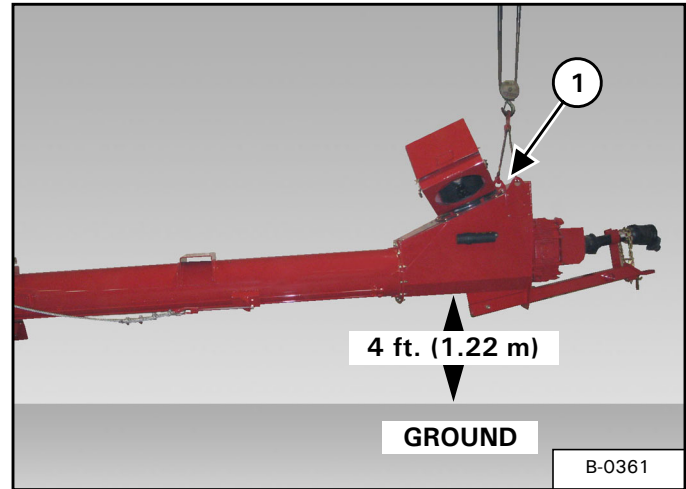

Install chains onto the two lifting hooks (Item 1) [Figure 143] on the intake auger.

Raise the intake auger / tube assembly approximately 4 ft. (1.22 m) off the ground [Figure 143].


Figure 144

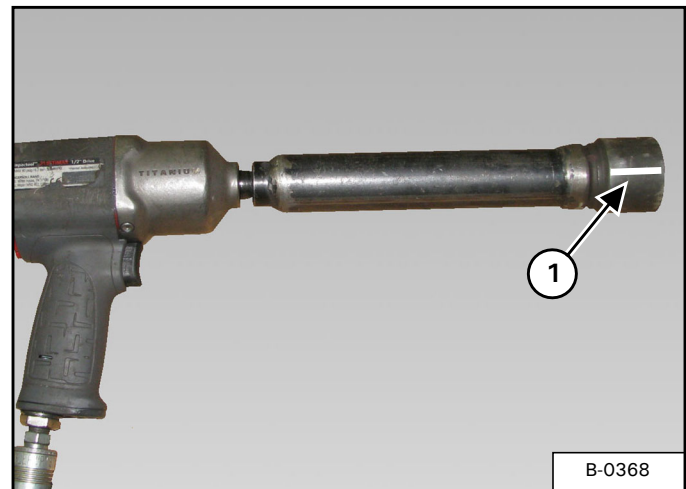

Place a mark (Item 1) [Figure 144] on the cable tightening tool. This will help to tighten the cables evenly.

Count the revolutions as the tool is turning while tightening.

Figure 145

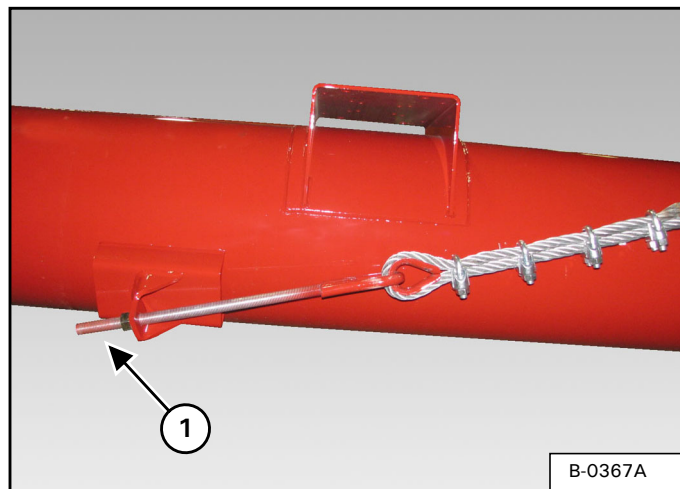

NOTE: Cable lengths may vary. The following is a starting point and cables may need to be tightened more or loosened depending on the cable length.

Tighten the long 3/4" cable until there is approximately 3 - 4 inches (76 - 102 mm) of exposed threads (Item 1) [Figure 145] on the eyebolt.

Repeat tightening procedure for the remaining cables.

NOTE: Tighten short 3/4" cables less than the longer 3/4" cables.


Lower the intake auger / tube assembly to the ground.

With the intake auger / tube assembly on the ground, the discharge spout end of the tube assembly should be bowed up (enough to install the discharge spout).

Stand behind the intake auger and look down the full length of the tube assembly to verify the tube is straight. Adjust 1/2" cables to straighten the tube (left to right) as needed.

With the tube assembly straight and slightly bowed up, tighten all the cable clamps and brackets on the tube assembly.

Figure 146

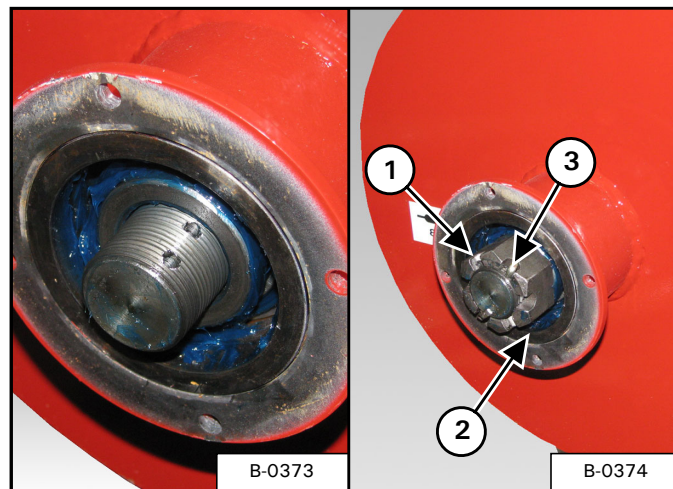


NOTE: The castle nut has been removed in the left picture to show cotter pin hole options.

With the tube assembly complete, tighten the castle nut (Item 1) until the castle nut contacts the washer / flighting shaft (Item 2) [Figure 146].

Check for cotter pin hole in the shaft. Tighten or back the castle nut off (applying some tension on the flighting) until the closest cotter pin hole(s) is exposed.


Install the cotter pin (Item 3) [Figure 146].

Figure 147

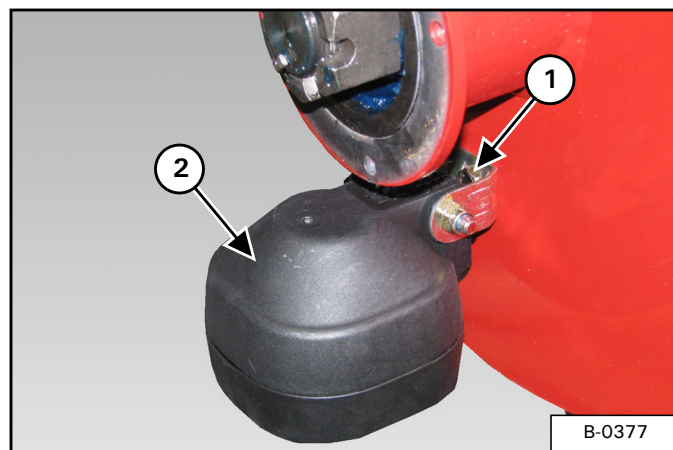

Using one bolt (Item 1) and lock nut (included with light), install the light (Item 2) [Figure 147].

Figure 148

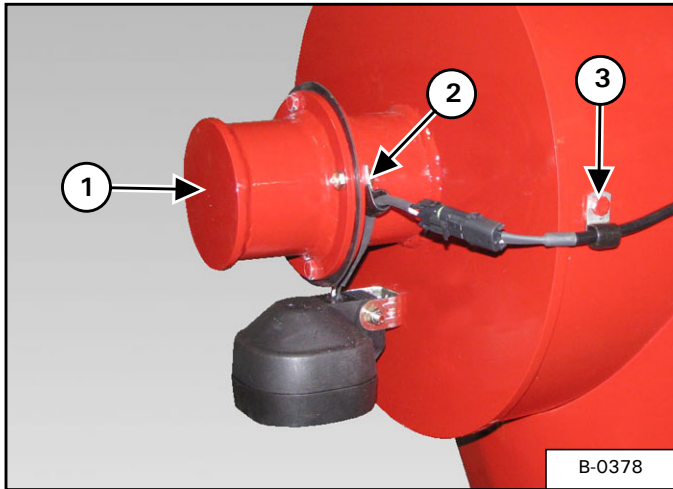

Install the dust cap (Item 1) [Figure 148] using the four bolts and lock nuts removed at the start of the tube assembly.


Install a cable clamp around the light pigtail.

When installing the dust cap bolts, install one cable clamp (Item 2) [Figure 148] on the bolt shown and secure in place with the lock nut.

Connect the light harness to the pigtail. Install a cable clamp around the light harness.

Using a bolt and lock nut, install a second cable clamp (Item 3) [Figure 148] in the #5 tube.


Figure 149

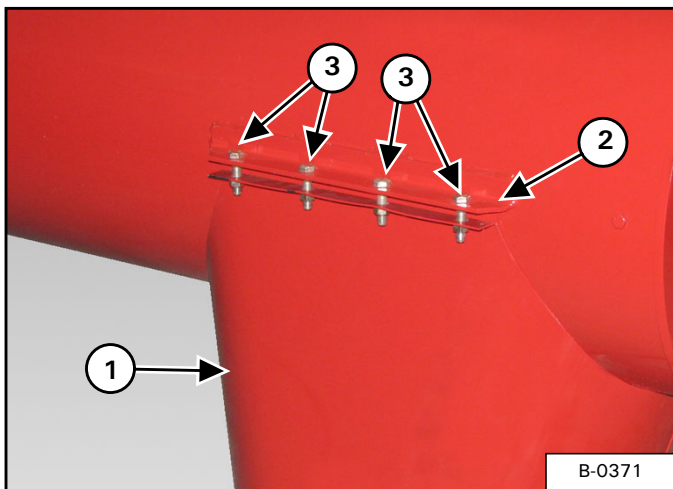

Align the discharge spout (Item 1) with the mounting brackets (Item 2) [Figure 149] on both sides of the #5 tube.

Install the eight 3/8" x 1-1/2" bolts (Item 3) [Figure 149] and 3/8" lock nuts. Tighten bolts and lock nuts evenly until the discharge spout contacts the #4 tube (1684) #5 tube (16104).


Figure 150

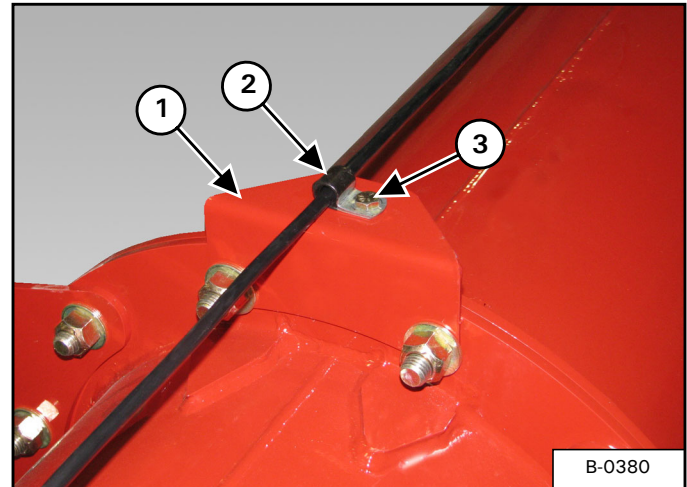

Route the light harness along the top of tube assembly.


Secure the light harness to the top bracket (Item 1) at each tube connection using one cable clamp (Item 2), one 5/16" x 3/4" bolt (Item 3) [Figure 150] and 5/16" lock nut at each location.

Figure 151

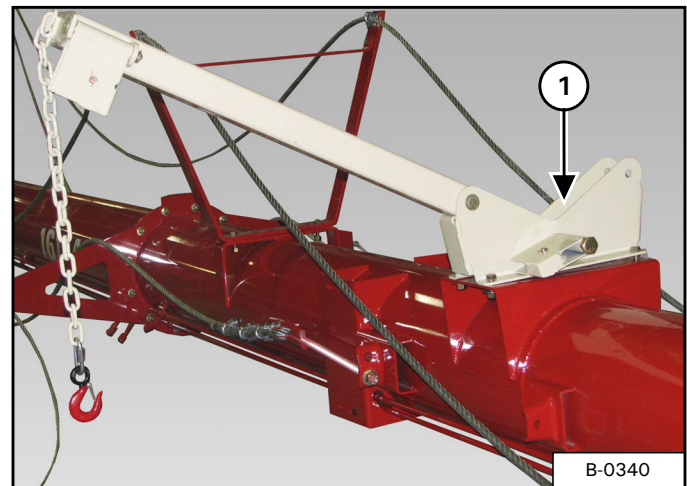

Using four 5/8" x 1-3/4" bolts, four 5/8" flat washers and four 5/8" lock nuts, install the lift boom assembly (Item 1) [Figure 151]. Tighten bolts and lock nuts.

Figure 152

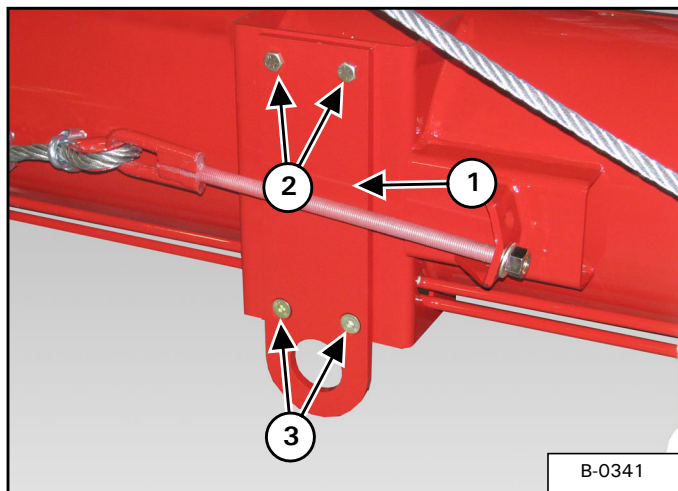

Align the undercarriage connector plate (Item 1) [Figure 152] with the mounting bracket on the #1 tube.


Install two 5/8" x 2" bolts (Item 2) [Figure 152] through the top two holes of the undercarriage connector plate and mounting bracket. Install one 5/8" flat washer and 5/8" lock nut on each bolt.

Install two 5/8" x 1-3/4" flat head bolts (Item 3) [Figure 152] through the bottom two holes of the undercarriage connector plate and mounting bracket. Install one 5/8" flat washer and 5/8" lock nut on each bolt.

Do not tighten bolts and lock nuts at this time.


Repeat above procedure for second undercarriage connector plate.

Figure 153

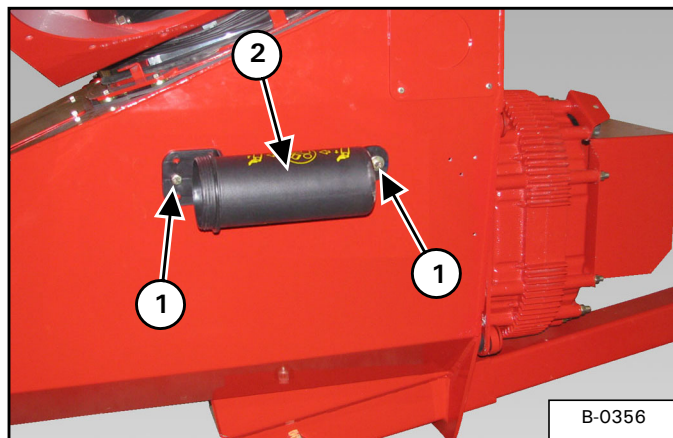

Using two 5/16" x 3/4" bolts (Item 1) and two 5/16" lock washers, align and install the manual holder (Item 2) [Figure 153] on the right side of the input box. Do not over-tighten the bolts and damage mounting flanges.

Figure 154

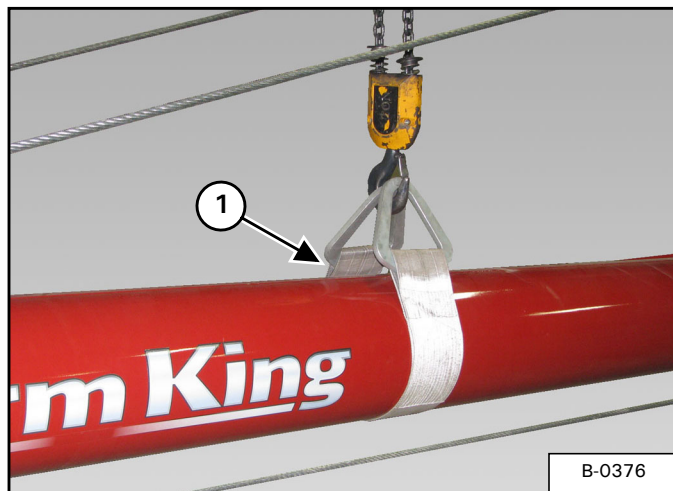


Install a strap (Item 1) [Figure 154] around the #4 tube.

Connect the strap to an approved lifting device.

Raise the tube assembly high enough to install the flex spout.

Figure 155

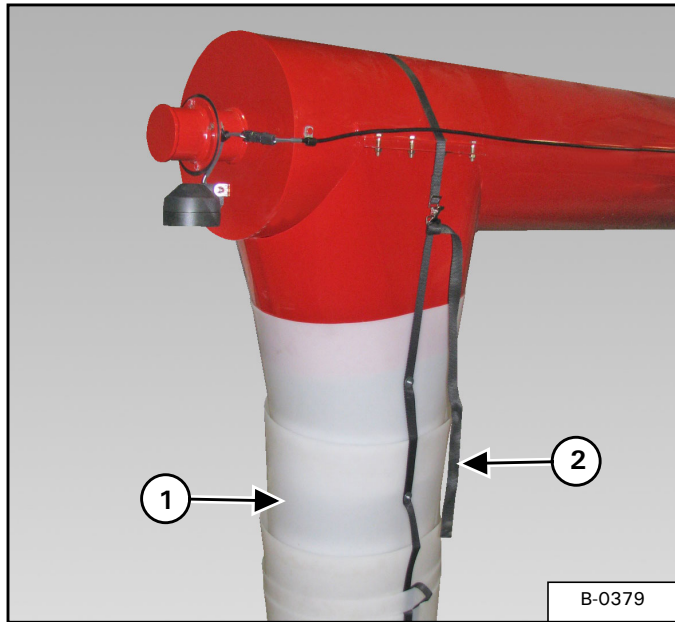

Slide the flex spout (Item 1) [Figure 155] onto the discharge spout.

Pull strap (Item 2) [Figure 155] up and over the #5 tube and connect the two ends of the strap together. Pull the strap tight to secure the flex spout to the #5 tube and discharge spout.

Lower the tube assembly to the ground.



IMPORTANT


Fully tighten all tube assembly hardware before installing the tube assembly onto the undercarriage.

16124 Tube Assembly

NOTE: The following images may not show your exact model as it appears but the procedure is correct.

Assemble the tube on flat level surface.

WARNING

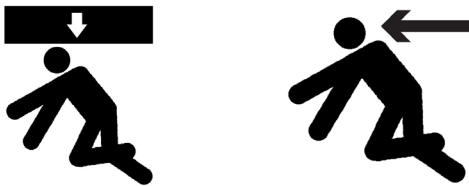

- **DO NOT** permit bystanders to be in the work area when unloading and assembling the auger components.
- **DO NOT** work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 156

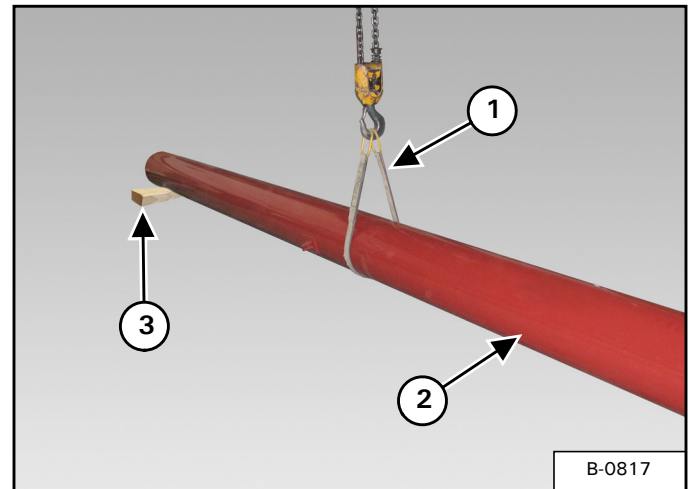


Install a strap (Item 1) around the #4 tube (Item 2) [Figure 156].

Raise and move the top tube to the assembly area.

Place a block (Item 3) [Figure 156] under the discharge spout end of the tube. Lower the tube onto the block. Remove strap.

Figure 157

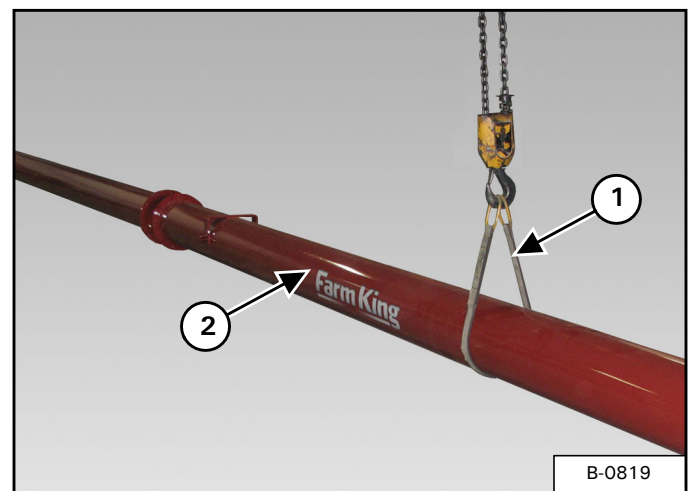


Install a strap (Item 1) around the #3 tube (Item 2) [Figure 157].

Raise and move the #3 tube to the assembly area. Lower the tube onto the block. Remove strap.


Repeat the above procedure for #2 tube.

Figure 158

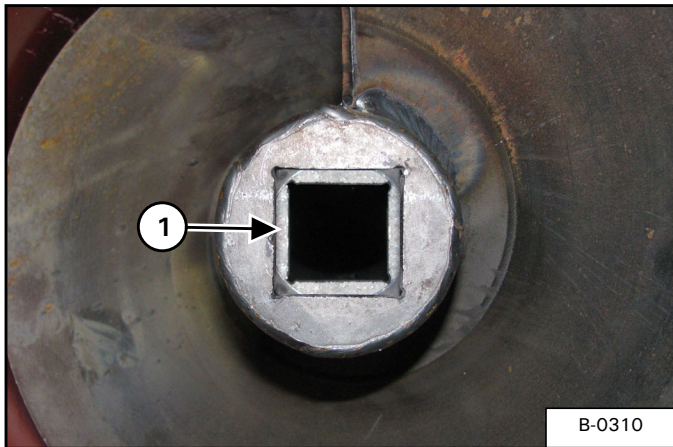

When installing the connecting shaft, the shaft will need to be aligned with and inserted into the inner collar (Item 1) [Figure 158] of flighting tube.

Figure 159

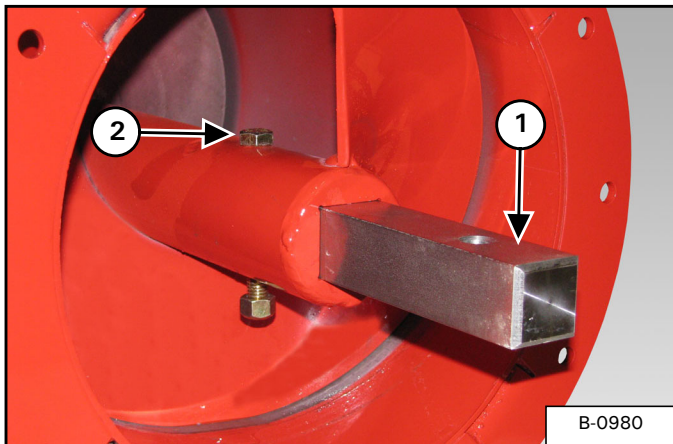


Slide the flighting out of the top #4 tube until the bolt hole in the end of the flighting is clear of the mounting flange.

Align the bolt holes and install the connecting shaft (Item 1) [Figure 159].


Apply thread locker to the bolt threads, install and tighten one 1/2" x 4" Gr. 8 bolt (Item 2) [Figure 159] and 1/2" lock nut.

Figure 160

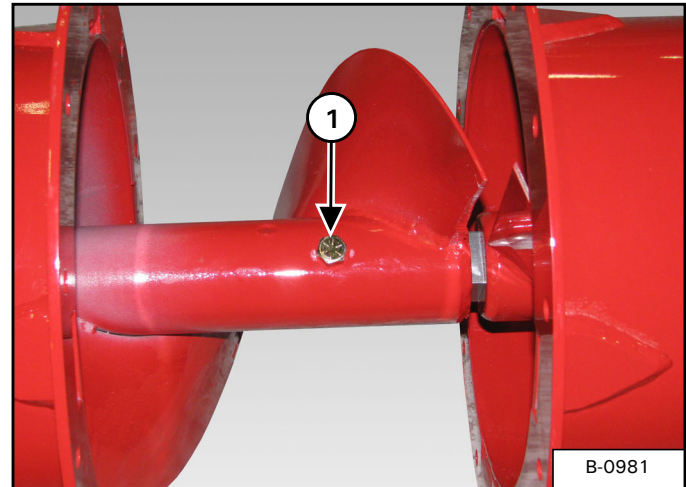

Slide the flighting from the #3 tube forward onto the connecting shaft. Apply thread locker to the bolt threads, install one 1/2" x 4" Gr. 8 bolt (Item 1) [Figure 160] and 1/2" lock nut. Tighten bolt and lock nut.


Figure 161

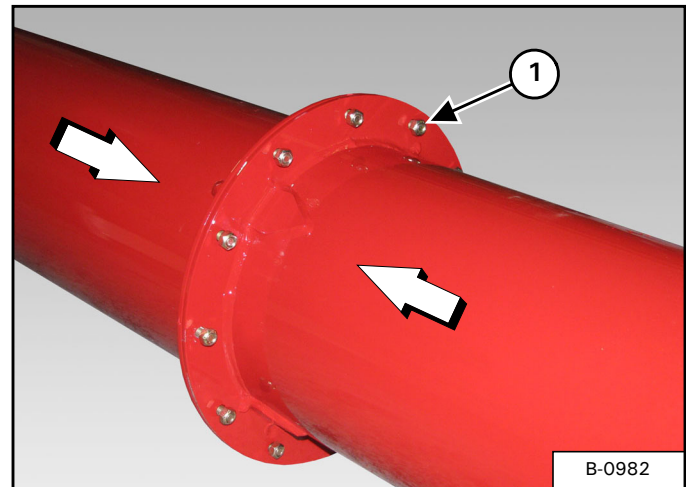

Slide the top #4 tube and #3 tube together until the mounting flanges contact each other [Figure 161].

Install 7/16" x 1-1/4" bolts (Item 1) [Figure 161] through the tube flanges. Install one 7/16" lock nut on each bolt. Tighten bolts and lock nuts (top bolts first, then bottom bolts).


Figure 162

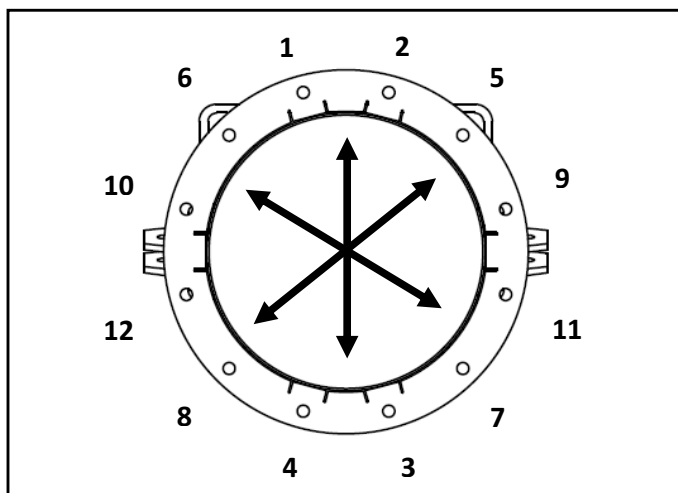

Tighten remaining bolts in a criss-cross pattern [Figure 163], working around the mounting flanges.


Repeat the procedure for connecting remaining tube sections.

Figure 163

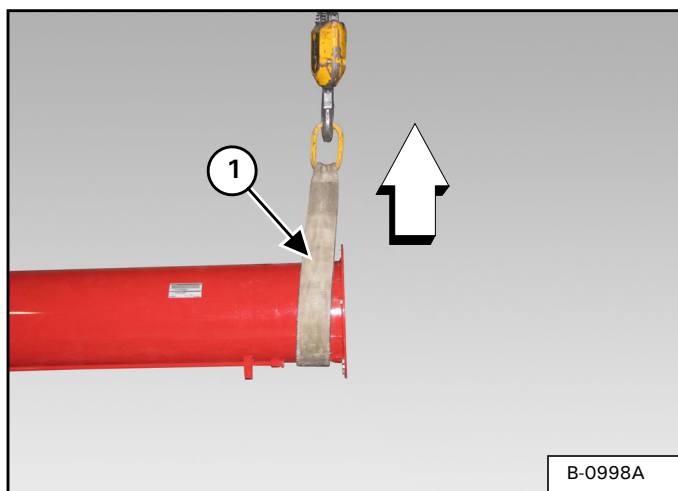

Install a strap (Item 1) [Figure 163] around the end of the #1 tube.


Figure 164

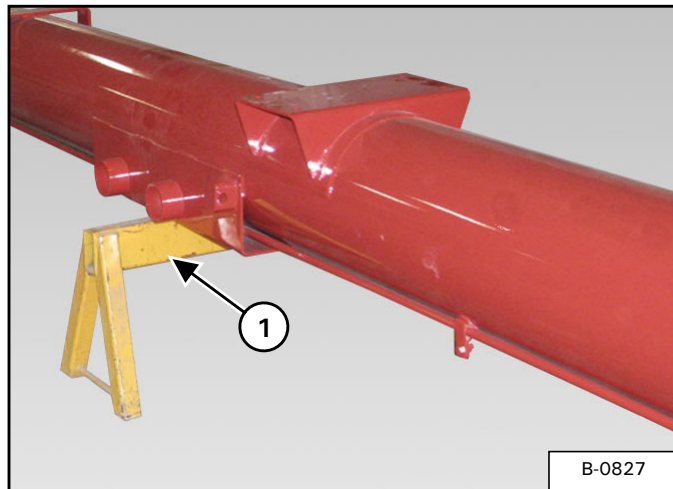

Raise the tube assembly and place a support stand (Item 1) [Figure 164] under the tube, lower the tube onto the support stand.


Remove strap.

Figure 165

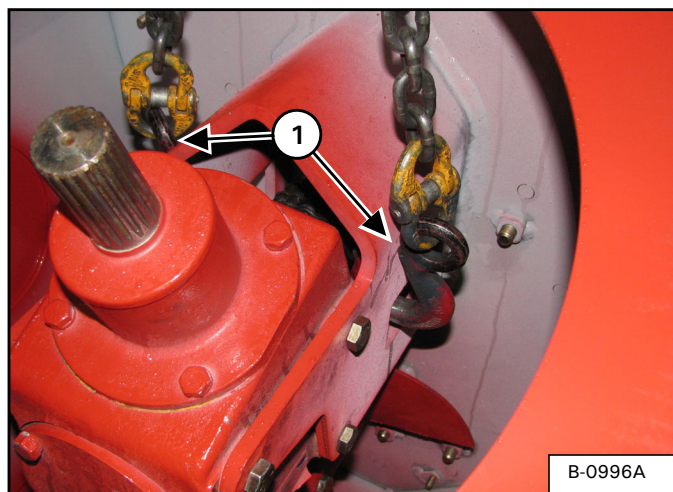

Install the chains (Item 1) [Figure 165] onto the input box gearbox mounting bracket. Raise and move the input box to the end of the bottom tube.

Figure 166

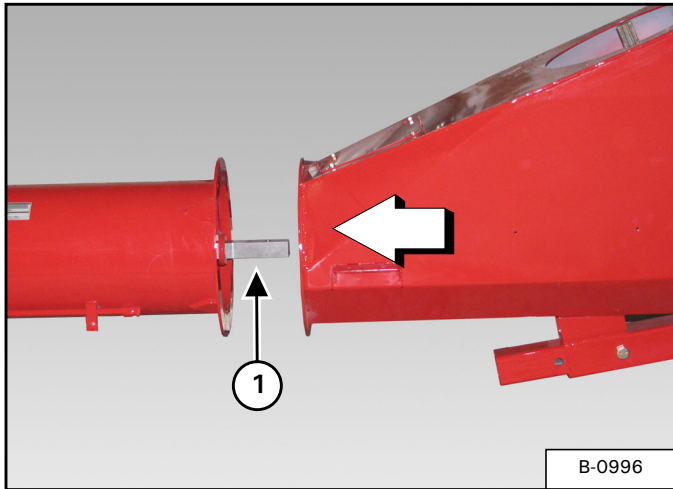


Align the bolt holes and install the connecting shaft (Item 1) [Figure 166].

Apply thread locker to the bolt threads, install and tighten one 1/2" x 4" Gr. 8 bolt and 1/2" lock nut.

Align the input box flighting with the flighting shaft (Item 1) [Figure 166] of the bottom tube.


Figure 167

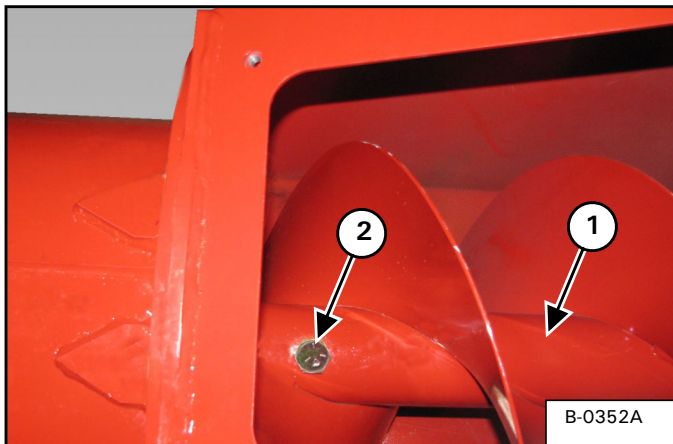

Align the input box flighting (Item 1) with the hole in the bottom tube flighting.

Apply thread locker to the bolt threads, install and tighten one 1/2" x 4" Gr. 8 bolt (Item 2) [Figure 167] and 1/2" lock nut. Tighten bolt and lock nut.


Figure 168

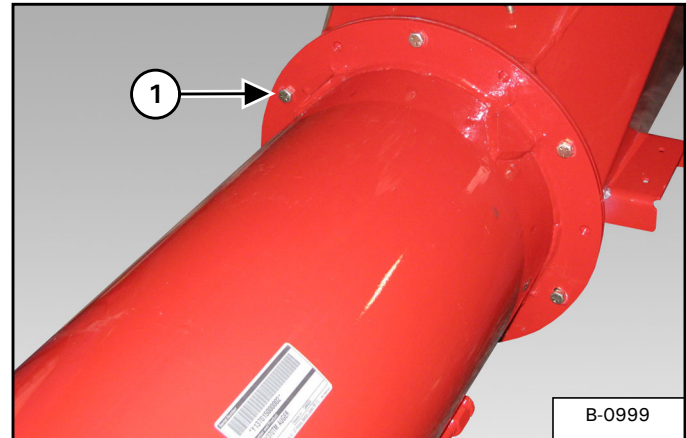

Move the input box towards the bottom tube until the two mounting flanges make contact.

Align the mounting holes and install the eight 7/16" x 1-1/4" bolts (Item 1) [Figure 168] and 7/16" lock nuts around the mounting flanges of the bottom tube and input box. Tighten bolts and lock nuts.

Figure 169

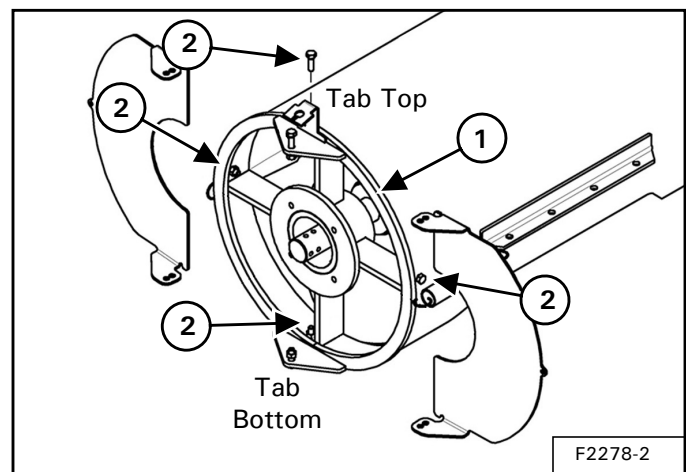


Install the overflow end cap (Item 1) [Figure 169] as shown onto the end of the #4 tube.

NOTE: The tabs must be aligned to the top and bottom of auger tube.

Align the holes and install the four 5/16" x 1" bolts and 5/16" lock nuts (Item 2) [Figure 169]. Tighten bolts.

Figure 170

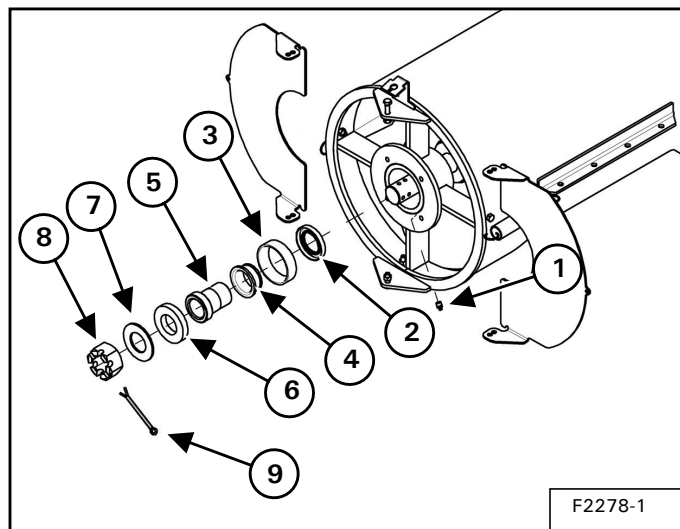

Install the grease zerk (Item 1) **[Figure 170]**.

Install the oil seal (Item 2), inner bearing cup (Item 3), inner bearing cone (Item 4), end bearing sleeve (Item 5), spacer (Item 6), narrow rim washer (Item 7), slotted nut (Item 8), 1/4" x 2" cotter pin (Item 9) **[Figure 170]** as shown onto the end of the #4 tube.


Apply 2-3 pumps of grease to the grease zerk.

With the tube assembly complete, tighten the castle nut (Item 7) **[Figure 170]** until the castle nut contacts the washer / flighting shaft.

Check for cotter pin hole in the shaft. Tighten or back the castle nut off (applying some tension on the flighting) until the closest cotter pin hole(s) is exposed.


Install the cotter pin (Item 8) **[Figure 170]**.

Figure 171

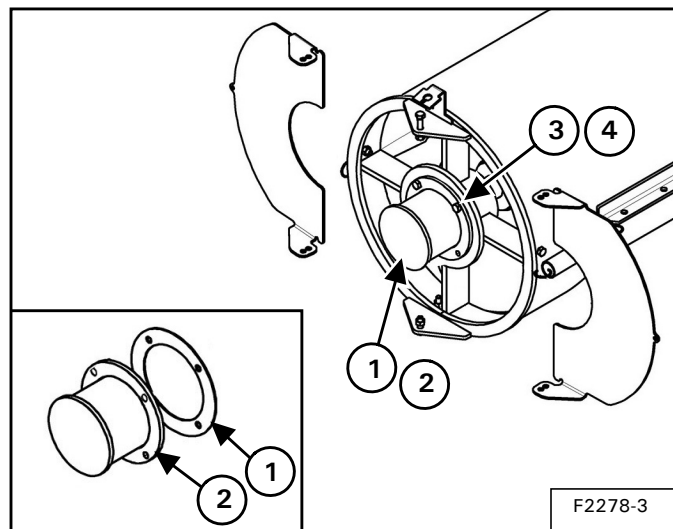

Install the rubber gasket (Item 1), flange cap (Item 2), and secure with the four 5/16" x 3/4" bolts and 5/16" lock nuts (Items 3 & 4) **[Figure 171]**.

Figure 172

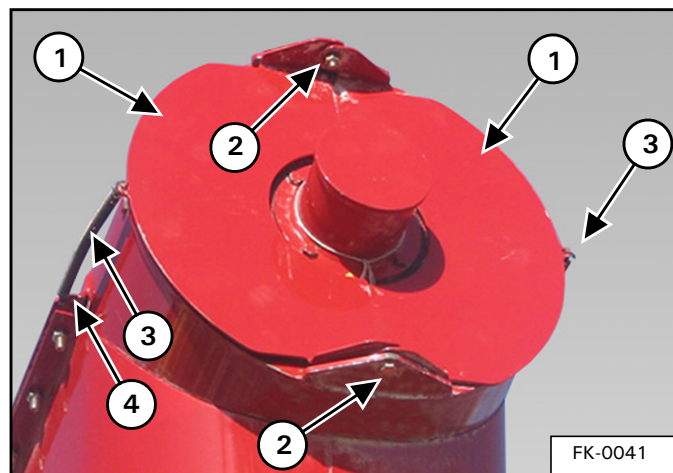

Install the overflow doors (Item 1) **[Figure 172]** as shown.

Install the two 5/16" x 1" bolts and lock nut (Item 2) **[Figure 172]**. Do not over tighten bolts.

Install the springs (Item 3). Attach the springs to the overflow doors and nearest hole on the spout mounts (Item 4) **[Figure 172]** located on the tube.


NOTE: **[Figure 172]** shows discharge spout installed. Discharge spout will be installed later.

16124 Bridging Assembly

NOTE: The following images may not show your exact model as it appears but the procedure is correct.

Assemble trusses when tubes are on the ground and supported at the discharge spout end, at mid point on each tube section, at each flange connection, and supported at input box flange (9 support points). Tube assembly must be straight (angle 0 degrees) when tubes are fully supported.

Figure 173

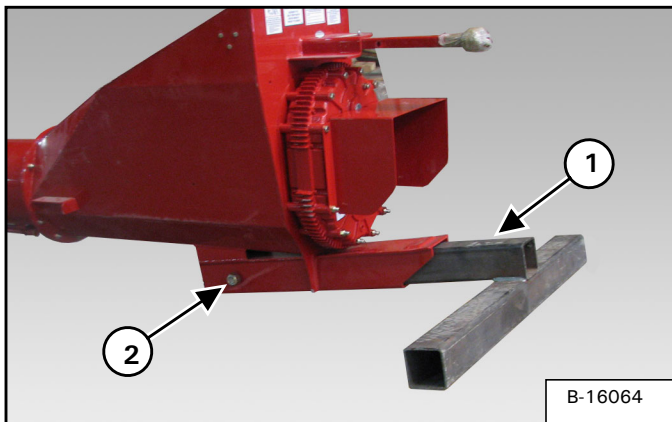

The T-bar (Item 1) is not shipped with unit. Install a bolt and nut (Item 2) [Figure 173] through the hitch mount and T-bar.


NOTE: If a T-bar is not available, secure the input box so as to prevent the tube assembly from rolling during truss beam installation.

NOTE: The T-bar is installed before truss beam assembly, the T-bar prevents the tube assembly from rolling during truss beam installation.

NOTE: See Page 92 for truss beam identification.

NOTE: The 16124 tube assembly consists of four tubes. When referring to the tubes, the lower tube will be #1 tube, #2 tube, #3 tube and #4 tube.


Figure 174

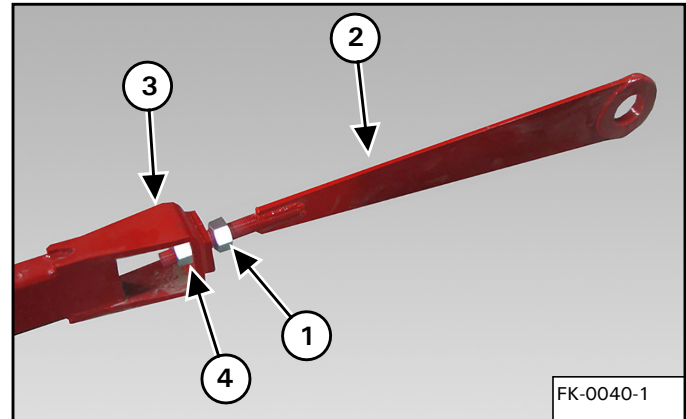

Install the 1-1/4" nut (Item 1) onto the truss fastener (Item 2). Install the truss fastener into the truss beam (Item 3). Install the 1-1/4" nut (Item 4) [Figure 174] onto the truss fastener.

Repeat procedure for the opposite side.

Figure 175

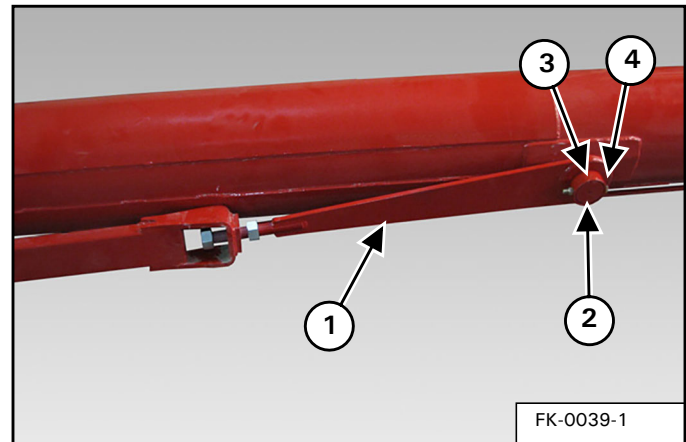


Install the truss fastener / beam assembly (Item 1) onto the #1 tube lower truss beam mount (Item 2) [Figure 175].

Install the undercarriage pin sleeve (Item 3) and 1/2" x 4-1/2" bolt and 1/2" lock nut (Item 4). Tighten the bolt and lock nut.

Repeat procedure on opposite side.

Figure 176

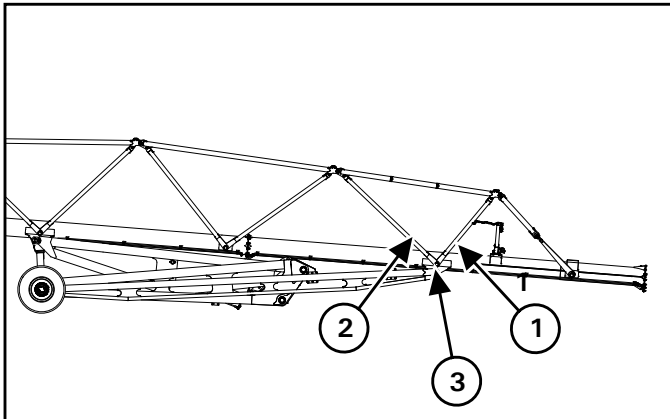


Install the truss beams (Items 1 & 2) onto the #1 tube upper truss beam mount (Item 3) [Figure 176].

NOTE: The upper truss beam (Item 1) [Figure 176] must be installed onto the truss beam mount first (both sides).

Install the undercarriage pin sleeve, 1/2" x 4-1/2" bolt and 1/2" lock nut. Tighten lock nut and bolt.

Repeat procedure on the opposite side.

Figure 177

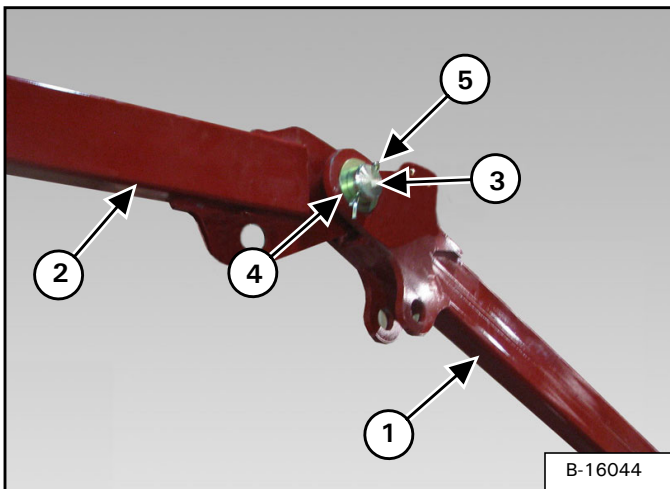


Raise the truss beam assembly (Item 1) and the truss beam (Item 2) [Figure 177].

Install the truss pin (Item 3), 2" x 10 ga. narrow rim washer (Item 4) and 5/16" x 3" cotter pin (Item 5) [Figure 177].

Repeat procedure on the opposite side.

Figure 178

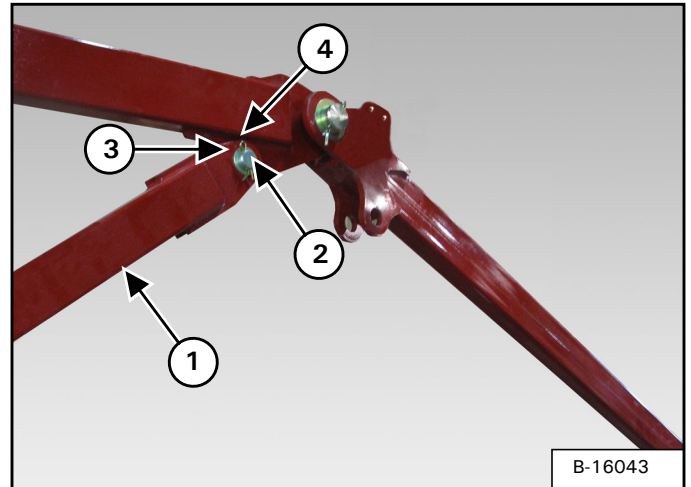


Raise and align truss beam (Item 1), install the 1-1/4" pin (Item 2), 1-1/4" narrow rim washer (Item 3) and 1/4" x 2" cotter pin (Item 4) [Figure 178].

Repeat procedure on the opposite side.

Truss Support Bracket Assembly

NOTE: See Page 94 for truss support bracket identification.


Figure 179

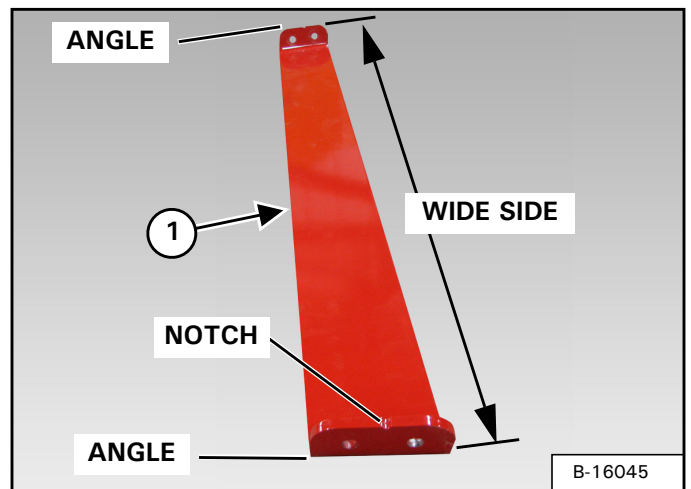

The truss support brackets (Item 1) [Figure 179] have none, one, two or three notches and are different lengths.

The truss support brackets are also angled on the ends and must be installed correctly.


Figure 180

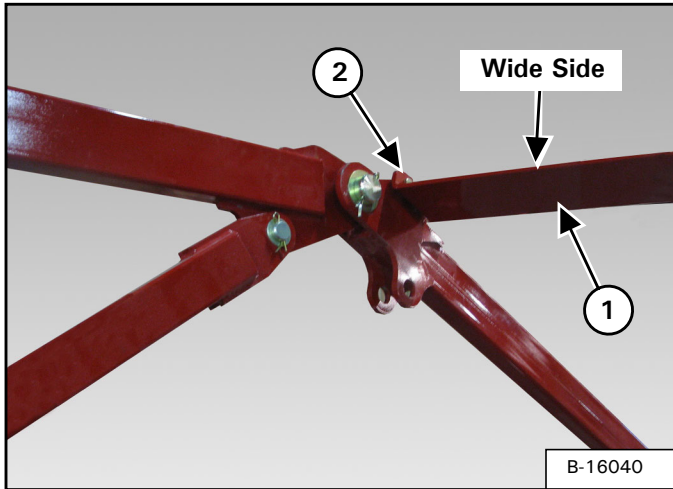

Place the truss support bracket (one notch) (Item 1) [Figure 180] between the left side and right side truss beams (wide side of support bracket toward the top tube).

Install two 1/2" x 1-3/4" bolts (Item 2) [Figure 180] and lock nut on each side. Do not tighten at this time.

Figure 181

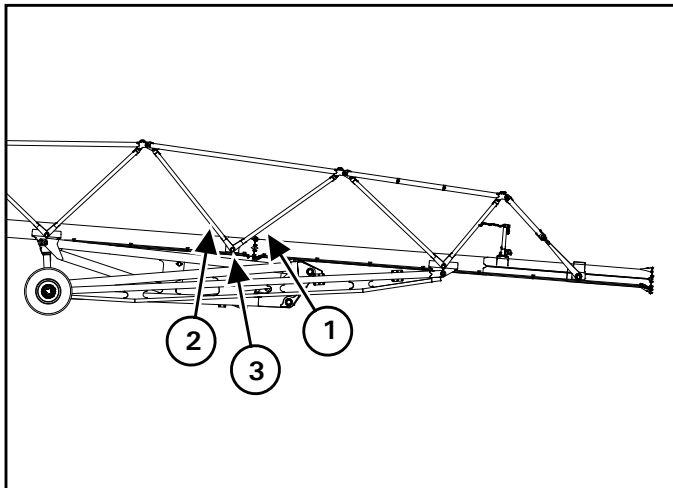


Install the truss beam (Items 1 & 2) onto the #2 tube lower truss beam mount (Item 3) [Figure 181].

NOTE: The upper truss beam (Item 2) [Figure 181] must be installed onto the truss beam mount first (both sides).

Install the undercarriage pin sleeve, 1/2" x 4-1/2" bolt and 1/2" lock nut. Tighten lock nut and bolt.

Repeat procedure on the opposite side.

Figure 182

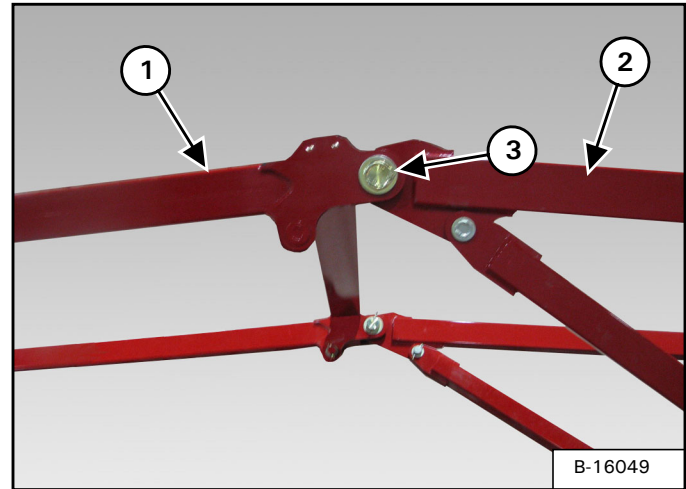


Raise the truss beams (Items 1 & 2) [Figure 182].

Align the truss beams and install the truss pin (Item 3) [Figure 182], 2" x 10 ga. narrow rim washer and 5/16" x 3" cotter pin.

Repeat procedure on the opposite side.

Figure 183

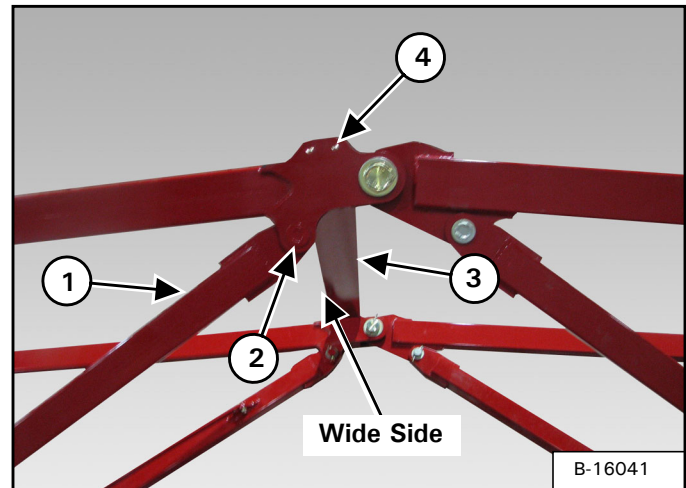


Raise and align the truss beam (Item 1), install the 1-1/4" pin (Item 2) [Figure 183], 1-1/4" narrow rim washer and 1/4" x 2" cotter pin.

Repeat procedure on the opposite side.

Place the truss support bracket (two notches) (Item 3) [Figure 183] between the left side and right side truss beams (wide side of support bracket toward the top tube).

Install two 1/2" x 1-3/4" bolts (Item 4) [Figure 183] and lock nut on each side. Do not tighten at this time.

Figure 184

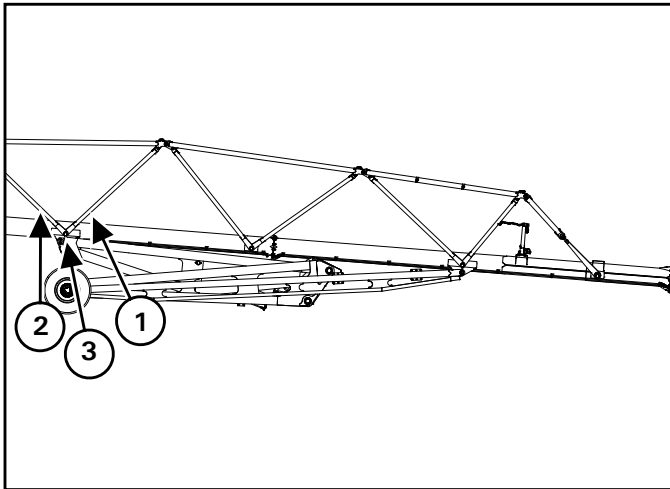


Install the truss beam (Items 1 & 2) onto the #2 tube upper truss beam mount (Item 3) [Figure 184].

NOTE: The upper truss beam (Item 2) [Figure 184] must be installed onto the truss beam mount first (both sides).

Install the undercarriage pin sleeve, 1/2" x 4-1/2" bolt and 1/2" lock nut. Tighten lock nut and bolt.

Repeat procedure on the opposite side.

Figure 185

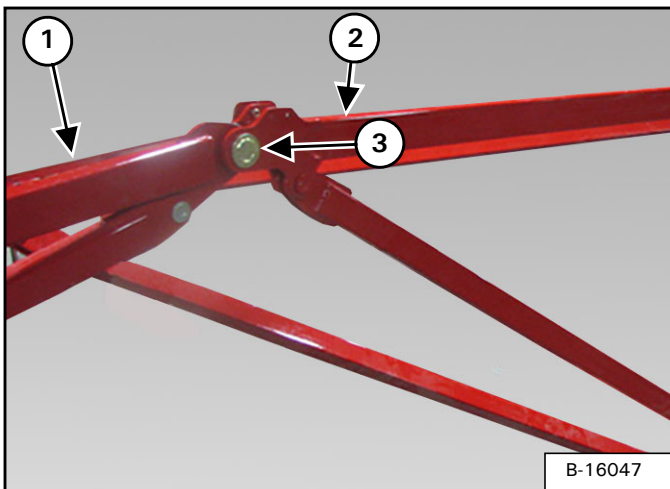


Raise the truss beam assembly (Item 1) and the truss beam (Item 2) [Figure 185].

Align the truss beams and install the truss pin (Item 3) [Figure 185], 2" x 10 ga. narrow rim washer and 5/16" x 3" cotter pin.

Repeat procedure on the opposite side.

Figure 186

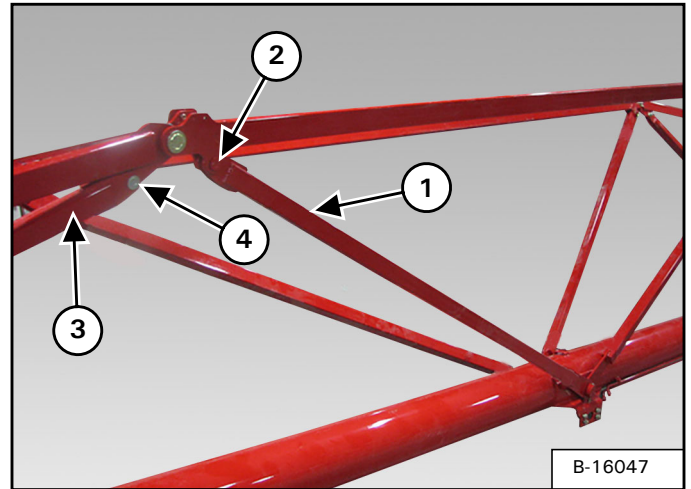


Raise and align truss beam (Item 1), install the 1-1/4" pin (Item 2), 1-1/4" narrow rim washer and 1/4" x 2" cotter pin [Figure 186].

Repeat procedure on the opposite side.

Raise and align truss beam (Item 3), install the 1-1/4" pin (Item 4), 1-1/4" narrow rim washer and 1/4" x 2" cotter pin [Figure 186].

Repeat procedure on the opposite side.


Figure 187

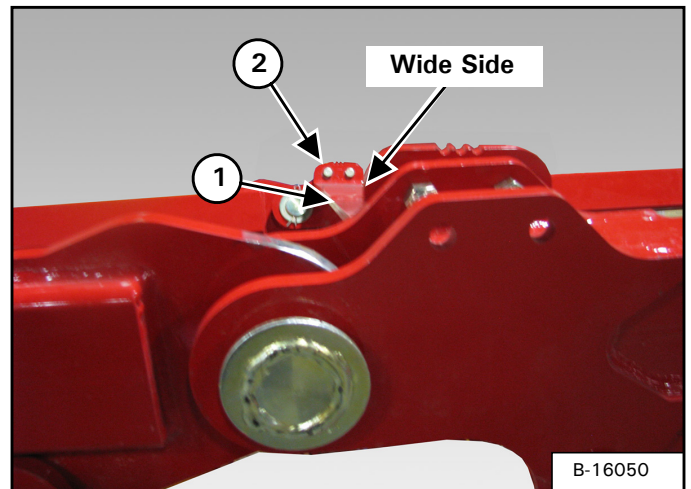

Place the truss support bracket (three notches) (Item 1) [Figure 187] between the left side and right side truss beams (wide side of support bracket toward the lower tube).

Install two 1/2" x 1-3/4" bolts (Item 2) [Figure 187] and lock nut on each side. Do not tighten at this time.

Figure 188

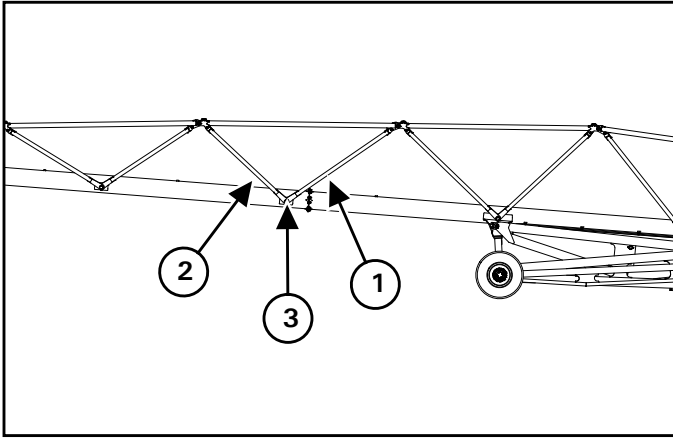


Install the truss beam (Items 1 & 2) onto the #3 tube lower truss beam mount (Item 3) [Figure 188].

NOTE: The upper truss beam (Item 2) [Figure 188] must be installed onto the truss beam mount first (both sides).

Install the undercarriage pin sleeve, 1/2" x 4-1/2" bolt and 1/2" lock nut. Tighten lock nut and bolt.

Repeat procedure on the opposite side.

Figure 189

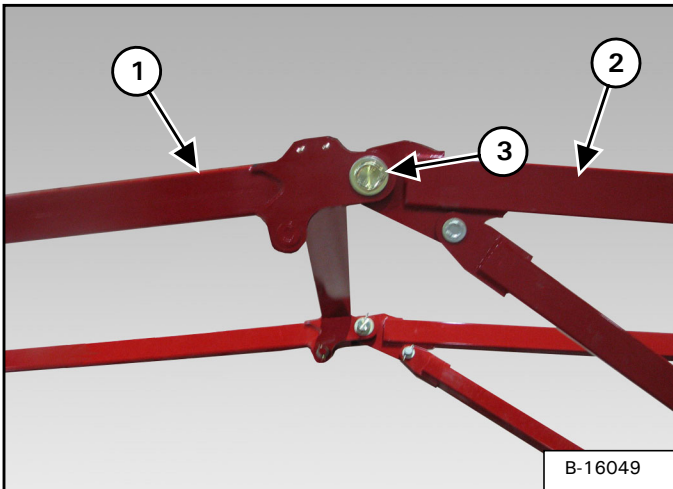


Raise the truss beams (Items 1 & 2) [Figure 189].

Align the truss beams and install the truss pin (Item 3) [Figure 189], 2" x 10 ga. narrow rim washer and 5/16" x 3" cotter pin.

Repeat procedure on the opposite side.

Figure 190

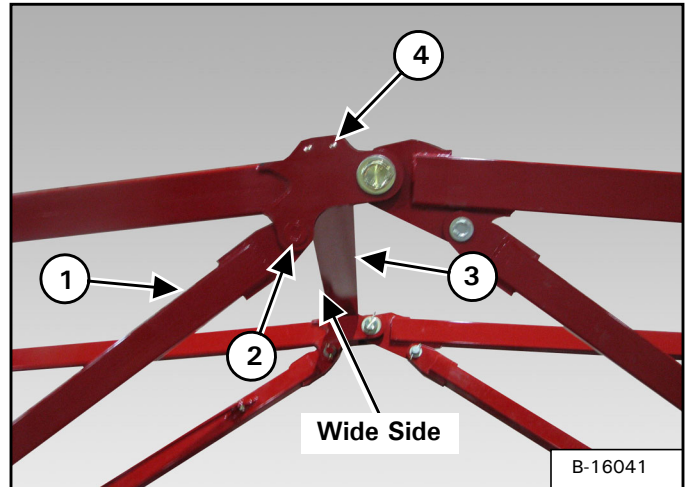


Raise and align the truss beam (Item 1), install the 1-1/4" pin (Item 2) [Figure 190], 1-1/4" narrow rim washer and 1/4" x 2" cotter pin.

Repeat procedure on the opposite side.

Place the truss support bracket (two notches) (Item 3) [Figure 190] between the left side and right side truss beams (wide side of support bracket toward the top tube).

Install two 1/2" x 1-3/4" bolts (Item 4) [Figure 190] and lock nut on each side. Do not tighten at this time.

Figure 191

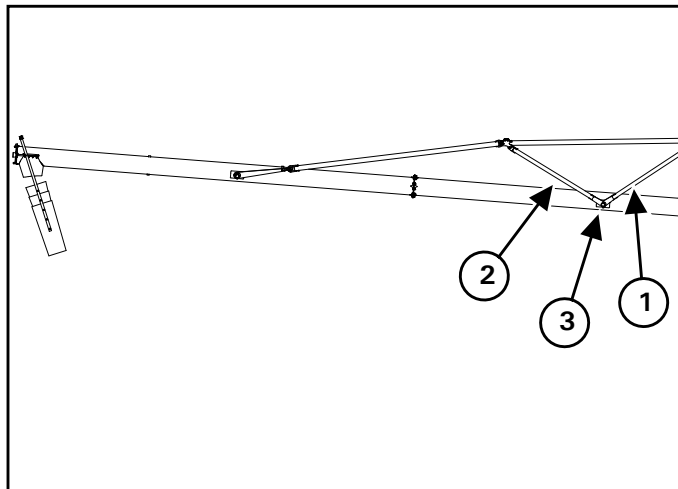


Install the truss beam (Items 1 & 2) onto the #3 tube upper truss beam mount (Item 3) [Figure 191].

NOTE: The upper truss beam (Item 2) [Figure 191] must be installed onto the truss beam mount first (both sides).

Install the undercarriage pin sleeve, 1/2" x 4-1/2" bolt and 1/2" lock nut. Tighten lock nut and bolt.

Repeat procedure on the opposite side.

Figure 192

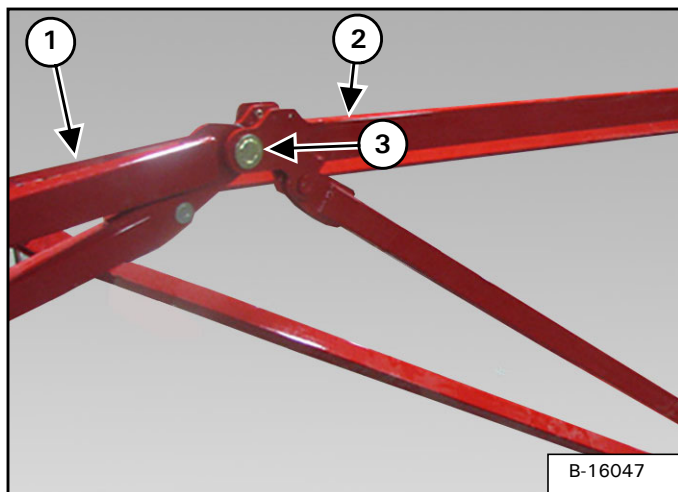


Raise the truss beam assembly (Item 1) and the truss beam (Item 2) [Figure 192].

Align the truss beams and install the truss pin (Item 3) [Figure 192], 2" x 10 ga. narrow rim washer and 5/16" x 3" cotter pin.

Repeat procedure on the opposite side.

Figure 193

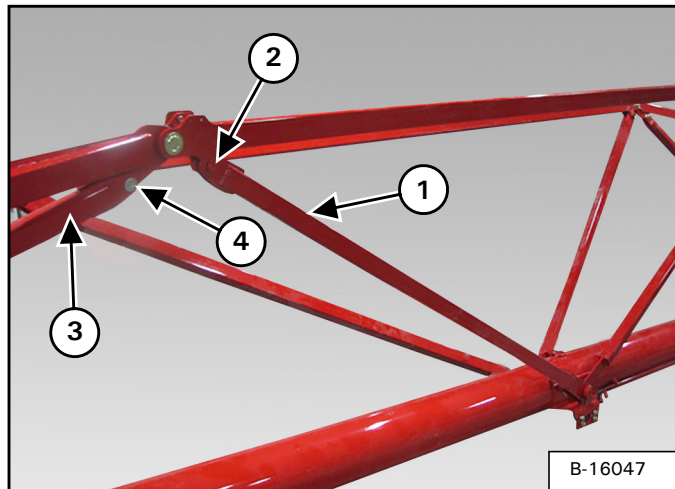


Raise and align truss beam (Item 1), install the 1-1/4" pin (Item 2), 1-1/4" narrow rim washer and 1/4" x 2" cotter pin [Figure 193].

Repeat procedure on the opposite side.

Raise and align truss beam (Item 3), install the 1-1/4" pin (Item 4), 1-1/4" narrow rim washer and 1/4" x 2" cotter pin [Figure 193].

Repeat procedure on the opposite side.


Figure 194

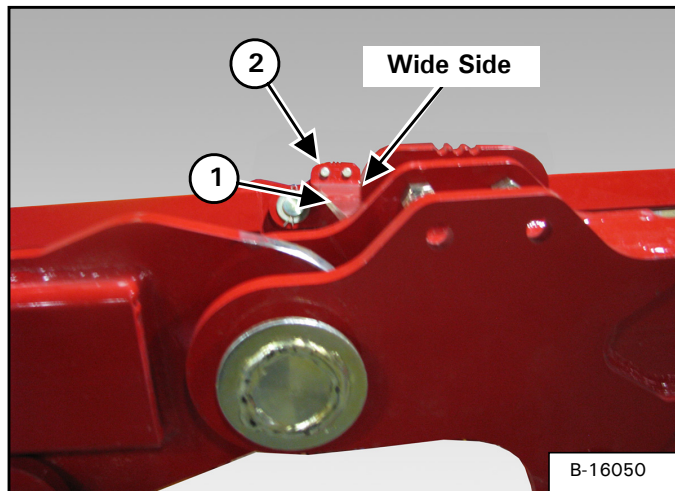

Place the truss support bracket (three notches) (Item 1) [Figure 194] between the left side and right side truss beams (wide side of support bracket toward the lower tube).

Install two 1/2" x 1-3/4" bolts (Item 2) [Figure 194] and lock nut on each side. Do not tighten at this time.


Figure 195

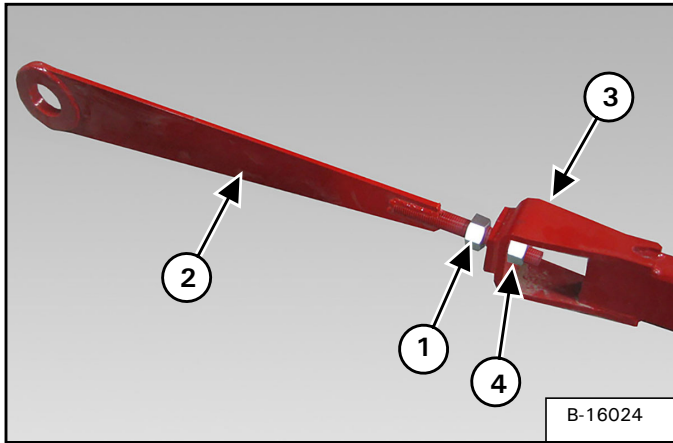

Install the 1-1/4" nut (Item 1) onto the truss fastener (Item 2). Install the truss fastener into the truss beam (Item 3) [Figure 195]. Install the 1-1/4" nut (Item 4) onto the truss fastener.

Repeat procedure for the opposite side.


Figure 196

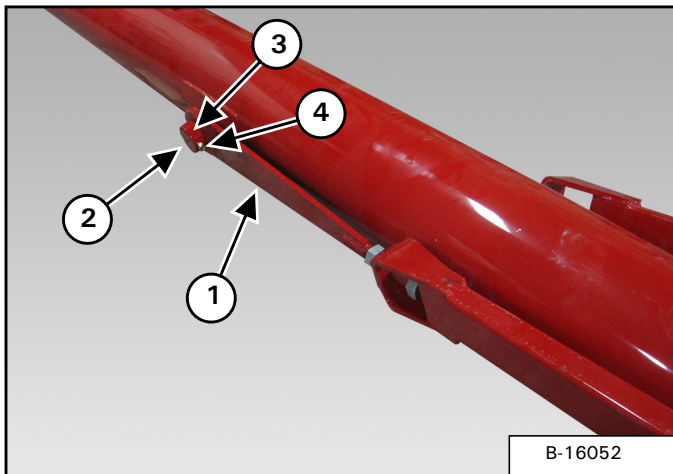

Install the truss fastener / beam assembly (Item 1) onto the #4 tube upper truss beam mount (Item 2) [Figure 196].

Install the undercarriage pin sleeve (Item 3) and 1/2" x 4-1/2" bolt and 1/2" lock nut (Item 4) [Figure 196]. Tighten the bolt and lock nut.

Figure 197

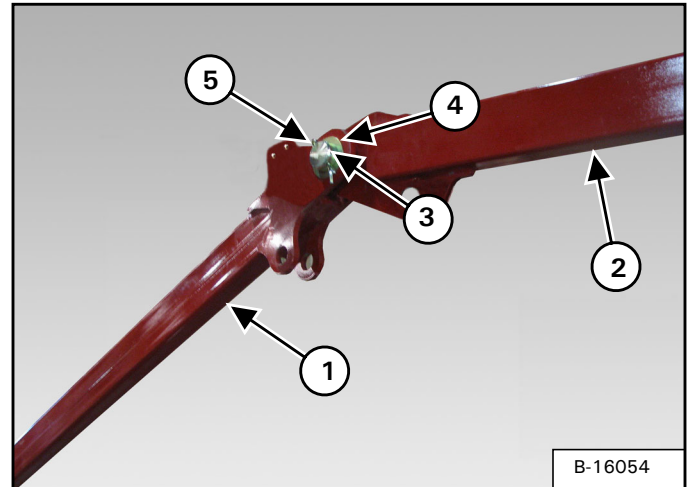


Raise the truss beam assembly (Item 1) and the truss beam (Item 2) [Figure 197].

Align truss beams and install the truss pin (Item 3), 2" x 10 ga. narrow rim washer (Item 4) and 5/16" x 3" cotter pin (Item 5) [Figure 197].

Repeat procedure on the opposite side.


Figure 198

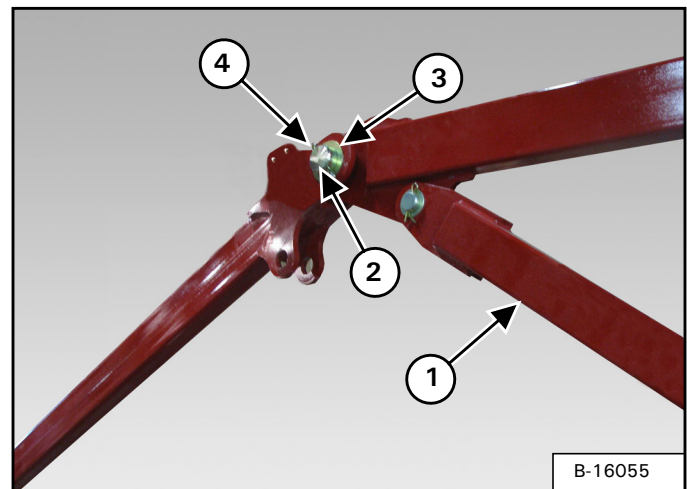

Raise and align truss beam (Item 1), install the 1-1/4" pin (Item 2), 1-1/4" narrow rim washer (Item 3) and 1/4" x 2" cotter pin (Item 4) [Figure 198].

Repeat procedure on the opposite side.

Figure 199

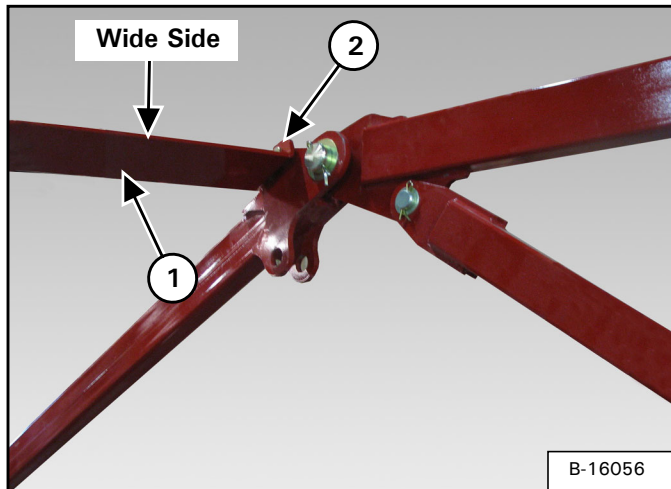


Place the truss support bracket (four notches) (Item 1) [Figure 199] between the left side and right side truss beams (wide side of support bracket toward the lower tube).

Install two 1/2" x 1-3/4" bolts (Item 2) [Figure 199] and lock nut on each side. Do not tighten at this time.

Cross Brace Plate Assembly

NOTE: See Page 94 for cross brace identification.

Figure 200

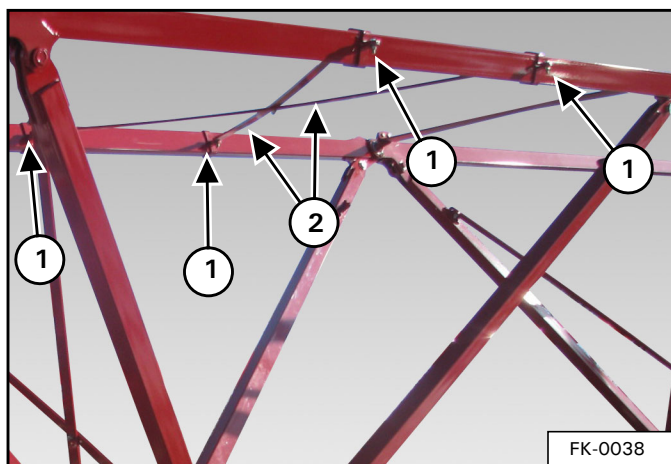


Place the cross brace holders (Item 1) on the truss beams as shown, install 1/2" x 1-1/2" bolts (Item 2) [Figure 200] through the truss brace holders (on the outside of truss beams) and install 1/2" lock nuts. Do not tighten.

NOTE: Center the cross brace plates evenly on the truss beams.

Align the cross brace plates (Item 2) [Figure 200] diagonally to the cross brace holders (on the inside of the truss beams).

Install 1/2" x 1-1/2" bolts through the cross brace plates and cross brace holders. Tighten all bolts.

Figure 201

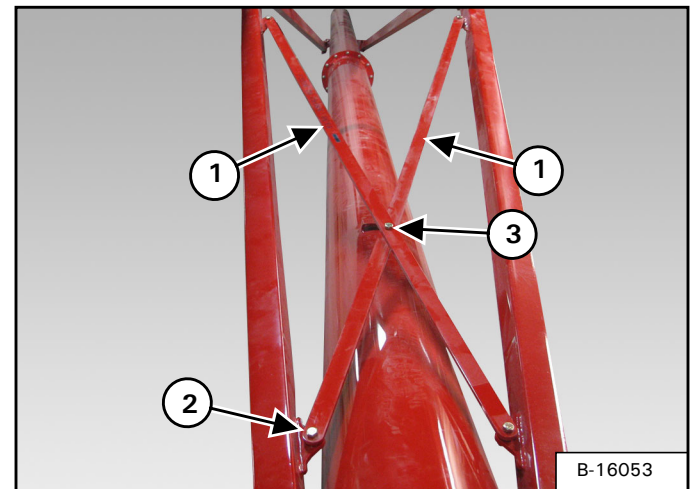

Align the cross brace plates (Item 1) [Figure 201] diagonally with the tabs on the left side and right side truss beams.

Install one 1/2" x 1-1/2" bolt (Item 2) [Figure 201] and lock nut in each end of cross brace plate.


Install one 1/2" x 1-1/2" bolt (Item 3) [Figure 201] through intersecting holes in cross plate braces. Do not tighten at this time.

Repeat procedure for all cross brace plates.

Tighten all cross brace bolts.


Lower and Upper Truss Adjustment

Figure 202

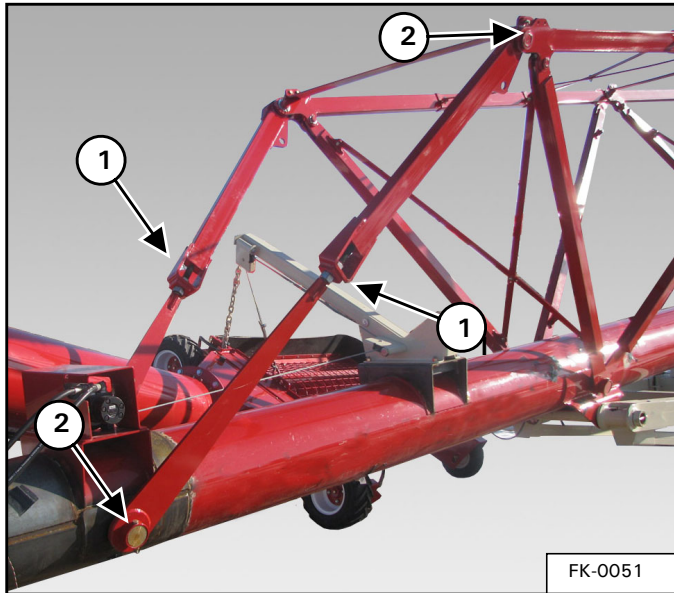

Adjust lower trusses (Item 1) so that both lower trusses are the same length, measuring from pin to pin (Item 2) [Figure 202] on each truss.

Figure 203

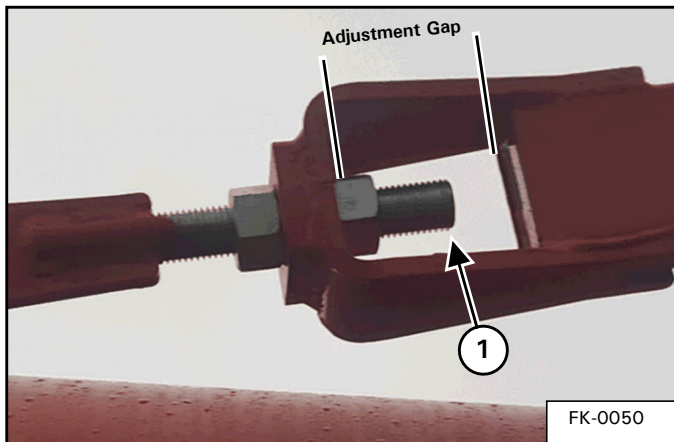

NOTE: Threaded rod end (Item 1) [Figure 203] should be near the middle of the adjustment gap.

Tighten both nuts on each of the lower trusses.


Repeat procedure for the upper truss adjustments.


Install the tube and bridging assembly onto the undercarriage and lift arms. See "16124 Installing Tube On Undercarriage" on page 104.

Farm King





16124 Bridging Identification

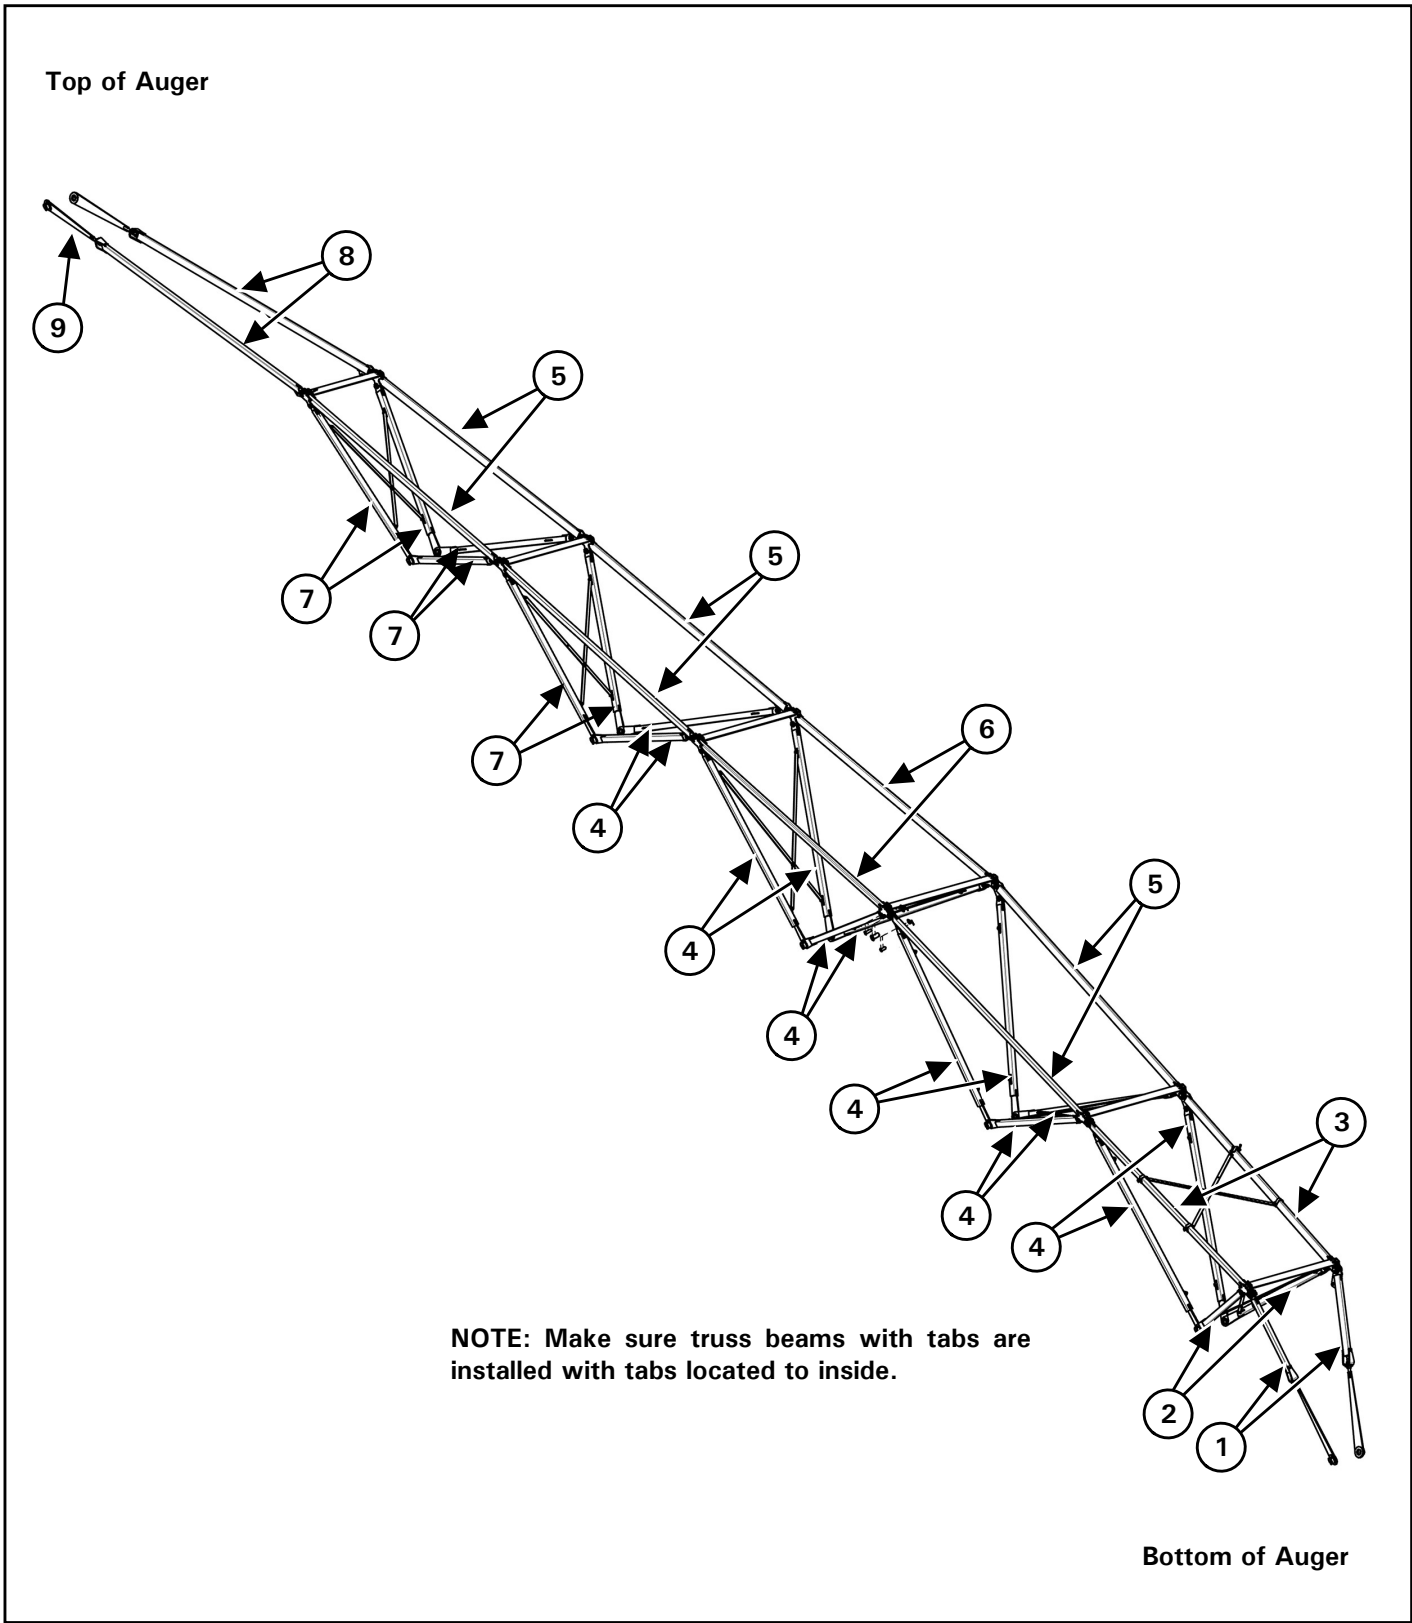

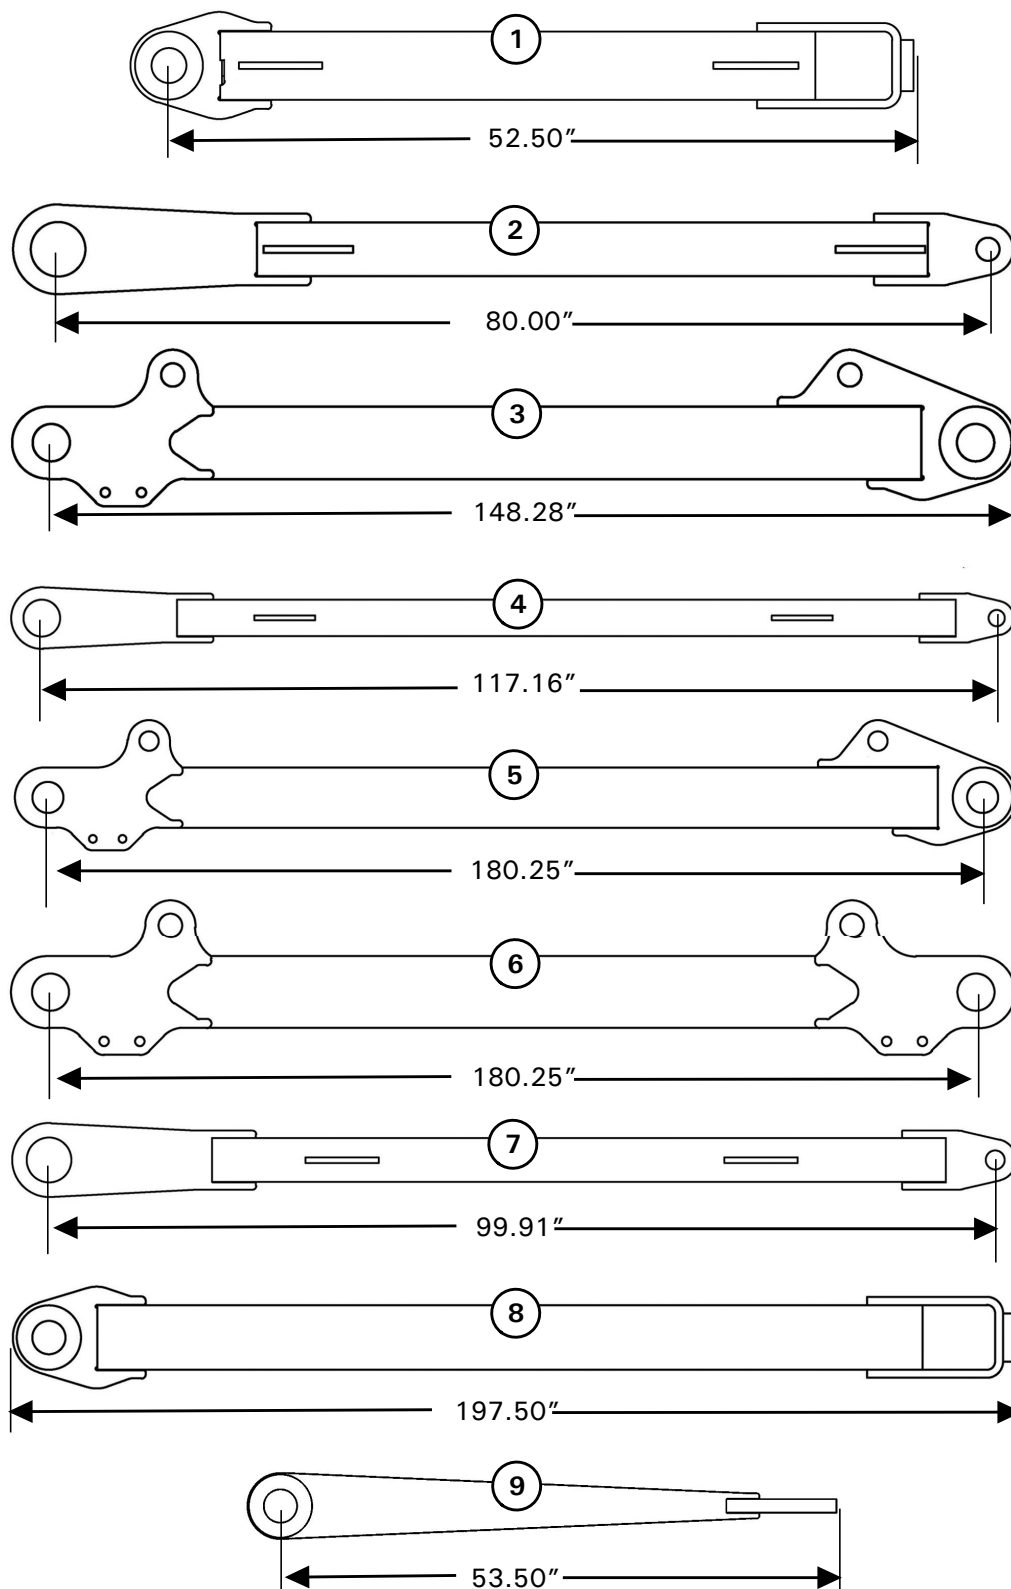

16124 Cross Brace Plate / Truss Support Bracket Identification

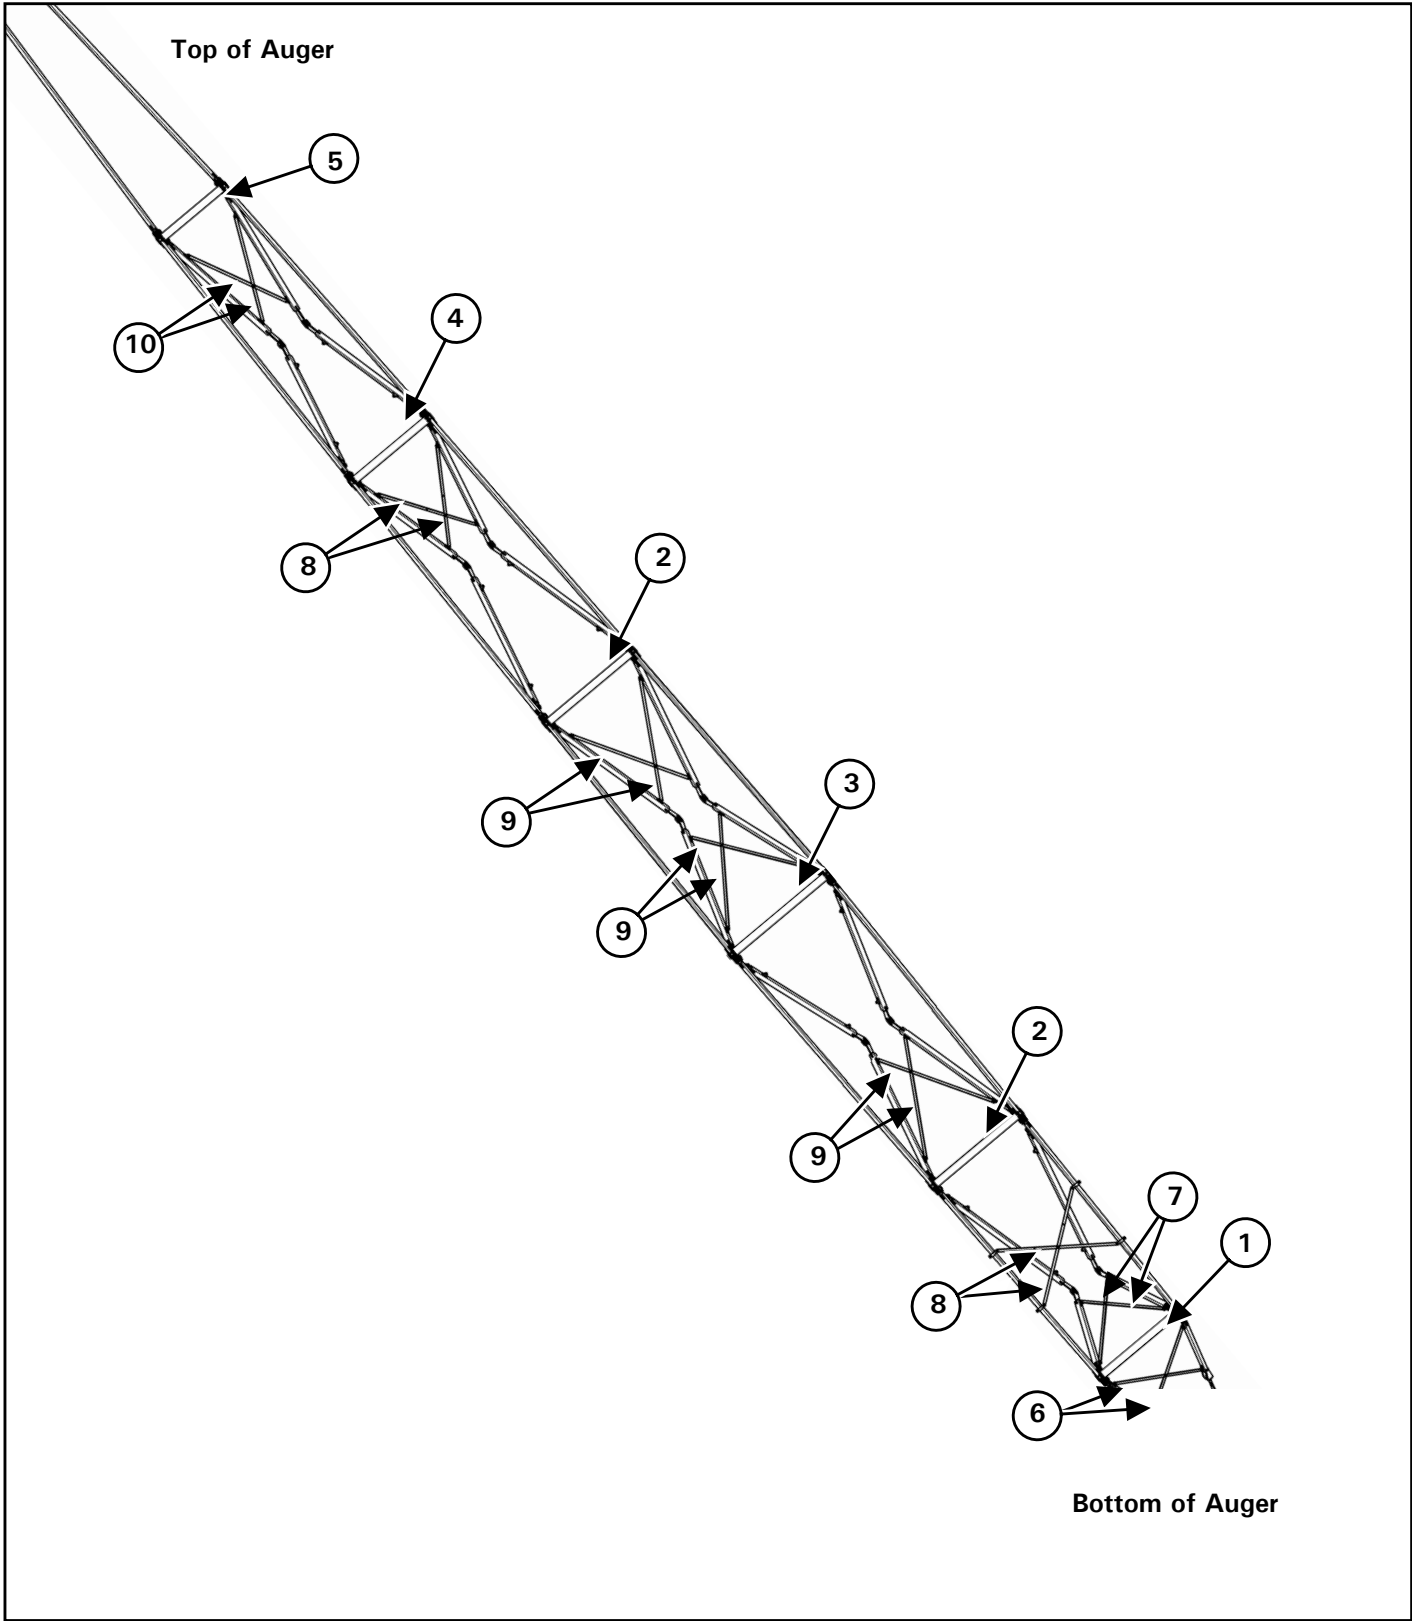

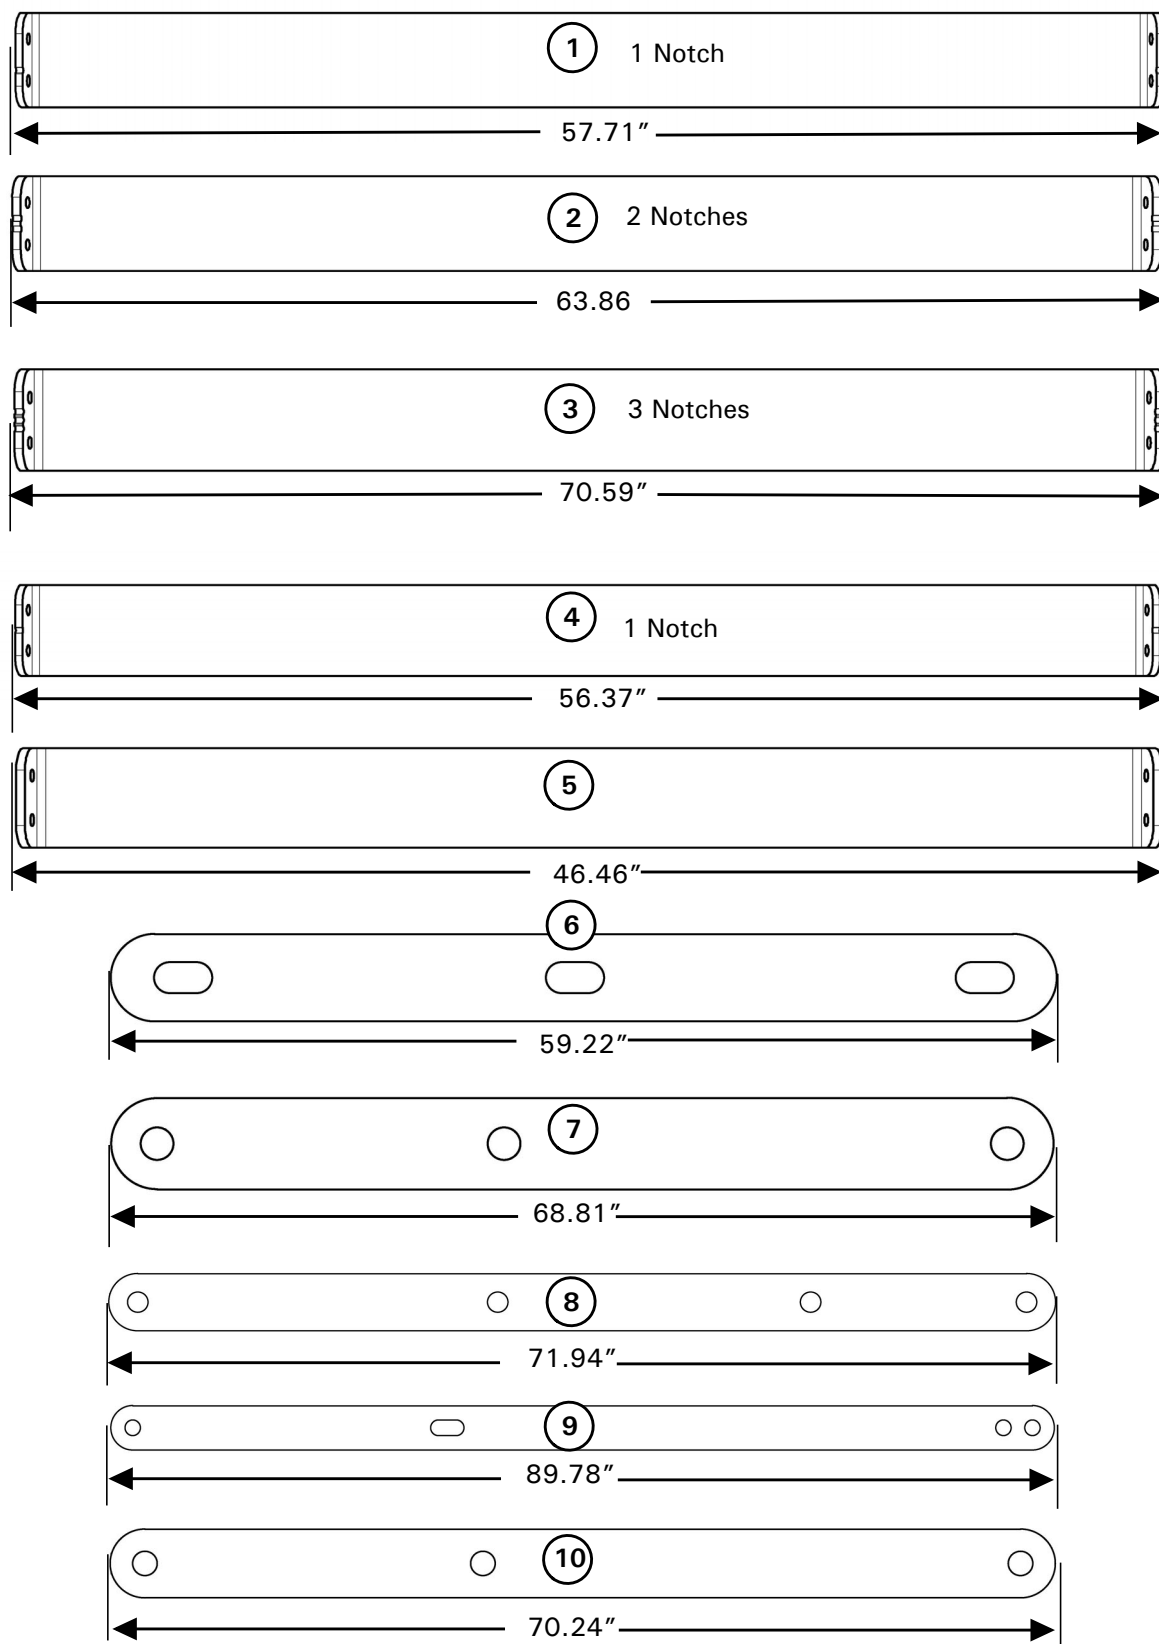

1684 Installing Tube On Undercarriage

Install the tube on the undercarriage on a flat level surface.

WARNING



- DO NOT permit bystanders to be in the work area when unloading and assembling the auger components.
- DO NOT work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.

WARNING




AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

IMPORTANT


Fully tighten all tube assembly hardware before installing the tube assembly onto the undercarriage.

Figure 204

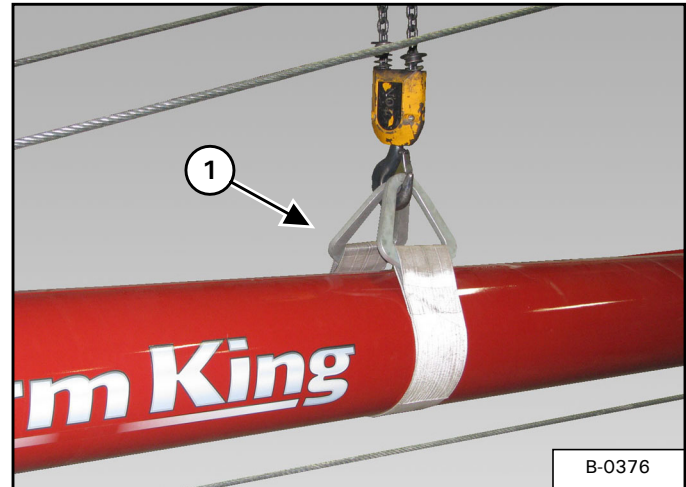


With the strap (Item 1) [Figure 204] installed around the center tube and connected to an approved lifting device, raise the tube assembly high enough to allow the undercarriage to be moved under the tube assembly.

Figure 205

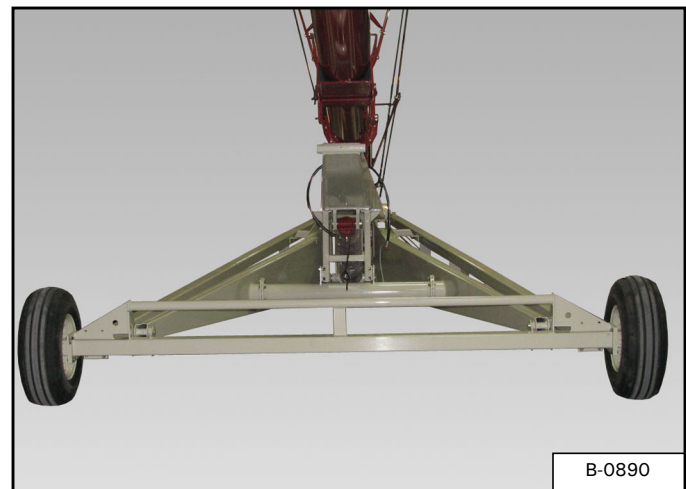

Move the undercarriage into position below the tube assembly [Figure 205].


Figure 206

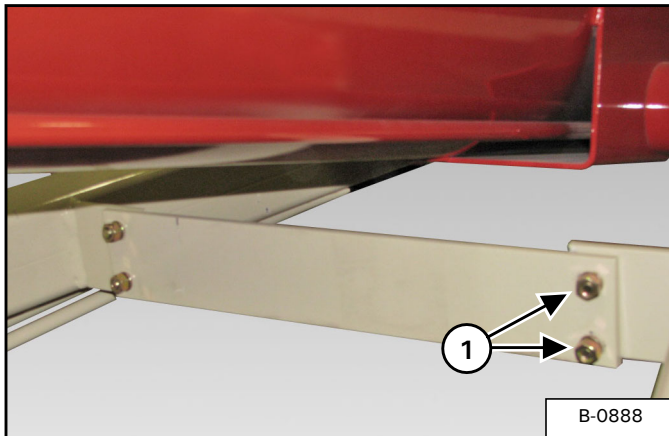

Remove the two 7/16" x 1-1/2" bolts (Item 1) [Figure 206], 7/16" lock nut and 7/16" flat washers from the undercarriage tie plate.

NOTE: Loosening the undercarriage tie plate will allow the RH & LH undercarriage arms to be moved during installation to the tube assembly.


Figure 207

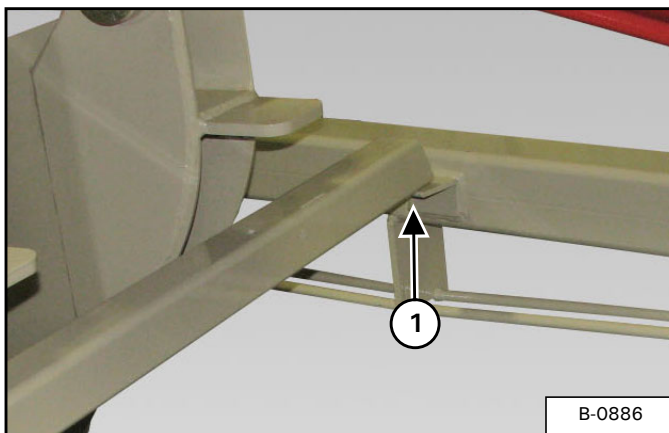

Remove the 5/8" x 1-3/4" bolt (Item 1) [Figure 207], 5/8" lock nut and 5/8" flat washer from the lift arm cradle. Rotate the lift arm cradle away from the LH undercarriage arm.

NOTE: Loosening the lift arm cradle will allow the RH & LH undercarriage arms to be moved during installation to the tube assembly.

Figure 208

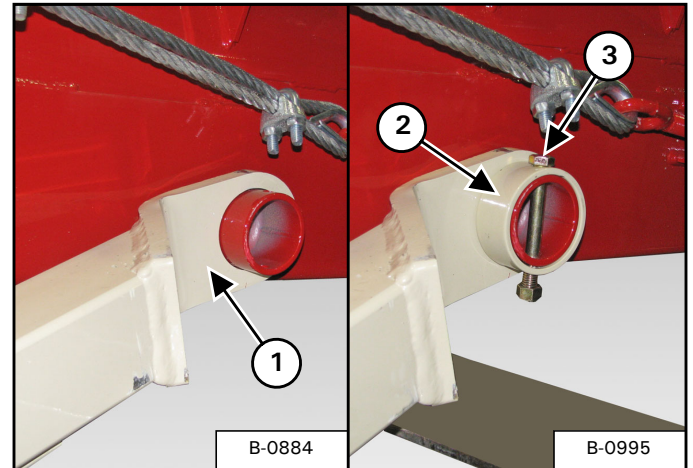


Fully install the RH & LH undercarriage arms (Item 1) [Figure 208] onto the mounts of the bottom tube section.

Install the undercarriage pin sleeve (Item 2), align holes and install one 1/2" X 4-1/2" bolt (Item 3) [Figure 208] through the sleeve and mount of the bottom tube section. Install one 1/2" lock nut on the bolt and tighten (both sides)

Reinstall the two 7/16" x 1-1/2" bolts (Item 1) [Figure 208], 7/16" lock nuts and 7/16" flat washers. Do not tighten bolts and lock nuts at this time.


Figure 209

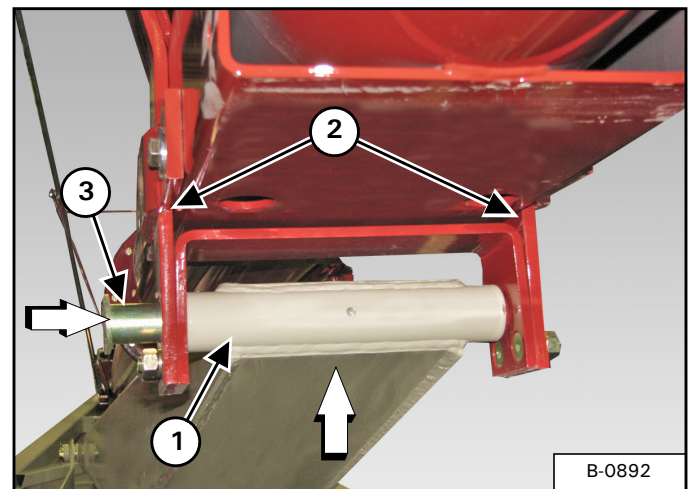

Align upper lift arm (Item 1) with the main bridging yoke (Item 2) [Figure 209] on the center tube section.

Install the lift arm pivot pin (Item 3) [Figure 209] through the main bridging yoke and upper lift arm.


Figure 210

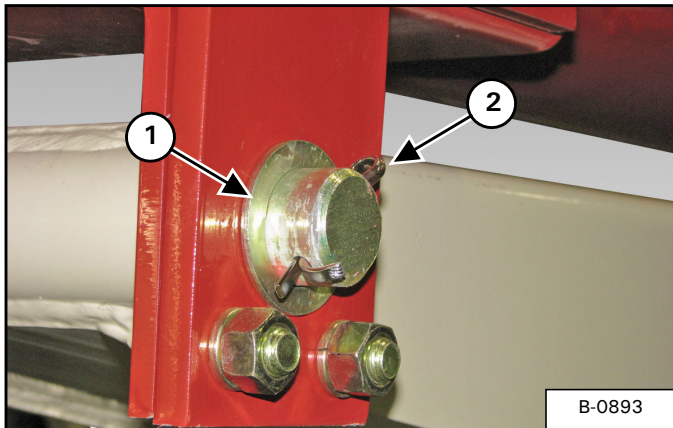

Install one 1-1/2" x 10 ga. narrow rim washer (Item 1) and one 1/4" x 2" cotter pin (Item 2) [Figure 210] through the lift arm pivot pin.

Place chock blocks in front and behind the tires of the undercarriage to prevent the auger assembly from moving.

Figure 211

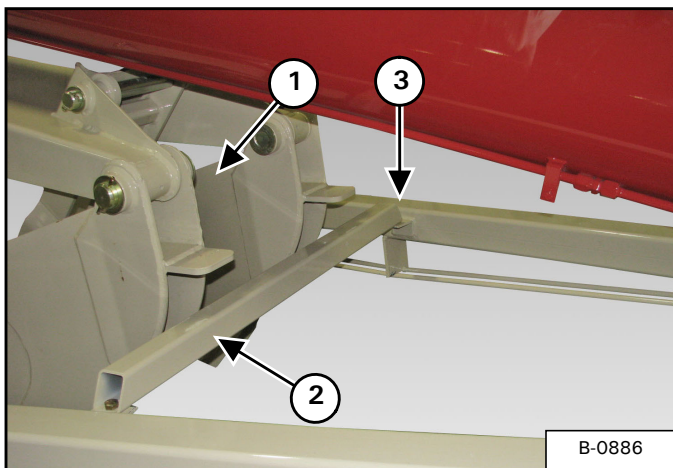


Install a strap around the LH or RH lower lift arm. Connect the strap to an approved lifting device and raise the lower lift arm assembly (Item 1) above the lift arm cradle (Item 2) [Figure 211].

Position the lift arm cradle on top of the undercarriage arm mount. Install bolt (Item 3) [Figure 211] and lock nut.

Lower the lower lift arm assembly onto the lift arm cradle.

Figure 212

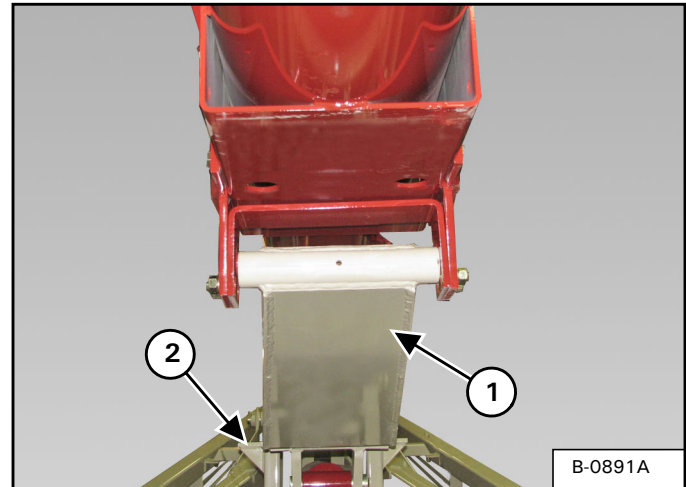

With the upper lift arm (Item 1) resting on the lift arm rest (Item 2) [Figure 212] and cradle rest, verify that the tube assembly is centered left to right on the undercarriage.

Adjust tube assembly as needed until the tube assembly is centered on the undercarriage.


Slightly raise the tube assembly above the undercarriage lift arm rest and cradle rest.

Tighten all remaining undercarriage bolts.


! IMPORTANT

Fully tighten all undercarriage hardware before lowering the tube assembly onto the undercarriage.


Lower tube assembly onto the undercarriage and remove the strap from tube assembly.

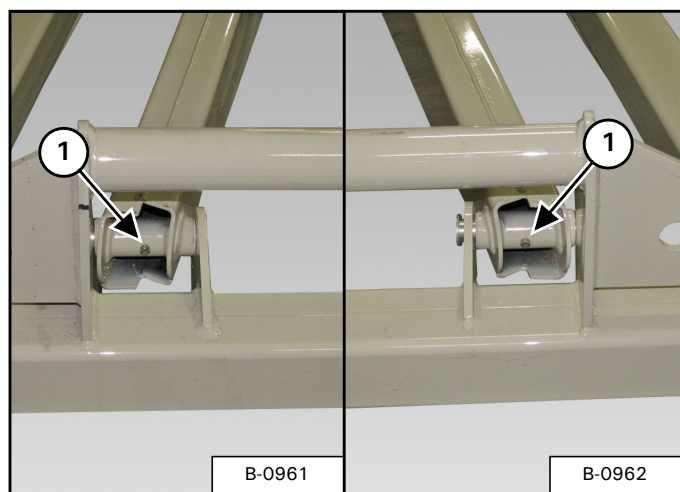Figure 213


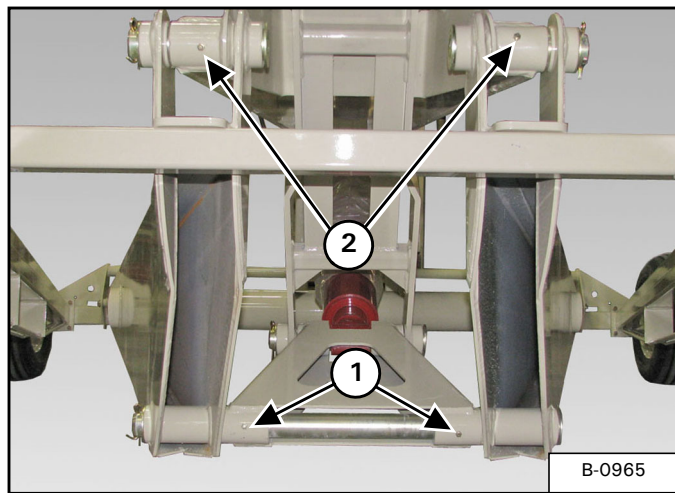
Install grease zerks (Item 1) [Figure 213] in the axle end of the LH & RH lower lift arms.

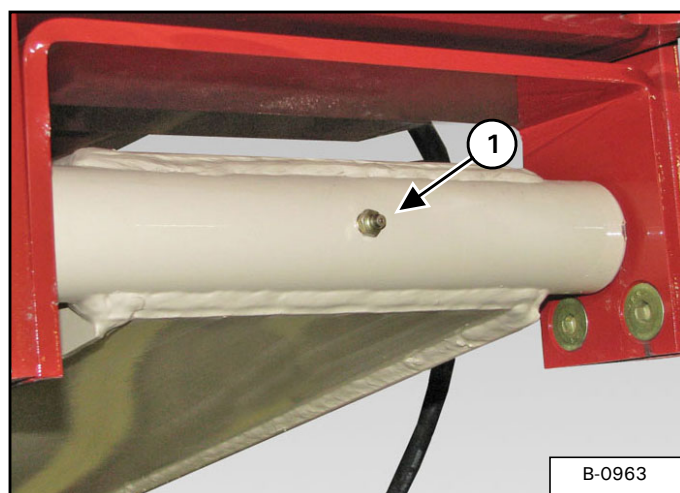Figure 214


Install one grease zerker (Item 1) [Figure 214] into the upper lift arm.

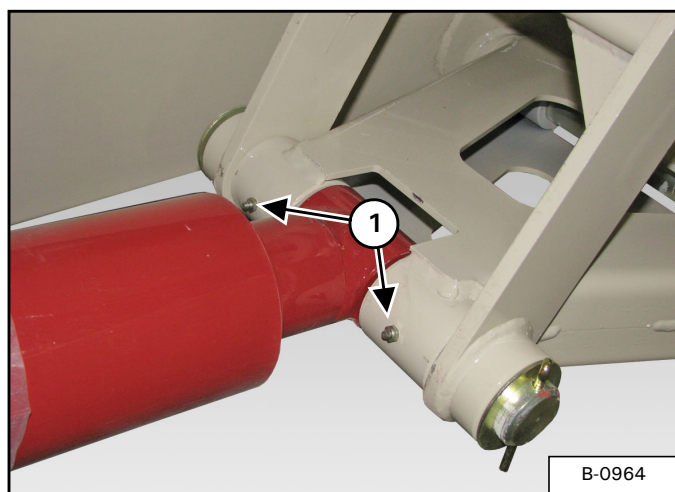Figure 215


Install two grease zerks (Item 1) [Figure 215] into the connecting link.

Figure 216


Install two grease zerks (Item 1) [Figure 216] into the connecting link.

Install two grease zerks (Item 2) [Figure 216] into the upper lift arm.

Grease all zerks on undercarriage. (See "LUBRICATION" on page 163.)



IMPORTANT

Check over undercarriage, verify all bolts are tight, all zerks are greased and cotter pins bent over.

16104 Installing Tube On Undercarriage

Install the tube on the undercarriage on a flat level surface.

WARNING



- DO NOT permit bystanders to be in the work area when unloading and assembling the auger components.
- DO NOT work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 217

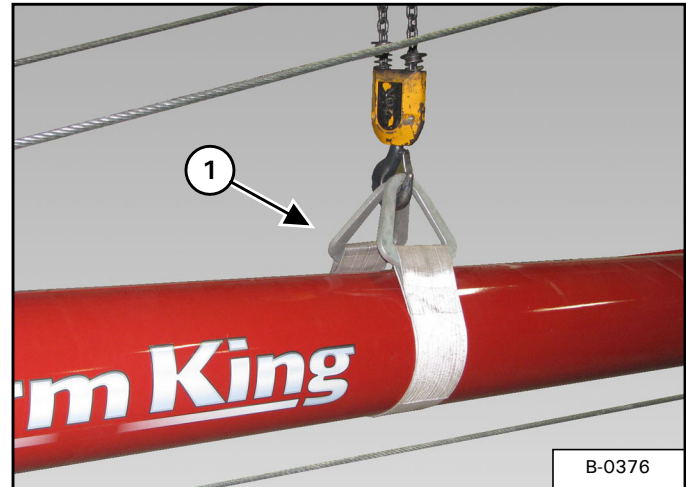


With the strap (Item 1) [Figure 217] installed around the #3 tube and connected to an approved lifting device, raise the tube assembly high enough to allow the undercarriage to be moved under the tube assembly.

Figure 218



Move the undercarriage into position below the tube assembly [Figure 218].


Figure 219

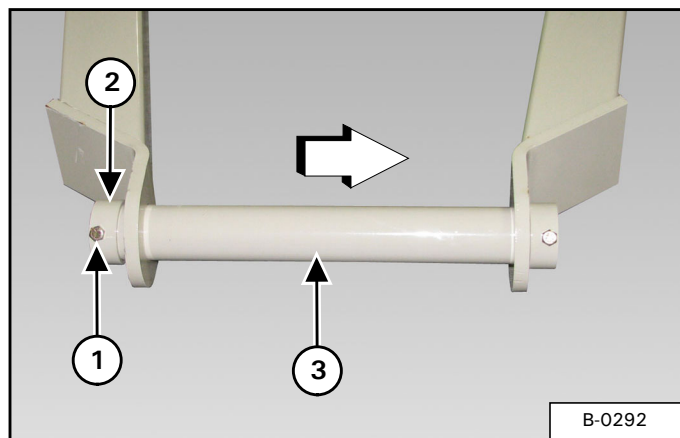

Remove the 1/2" x 4-1/2" bolt (Item 1), 1/2" lock nut and collar (Item 2) [Figure 219].


Remove the undercarriage lift arm pin (Item 3) [Figure 219].

Figure 220

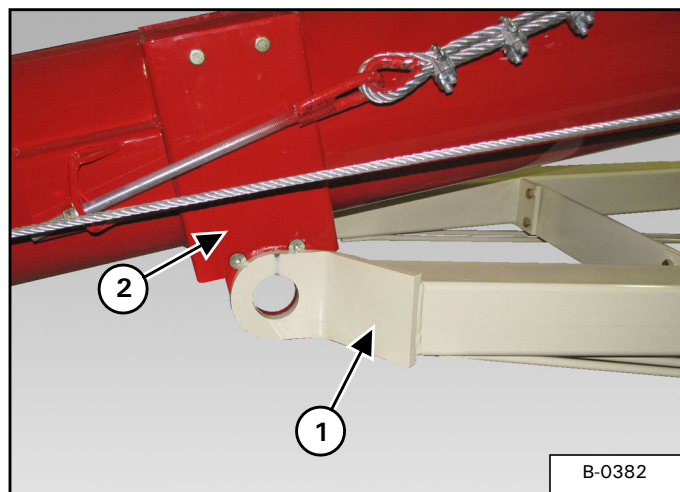


Raise the front of the undercarriage (Item 1) and align the holes of the undercarriage and the undercarriage connector plate(s) (Item 2) [Figure 220].

Figure 221

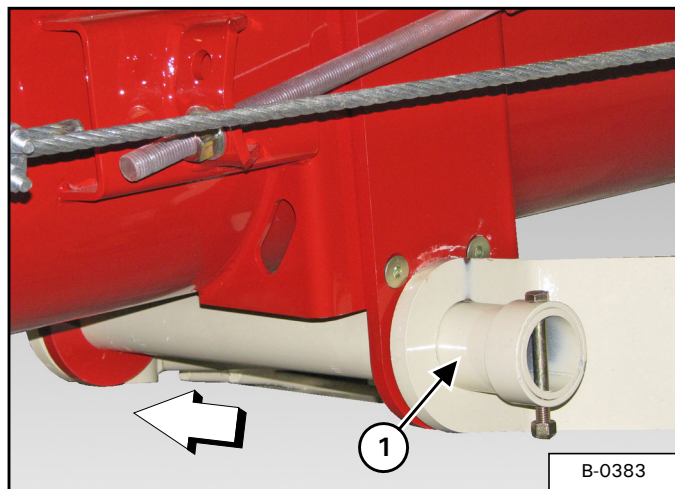

Install the undercarriage lift arm pin (Item 1) [Figure 221] through the left undercarriage arm, undercarriage connector plates and right undercarriage arm.


Figure 222

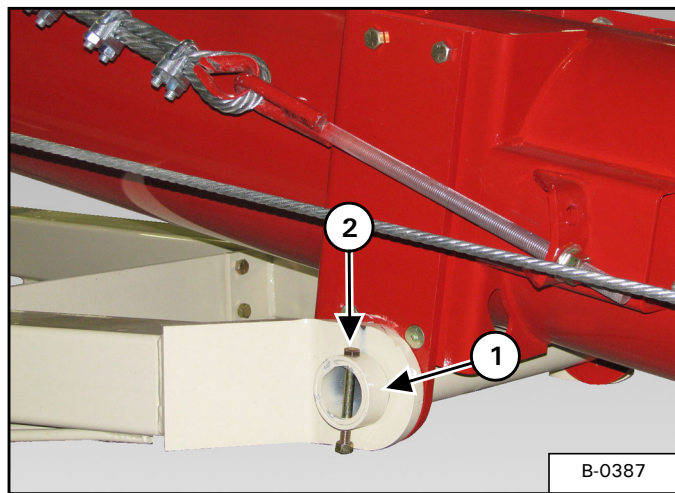

Install the collar (Item 1), 1/2" x 4-1/2" bolt (Item 2) [Figure 222] and 1/2" lock nut.


Tighten the bolt and lock nut until the lock nut contacts the collar (both sides).

Figure 223

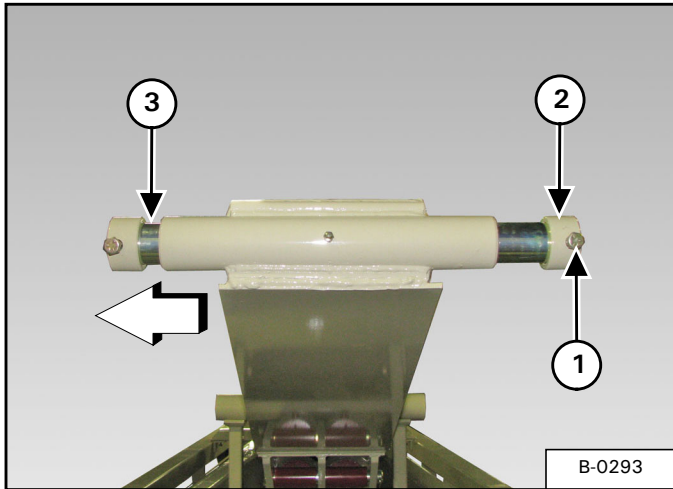


Remove the 1/2" x 3-1/2" bolt (Item 1), 1/2" lock nut, collar (Item 2) and upper lift arm pin (Item 3) [Figure 223].

Figure 224

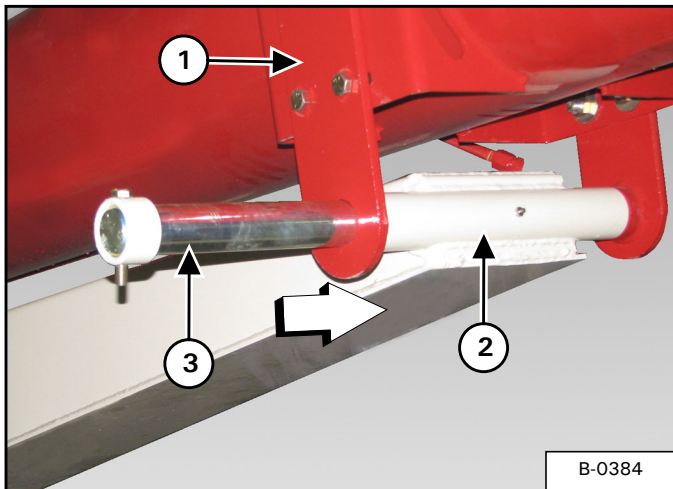

Lower the tube assembly and align the holes of the bridging plate (Item 1) and upper lift arm (Item 2). Install the upper lift arm pin (Item 3) [Figure 224] through the bridging plate and upper lift arm.

Figure 225

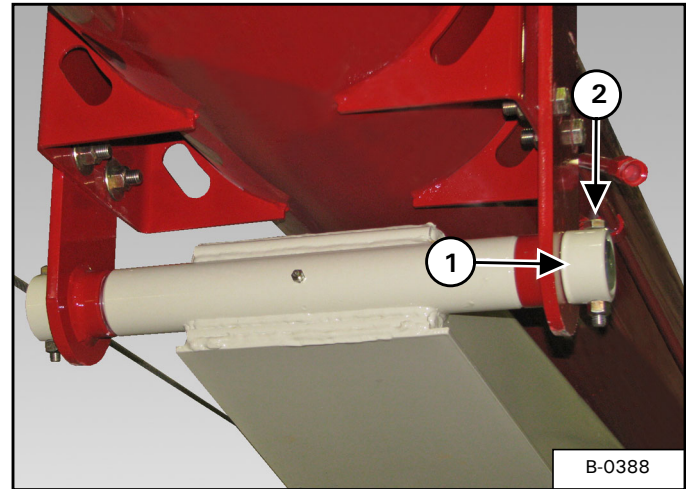


Install collar (Item 1), 1/2" x 3-1/2" bolt (Item 2) [Figure 225] and 1/2" lock nut.

Tighten the bolt and lock nut until the lock nut contacts the collar (both sides).


Place chock blocks in front and behind the tires of the undercarriage to prevent the auger assembly from moving.

Figure 226

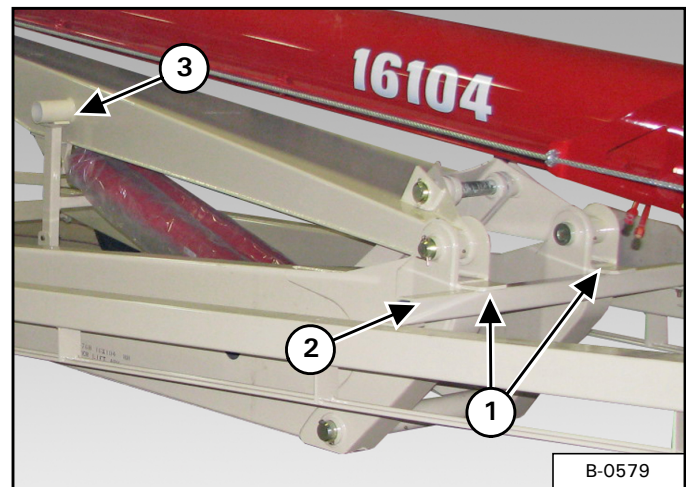

Lower the tube assembly until the upper lift arm (Item 1) is resting on the lift arm rest (Item 2) and cradle rest (Item 3) [Figure 226].


Figure 227

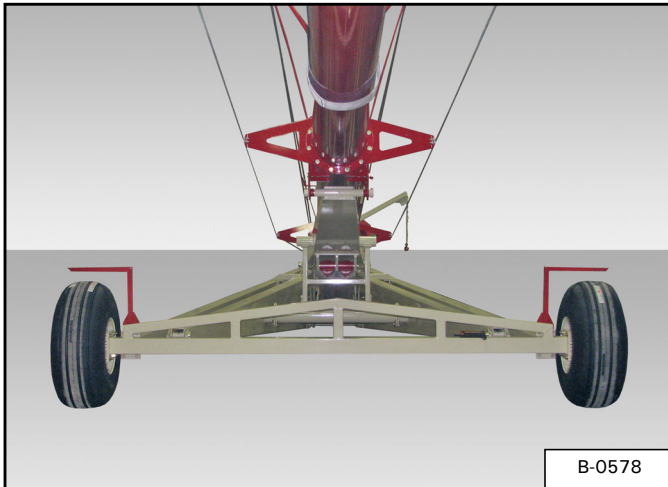

With the upper lift arm resting on the lift arm rest and cradle rest, verify that the tube assembly is centered left to right on the undercarriage [Figure 227].

Adjust tube assembly as needed until the tube assembly is centered on the undercarriage.

Figure 228

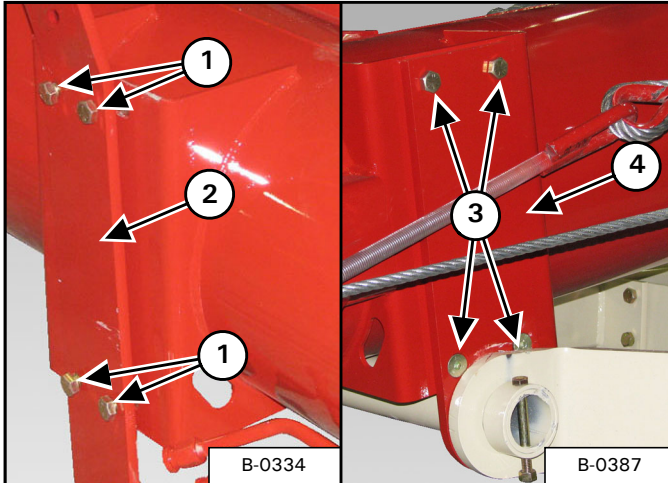


Slightly raise the tube assembly above the undercarriage lift arm rest and cradle rest.

Tighten the four bolts (Item 1) and lock nuts on the bridging plate (Item 2) [Figure 228] (connected to the upper lift arm).

Tighten the four bolts (Item 3) and lock nuts on the undercarriage connector plates (Item 4) [Figure 228] (connected to the front of the undercarriage).

Figure 229

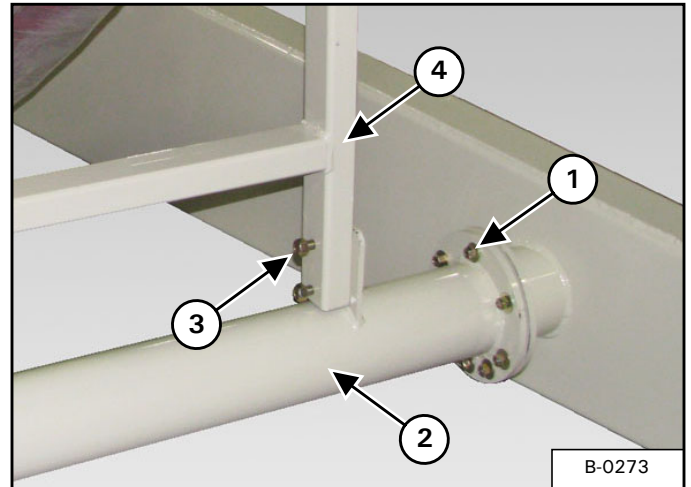

Tighten up the sixteen 1/2" bolts (Item 1) and nuts on the torque tube (Item 2) [Figure 229].

Tighten up the four 1/2" bolts (Item 3) and nuts on the cradle rest (Item 4) [Figure 229].

Tighten all remaining undercarriage bolts.

! IMPORTANT

Fully tighten all undercarriage hardware before lowering the tube assembly onto the undercarriage.

Lower tube assembly onto the undercarriage and remove the strap from tube assembly.

Grease all zerks on undercarriage. (See "LUBRICATION" on page 163.)

! IMPORTANT

Check over undercarriage, verify all bolts are tight, all zerks are greased and cotter pins bent over.

16124 Installing Tube On Undercarriage

NOTE: The following images may not show your exact model as it appears but the procedure is correct.

Install the tube on the undercarriage on a flat level surface.

WARNING



- **DO NOT** permit bystanders to be in the work area when unloading and assembling the auger components.
- **DO NOT** work under suspended parts.
- Keep away from moving parts.
- Always use lifting devices / vehicles, chains or straps of adequate size and strength when unloading and assembling the auger components.


WARNING



AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when assembling the equipment.

Figure 230

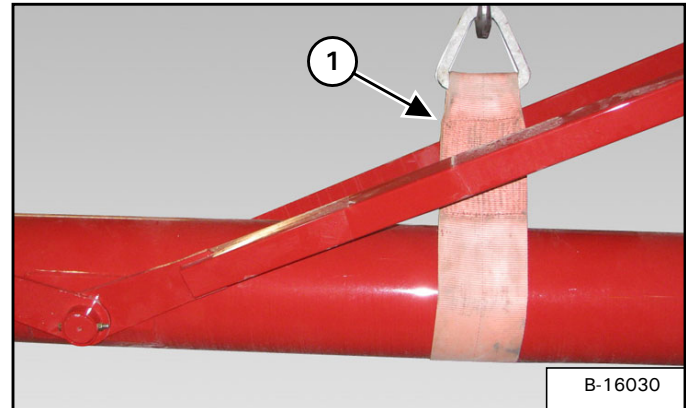


With the strap (Item 1) [Figure 230] installed around the #4 tube and connected to an approved lifting device, and a strap connected at the front of the #1 tube and connected to an approved lifting device, raise the tube assembly high enough to allow the undercarriage to be moved under the tube assembly.

NOTE: The tube/truss assembly must be prevented from rotating as it is top heavy, this can be done by placing straps around the upper middle horizontal truss members, do not lift the assembly by the trusses, just prevent rotation.

Move the undercarriage into position below the tube assembly [Figure 230].

Figure 231

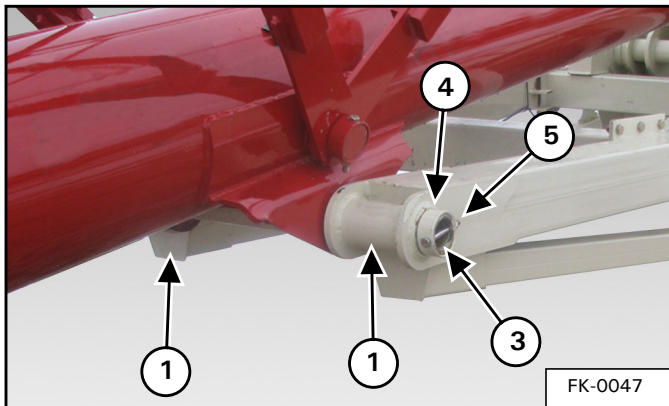


Raise the front of the undercarriage (Item 1) **[Figure 231]** and align the holes of the undercarriage with the mount holes on the tube.

Install the undercarriage 2" diameter lift arm pin (Item 3) **[Figure 231]** through the left undercarriage arm, tube mount holes and right undercarriage arm.


Install the collar (Item 4), 1/2" x 3-1/2" bolt and 1/2" lock nut (Item 5) **[Figure 231]** (both sides). Tighten the bolts and lock nuts until the lock nuts contact the collar.

Figure 232

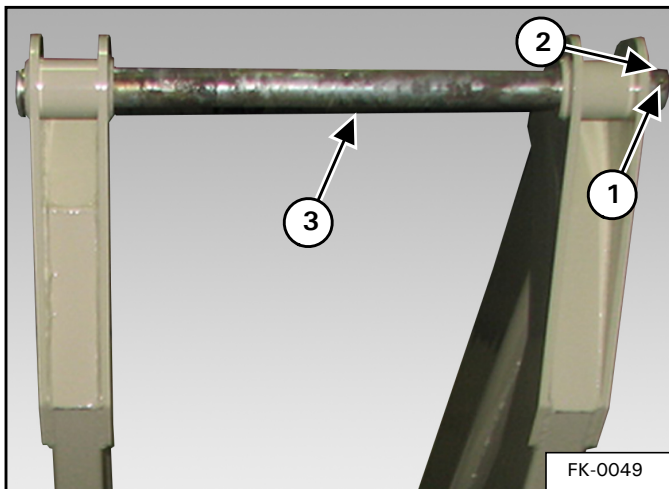

Remove the 1/2" x 3-1/2" bolt, 1/2" lock nut (Item 1), collar (Item 2) and the 2" diameter upper lift arm pin (Item 3) that was previously installed for lifting purposes. **[Figure 232]**.


Figure 233

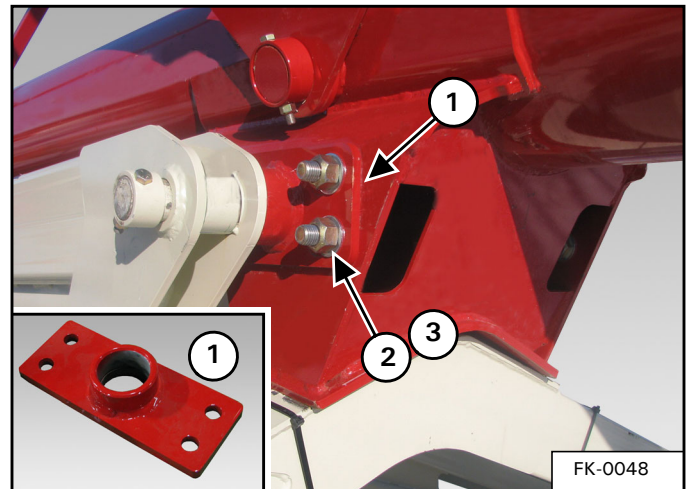

Place the plate (Item 1) as shown **[Figure 233]**, install four 1" x 3" bolts, flat washers (Item 2) and lock nuts (Item 3) onto the bolts. Do not tighten at this time.

Repeat procedure for the opposite side.

Figure 234

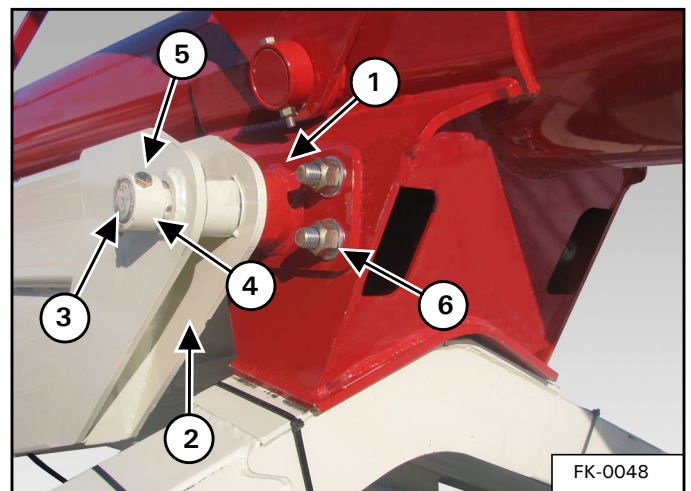


Lower the tube assembly and align the holes of the tube undercarriage mounting plate (Item 1) and upper lift arm (Item 2) **[Figure 234]**.

Install the 2" upper lift arm pin (Item 3) **[Figure 234]** through the upper lift arms and plates.

Install collar (Item 4), 1/2" x 3-1/2" bolt (Item 5) **[Figure 234]** and 1/2" lock nut (both sides). Tighten the bolt and lock nut until the lock nut contacts the collar (both sides).

Tighten the bolts (Item 6) **[Figure 234]** (both sides).

Figure 235

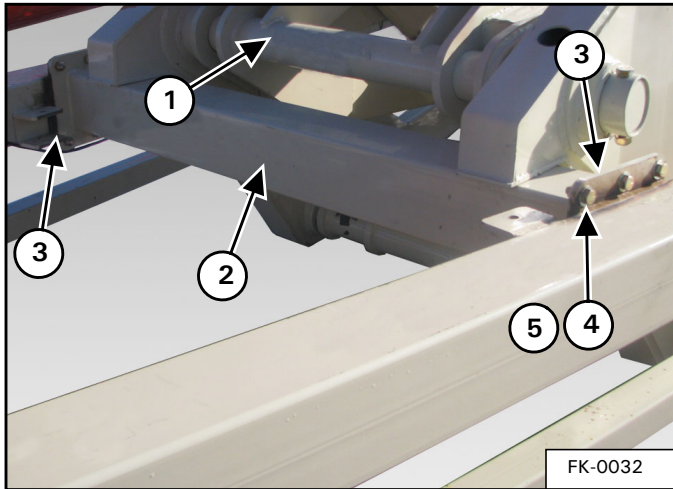


Place chock blocks in front and behind the tires of the undercarriage to prevent the auger assembly from moving.

Lower the tube assembly until the upper lift arm (Item 1) is resting on the cross brace support (Item 2) [Figure 235].

Slightly raise the tube assembly above the cross brace support.

Figure 236

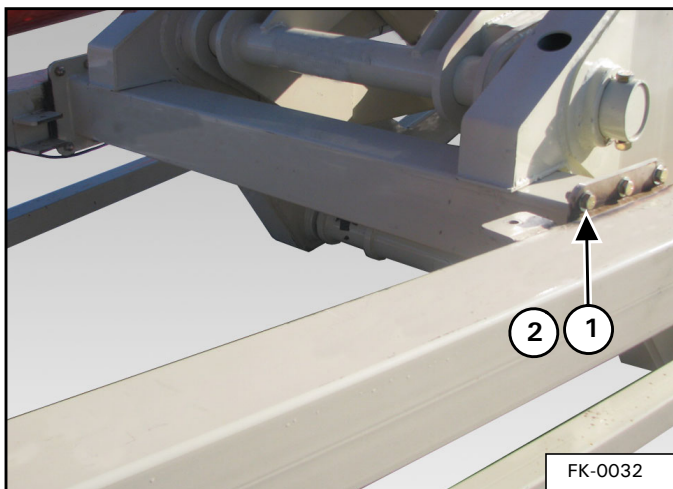

Tighten the six 5/8" x 1-1/2" bolts (Item 1) and 5/8" lock nuts (Item 2) [Figure 236] on the cross brace support (both sides).

Tighten all remaining undercarriage bolts and cross support braces.

! IMPORTANT

Fully tighten all undercarriage hardware before lowering the tube assembly onto the undercarriage.

Lower tube assembly onto the undercarriage until the pressure is released from the straps and lifting device from #4 tube and #1 tube.

Measure the tube angle at the midpoint and flange connection of each section of tube.

Ensure the top two tube (#4 & #3 tube) sections are at the same angle, the tube is straight (+/- 1 degree) and the spout end is not dipping down or tipping up.

NOTE: If the spout end is dipping down or tipping up, lift the end tube (#4 tube) at the discharge spout and adjust the lengths of the upper trusses. See truss adjustment on page 90.


The angle of the #4 tube must be the same as the angle of the #3 tube when the lifting device and straps are removed. The tube is self supported and straight (+/- 1 degree).

Grease all zerks on undercarriage. (See "LUBRICATION" on page 163.)

! IMPORTANT

Check over undercarriage, verify all bolts are tight, all zerks are greased and cotter pins bent over.

Figure 237

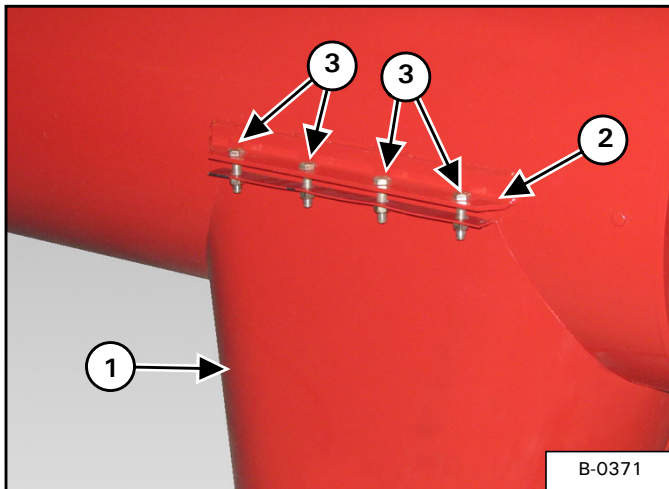


Align the discharge spout (Item 1) with the mounting brackets (Item 2) [Figure 237] on both sides of the #4 tube.

Install the eight 3/8" x 1-1/2" bolts (Item 3) [Figure 237] and 3/8" lock nuts. Tighten bolts and lock nuts evenly until the discharge spout contacts the #4 tube.

1684, 16104 & 16124 Installing The Intake Auger

NOTE: The following images may not show your exact model as it appears but the procedure is correct.

Figure 238

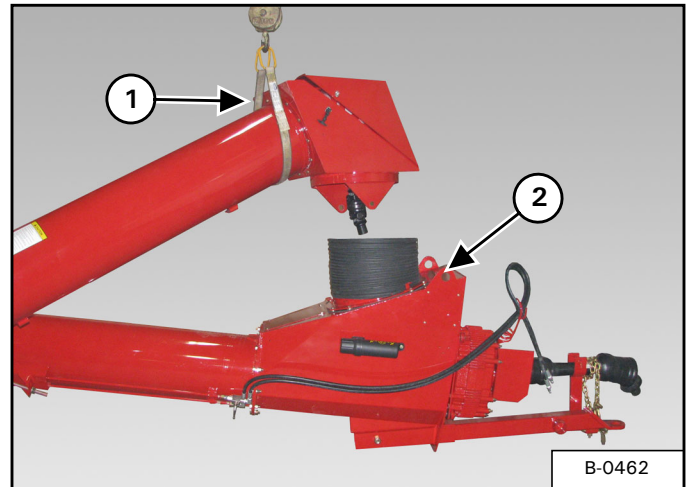


Install a strap (Item 1) [Figure 238] around the intake auger.

Connect the strap to an approved lifting device.

Raise the intake auger and position over the input box (Item 2) [Figure 238].

Figure 239

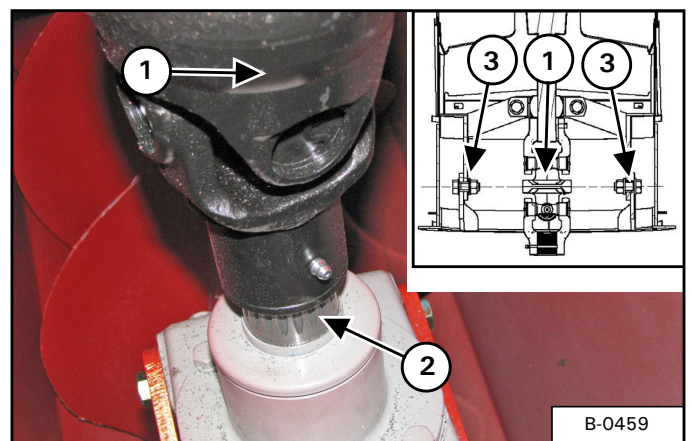


Lower the intake auger, align the u-joint (Item 1) with the top gearbox shaft (Item 2) [Figure 239] of the input box.

NOTE: Lubricate top gearbox shaft before lowering the intake auger onto the shaft.

Lower the intake auger onto the shaft. Align the center of the u-joint (Item 1) with the pivot holes (Item 3) [Figure 239].


Figure 240

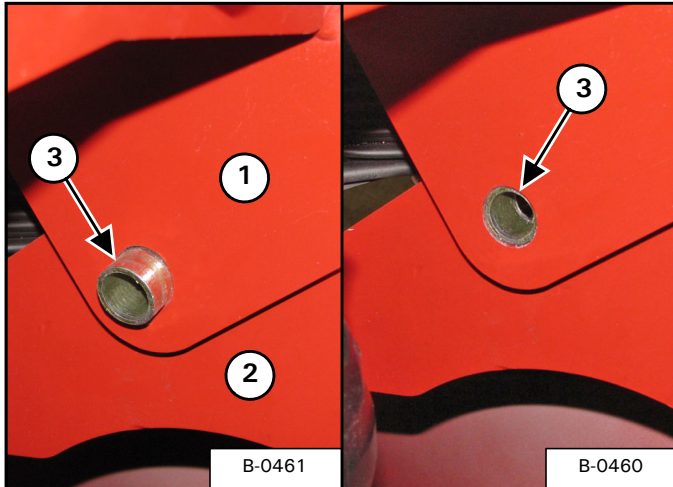

Align the hole of intake auger mounting plate (Item 1) and the hole of intake box mounting plate (Item 2) [Figure 240] (both sides).

Install bushing (Item 3) [Figure 240] through the intake auger mounting plate and input box mounting plate until flush with the inside of the intake auger mounting plate (both sides).


Figure 241

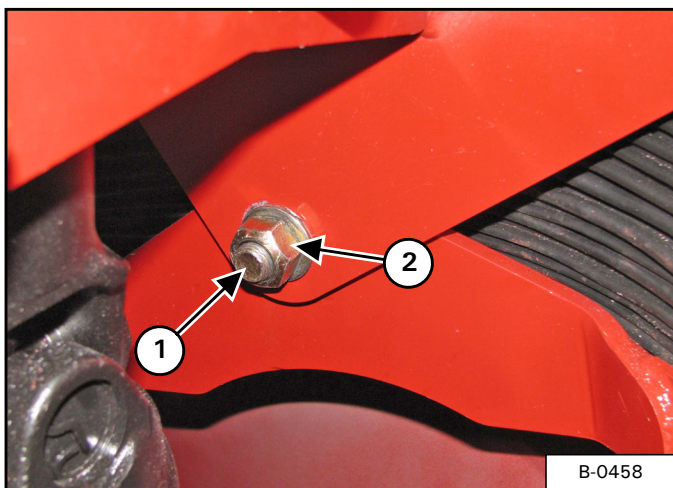

Install one bolt (Item 1) and lock nut (Item 2) [Figure 241] (both sides).

Tighten the bolt and lock nut securely against the bushing.

Figure 242

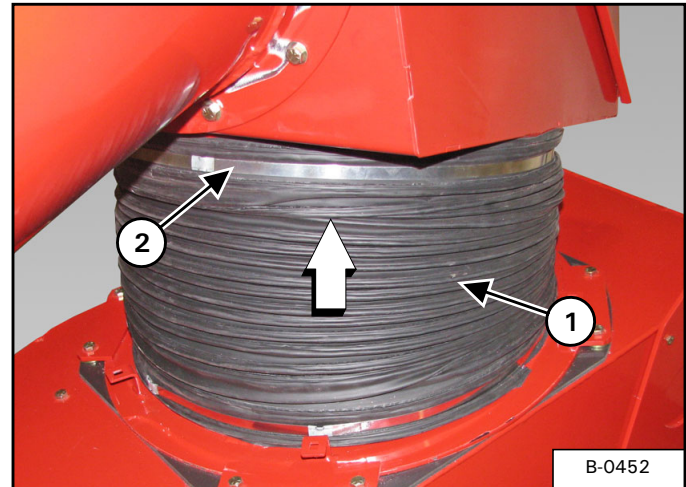


Slide the plastic sleeve (Item 1) up onto the intake auger. Install the clamp (Item 2) [Figure 242] and tighten to secure the plastic sleeve to the intake auger.


Remove the strap and lifting device.

1684 & 16104 Hopper Assembly And Installation


Figure 243

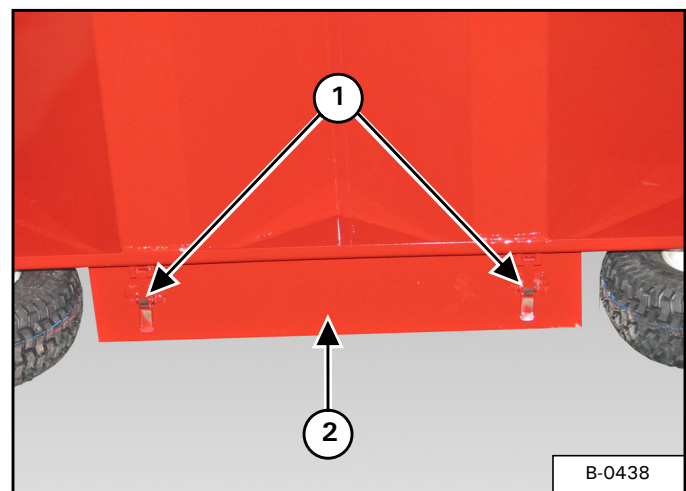

Release the two latches (Item 1) and raise the hopper chain guard cover (Item 2) [Figure 243] to access the rubber edge bolt hole locations on the end of the hopper.

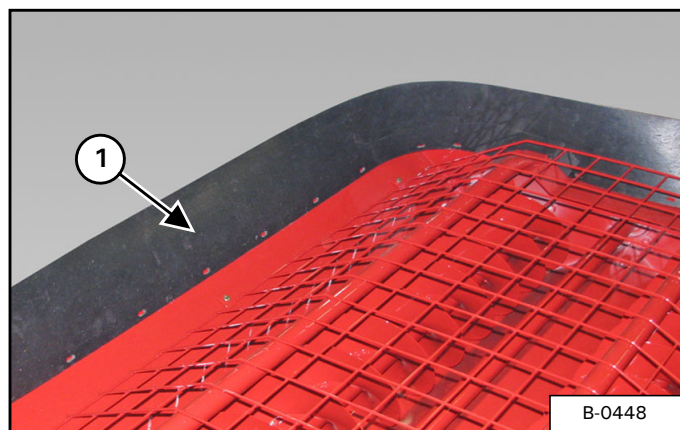
Figure 244


Place the rubber edge (Item 1) [Figure 244] inside the outer flange of the hopper.

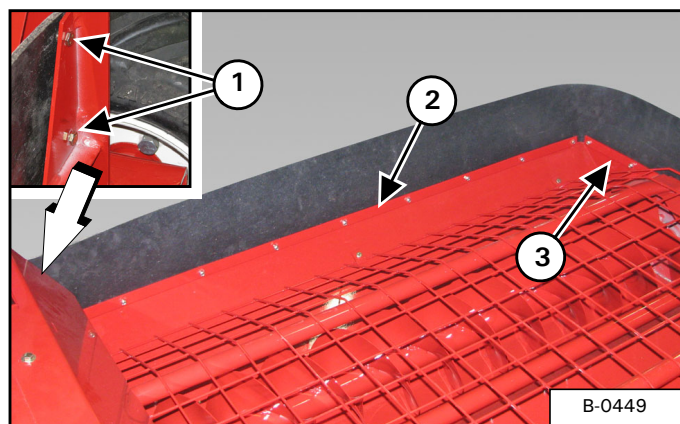Figure 245


Align the end of the rubber edge with the two holes at the back of the hopper. Install two 1/4" x 1" bolts (Item 1) [Figure 245] through the hopper and rubber edge. Install a 1/4" lock nut on each bolt.

Align one long rubber reinforcement (Item 2) and one short rubber reinforcement (Item 3) [Figure 245] with holes in the rubber edge and outer hopper flange (both sides). Install 1/4" x 1" bolts through the hopper, rubber edge and rubber reinforcements (install bolts from the outside of the hopper flange). Install a 1/4" lock nut on each bolt. Do not tighten bolts and lock nuts at this time.

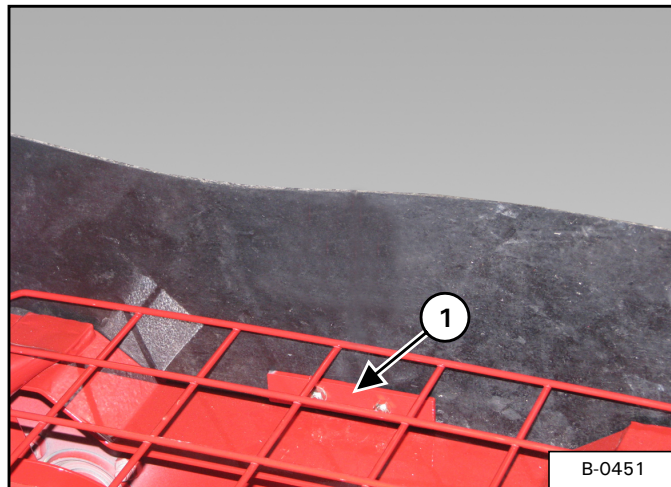
Figure 246


Align the two hole rubber reinforcement (Item 1) [Figure 246] with holes in the rubber edge and outer hopper flange. Install two 1/4" x 1" bolts through the hopper, rubber edge and rubber reinforcement (install bolts from the outside of the hopper flange). Install a 1/4" lock nut on each bolt. Do not tighten bolts and lock nuts at this time.

NOTE: When tightening the rubber edge bolts and lock nuts, tighten until the lock nut contacts the rubber reinforcements. Do not over tighten and cause the rubber reinforcements to become wavy.

Tighten all bolts and lock nuts to secure the rubber edge to the hopper.

Figure 247

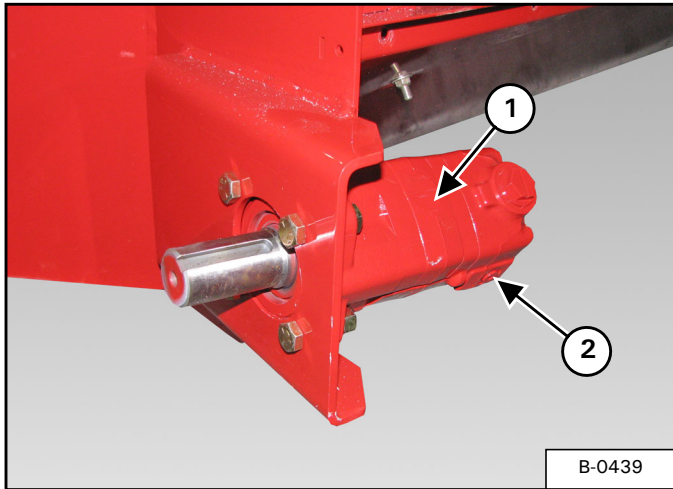

Align and install one hydraulic wheel motor (Item 1) [Figure 247] through the mounting bracket on the side of the hopper.


NOTE: Install the left hydraulic wheel motor (Item 1) with the small port (Item 2) [Figure 247] facing down and towards the outside.

NOTE: Rotate the right hydraulic wheel motor 180° and install with the small port facing up and towards the outside.

Install four 1/2" x 1-3/4" bolts through the mounting bracket and hydraulic wheel motor. Install 1/2" lock nuts on each bolt and tighten to secure the hydraulic wheel motor to the hopper.

Repeat for the right hydraulic wheel motor (with the small port facing up and towards the outside).

Figure 248

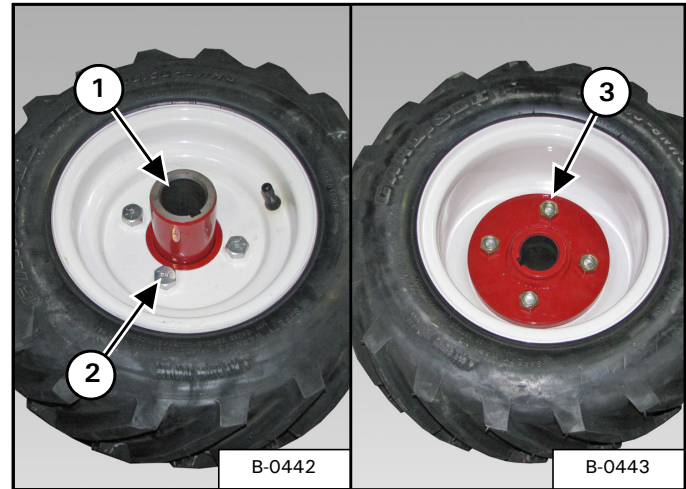


Install the hub (Item 1) [Figure 248] through the rim of the wheel (from the back side of the rim, with the valve stem facing up).

Install four 1/2" x 1-3/4" wheel bolts (Item 2) [Figure 248] through the rim and hub.

Install four 1/2" wheel nuts (Item 3) [Figure 248] on to the bolts. Tighten bolts and nuts to secure the hub to the rim.

Repeat [Figure 248] procedure for second rim / wheel assembly.


Figure 249

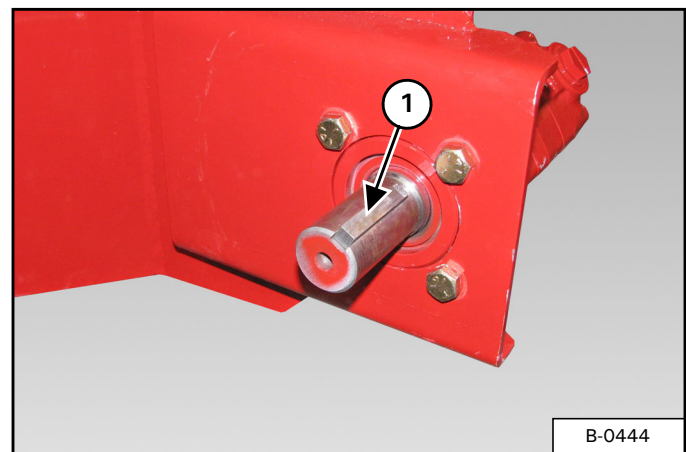

Install the key (Item 1) [Figure 249] into groove on the hydraulic wheel motor shaft (both sides).

NOTE: Lubricate shaft before installing wheel assembly.

Figure 250

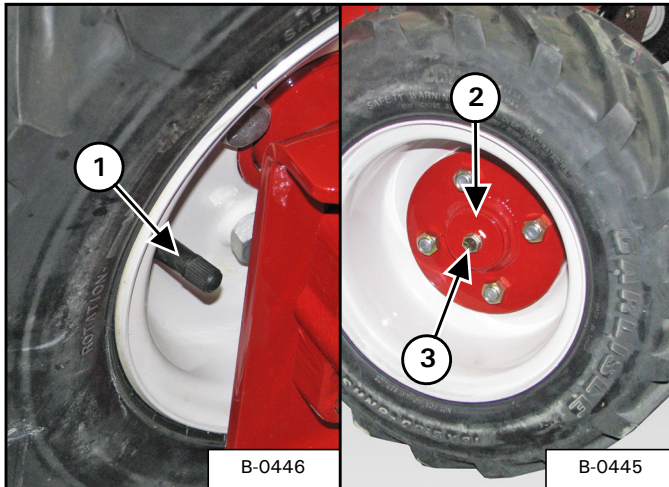


Install the hub onto the hydraulic wheel motor shaft with the valve stem (Item 1) [Figure 250] on the inside.

Install one 3/8" lock washer and one 13/32" ID x 2" OD flat washer (Item 2) onto one 3/8" x 2-1/4" bolt (Item 3) [Figure 250]. Install bolt through the hub and into the hydraulic wheel motor shaft. Tighten the bolt to securely fasten the hub to the hydraulic wheel motor shaft.

Repeat [Figure 250] procedure for second hub / wheel assembly.


Figure 251

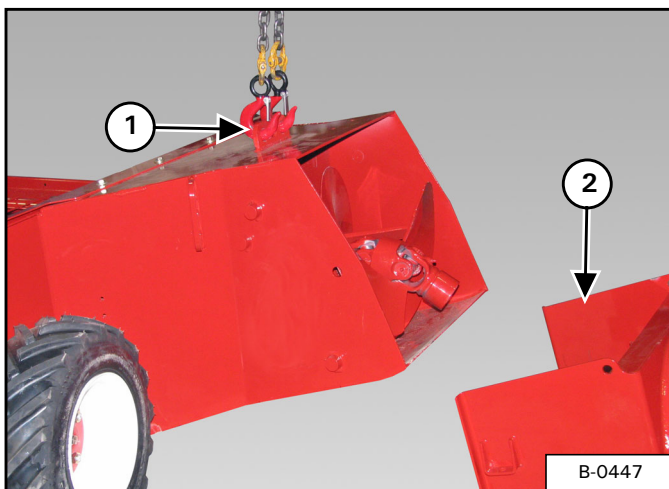

Install chains (Item 1) [Figure 251] into the holes on the top of the hopper.


Raise and move the hopper in front of the intake auger (Item 2) [Figure 251].

Figure 252

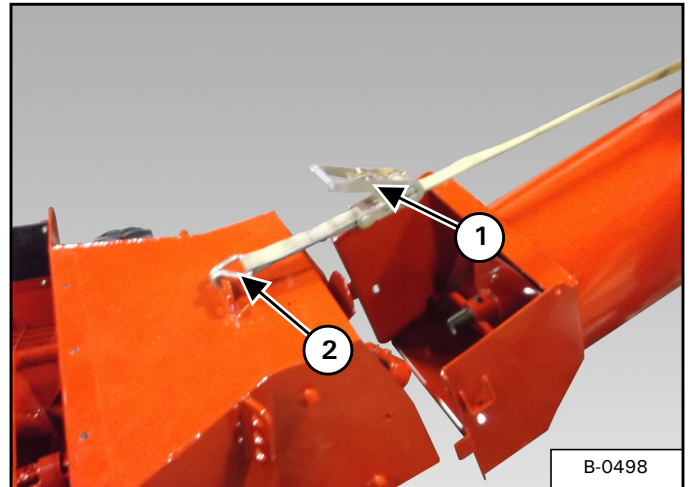


Install a ratchet strap (Item 1) onto the bracket (Item 2) [Figure 252] on the top of the hopper (connect the opposite end of the ratchet strap to the mounting bracket on the top of the intake auger).

Figure 253

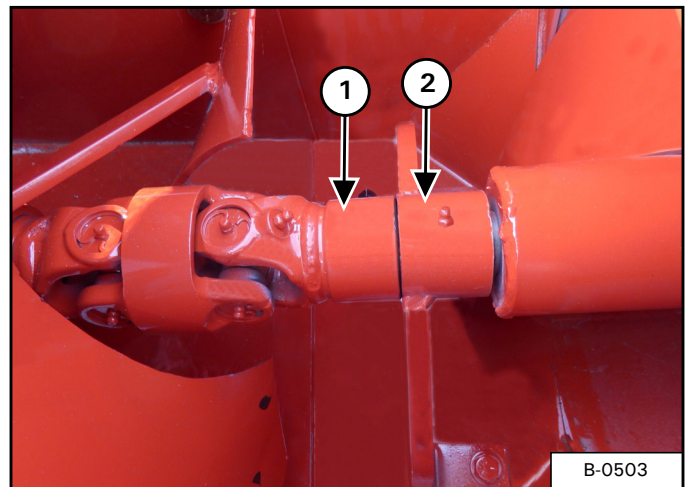

Tighten the ratchet strap, align the hopper u-joint (Item 1) with the shaft (Item 2) [Figure 253] on the intake auger. Tighten the ratchet strap until the u-joint is all the way on the shaft.

Figure 254

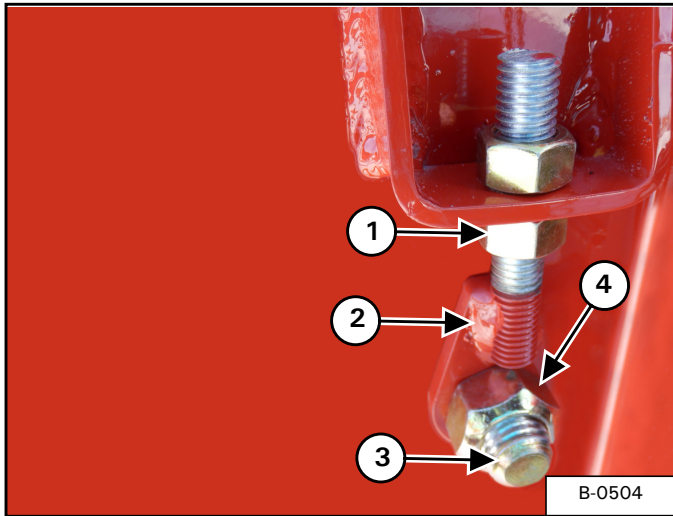

Align the mounting holes on the hopper and intake auger.

Thread one 1/2" nut (Item 1) onto the hopper adjustment bolt (Item 2) [Figure 254], install the adjustment bolt up, into the bracket on the intake auger. Install a second 1/2" nut to hold the adjustment bolt in position.

Install one 3/4" x 1-5/8" bolt (Item 3) (from inside) through the hopper, adjustment bolt and intake auger. Install one 3/4" lock nut (Item 4) [Figure 254] onto the bolt.

Repeat the [Figure 254] procedure on the opposite side of the hopper and intake auger.

Tighten the bolt (Item 3) and lock nut (Item 4) [Figure 254] (both sides), do not overtighten, bolts must be able to rotate with a wrench.


Extend the adjustment bolt (Item 2) [Figure 254] (both sides) until the gap on the bottom is closed.

Secure adjustment with nut (Item 1) [Figure 254] (both sides).

1684 & 16104 Installing The Winch


NOTE: The following images may not show your winch exactly as it appears but the procedure is correct for both the electrical and hydraulic winches.

Figure 255

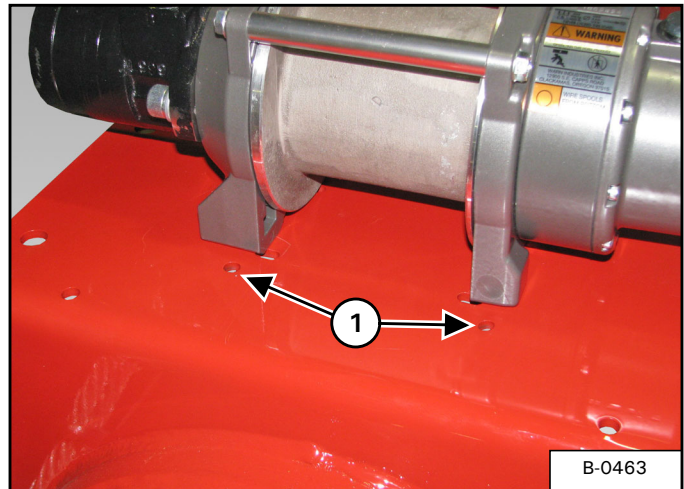


Align the winch with four holes (Item 1) [Figure 255] in the winch mounting plate on the top of the #1 tube.

Figure 256

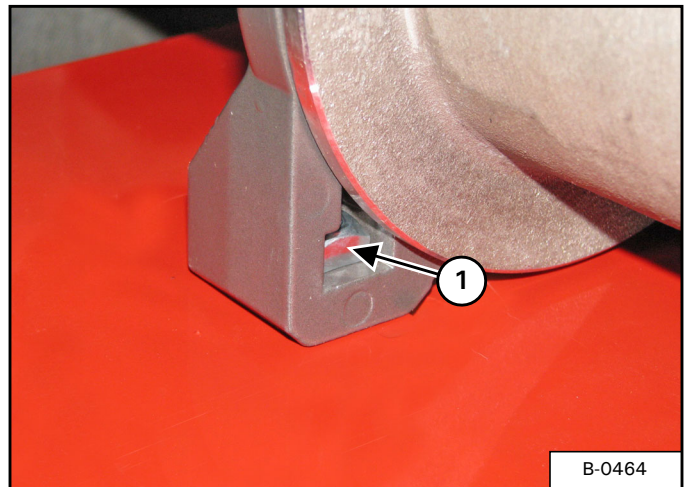

Install one square head nut (Item 1) [Figure 256] into each foot of the winch.


Figure 257

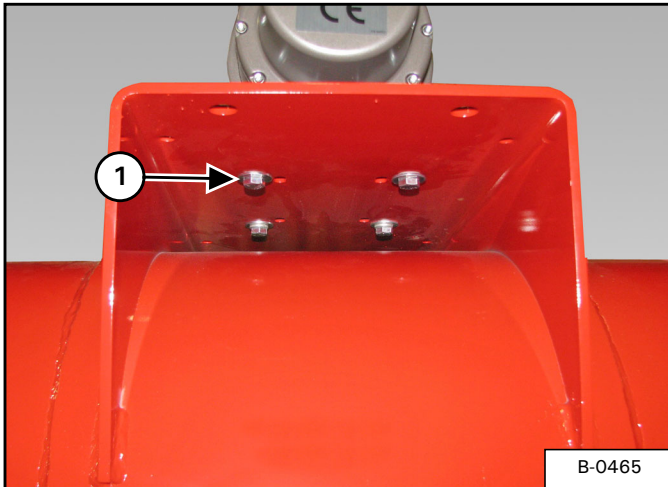

Install one lock washer and flat washer onto the four bolts


While holding down on the square nut (Item 1) [Figure 256], install one bolt, lock washer and flat washer (Item 1) [Figure 257] up through the winch mounting plate and into the square head nut. Repeat for the remaining three bolts, lock washers and flat washers. Tighten all four bolts.

Figure 258

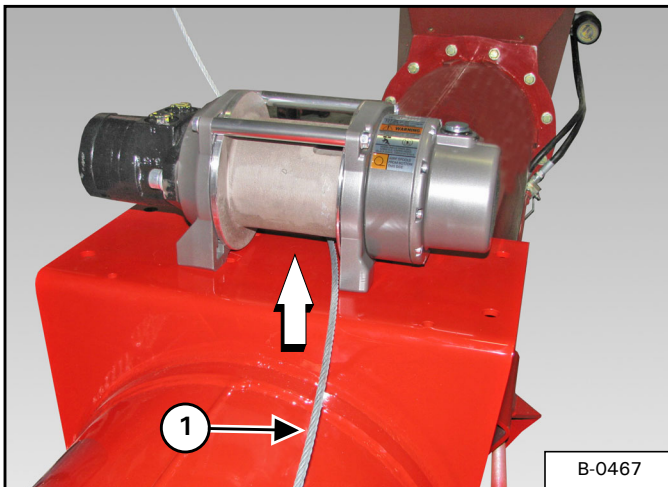


Route the winch cable (Item 1) [Figure 258] through the end pulley of the lift boom, down through the bottom pulley of the lift boom, across the top of the #1 tube and between the winch and winch mounting plate.

Figure 259

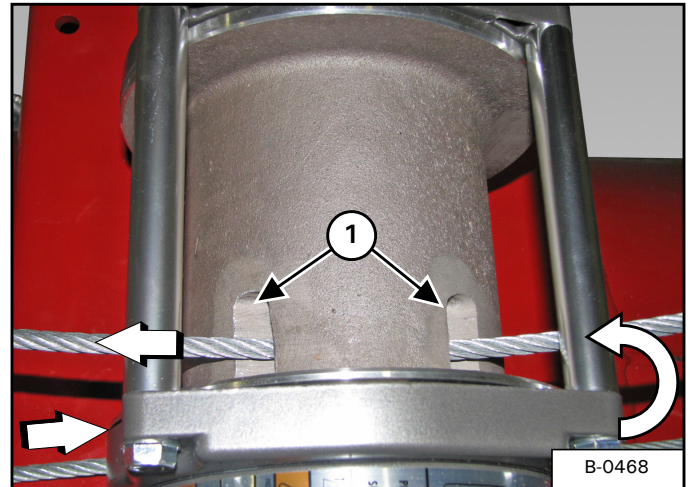


With the winch cable routed under the winch, feed the cable back through the two slots (Item 1) [Figure 259] of the winch.

Figure 260

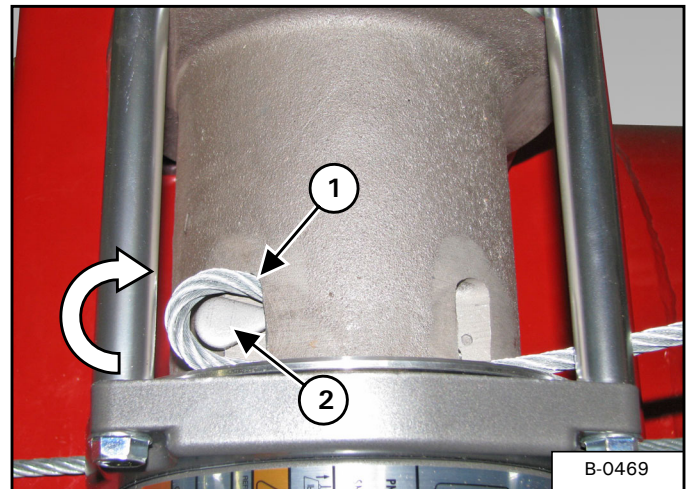


Loop the tail end (Item 1) of the cable and feed back into the slot, install the wedge (Item 2) [Figure 260] inside the loop.

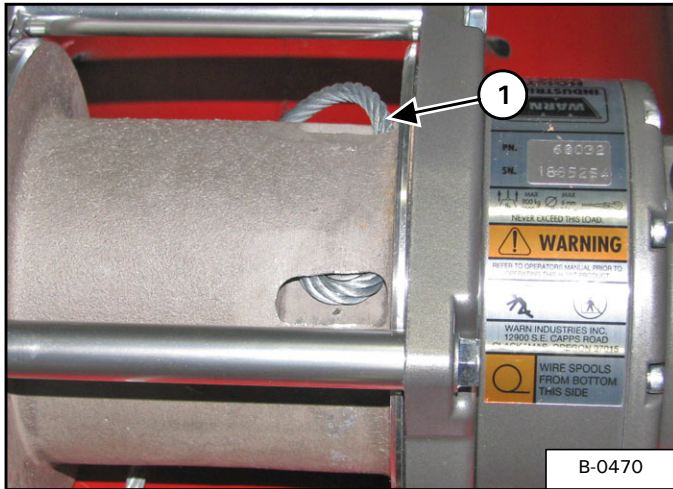Figure 261


Pull back on the cable (Item 1) [Figure 261] until the loop and wedge are inside the slot.

16124 Hydraulic Hitch Installation

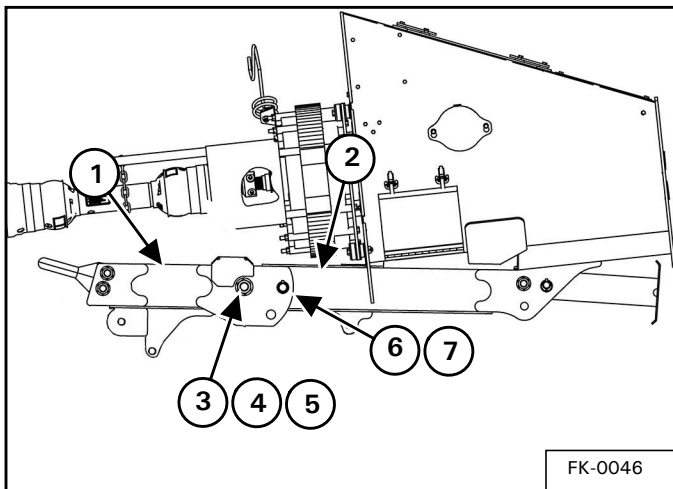Figure 262


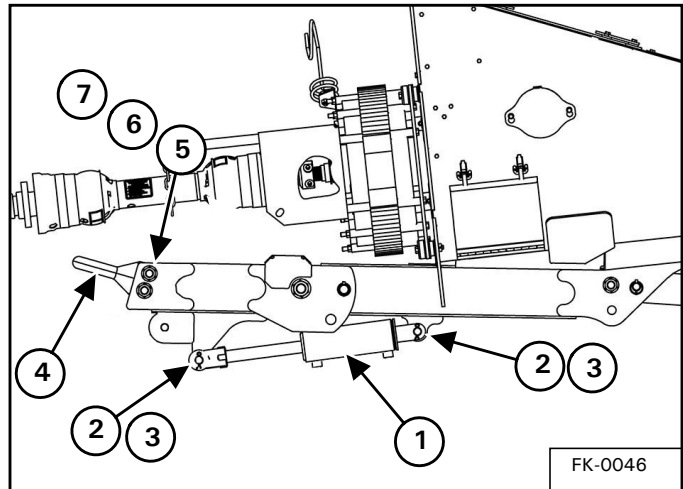
Place the hitch tube (Item 1) [Figure 262] as shown.

Align the hitch tube with the intake auger mount (Item 2) [Figure 262].

Install the 1-1/4" x 6-1/2" bolt (Item 3), 1-1/4 x 10 ga narrow rim washer (Item 4) and 1-1/4" lock nut (Item 5) [Figure 262]. Do not over tighten bolt, hitch tube must be free to pivot.

Install the 1-1/4" pin (Item 6) and secure with 3/16" lynch pin (Item 7) [Figure 262].

16124 Hydraulic Hitch Cylinder Installation

Figure 263


Place the hydraulic cylinder (Item 1) [Figure 263] as shown.


Install the 1" diameter pins (Item 2) and secure with 1/4" x 1-1/2" cotter pins (Item 3) [Figure 263].

Align the pintle hitch (Item 4) [Figure 263] with the two holes on the hitch tube.

Install the two 1" bolts (Item 5), four 1" flat washers (Item 6) and two 1" lock nuts (Item 7) [Figure 263]. Tighten bolts.

16124 Auger Stand Installation

Figure 264

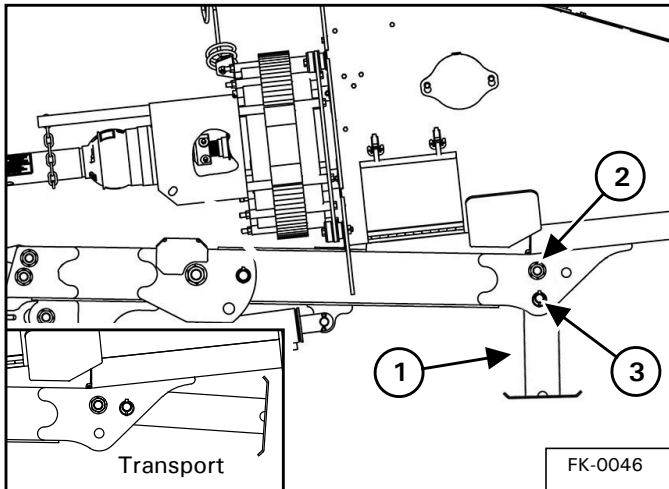

Raise the intake auger and place the auger stand (Item 1) [Figure 264] as shown.


Align holes and install the 1" x 6" bolt and 1" lock nut (Item 2) in the upper hole. Install the 1" diameter pin and lynch pin (Item 3) [Figure 264]. Do not overtighten the 1" bolt.

Lower the intake auger until the auger stand contacts the ground.

Install the auger stand horizontally for transport.

1684, 16104 & 16124 Hydraulic Hose Holder Installation

Figure 265

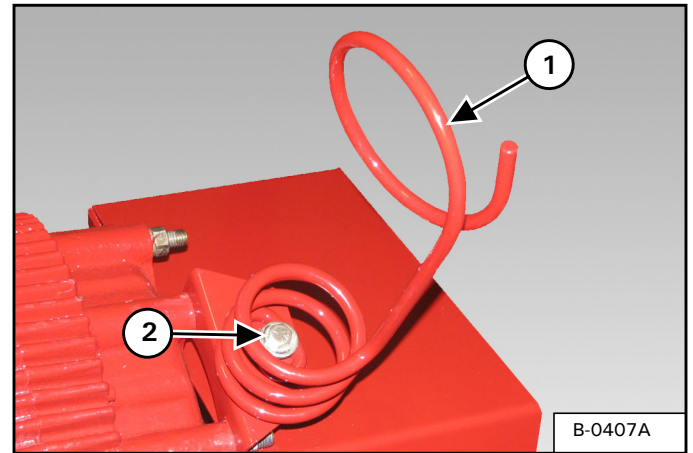


Install the hydraulic hose holder (Item 1) [Figure 265] onto the mounting bracket located on the top of the gearbox (above the hitch).

Install one 3/8" flat washer onto one 3/8" x 1" bolt (Item 2) [Figure 265], install the bolt down through the storage bracket and mounting bracket. Install one 3/8" lock washer on the bolt and tighten to secure the storage bracket gearbox.

1684 & 16104 Hitch Adjustment


Figure 266

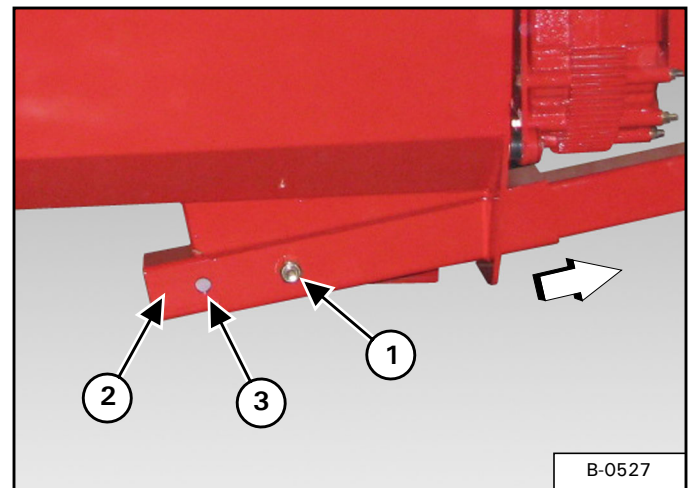

Remove bolt (Item 1) and lock nut. Move the hitch (Item 2) forward and align the back hole (Item 3) [Figure 266] of the hitch with the hitch mount. Re-install and tighten the bolt and lock nut.

1684 & 16104 Safety Chain Installation


Figure 267

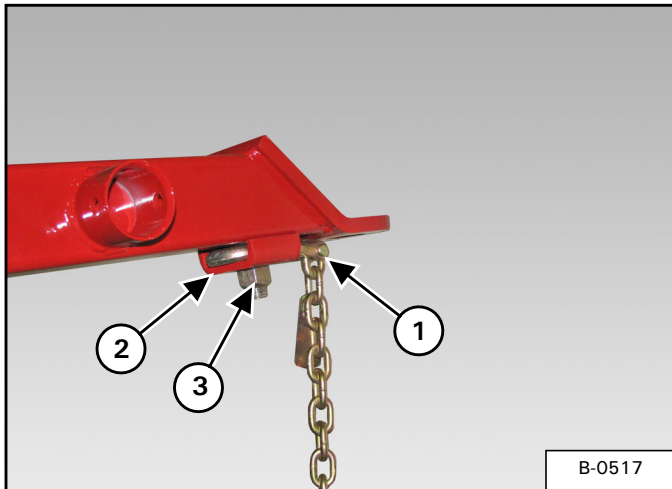

Install the safety chain loop (Item 1) over the bolt on the bottom side of the hitch, install the safety chain bracket (Item 2) on the bolt and over the safety chain loop. Install one 1" lock nut (Item 3) [Figure 267] and tighten to secure the safety chain to the hitch.

16124 Safety Chain Installation


Figure 268

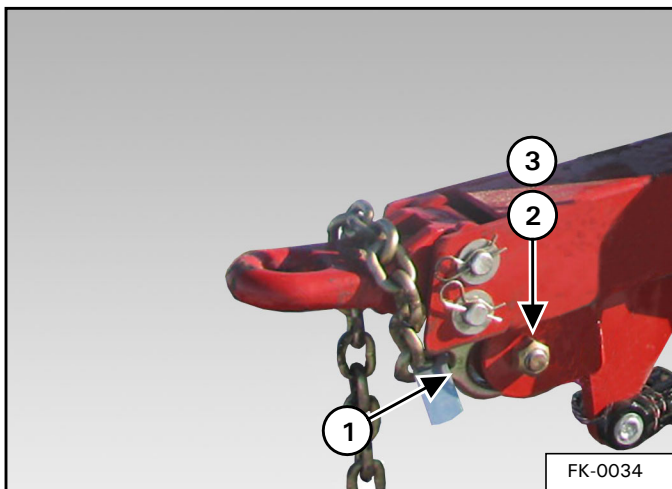

Install the safety chain loop (Item 1) as shown. Install the 1" x 3" bolt (Item 2) and 1" lock nut (Item 3) [Figure 268]. Tighten to secure the safety chain to the hitch.

1684 & 16104 Jack Installation

Figure 269

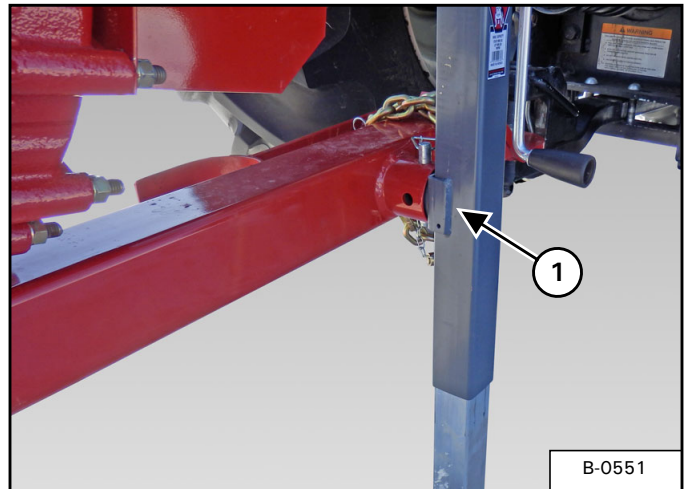


Align and install the jack (Item 1) [Figure 269] onto the hitch.

1684, 16104 & 16124 PTO Driveline Installation

NOTE: The following images may not show your exact model as it appears but the procedure is correct.


Figure 270

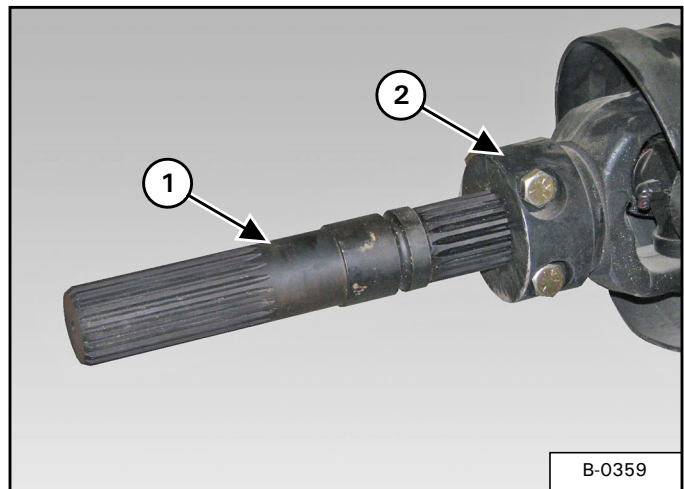

NOTE: Grease spline shaft before assembly.

Install the shaft (Item 1) into the PTO driveline (Item 2) [Figure 270]. Tighten the two 1/2" bolts and lock nuts.

Figure 271

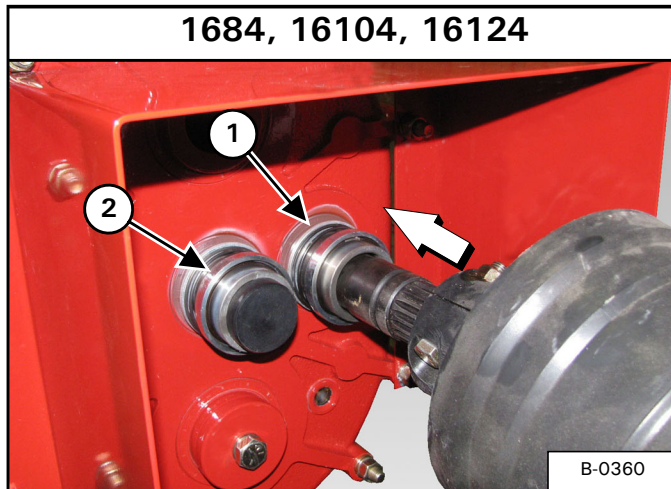


Push back on the collar (Item 1) [Figure 271] and install the shaft into the gearbox until the collar slides forward, locking the shaft in the gearbox.

NOTE: The 16124 connects to different port (use center port) (Item 2) [Figure 271].


1684 & 16104 PTO Holder Installation

Figure 272

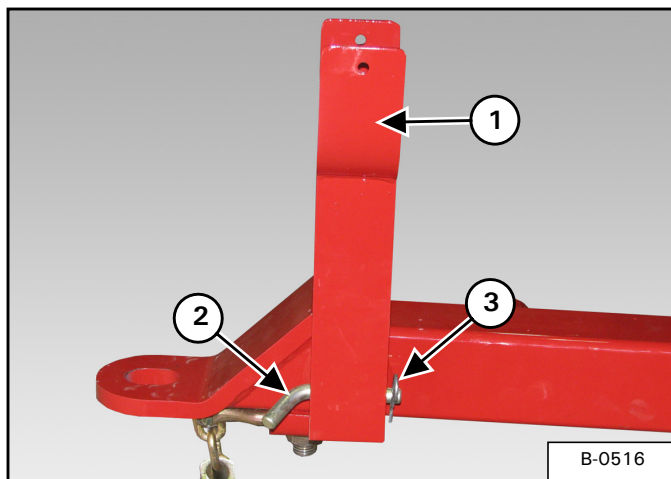

Install the PTO holder (Item 1) onto the left side of the side of the hitch assembly. Install pin (Item 2) through the PTO holder and hitch mount, then secure in position with the hair pin clip (Item 3) [Figure 272].


Figure 273

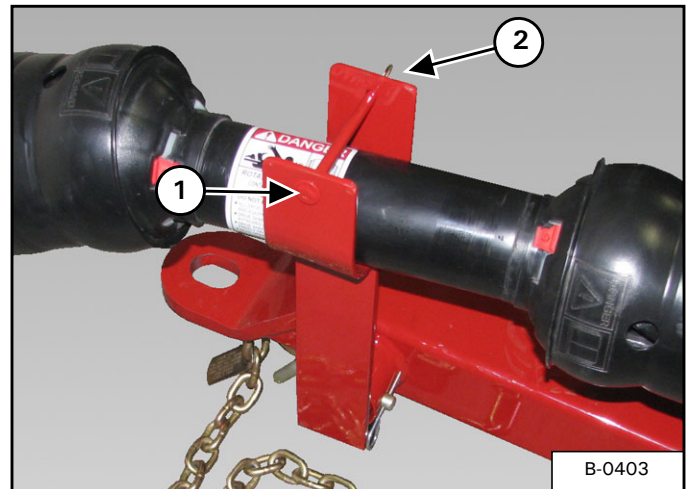

Install the pin (Item 1) through the storage bracket and install hair pin clip (Item 2) [Figure 273], securing the PTO driveline in the bracket.

16124 PTO Holder Installation

Figure 274

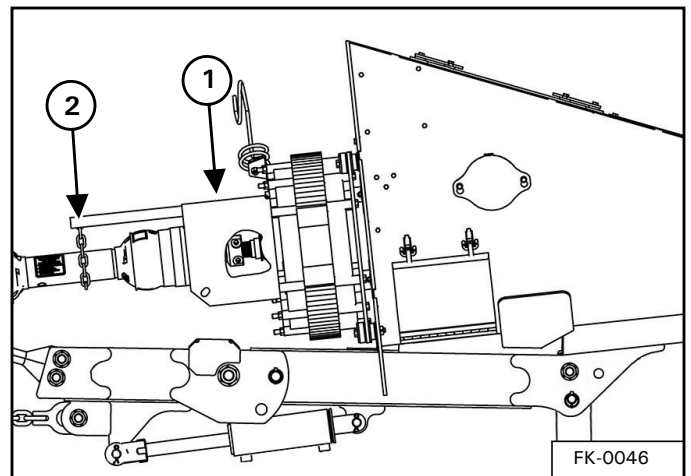

Install the PTO holder (Item 1) as shown. Place the PTO holder chain (Item 2) around the PTO driveline and hook chain back to itself. [Figure 274].

HYDRAULIC ASSEMBLY

1684 Hydraulic Cylinder Hose Assembly

! IMPORTANT

When installing and servicing hydraulic systems, clean the work area before assembly or disassembly and keep all parts clean. Always use caps and plugs on hoses, hydraulic tubes and ports to keep dirt out. Dirt can quickly damage the system.

! IMPORTANT


Contain and dispose of any oil leakage in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local, state and federal regulations for the correct disposal.

Install the 08 MNPT x 08 MNPT 90° elbow into the flow control valve [Figure 275].

Install the 08 x 00 MJIC x 08 MNPT hydraulic hose into the 08 FNPT One Way Flow Control Valve [Figure 275].

NOTE: Place a collection container under the hydraulic cylinder ports before removing the plugs.

Figure 276

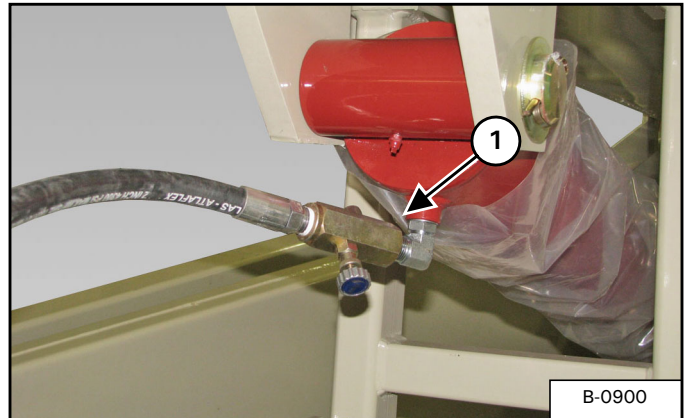


Remove the plastic plug from the base end (upper) of the hydraulic cylinder.

Install the flow control valve assembly (Item 1) [Figure 276] into the hydraulic cylinder.

Tighten all connections.


Figure 277

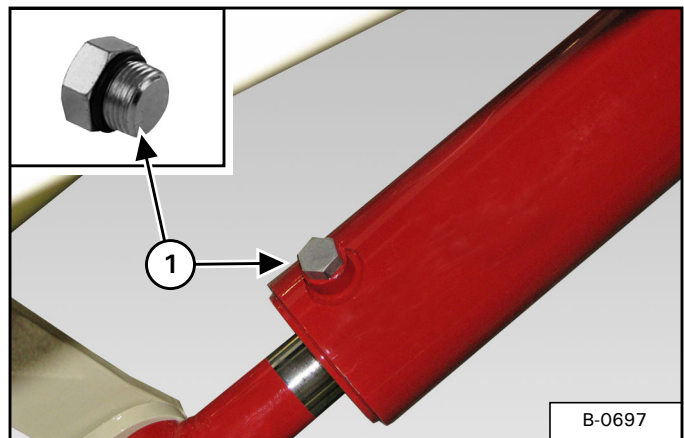

Remove the plastic plug from the rod end (lower) of the hydraulic cylinder.

Locate and install the 08 MORB vent plug (Item 1) [Figure 277] into the hydraulic cylinder.

Figure 275

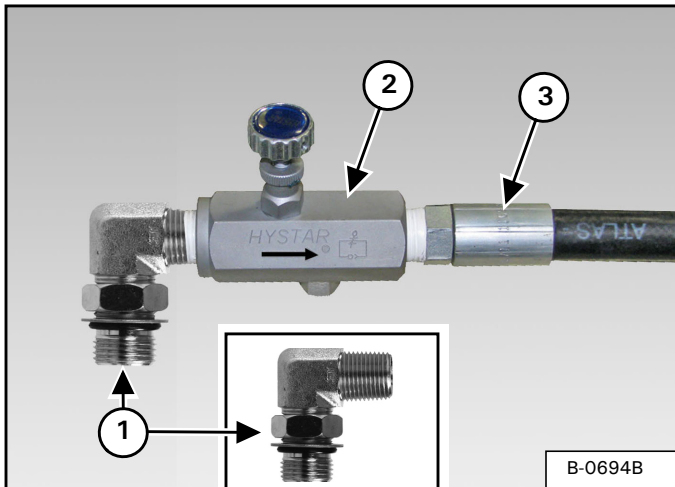


Locate one each of the following components [Figure 275]:

1. 08 MNPT x 08 MNPT 90° Elbow (Item 1)
2. 08 FNPT One Way Flow Control Valve (Item 2)
3. 08 x 10 MJIC x 08 MNPT Hydraulic Hose (Item 3)


NOTE: Apply teflon tape to the male threads of each fitting.

Figure 278

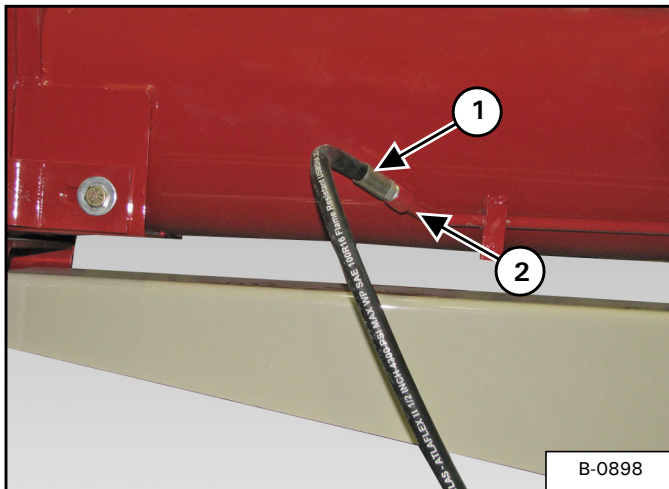


Install and tighten the 08 x 010 MJIC x 08 MNPT hydraulic hose (Item 1) into the tube (Item 2) [Figure 278] on the center tube section.

Figure 279

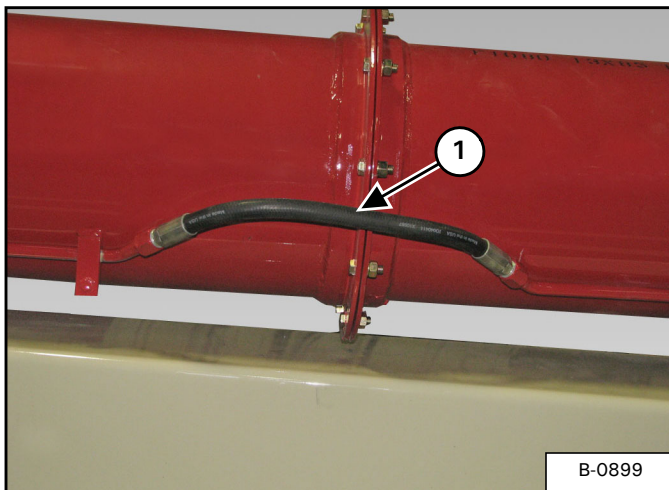

Install and tighten the 08 x 010 MJIC x 08 MNPT hydraulic hose (Item 1) [Figure 279] into the tubes on the center and bottom tube sections.

Figure 280

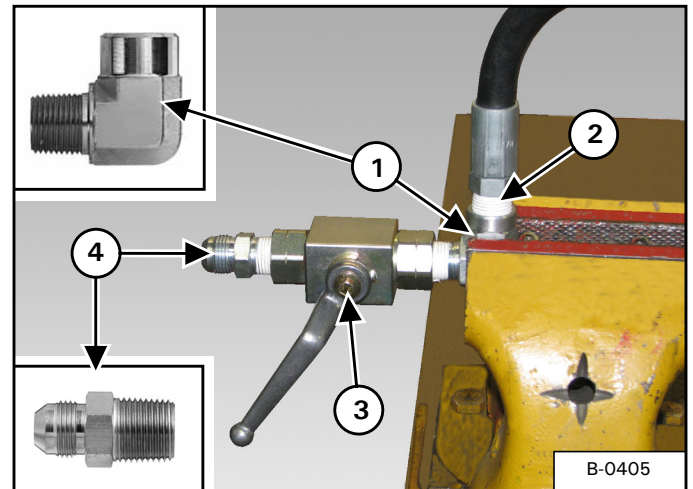

Locate one 90° elbow (Item 1) [Figure 280] and place in a vise.

Apply teflon tape to the threads of the hydraulic hose fitting, then install and tighten quick coupler hose (Item 2) [Figure 280] assembly into the 90° elbow.


Apply teflon tape to the threads of the 90° elbow.

Locate, install and tighten the 1/2" ball valve (Item 3) onto the 90° elbow.

Locate one adapter fitting (Item 4) [Figure 280].


Apply teflon tape to the threads of the adapter fitting, then install and tighten adapter fitting into the 1/2" ball valve (Item 3) [Figure 280].

Figure 281

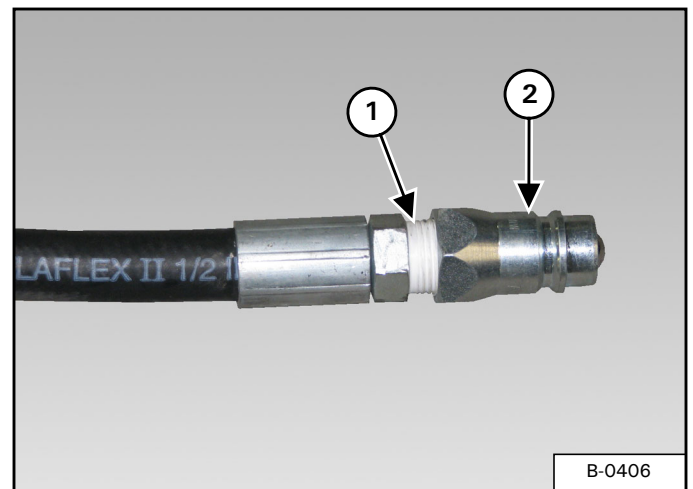

Apply teflon tape to the threads (Item 1) of the hydraulic hose fitting, then install and tighten the male quick coupler fitting (Item 2) [Figure 281].

Figure 282

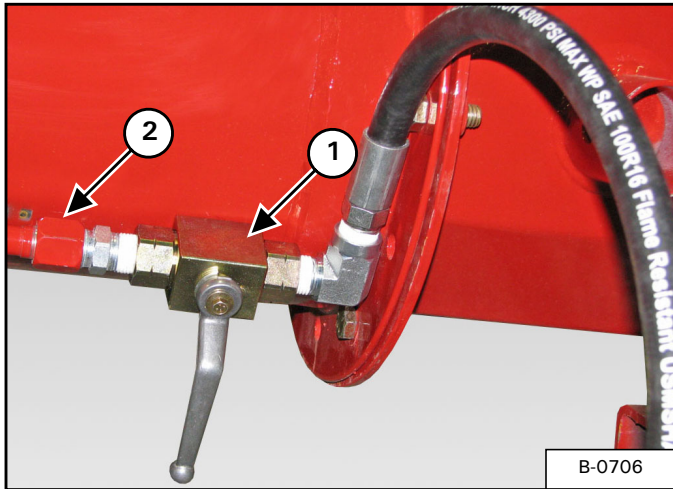

Install hose assembly (Item 1) into the hydraulic tube (Item 2) [Figure 282] on the bottom tube section. Route the hose towards the hitch and install into the hydraulic hose holder.

16104 & 16124 Hydraulic Cylinder Hose Assembly


! IMPORTANT

When installing and servicing hydraulic systems, clean the work area before assembly or disassembly and keep all parts clean. Always use caps and plugs on hoses, hydraulic tubes and ports to keep dirt out. Dirt can quickly damage the system.

! IMPORTANT


Contain and dispose of any oil leakage in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local, state and federal regulations for the correct disposal.

Figure 283

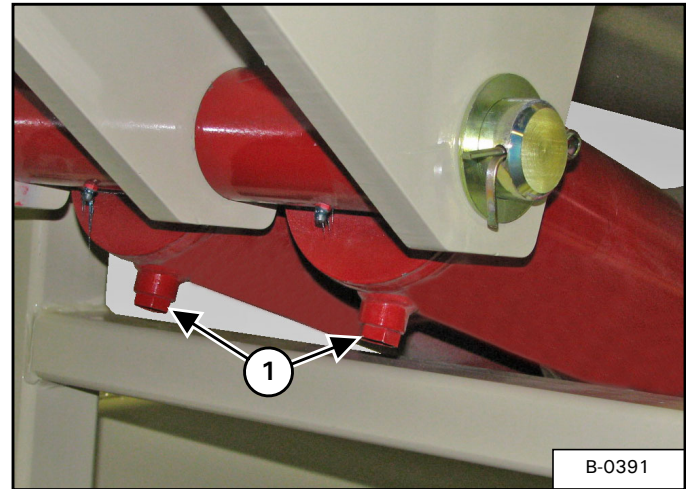


Remove the plugs (Item 1) [Figure 283] from the base end of the hydraulic cylinders.

Figure 284

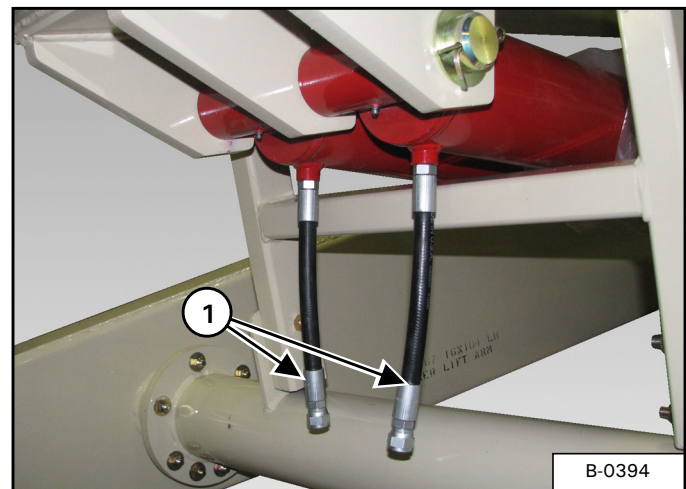

Locate and install the two hydraulic hoses (Item 1) [Figure 284].

Figure 285

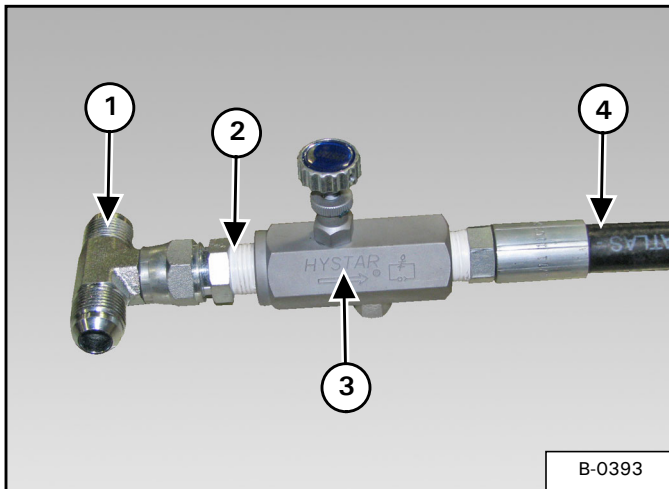


Locate one tee fitting (Item 1), adapter fitting (Item 2), flow control valve (Item 3) and hydraulic hose (Item 4) [Figure 285]. Apply teflon tape to the threads of the adapter fitting and hydraulic hose fitting.

Install and tighten the hose into the flow control valve.

Install and tighten the adapter fitting into the flow control valve.


Install and tighten the tee fitting onto the adapter fitting.

Figure 286

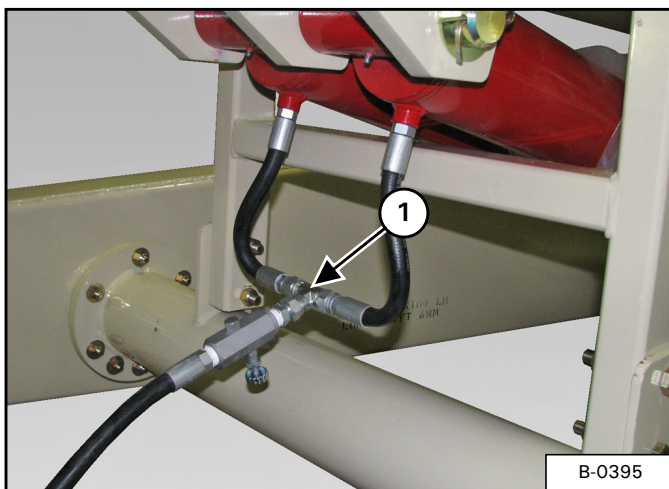

Install and tighten the two hoses from the base ends of the cylinders onto the tee fitting (Item 1) [Figure 286].


Figure 287

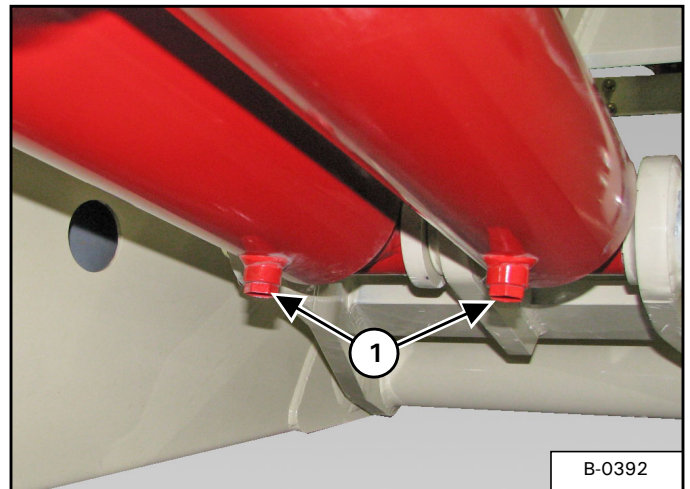

NOTE: Place a collection container under the hydraulic cylinder ports before removing the plugs.


Remove the two plugs (Item 1) [Figure 287] from the rod end of the hydraulic cylinders.

Figure 288

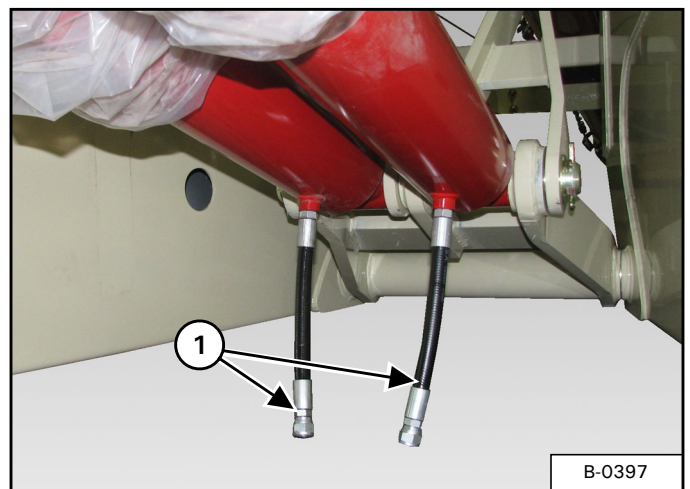


Locate and install the two hydraulic hoses (Item 1) [Figure 288].

Figure 289

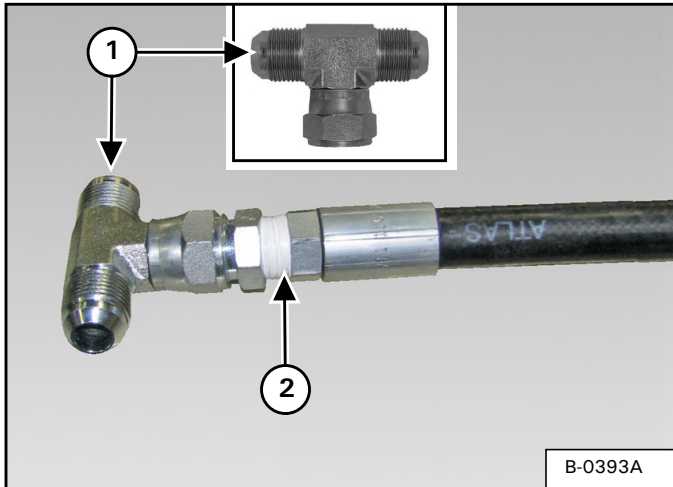


Locate one tee fitting (Item 1) and hydraulic hose (Item 2) [Figure 289]. Apply teflon tape to the threads of the hydraulic hose fitting. Install the hose into the tee fitting and tighten.

Figure 290

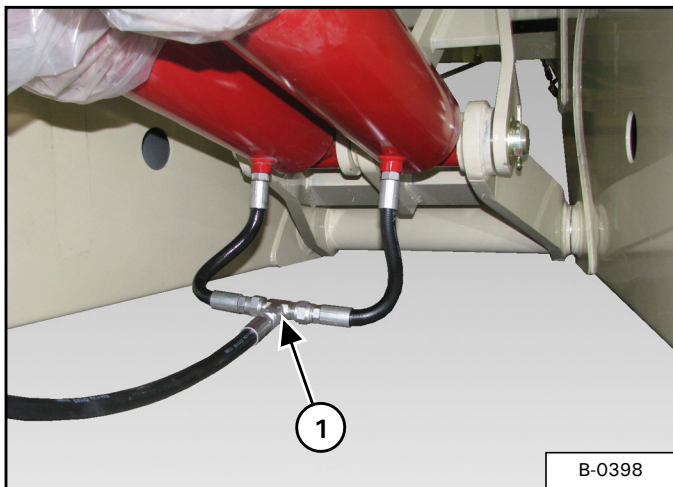


Install and tighten the two hoses from the rod ends of the cylinders onto the tee fitting (Item 1) [Figure 290].

Figure 291

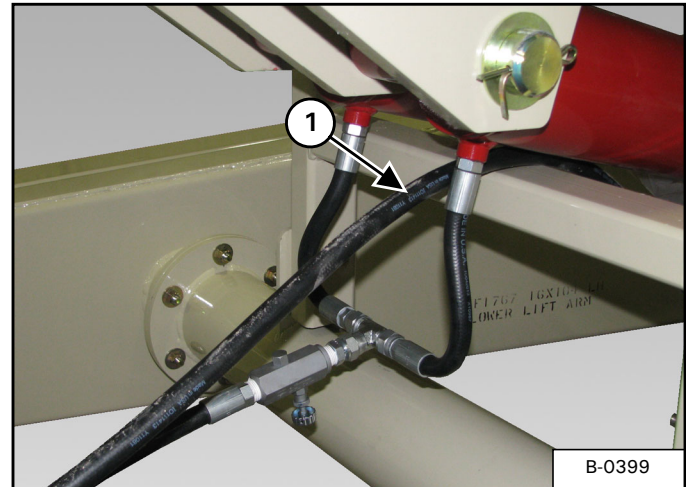

Route the hydraulic hose (Item 1) [Figure 291] over the top of one of the cylinders.

Figure 292

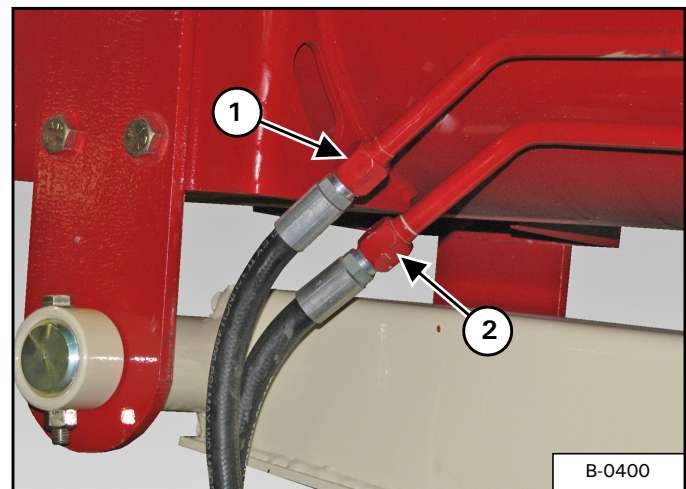


Route the rod end and base end hydraulic hoses up to the hydraulic tube on the #3 tube (on the right side, just in front of the upper lift arm pin).

Install and tighten the based end hydraulic hose to the top hydraulic tube (Item 1) [Figure 292].

Install and tighten the rod end hydraulic hose to the bottom hydraulic tube (Item 2) [Figure 292].


Figure 293

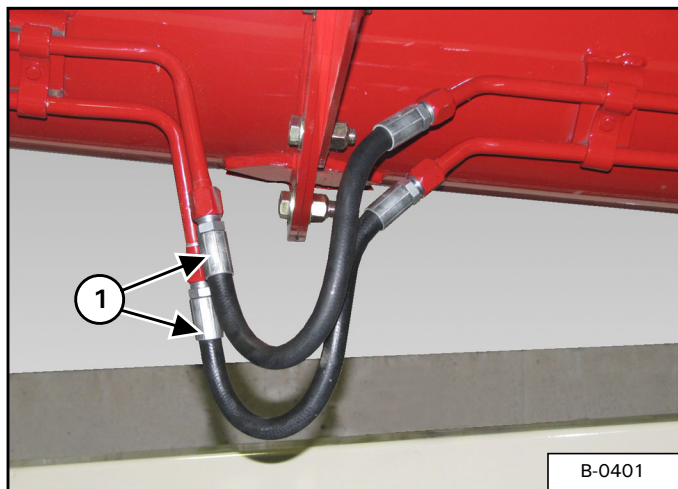

Locate, install and tighten the two hydraulic hoses (Item 1) [Figure 293] onto the hydraulic tubes. Connecting the #3 and #2 hydraulic tubes.

Repeat [Figure 293] procedure to connect the #2 and #1 hydraulic tubes.


Figure 294

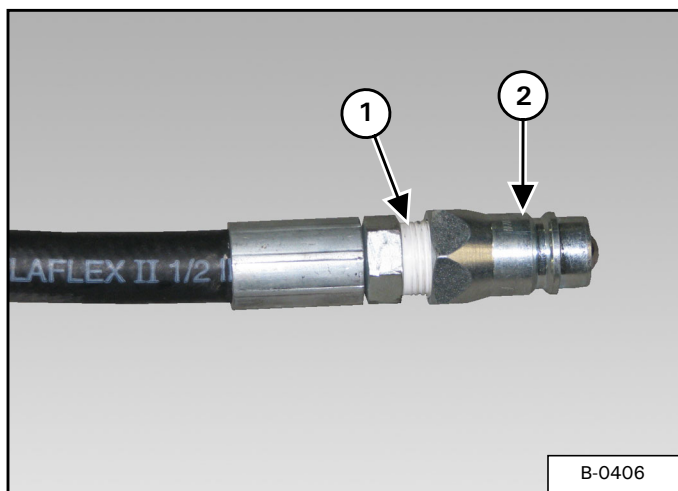

Apply teflon tape to the threads (Item 1) of the hydraulic hose fitting, then install and tighten the male quick coupler fitting (Item 2) [Figure 294].

Repeat for second quick coupler hose.


Figure 295

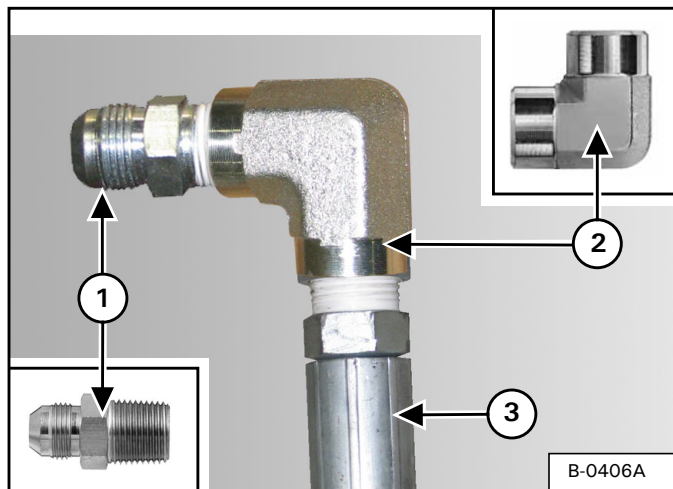

Locate one adapter fitting (Item 1) and 90° elbow fitting (Item 2) [Figure 295].

Install one hydraulic quick coupler hose assembly (Item 3) [Figure 295] into the 90° elbow.

Figure 296

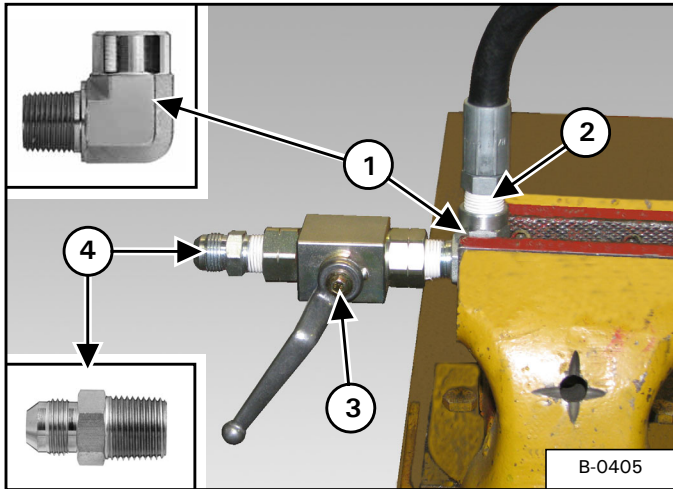

Locate one 90° elbow (Item 1) [Figure 296] and place in a vise.

Apply teflon tape to the threads (Item 1) of the hydraulic hose fitting, then install and tighten quick coupler hose assembly into the 90° elbow (Item 2) [Figure 296].


Apply teflon tape to the threads of the 90° elbow.

Locate, install and tighten the 1/2" ball valve (Item 3) onto the 90° elbow.

Locate one adapter fitting (Item 4) [Figure 296].

Apply teflon tape to the threads of the adapter fitting, then install and tighten adapter fitting into the 1/2" ball valve (Item 3) [Figure 296].


Figure 297

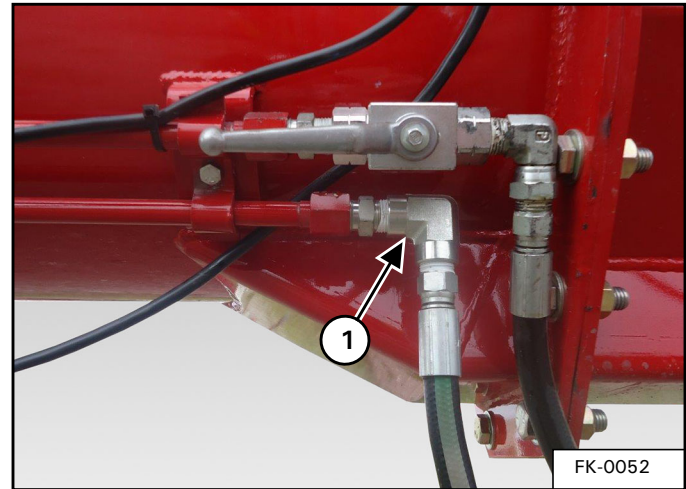

Install hose assembly (Item 1) [Figure 297] into the bottom hydraulic tube on the #1 tube.


NOTE: Hydraulic hoses must be facing down.

Figure 298

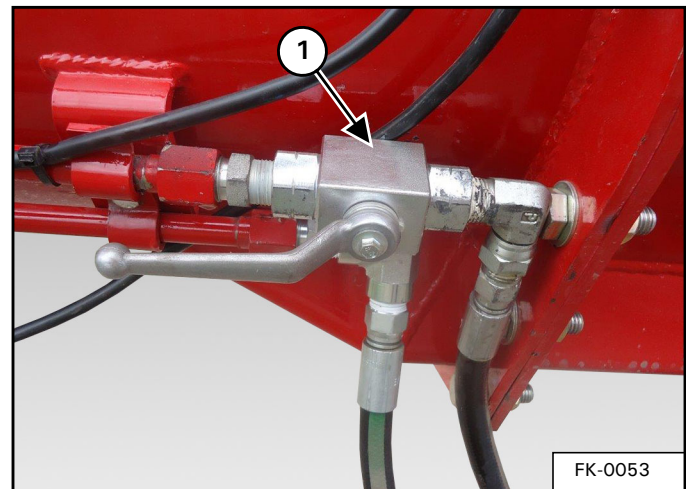

Install hose / valve assembly (Item 1) [Figure 298] into the top hydraulic tube on the #1 tube.

Figure 299

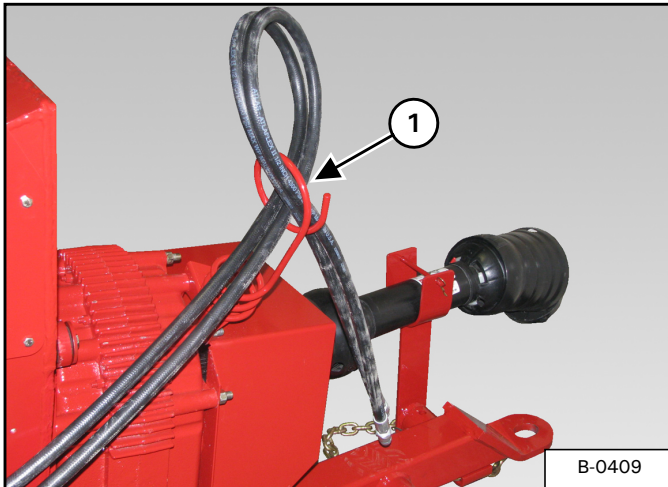


Route the quick coupler hoses along the input box and install into the storage bracket (Item 1) [Figure 299].

1684, 16104 & 16124 Hydraulic Control Valve Assembly And Installation

NOTE: The following images may not show your exact model as it appears but the procedure is correct.


Figure 300

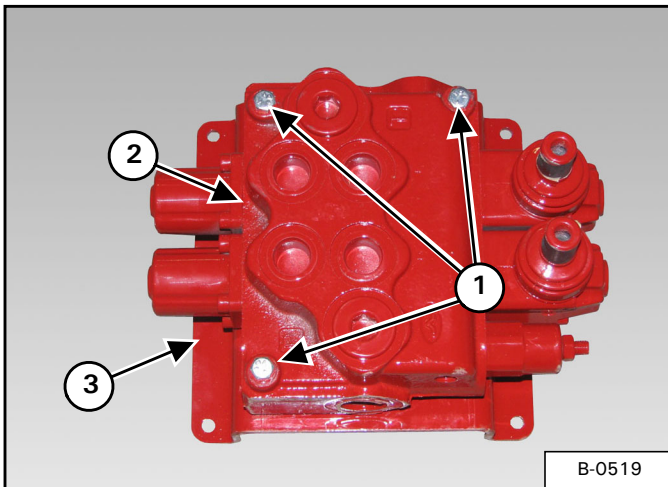

Using three bolts (Item 1) and lock nuts, install the valve block (Item 2) to the mounting bracket (Item 3) [Figure 300]. Tighten the three bolts and lock nuts.

Remove plastic plugs from the valve block.

Figure 301

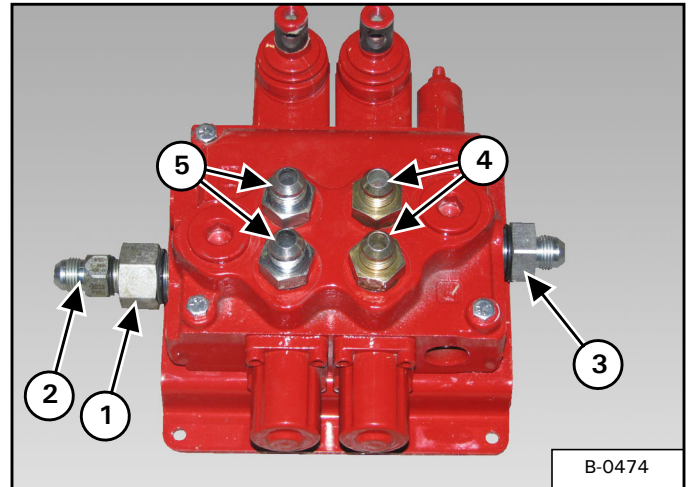

Install fitting (Item 1) into the valve block. Install fitting (Item 2) [Figure 301].


Install fitting (Item 3) [Figure 301] into the valve block.

Install the two restrictor fittings (Item 4) [Figure 301] into the valve block.

Install the two fittings (Item 5) [Figure 301] into the valve block.


Tighten all fittings.

Figure 302

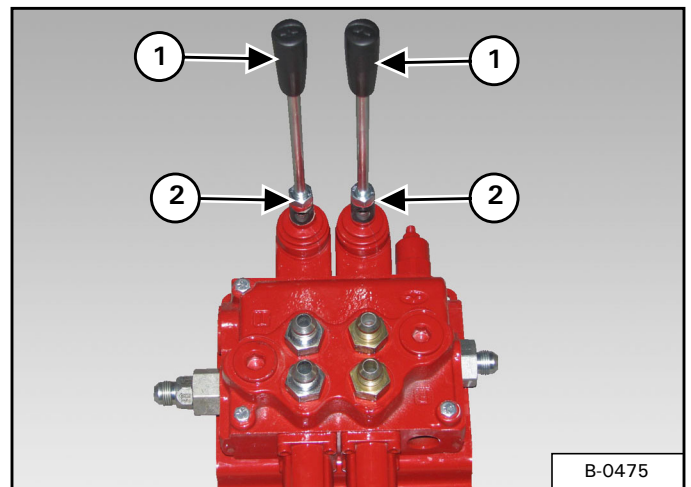


Install the two handles (Item 1) into the control valve. Tighten the two jam nuts (Item 2) [Figure 302] to secure the handles to the control valve.

Figure 303

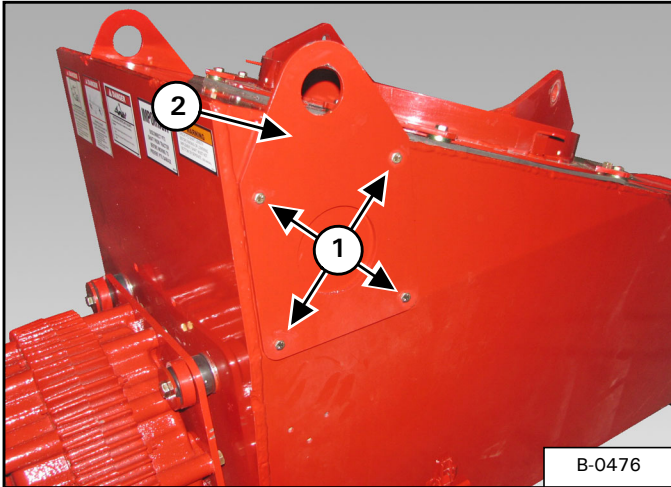

Remove the four bolts (Item 1) and lifting bracket (Item 2) [Figure 303] (both sides).


Figure 304

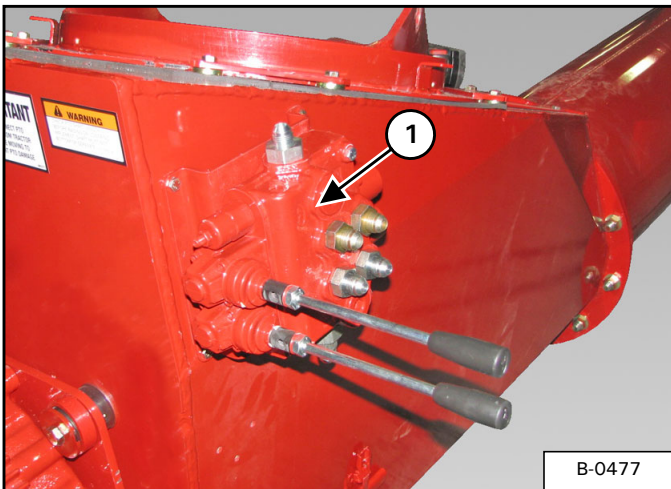

Using the four bolts from the lifting bracket, install the valve block assembly (Item 1) [Figure 304] onto the opposite side of the intake auger.

1684, 16104 & 16124 Hydraulic Winch Hose Installation And Routing


Figure 305

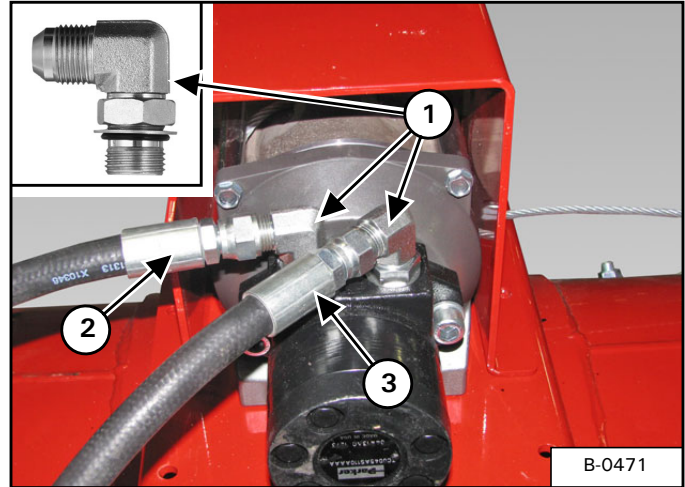

Install and tighten two 90° elbow fittings (Item 1) [Figure 305] into the winch.

Install and tighten the hydraulic hoses (Items 2 & 3) [Figure 305] onto the 90° elbow fittings.

Figure 306

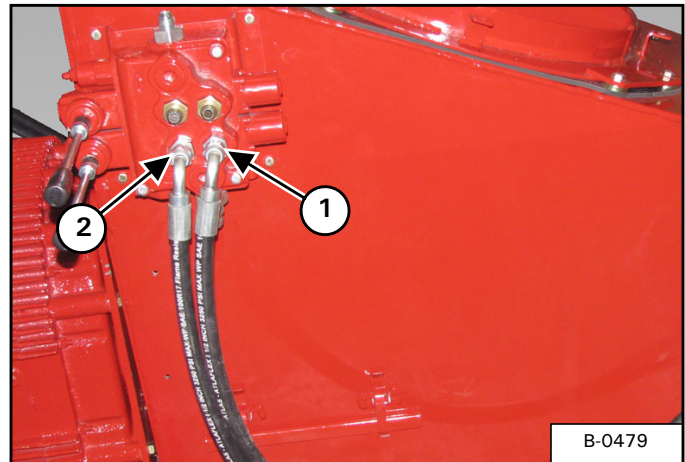


Route the two winch hydraulic hoses towards the input box [Figure 306].

Install and tighten winch hydraulic hose (Item 2) [Figure 305] onto the bottom right fitting (Item 1) [Figure 306] on the valve block.


Install and tighten winch hydraulic hose (Item 3) [Figure 305] onto the bottom left fitting (Item 2) [Figure 306] on the valve block.

Figure 307

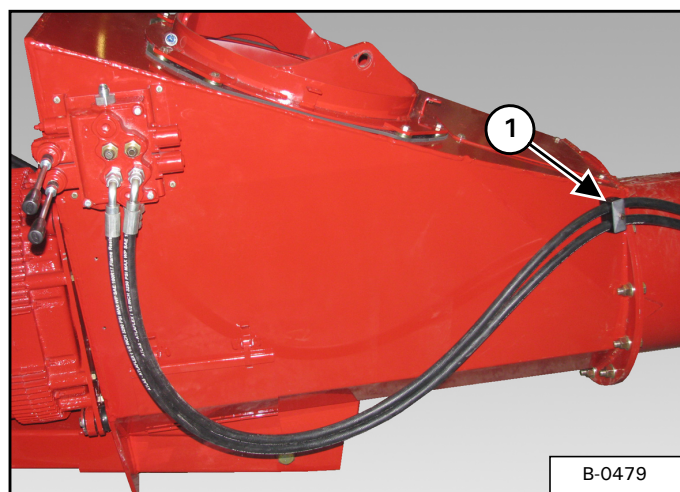

Place the two winch hydraulic hoses into a clamp (Item 1) [Figure 307] and install the clamp to the side of the input box.

Figure 308

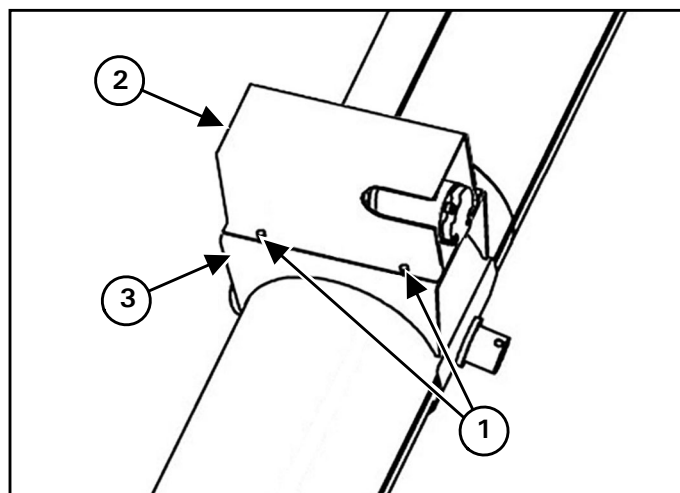


Using four bolts (Item 1) (two each side) and lock nuts, install the winch shield (Item 2) onto the winch mounting plate (Item 3) [Figure 308].

Tighten the four bolts and lock nuts to secure the winch shield to the winch mounting plate.

1684, 16104 & 16124 Hydraulic Motor Hose Installation And Routing

NOTE: The following images may not show your exact model as it appears but the procedure is correct.


Figure 309

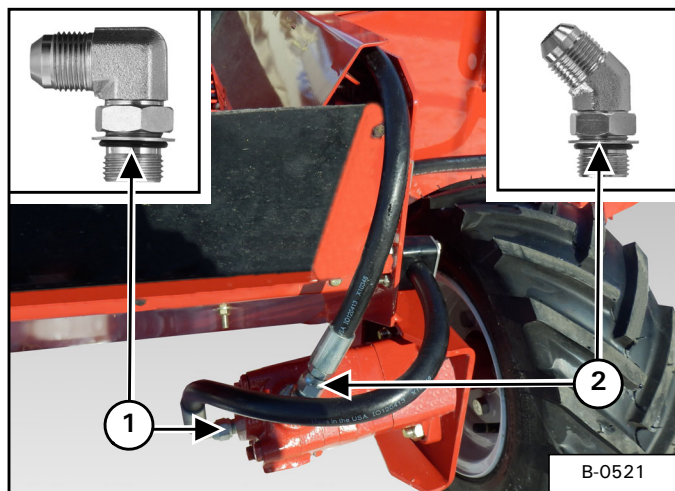

Install one 90° elbow fitting (Item 1) [Figure 309] into the bottom port of the wheel hydraulic motor (both sides).

Install one 45° elbow fitting (Item 2) [Figure 309] into the top port of the wheel hydraulic motor (both sides).

Figure 310

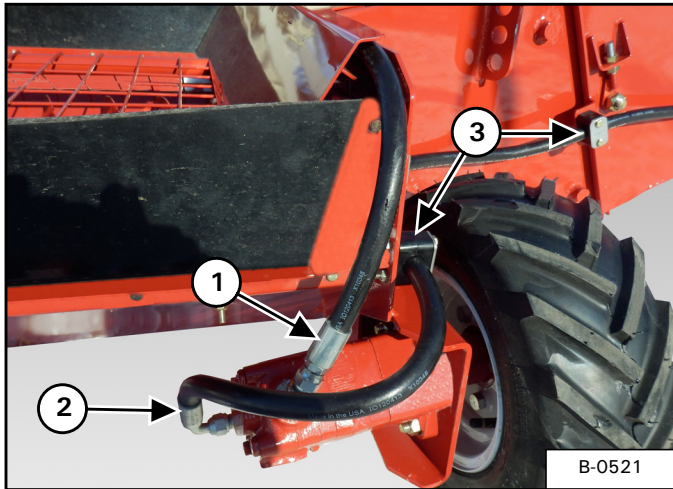


Route hydraulic hose (Item 1) [Figure 310] under the shield on the hopper. Install the hose onto the 45° fitting on both wheel hydraulic motors.

Install hydraulic hose (Item 2) [Figure 310] onto the 90° fitting on wheel hydraulic motor (both sides).

Place two clamps (Item 3) around hydraulic hose (Item 2) [Figure 310], using 5/16" x 2-1/4" bolts, install the two clamps onto the hopper (both sides) and intake auger.


Figure 311

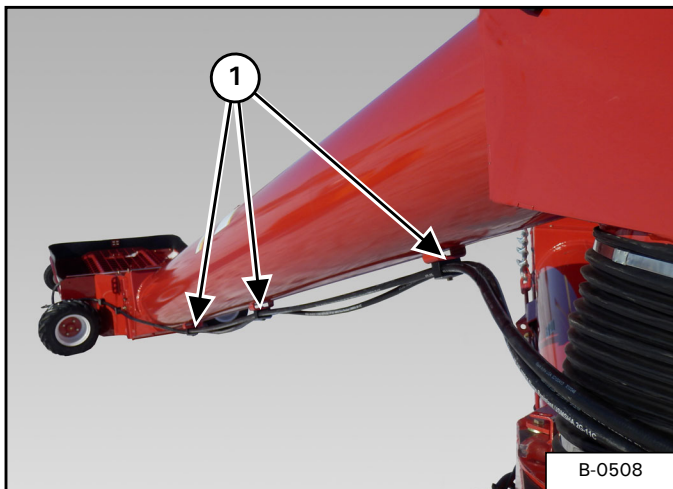

Route wheel hydraulic hoses under the intake auger towards the hitch [Figure 311].

Place three clamps (Item 1) [Figure 311] around hydraulic hoses, using 5/16" x 2-1/4" bolts, install the three clamps onto the brackets on the bottom of the intake auger.

Figure 312

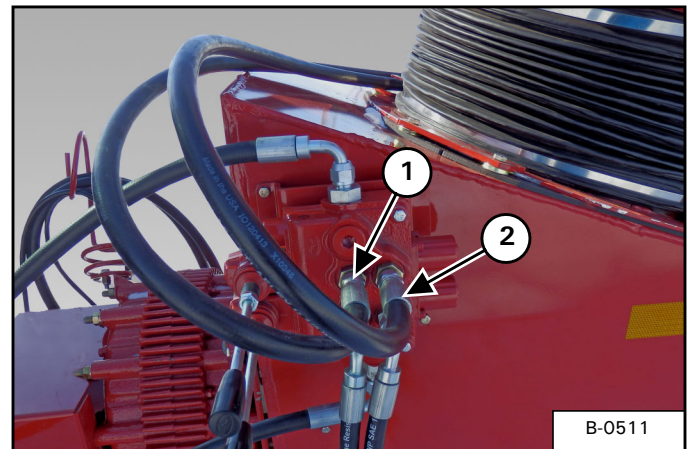

Route the two wheel hydraulic hoses around the base of the intake auger and towards the valve block [Figure 312].


Install the left wheel motor hydraulic hose (Item 1) [Figure 312] onto the upper left fitting on the valve block.

Install the right wheel motor hydraulic hose (Item 2) [Figure 312] onto the upper right fitting on the valve block.

1684, 6104 & 16124 Control Valve Return And Supply Hose Installation

NOTE: The following images may not show your exact model as it appears but the procedure is correct.


Figure 313

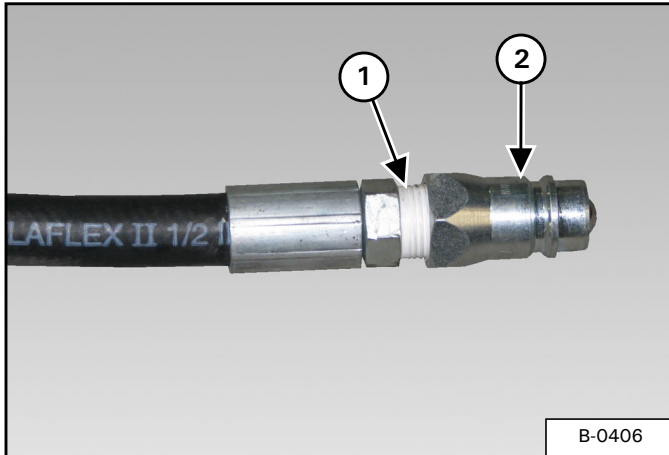

Apply teflon tape to the threads (Item 1) of the hydraulic hose fitting, then install and tighten the male quick coupler fitting (Item 2) [Figure 313].

Repeat for second quick coupler hose.

Figure 314

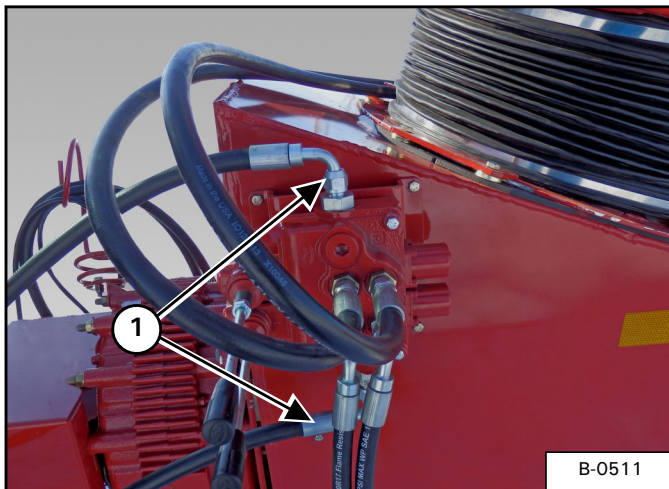

Install the two quick coupler hoses (Item 1) [Figure 314] to the top and bottom fittings on the valve block.


Place the two quick coupler hoses into the storage bracket.

NOTE: After all required components have been installed onto the input box, install bolts into all remaining open holes of the input box.

1684, 16104 & 16124 ELECTRICAL ASSEMBLY

Intake Auger Work Light Installation

Figure 315

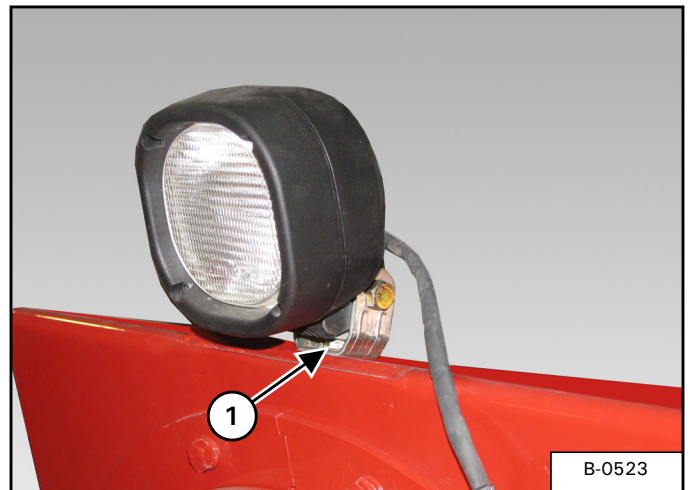


Using one bolt (Item 1) [Figure 315] and lock nut (included with light), install the work light on top of the intake auger.

Connect the wire harness to the work light and route down towards the front of the input box.

Amber Light Installation And Harness Routing

NOTE: The following images may not show your exact model as it appears but the procedure is correct.


Figure 316

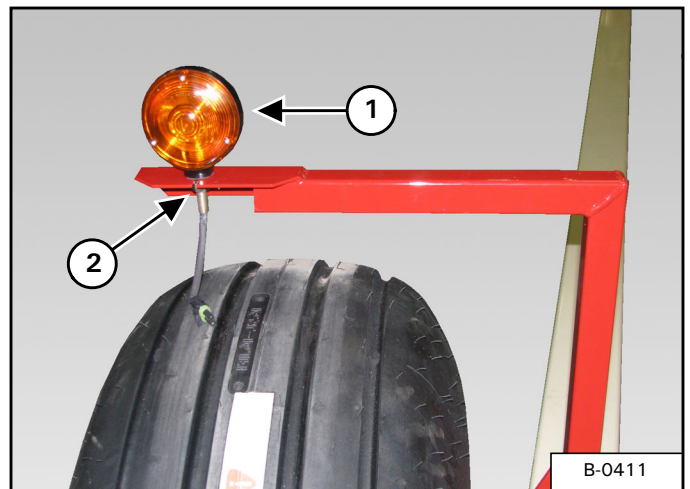

Install the amber light assembly (Item 1) into the blinker mount. Hold the amber light parallel with the

blinker mount and tighten nut (Item 2) [Figure 316] (both sides).


Figure 317

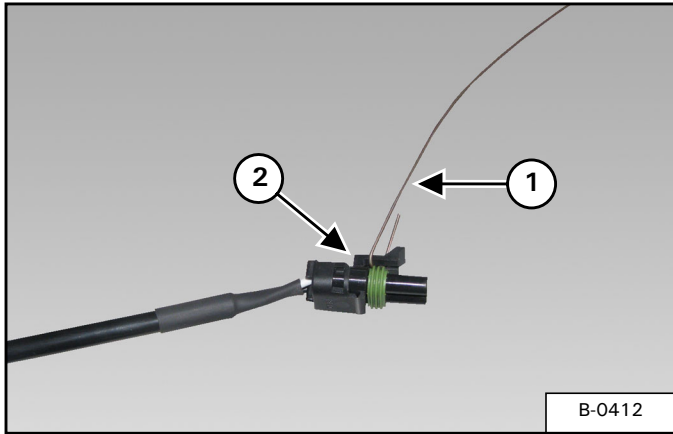

Install a 48 in. (1219 mm) length of wire (Item 1) to the male connector (Item 2) [Figure 317] on the extension harness.

Repeat [Figure 317] procedure for second amber light extension harness.

Figure 318

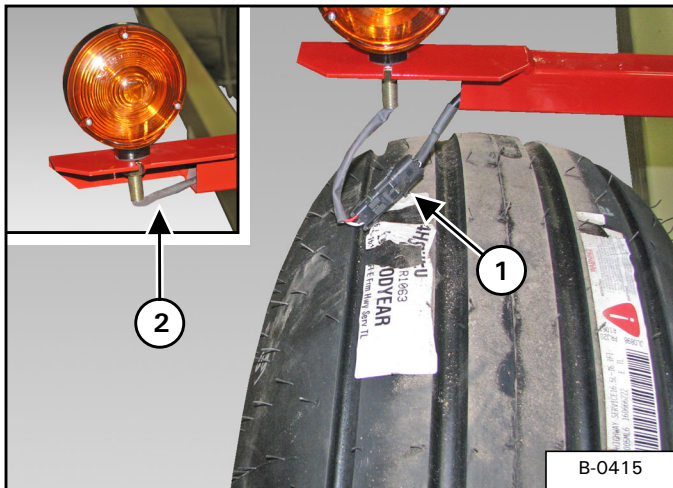


Feed the wire inside the blinker mount until the wire exits the blinker mount by the axle. Pull the wire while carefully feeding the extension harness into the blinker mount.

Connect the extension harness (Item 1) [Figure 318] to the amber light. Pull on the extension harness while carefully feeding the harness connection inside the blinker mount.

Leave a small amount of slack (Item 2) [Figure 318] where the wire harness enters the blinker mount.


Repeat [Figure 318] procedure for second amber light extension harness.

Figure 319

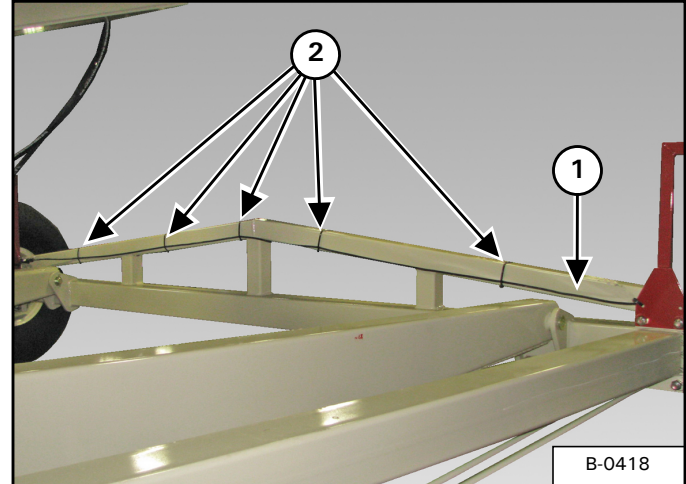


Route the left amber light extension harness (Item 1) along the axle (towards the right side) and secure with cable ties (Item 2) [Figure 319].

Figure 320

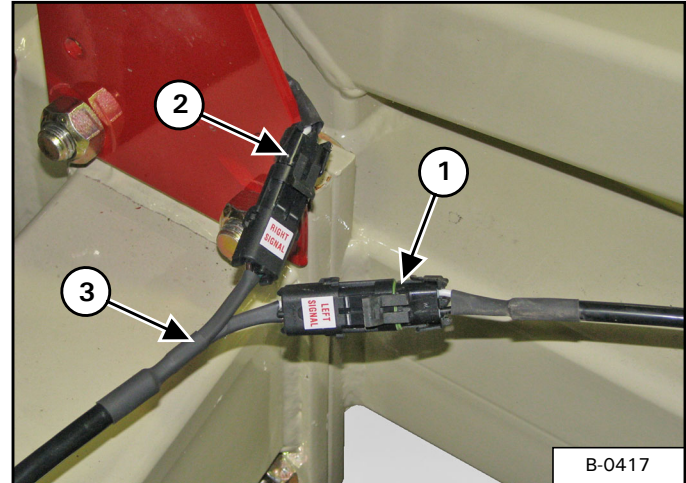

Connect the left amber light extension harness (Item 1) and right amber light extension harness (Item 2) to the extension cable (Item 3) [Figure 320].

Figure 321

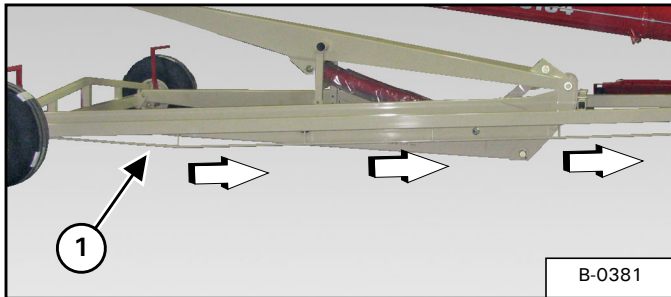


Route the extension harness along the bottom of the right undercarriage arm (Item 1) [Figure 321].

Continue to route the extension harness along the hydraulic tubes of the #1 tube (towards the input box). Secure with cable ties.


Light Switch Box Installation

Figure 322

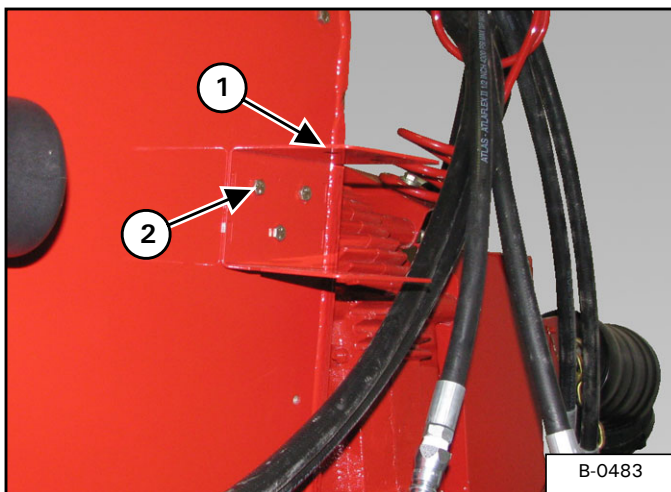


Align the light switch mounting bracket (Item 1) with the holes in the input box. Install three bolts (Item 2) [Figure 322] and tighten to secure the light switch mounting bracket to the intake auger.

Figure 323

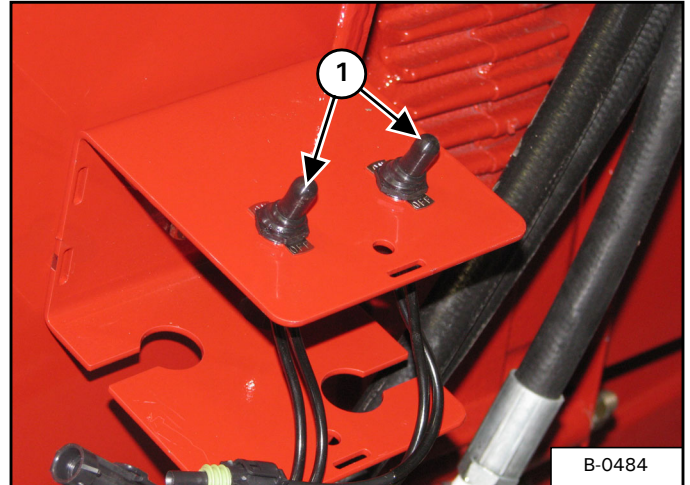


Install the two light switches (Item 1) [Figure 323].

Figure 324

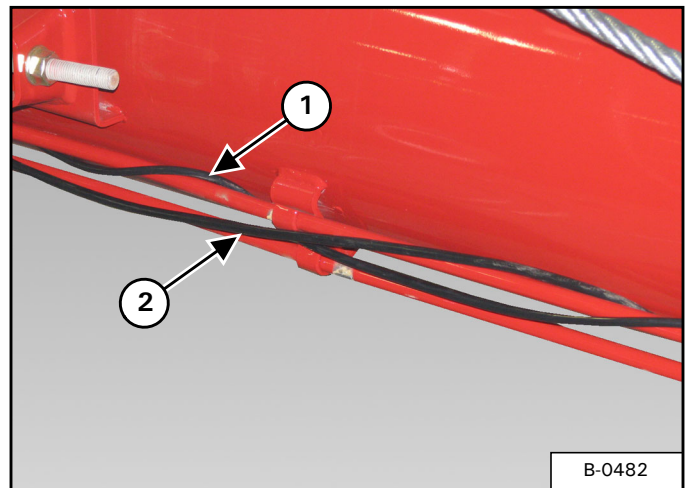


Wrap the discharge spout work light harness (Item 1) and the amber lights extension harness (Item 2) [Figure 324] around the hydraulic tubes on the #1 tube. Route the harnesses towards the input box.

Figure 325

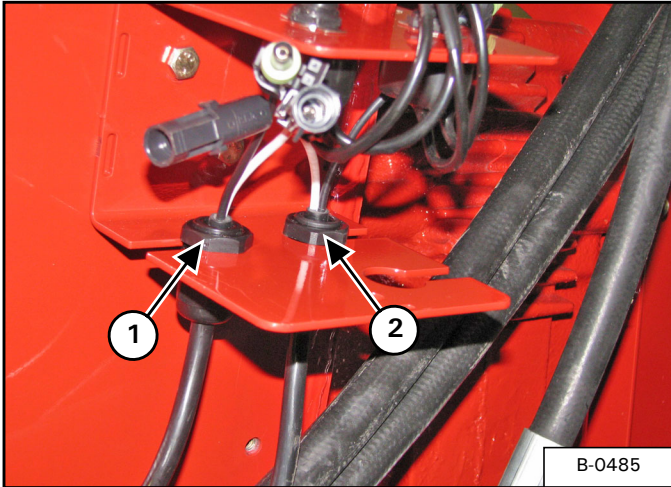

Install the discharge spout work light harness (Item 1) and intake auger harness (Item 2) [Figure 325] into the light switch mounting bracket.


Figure 326

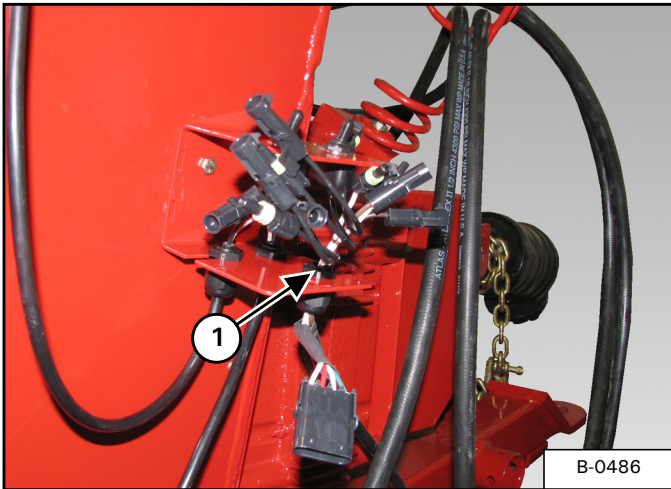

Install the main wire harness (Item 1) [Figure 326] into the light switch mounting bracket.

See 1684, 16104 ELECTRICAL DIAGRAM on page 273 to connect the wire harnesses.

Figure 327

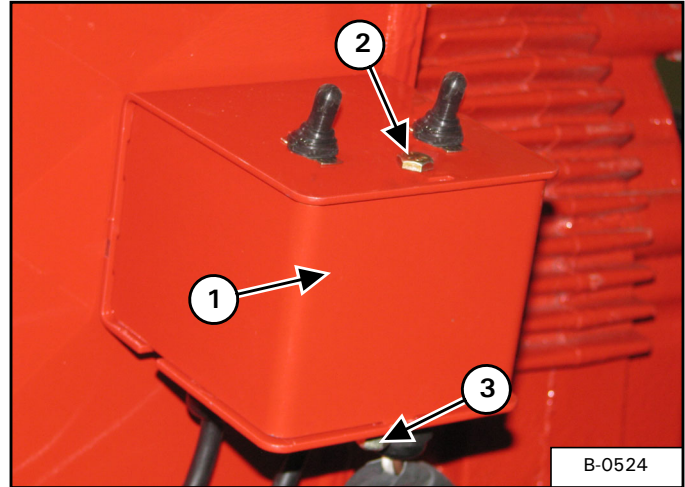

Install the light switch cover (Item 1) [Figure 327].

Install a bolt (Item 2) down through the mounting bracket and install a lock nut (Item 3) [Figure 327] on the bolt.

Tighten bolt and lock nut to secure the cover to the bracket.

OPERATION

GENERAL OPERATION INFORMATION	135
Pre - Operation Checklist	135
Break - In Checklist	136
Tractor Requirements	137
Entering And Leaving The Operator's Position	138
INITIAL SET-UP	139
Connecting 1684 or 16104 The Backsaver Auger To The Tractor	139
Connecting The 16124 Backsaver Auger To The Tractor	140
Connecting The PTO Driveline	142
PTO Driveline	143
Connecting Hydraulic Hoses	146
Connecting Electrical Harness	146
AUGER OPERATION	147
Operating The Hopper Mover And Winch	147
Adjusting Flow Control Valve	147
Auger Placement	148
Unloading Belly Dump Units	150
Unloading Rear And Side Dump Units	152
TRANSPORTING	154
Requirements	154
Transporting Guidelines	154
Transporting Procedure	155

Farm King



GENERAL OPERATION INFORMATION

Pre - Operation Checklist

Before operating the Backsaver Auger for the first time and each time thereafter, check the following items:



WARNING



AVOID INJURY OR DEATH

- Disengage the PTO, engage the machine's parking brake, stop the engine and make sure all rotating components are completely stopped before connecting, disconnecting, adjusting or cleaning any PTO driven equipment.
- Always keep PTO shields and all guards in place when using PTO driven equipment.
- Disengage PTO for road travel.
- Keep hands, feet and clothing away.



WARNING

AVOID INJURY OR DEATH

Wear safety glasses to prevent eye injury when any of the following conditions exist:


- When fluids are under pressure.
- Flying debris or loose material is present.
- Engine is running.
- Tools are being used.

4. Lubricate the equipment per the schedule outline in the Maintenance Section. (See "SERVICE SCHEDULE" on page 162.)

5. Check the auger hitch for damaged, loose or missing parts. Repair as needed before operation.
6. Check tire pressure. Inflate per manufacturer's specification.
7. Check wheel bolts for tightness. Torque as required. (See "AXLE" on page 170.)
8. Check the augers. Remove any material build-up or debris that has become entangled.
9. Check that all bearings turn freely. Replace as required.
10. Make sure that all guards and shields are in place, secured and functioning as designed.



WARNING

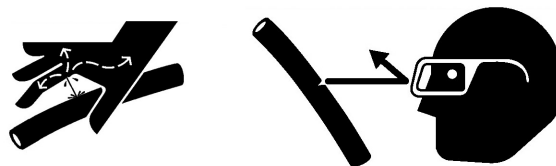

Leaking fluids under pressure can enter the skin and cause serious injury or death. Immediate medical attention is required. Wear goggles. Use cardboard to check for leaks.

11. Check condition of all hydraulic components for leaks. Repair as required.

NOTE: Do not operate with hydraulic leaks.

12. Check gearbox oil level. Fill as required. (See "LUBRICATION" on page 163.)
13. Verify that the tractor's drawbar is adjusted correctly for use with the auger. (See "Drawbar Adjustment" on page 138.)
14. Check that the PTO drivelines telescope easily and turn freely.
15. Make sure the PTO ends are securely attached to the auger and the tractor.

Break - In Checklist

NOTE: The Backsaver Auger must have a break-in period with different operating conditions than for normal use.

The tube and flighting must get a polished surface through use. Once the new auger has polished it will run smooth at recommended speed.

NOTE: Never operate an empty auger for over one minute, as the flighting and housing will experience excessive wear.

During the break-in-period:

1. Run the tractor at slow idle until grain begins to flow from the discharge. For the first 500 bushels, operate at the slow speed and restrict the flow of grain at the intake.
2. Gradually increase the speed until operating at full PTO speed.

NOTE: Do not run empty during break-in period.

Check the following mechanical items after 1 hour of operation and again after 10 hours of operation:

1. Check the auger hitch for damaged, loose or missing parts. Repair as needed before operation.
2. Check for loose fasteners and hardware. Tighten as required.
3. Make sure that all guards and shields are in place, secured and functioning as designed
4. Check that the PTO driveline telescopes easily and turns freely.
5. Check condition of all hydraulic components for leaks. Tighten fittings to correct leaks or replace components. Do not operate with hydraulic leaks.
6. Check tire pressure. Inflate per manufacturer's specification.
7. Check gearbox oil level. Fill as required. (See "LUBRICATION" on page 163.)
8. Check the augers. Remove any debris.

 WARNING



AVOID INJURY OR DEATH

- Disengage the PTO, engage the machine's parking brake, stop the engine and make sure all rotating components are completely stopped before connecting, disconnecting, adjusting or cleaning any PTO driven equipment.
- Always keep PTO shields and all guards in place when using PTO driven equipment.
- Disengage PTO for road travel.
- Keep hands, feet and clothing away.

Tractor Requirements

- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

The tractor must be equipped with a 20 - spline, 1-3/4 inch (44.5 mm) PTO shaft when used with the Backsaver Auger.

1684 Backsaver Auger

The 1684 Backsaver Auger has a total weight of approximately 11,000 lb (4994 kg) and a hitch weight of about 2,460 lb (1115 kg). The tractor / tow vehicle must be rated for this amount of weight to transport the auger.

The 1684 Backsaver Auger will require a MFWD (Mechanical Front Wheel Drive) tractor (minimum 150 hp), three auxiliary hydraulic functions, Category IV rated drawbar and a 7-Pin electrical connection.

16104 Backsaver Auger

The 16104 Backsaver Auger has a total weight of approximately 13,500 lb (6120 kg) and a hitch weight of about 2,460 lb (1115 kg). The tractor / tow vehicle must be rated for this amount of weight to transport the auger.

The 16104 Backsaver Auger will require a MFWD (Mechanical Front Wheel Drive) tractor (minimum 275 hp), three auxiliary hydraulic functions, Category IV rated drawbar and a 7-Pin electrical connection.


16124 Backsaver Auger

The 16124 Backsaver Auger has a total weight of approximately 23,010 lb (10437 kg) and a hitch weight of about 3,810 lb (1728 kg). The tractor / tow vehicle must be rated for this amount of weight to transport the auger.

The 16124 Backsaver Auger will require a MFWD (Mechanical Front Wheel Drive) tractor (minimum 250 hp), three auxiliary hydraulic functions, Category IV rated drawbar and a 7-Pin electrical connection.

Drawbar Adjustment


Figure 328

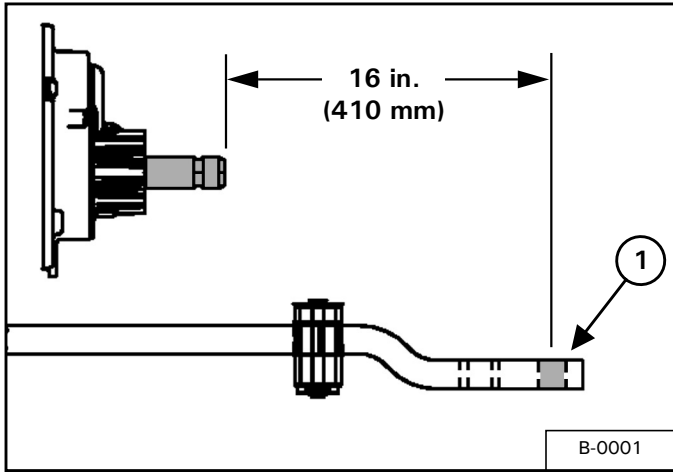

Adjust the tractor's drawbar in / out, until the center of the hitch pin hole (Item 1) [Figure 328] is 16 inches (410 mm) from the end of the tractor's PTO shaft. See your tractor's owner's manual for correct adjustment procedures.

NOTE: A tractor hitch of less than 16" minimum will result in PTO bottoming out, when operating auger at maximum height.

Figure 329

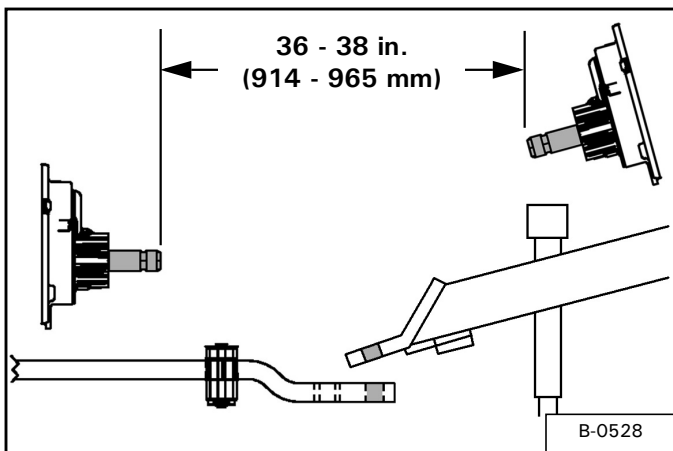


The distance between the tractor and the auger PTO shaft should be between 36 - 38 in. (914 - 965 mm) with the tractor and auger on level ground and the auger in full down position. This distance is obtained by either adjusting the tractor hitch, the auger hitch or both [Figure 329].

For checking PTO driveline see "PTO Driveline" on page 143.

Entering And Leaving The Operator's Position

! IMPORTANT

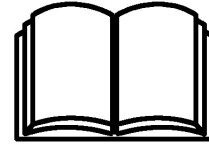

Follow the instructions in your tractor's operation manual for the correct procedure.

Entering The Operator's Position

Move to the operator's position, start the engine and release the parking brake.

Leaving The Operator's Position

! WARNING

AVOID INJURY OR DEATH

Before you leave the operator's position:

- Always park on a flat level surface.
- Place all controls in **NEUTRAL**.
- Engage the park brake.
- Stop the engine and remove the key.
- Wait for all moving parts to stop.

Park the tractor / equipment on a flat level surface.

Place all controls in neutral, engage the park brake, stop the engine and wait for all moving parts to stop. Leave the operator's position.

NOTE: The engine will need to remain running and the PTO engaged for auger operation.

INITIAL SET-UP

Connecting 1684 or 16104 The Backsaver Auger To The Tractor

Always inspect the tractor's drawbar and auger hitch before connecting. See the tractor's owner's manual.

Verify that the tractor's drawbar is adjusted correctly for use with the auger. (See "Drawbar Adjustment" on page 138.)

Enter the operator's position. (See "Entering The Operator's Position" on page 138.)

Move the tractor into position in front of the auger.



AVOID INJURY OR DEATH

Before moving the tractor, look in all directions and make sure no bystanders, especially small children are in the work area. Do not allow anyone between the tractor and the equipment when backing up to the equipment for connecting.


Move the tractor backwards, aligning the drawbar with the auger hitch.

NOTE: The jack may need to be lowered or raised for proper alignment of the drawbar and hitch.

If the auger hitch needs to be adjusted, stop the tractor when drawbar is just in front of the auger hitch.

Leave the operator's position. (See "Leaving The Operator's Position" on page 138.)

Figure 330

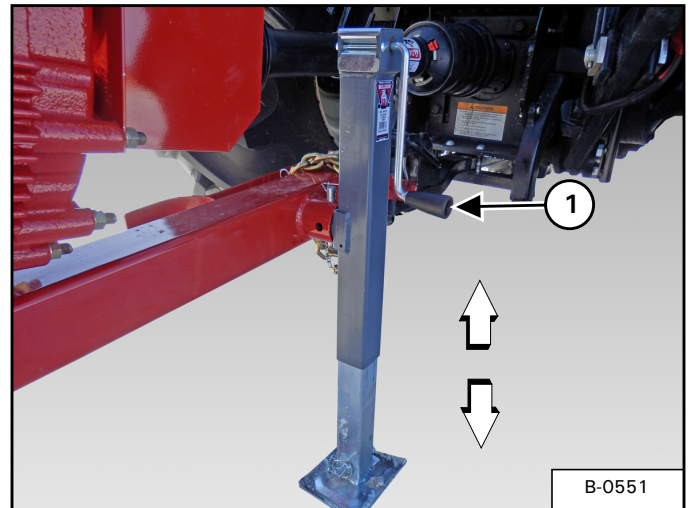

Turn the handle (Item 1) [Figure 330] clockwise to raise the hitch or counterclockwise to lower the hitch.

Lower or raise the auger hitch until aligned with the tractor's drawbar.

Move to the operator's seat, start the engine and release the parking brake.

Move the tractor backwards, aligning the drawbar hitch pin hole with the auger hitch pin hole(s).

Stop the tractor and leave operator's position.




AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when connecting and disconnecting equipment.

NOTE: Always use a hitch pin of adequate size and strength and a retaining pin with a locking device.

Figure 331

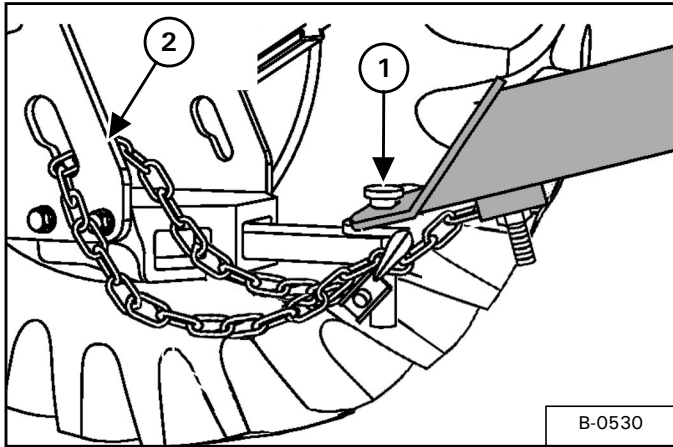


Install the hitch pin (Item 1) [Figure 331] and retaining pin to securely fasten the auger hitch to the tractor drawbar.

NOTE: Always use a hitch pin of adequate size and strength and a retaining pin with a locking device.

Attach the safety chain (Item 2) [Figure 331] around the frame of the tractor.

Figure 332

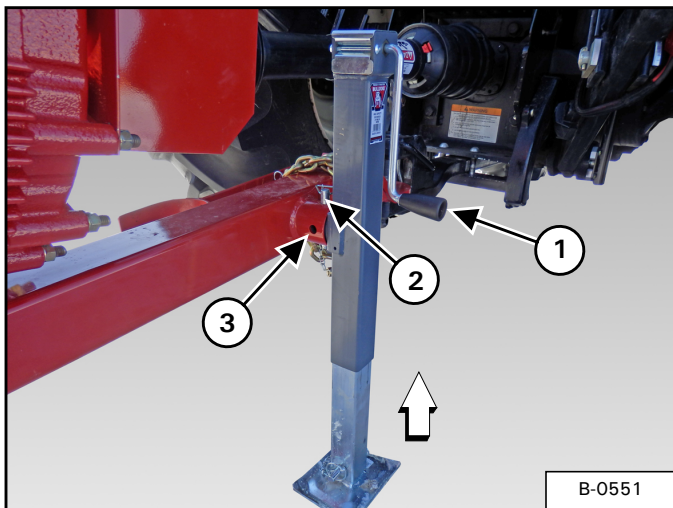


Turn the handle (Item 1) [Figure 332] counterclockwise to loosen the jack.

Remove the pin (Item 2) and rotate the jack to transport position and install the pin into transport position (Item 3) [Figure 332].

Connecting The 16124 Backsaver Auger To The Tractor

16124 Backsaver Auger

WARNING

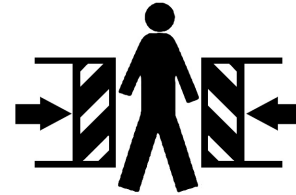

AVOID INJURY OR DEATH

Before moving the tractor, look in all directions and make sure no bystanders, especially small children are in the work area. Do not allow anyone between the tractor and the equipment when backing up to the equipment for connecting.

Move the tractor backwards, aligning the drawbar with the auger hitch.

If the auger hitch needs to be adjusted, stop the tractor when drawbar is just in front of the auger hitch.

Stop the tractor and leave operator's position.

Connect the hydraulic hoses from the hitch cylinder to the tractor remote couplers.

Enter the operator's position. (See "Entering The Operator's Position" on page 138.)

WARNING




AVOID INJURY OR DEATH

Keep fingers and hands out of pinch points when connecting and disconnecting equipment.

Operate the proper tractor hydraulic control to raise the auger hitch high enough to allow tractor drawbar to be aligned with auger hitch. Lower auger hitch onto drawbar hitch.

Figure 333

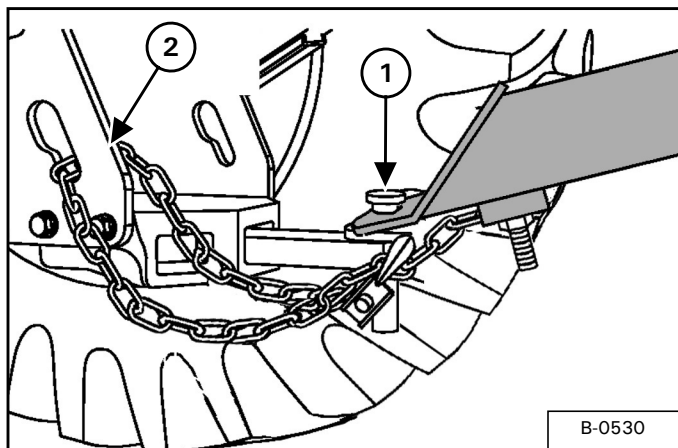


Install the hitch pin (Item 1) [Figure 333] and retaining pin to securely fasten the auger hitch to the tractor drawbar.

NOTE: Always use a hitch pin of adequate size and strength and a retaining pin with a locking device.


Attach the safety chain (Item 2) [Figure 333] around the frame of the tractor.

Figure 334

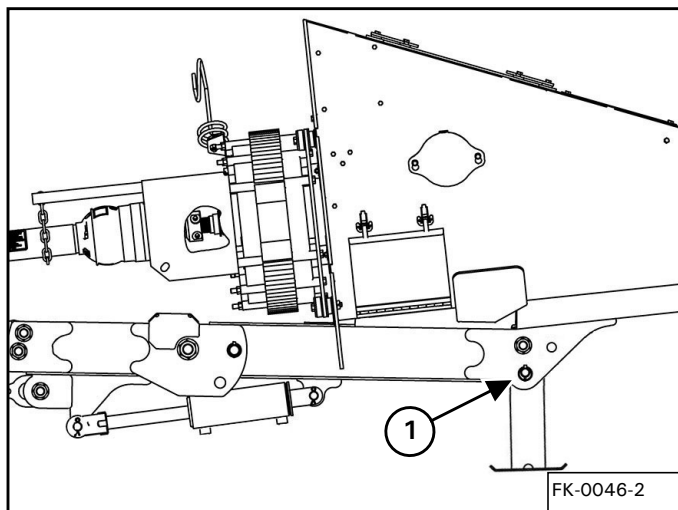


Operate the hydraulic lever to raise the auger hitch to allow clearance to move the auger stand. Remove auger stand locking pin (Item 1) [Figure 334].

Figure 335

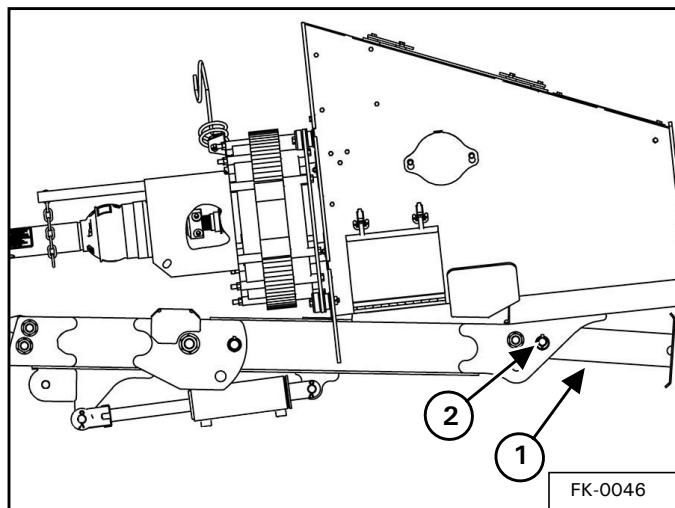

Rotate auger stand (Item 1) upward into storage position and install auger stand locking pin (Item 2) [Figure 335].

Figure 336

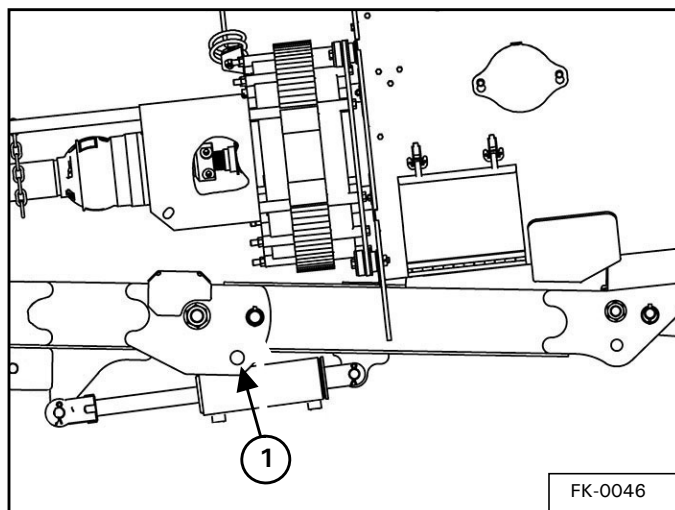

Operate the proper tractor hydraulic control to adjust the auger hitch to align holes and install hitch locking pin (Item 1) [Figure 336] in transport position.



WARNING

AVOID INJURY OR DEATH

Do NOT operate equipment without locking pins in place.

Connecting The PTO Driveline

WARNING

AVOID INJURY OR DEATH

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause serious injury or death.

NOTE: Clean and grease tractor's PTO shaft and PTO driveline coupling each time driveline is connected.

Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.)


IMPORTANT

Improper hitch installation can cause PTO driveline damage.

- Do not modify the hitch or use an unapproved hitch.
- Make sure the PTO driveline is of adequate length and that u-joints are in the correct phase.

Remove the PTO driveline from the storage position (if applicable).

Figure 337

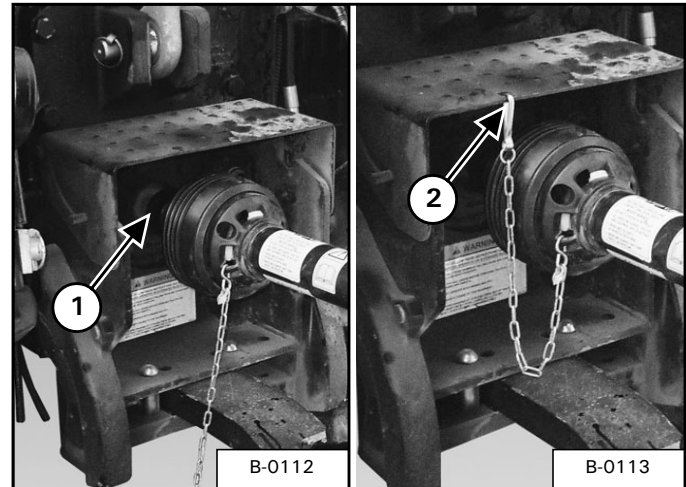

Retract the collar and slide the PTO driveline (Item 1) onto the tractor PTO shaft until it locks onto the shaft. Push and pull on the PTO driveline to verify it is securely attached to the PTO shaft. Install PTO driveline safety chain (Item 2) [Figure 337].

NOTE: The PTO driveline must have a means to retain it to the PTO shaft on the tractor.

WARNING



- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

PTO Driveline

PTO Driveline Length Check

NOTE: Due to variations in distances between tractor PTO shafts and implement input shafts, drivelines may need to be shortened or a longer shaft may be required. When fitting the implement to the tractor, the PTO driveline, with telescoping sections, must be inspected. When the sections are at the most compressed operating position, the sections must not "bottom out". At its shortest length, there must be at least 2 in. (50,8 mm) of clearance between each section end and opposite section end at the most compressed operating position. When the sections are at the most extended position, there must be sufficient engagement between the sections. At its farthest operating extension, a minimum section engagement of 33% of shaft length must be maintained.



WARNING

AVOID INJURY OR DEATH


- Do NOT exceed the rated implement PTO speed.
- Stay clear of rotating driveline.
- Keep bystanders away.
- Keep hands, feet, clothing and long hair away.
- Keep PTO shields and all guards in place.
- Disengage PTO, move the tractor controls to the Neutral position, stop the engine and make sure all rotating components are stopped before leaving the operator's position.
- Do NOT service the tractor or implement with the PTO engaged.
- Do NOT service the implement in a raised position unless properly blocked and with all rotating components stopped.
- Disengage PTO for road travel.

PTO Driveline Bottoming Out Check

Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.)

Make sure the PTO driveline and all rotating components have come to a complete stop before leaving the operator's position (if applicable).

Figure 338

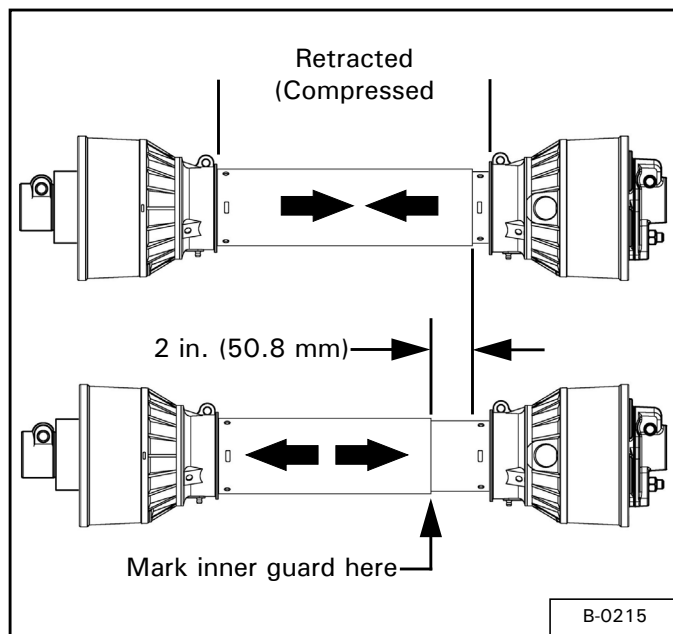

1. Disconnect the PTO driveline from the tractor and slide the PTO driveline together until fully retracted (compressed).
2. Measure the retracted (compressed) length of PTO driveline [Figure 338].
3. Extend the PTO driveline 2 in. (50,8 mm) from the retracted length and place a mark on the inner guard at the end of the outer guard [Figure 338].
4. Reattach the PTO driveline to the tractor PTO shaft.
5. Enter the operator's position. (See "Entering The Operator's Position" on page 138.) Start the engine.
6. With the rear PTO DISENGAGED, raise and lower the implement and watch the PTO driveline extend and retract.
7. If the outer PTO driveline guard slides in (retracts) over the mark at any point of travel, the PTO driveline needs to be shortened.

Reducing The PTO Driveline Length

Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.)

Make sure the PTO driveline and all rotating components have come to a complete stop before leaving the operator's position.



AVOID INJURY OR DEATH

- Do NOT exceed the rated implement PTO speed.
- Stay clear of rotating driveline.
- Keep bystanders away.
- Keep hands, feet, clothing and long hair away.
- Keep PTO shields and all guards in place.
- Disengage PTO, move the tractor controls to the Neutral position, stop the engine and make sure all rotating components are stopped before leaving the operator's position.
- Do NOT service the tractor or implement with the PTO engaged.
- Do NOT service the implement in a raised position unless properly blocked and with all rotating components stopped.
- Disengage PTO for road travel.

Remove the PTO driveline from the tractor and place in storage position (if equipped).


Enter the operator's position. (See "Entering The Operator's Position" on page 138.) Start the engine.

Raise or lower the auger to get the shortest distance between the tractor PTO shaft and auger gearbox PTO shaft.

Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.)


Pull the PTO driveline apart and reinstall each individual section; one half to the tractor PTO shaft and one half to the implement gearbox PTO shaft.

Figure 339

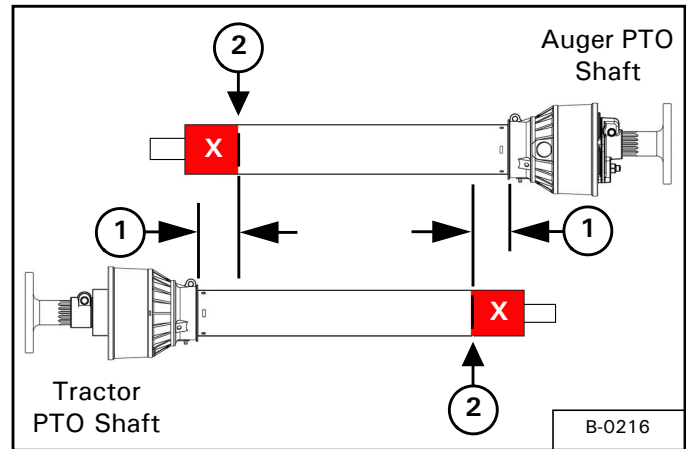

1. Hold PTO driveline sections parallel to one another and measure back 2 in. (50,8 mm) (Item 1) from the yoke of each section and place mark on opposite section. Cut the plastic shield at this length (Item 2) [Figure 339].

Figure 340

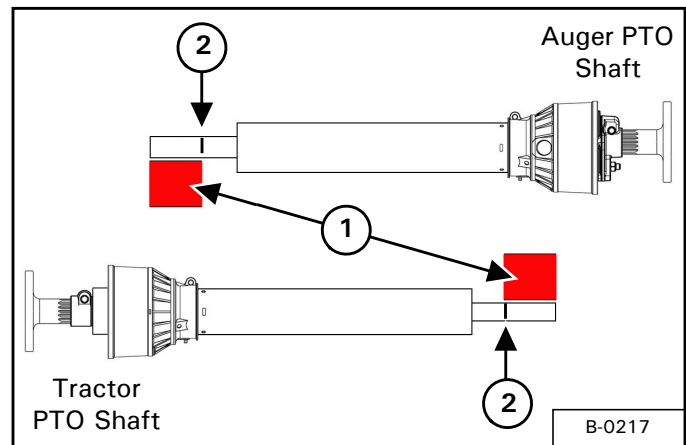

2. Using the plastic guard lengths that were cut off in [Figure 339], align the cut off lengths (Item 1) with the end of the inner & outer shafts. Place a mark (Item 2) [Figure 340] on the inner & outer shafts and cut the inner & outer shafts off at this length.
3. Round off all sharp edges and debur.
4. Thoroughly grease and install the PTO driveline halves together.
5. Recheck for proper operation.

PTO Driveline Engagement Check

Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.)

Make sure the PTO driveline and all rotating components have come to a complete stop before exiting the compact tractor.




AVOID INJURY OR DEATH

- Do NOT exceed the rated implement PTO speed.
- Stay clear of rotating driveline.
- Keep bystanders away.
- Keep hands, feet, clothing and long hair away.
- Keep PTO shields and all guards in place.
- Disengage PTO, move the tractor controls to the Neutral position, stop the engine and make sure all rotating components are stopped before leaving the operator's position.
- Do NOT service the tractor or implement with the PTO engaged.
- Do NOT service the implement in a raised position unless properly blocked and with all rotating components stopped.
- Disengage PTO for road travel.

1. Disconnect the PTO driveline from the tractor and fully slide the driveline sections together (retracted).


Figure 341

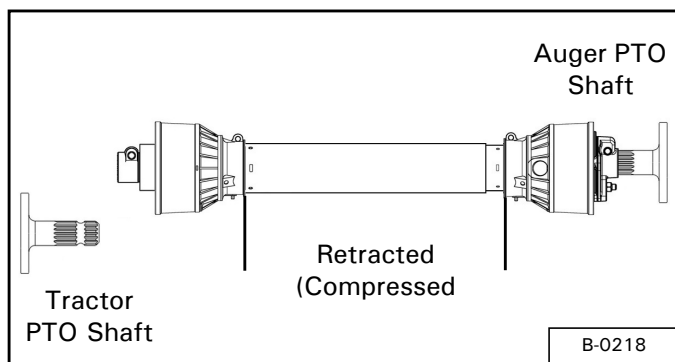

2. Measure the retracted (compressed) length of the PTO driveline between the bases of the plastic guards [Figure 341].

3. Multiply the retracted driveline length by 1.667 to determine the PTO driveline Maximum Operating Length. (i.e.: 25.5 in. (647,7 mm) x 1.667 = 42.5 in. (1079,7 mm) Maximum Operating Length).
4. Attach the PTO driveline to the tractor PTO output shaft.
5. Enter the operator's position. (See "Entering The Operator's Position" on page 138.)
6. With the PTO driveline attached, position the auger to where the telescoping PTO driveline is at its maximum operating extension.
7. Stop the engine and leave the operator's position. (See "Leaving The Operator's Position" on page 138.) Make sure the PTO driveline and all rotating components have come to a complete stop before leaving the operator's position.

Figure 342

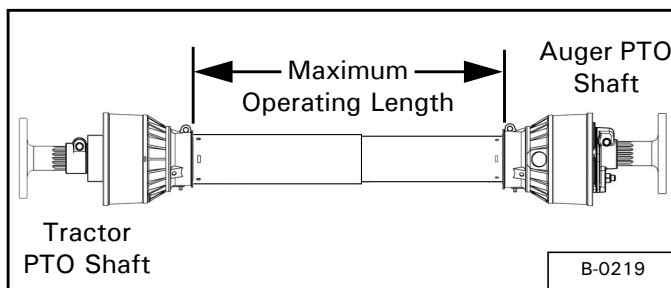


8. Measure the length of the PTO driveline between the bases of the plastic shields [Figure 342] to determine the maximum operating length.

A. If the measured maximum operating length is less than the Maximum Operating Length calculation (from Step 3), the PTO driveline has adequate engagement

B. If the measured maximum operating length is equal to or more than the Maximum Operating Length calculation (from Step 3), the PTO driveline does not have adequate engagement and should be replaced with a longer driveline. See your Farm King dealer for available PTO drivelines.

Connecting Hydraulic Hoses

WARNING

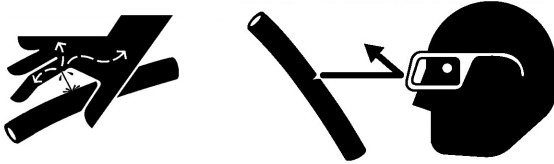

HIGH PRESSURE FLUID HAZARD

To prevent serious injury or death from high pressure fluid:

- Relieve pressure on system before repairing or adjusting.
- Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.
- Keep all components in good repair.


IMPORTANT

- Contain and dispose of any oil leakage in an environmentally safe manner.
- Thoroughly clean the quick couplers before making connections. Dirt can quickly damage the system.

NOTE: Make sure the quick couplers are fully engaged. If the quick couplers do not fully engage, check to see that the couplers are the same size and type.

To Connect:

Figure 343

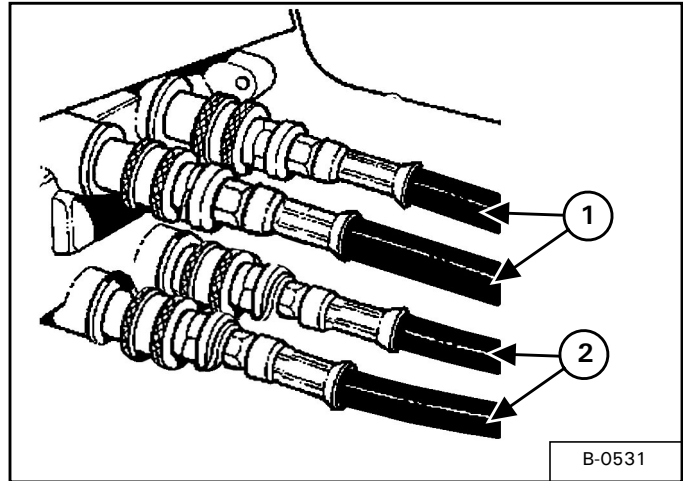

Pull back on the collar of the female coupler, push couplers together, release the collar when the couplers are fully engaged and locked [Figure 343].

Install the two lift cylinder quick coupler hoses (Item 1) [Figure 343].

Install the two valve block quick coupler hoses (Item 2) [Figure 343].

To Disconnect:

WARNING

AVOID BURNS

Hydraulic fluid, tubes, fittings and quick couplers can get hot when running equipment. Be careful when connecting and disconnecting quick couplers.

Pull back on the collar and pull the male coupler out to disconnect.

Connecting Electrical Harness

Connect the auger's electrical harness to the tractor's electrical system.

Lower jack until weight of equipment is resting on tractor drawbar. Pull lock pin on jack and remove. Mount jack to storage bracket and secure with lock pin.

AUGER OPERATION

Operating The Hopper Mover And Winch




Never operate the winch or hopper mover when the PTO is engaged.

Enter the tractor and start the engine.

Engage the hydraulic circuit for the hopper / winch control valve on the intake box. Run the tractor engine at low idle.

Hopper Mover Operation

Figure 344

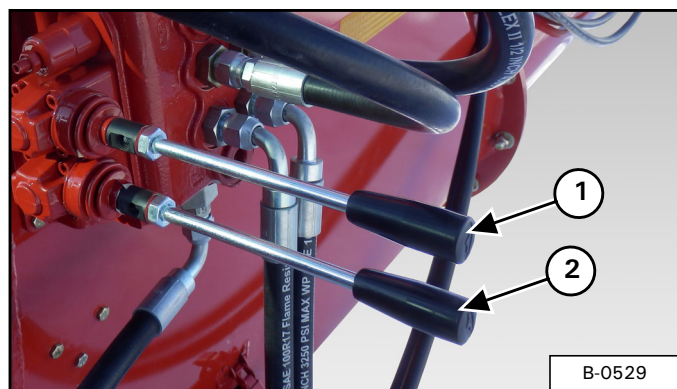

Move the lever (Item 1) [Figure 344] to the right (away from the hitch) to move the hopper to the right. Move the lever to the left (towards the hitch) to move the hopper to the left.


Winch Operation

Move the lever (Item 2) [Figure 344] to the left (towards the hitch) to raise the boom cable (wind cable). Move the lever to the right (away from the hitch) to lower the boom cable (unwind cable).

NOTE: Never have less than three wraps of cable on the drum of the winch.

Adjusting Flow Control Valve

Figure 345

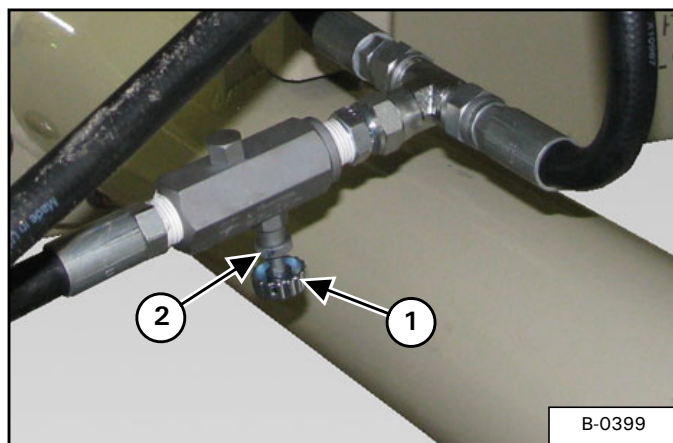

Turn the knob (Item 1) [Figure 345] on the flow control valve "IN" to decrease the speed the auger lowers. Turn the knob "OUT" to increase the speed the auger lowers.

Loosen the nut (Item 2) [Figure 345] and turn the knob all the way in (tight). The approximate initial setting should be 3-1/2 turns out from the tight position. When set, re-tighten nut to set position.

NOTE: Be sure that the valve is slightly open before raising the first time or auger will not lower.

Auger Placement



DANGER

ELECTROCUTION HAZARD

To prevent serious injury or death from electrocution:

- Be aware of overhead power lines.
- Keep away from power lines when transporting or raising auger.
- Electrocution can occur without direct contact.



CAUTION

- Do not operate the unit before reading and understanding the Operator's Manual.
- Keep all safety devices in place.
- Keep off the equipment at all times.
- Keep hands, feet and clothing away from moving parts while in operation.
- Make certain everyone is clear of the equipment before applying power or moving the machine.
- Do not adjust, service, lubricate, clean, unclog or move the mechanism until all power is shut off.
- While in operation, always support the discharge end or provide adequate anchorage of the intake end to prevent sudden tipping.
- Disconnect power of electrical driven units before resetting motor over loads.
- To avoid tipping, make sure auger is empty before attempting to move.
- Keep wheels of undercarriage level and on firm ground.
- Lower unit to the recommended transport position before transporting.



IMPORTANT

- Do not raise the main auger higher than 35° before lowering the intake auger or interference between the intake auger and the intake box will occur.
- Never attempt to raise or lower the auger during operation.
- Verify wheels are free to move.



IMPORTANT

- Operate the auger at a 35° angle. Do not exceed a 42° angle.
- Angles above 35°, decreases auger capacity.




IMPORTANT

- Some types of fertilizer may cause accelerated wear and corrosion as well as added stress on lift components due to additional load.
- Use of fertilizer can affect warranty.



IMPORTANT

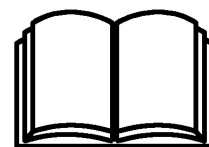

Follow the instructions in your tractor's operation manual for the correct operating instructions.

With the main auger in the fully down position, move the auger towards the bin or barn. Position the auger as close as possible to the bin or barn.



Never place blocks under the wheels to increase the elevation of auger.

Stop the tractor and engage the parking brake. Engage the tractor's hydraulics. Run the tractor engine at low idle.

Figure 346



Using the tractor controls, slowly raise the main auger to the desired height (do not exceed a 42° angle).




Keep wheels of undercarriage level and on firm ground. Raise the auger to the desired height and back the auger into position. Do not support the auger on the bin. As the auger becomes full, the weight may cause damage to the underside of the auger or to the bin.

Back the auger into position above the bin. Lower the auger until the downspout (Item 1) [Figure 346] enters the bin.

Engage the tractor's parking brake, stop the engine and exit the tractor.

Unloading Belly Dump Units

Figure 347

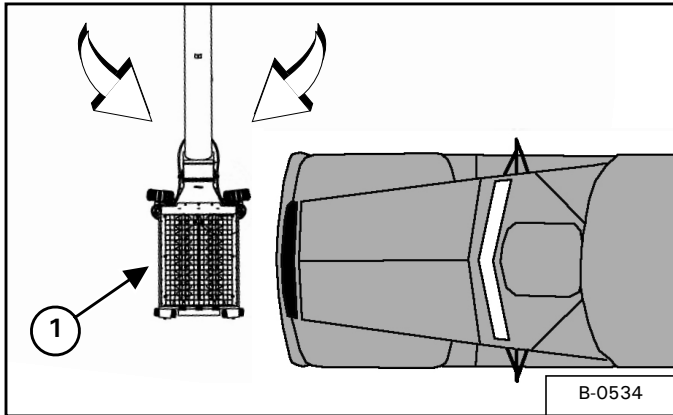


Move the hopper (Item 1) [Figure 347] out at a 90° angle from the auger.

Move the belly dump unit into position, centered on the hopper [Figure 347].

Mark the path of the belly dump unit for future units to unload and maintain the proper distance from the auger to allow adequate space for the hopper to be moved in and out without interference.

Move the hopper mover lever left or right to move the hopper in towards the auger, away from vehicle traffic.


Figure 348

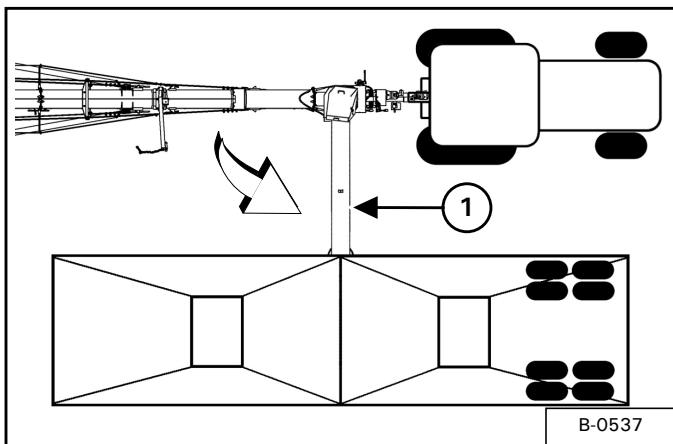

Move the belly dump unit straight forward until centered on the intake auger pivot. Stop the belly dump unit.

Move the hopper (Item 1) [Figure 348] under the belly dump unit.

Figure 349

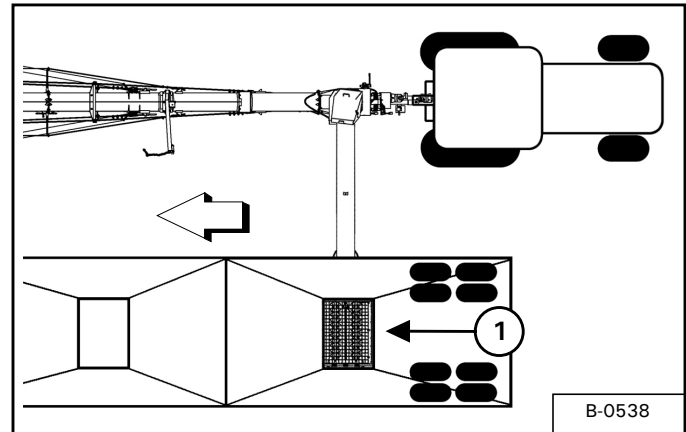

Move the belly dump unit forward until the rear compartment is directly over the hopper (Item 1) [Figure 349].

WARNING




- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

With tractor running at a low idle, engage the tractor PTO slowly to start the auger. Increase engine RPM (do not exceed 1000 RPM PTO speed).

Slowly open the rear compartment gate.

Adjust gate until the hopper augers and intake auger can move grain to the main auger without overflowing the hopper.

When the rear compartment is empty, close the gate, disengage the PTO and lower engine RPM speed.

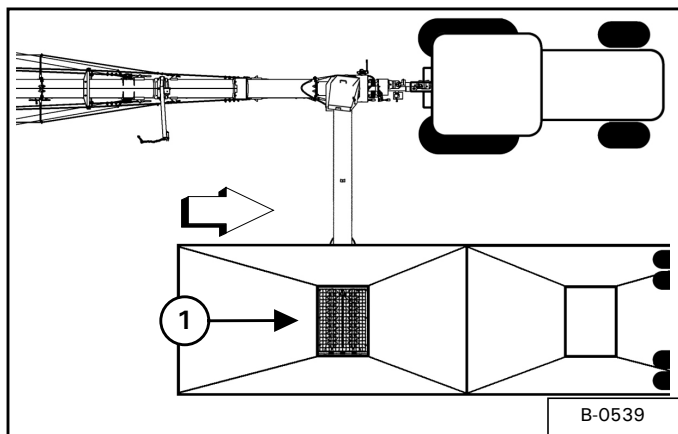Figure 350


Move the belly dump unit back until the front compartment is directly over the hopper (Item 1) [Figure 350].

WARNING



- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

With tractor running at a low idle, engage the tractor PTO slowly to start the auger. Increase engine RPM (do not exceed 1000 RPM PTO speed).

Slowly open the front compartment gate.

Adjust gate until the hopper augers and intake auger can move grain to the main auger without overflowing the hopper.

When the front compartment is empty, close the gate, disengage the PTO and lower engine RPM speed.


Move the hopper in the desired position away from vehicle traffic.

Disengage the tractor hydraulics and exit the tractor.

Unloading Rear And Side Dump Units

Rear Dump Units

Figure 351

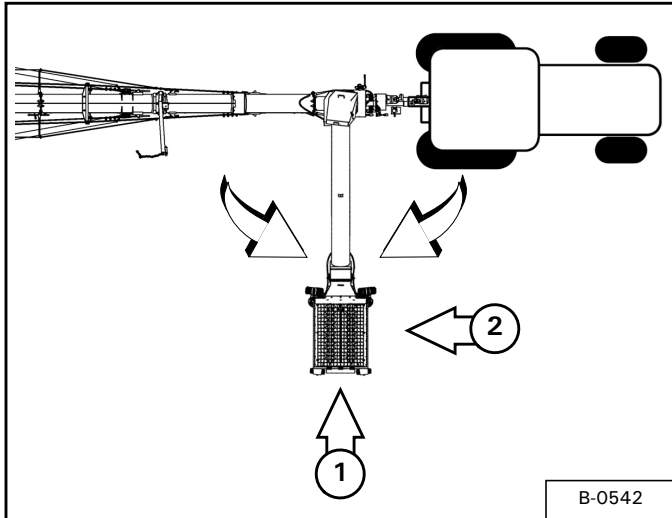

Move the hopper out at a 90° angle from the auger [Figure 351].

Move the rear dump unit into the unloading position at the end of the hopper (Item 1) or on the tractor side of the hopper (Item 2) [Figure 351].

Position the gate of the rear dump unit over the hopper (as close to the center of the hopper as possible).

Stop the rear dump unit and engage the parking brake (if equipped).

WARNING



- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

With tractor running at a low idle, engage the tractor PTO slowly to start the auger. Increase engine RPM (do not exceed 1000 RPM PTO speed).

Slowly open the gate on the rear dump unit.


Adjust gate until the hopper augers and intake auger can move grain to the main auger without overflowing the hopper.

When the unit is empty, close the gate, disengage the PTO and lower engine RPM speed.

Disengage the tractor hydraulics and exit the tractor.

Side Dump Units

Figure 352

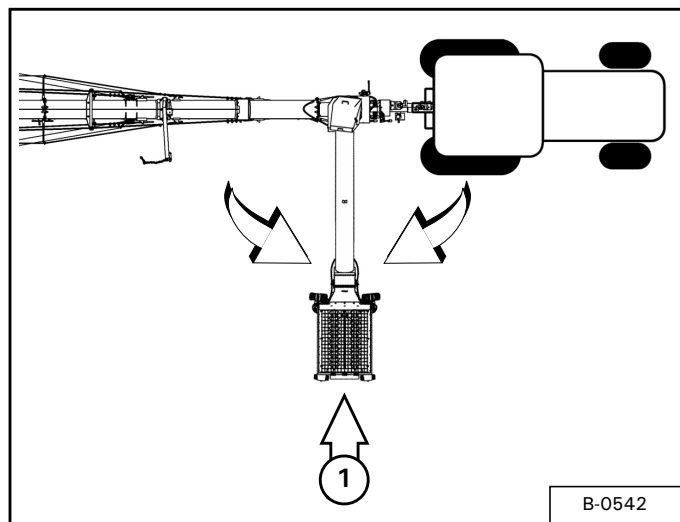

Move the hopper out at a 90° angle from the auger [Figure 352].

Move the side dump unit into the unloading position at the end of the hopper (Item 1) [Figure 352].

Position the gate of the side dump unit over the hopper (as close to the center of the hopper as possible).

Stop the side dump unit and engage the parking brake (if equipped).

WARNING



- Do NOT exceed 1000 RPM PTO.
- Keep PTO shields and all guards in place.
- Keep away from moving parts.
- Keep bystanders away.

With tractor running at a low idle, engage the tractor PTO slowly to start the auger. Increase engine RPM (do not exceed 1000 RPM PTO speed).

Slowly open the gate on the side dump unit.

Adjust gate until the hopper augers and intake auger can move grain to the main auger without overflowing the hopper.

When the unit is empty, close the gate, disengage the PTO and lower engine RPM speed.

Disengage the tractor hydraulics and exit the tractor.

TRANSPORTING

Requirements



DANGER

ELECTROCUTION HAZARD

To prevent serious injury or death from electrocution:

- Be aware of overhead power lines.
- Keep away from power lines when transporting or raising auger.
- Electrocution can occur without direct contact.



WARNING

Use of an unapproved hitch or tractor / tow vehicle can result in loss of control, leading to serious injury or death.

Tractor / tow vehicle and hitch must have the rated capacity to tow equipment.



CAUTION

- Do not operate the unit before reading and understanding the Operator's Manual.
- Make certain everyone is clear of the equipment before applying power or moving the machine.
- To avoid tipping, make sure auger is empty before attempting to move.
- Keep wheels of undercarriage level and on firm ground.
- Lower unit to the recommended transport position before transporting.
- Disconnect PTO driveline from the tractor before moving or transporting.



IMPORTANT

Never exceed 20 mph (32 kph).



IMPORTANT

Do not move or transport the auger unless the hopper and intake auger are in the raised / transport position and securely fastened before transporting.

Comply with federal, state, local and provincial laws regarding the transport of farm equipment on public roadways.

Verify that the tractor / tow vehicle are approved for transporting the equipment and that the equipment is securely attached to the tractor / tow vehicle.

Verify safety chain is installed and properly connected before transporting equipment.

Verify that the SMV (Slow Moving Vehicle) emblem, all lights and reflectors are clean and visible.

Always attach a red flag to the end of the auger when transporting on roads.

Disconnect the PTO driveline from the tractor before transporting.

Transporting Guidelines

The ratio of the tractor / tow vehicle weight to the loaded equipment weight plays an important role in defining acceptable travel speed.

TRAVEL SPEED - Acceptable travel speed.

WEIGHT RATIO - Weight of fully equipped or loaded implement(s) relative to weight of tractor / tow vehicle.

TRAVEL SPEED	WEIGHT RATIO
Up to 20 mph (32 kph)	1 to 1 (or less)
Up to 10 mph (16 kph)	2 to 1 (or less)
DO NOT TOW	More than 2 to 1


Transporting Procedure

Remove all supports on the discharge end and anchorage from the intake end (if required).

Enter the tractor, start the engine and engage the tractor's hydraulics.

Engage the hydraulic circuit for the hopper / winch control valve on the intake box. Run the tractor engine at low idle.


Figure 353

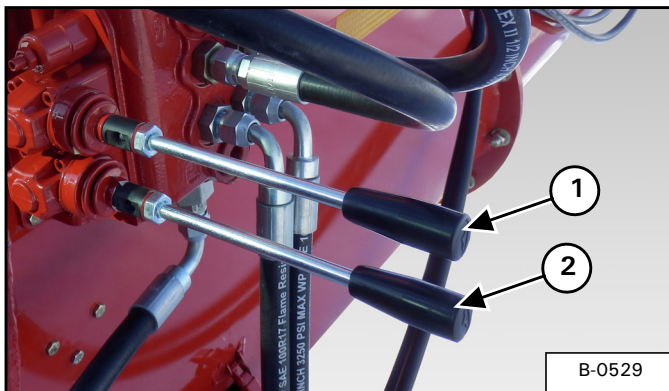

Move the lever (Item 1) [Figure 353] to the right (away from the hitch) to move the hopper to the right (toward the auger) until the boom cable can be installed.

Move the lever (Item 2) [Figure 353] to the right (away from the hitch) to lower the boom cable (unwind cable).

Figure 354

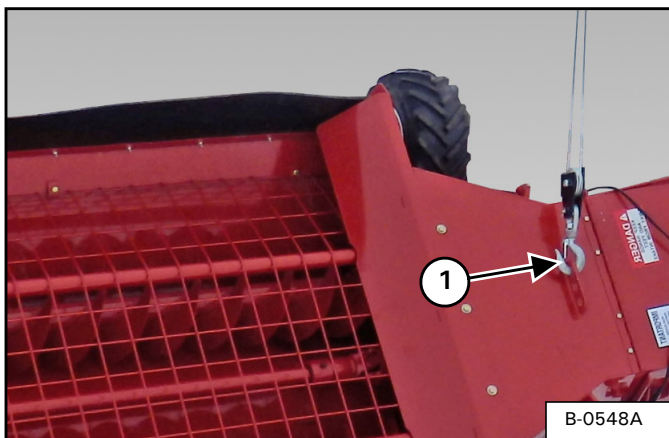

Install the boom cable (Item 1) [Figure 354] onto the hopper.


Move the lever (Item 2) [Figure 353] to the left (towards the hitch) to raise the boom cable (wind cable).

Raise the hopper until the transport chain can be installed.

WARNING

The weight of the hopper and intake auger assembly must be supported by the transport chain, whenever the auger is moved. If the weight of the intake auger is on the winch, the winch may be damaged during transport.

Figure 355

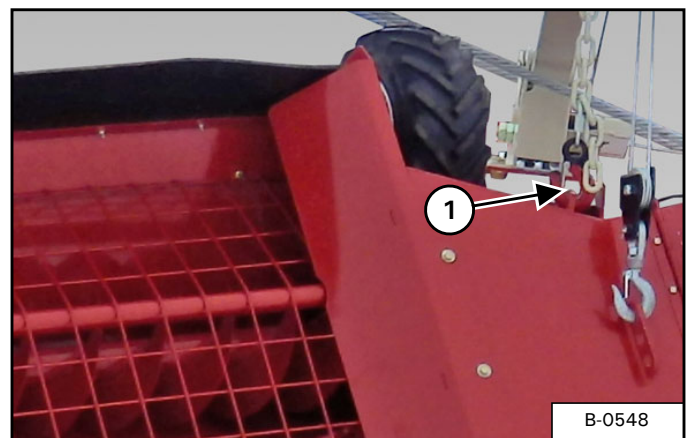

Install the transport chain (Item 1) [Figure 355] onto the hopper.

Lower the hopper until the transport chain is supporting the weight of the hopper and intake auger.

Enter the tractor, using the tractor controls, slowly raise the main auger until the discharge spout is clear from the bin.


Release the parking brake and move the tractor and auger forward (away from the bin) until there is adequate space for the auger to be lowered into the transport position.

Stop the tractor and engage the parking brake.

! IMPORTANT

Always lower the auger before transporting and allow the weight of the auger to rest on the undercarriage and not the hydraulic cylinders.

Figure 356

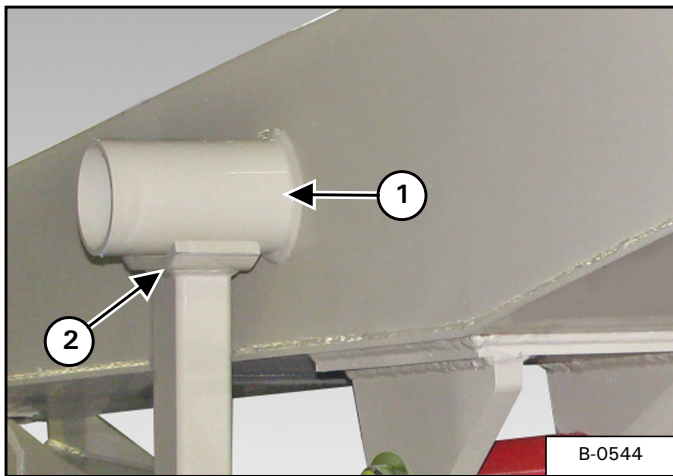

Fully lower the auger until the upper lift arm (Item 1) contacts the cradle rest (Item 2) [Figure 356] (both sides).

! WARNING


AVOID INJURY OR DEATH

Before you leave the operator's position:

- Always park on a flat level surface.
- Place all controls in **NEUTRAL**.
- Engage the park brake.
- Stop the engine and remove the key.
- Wait for all moving parts to stop.


Engage the tractor's parking brake, stop the engine and exit the tractor.

Figure 357

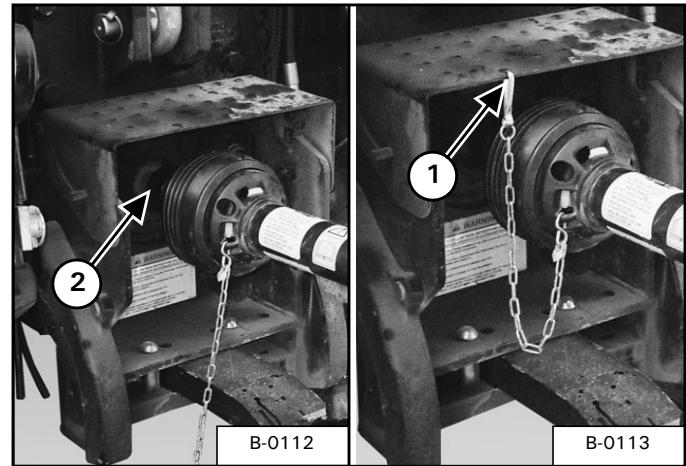

Remove the PTO driveline safety chain (Item 1). Retract the collar (Item 2) [Figure 357] and slide the PTO driveline off the tractor PTO shaft.

Figure 358

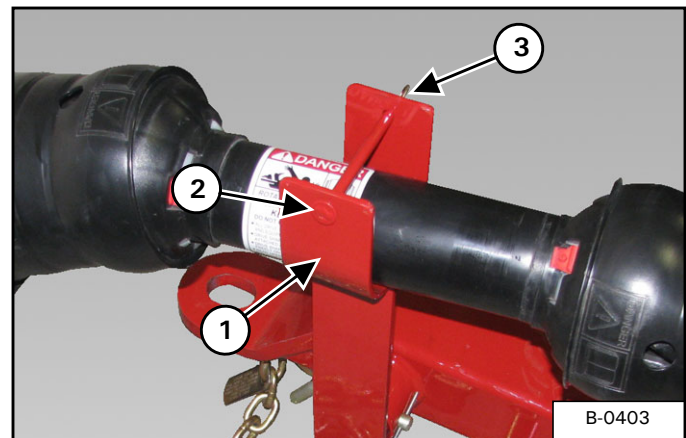


Place the PTO driveline into the PTO holder (Item 1). Install the clevis pin (Item 2) and hairpin clip (Item 3) [Figure 358].

Verify that the auger is securely fastened to the tractor / tow vehicle and that the hitch safety chain is properly attached to the auger and tractor / tow vehicle.

Verify that the SMV (Slow Moving Vehicle) sign is attached and visible.

Verify that the amber lights are clean and operating correctly.

Figure 359

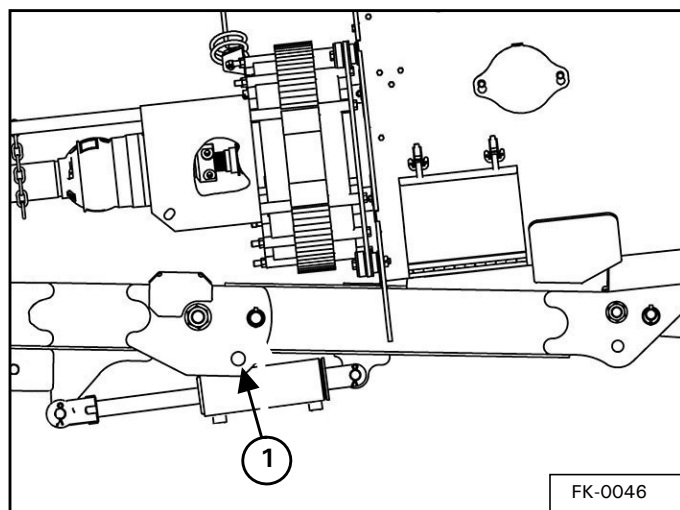

Remove the hitch locking pin.

Operate the proper tractor hydraulic control to adjust the auger hitch to align holes and install hitch locking pin (Item 1) [Figure 336] in transport position.



WARNING

AVOID INJURY OR DEATH

Do **NOT** operate equipment without locking pins in place.

Farm King



MAINTENANCE

TROUBLESHOOTING	161
Chart	161
SERVICE SCHEDULE	162
Maintenance Intervals	162
LUBRICATION	163
Recommendations	163
Locations	163
1684 & 16104 Hopper Dual Auger Drive Chains	168
16124 Hopper High Capacity Auger Drive Chains	168
M2000 Helical Gearbox (If Equipped)	168
4168 Lower Gearbox	169
4168 Upper Gearbox	169
Cleaning And Inspection	169
AXLE	170
Tire / Wheel Replacement	170
Wheel Lug Nut Torque	170
1684 & 16104 BRIDGING CABLES	171
Cable Inspection	171
Lubricating	171
Cleaning	171
Lower And Upper Bridging Cables	171
Side Bridging Cables	173
16124 BRIDGING	174
SAFETY SIGN (DECAL) INSTALLATION	174
Procedure	174
STORAGE AND RETURN TO SERVICE	175
Storage	175
Return To Service	175

Farm King



TROUBLESHOOTING

Chart



WARNING

Instructions are necessary before operating or servicing equipment. Read and understand the Operator and Parts Manual and safety signs (decals) on equipment. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

NOTE: If a problem is encountered that is difficult to solve, even after having read through this troubleshooting section, please call your local distributor, dealer or factory. Before you call, please have this Operator And Parts Manual and the serial number of your machine at hand.

PROBLEM	CAUSE	CORRECTION
Cannot start augers.	Plugged auger or obstruction.	Shutoff tractor and disconnect the PTO. Remove obstruction.
	Bearing failure.	Check bearings and replace if required.
Grain flow is too fast.	Discharge gate(s) open too far.	Close the gate(s) to allow a slower grain flow to the hopper / intake auger.
Grain flow is too slow.	Discharge gate(s) not open enough.	Open the gate(s) to allow a faster grain flow to the hopper intake auger.
	Tractor RPM set to low.	Raise tractor RPM to proper setting.
Lights do not function.	Loose connection.	Check electrical connection at tractor.
	Faulty harness or wire.	Check for broken wires.
	Faulty tractor circuit.	Check tractor light circuit.

SERVICE SCHEDULE

Maintenance Intervals

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Auger.



WARNING

Instructions are necessary before operating or servicing equipment. Read and understand the Operator and Parts Manual and safety signs (decals) on equipment. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

#	DESCRIPTION	SERVICE PROCEDURES						
		Check	Clean	Lube	Change	Adjust	Drain	Locations
Daily Maintenance (or every 8 hours)								
1	CV Joints, U-Joints and Bearings			•				
2	PTO Driveline			•				
3	Universal Joint (Front)			•				
4	Lower & Upper Lift Arm Pivots			•				
5	Hopper Drive Shaft & U-Joints			•				
6	Intake Auger Shaft & U-Joints			•				
7	Dual Auger Hopper Drive Chains			•				
Weekly (or every 50 hours)								
8	Lower Intake Auger Gearbox Oil Level	•						
9	Upper Intake Auger Gearbox Oil Level	•						
10	Main Gearbox	•						
11	Wheel Lug Nut Torque	•						
12	Winch Cable	•						
13	Bridging Cable Tension	•						
Semi-Annually (or every 250 hours)								
14	Bridging Cables	•	•			•		
15	Backsaver Auger		•					
Annually (or every 500 hours)								
16	Lower Intake Auger Gearbox Oil				•			
17	Upper Intake Auger Gearbox Oil				•			
18	Main Gearbox				•			
19	Main Tubes	•						

LUBRICATION

Recommendations

Always use a good quality multi-purpose / lithium base grease when lubricating the equipment.

! IMPORTANT

Do not over-grease bearings. Greasing too often can damage seals and lead to premature bearing failure.

- Always use a hand-held grease gun.
- Clean fitting before greasing, to avoid injecting dirt and grit.
- Replace and repair broken fittings immediately.
- If fittings will not take grease, remove and clean thoroughly. Replace fitting if necessary.


Locations

! IMPORTANT

Fluid such as engine oil, hydraulic fluid, coolants, grease, etc. must be disposed of in an environmentally safe manner. Some regulations require that certain spills and leaks on the ground must be cleaned in a specific manner. See local, state and federal regulations for the correct disposal.


Lubricate the following grease locations EVERY 8 HOURS:

Figure 360

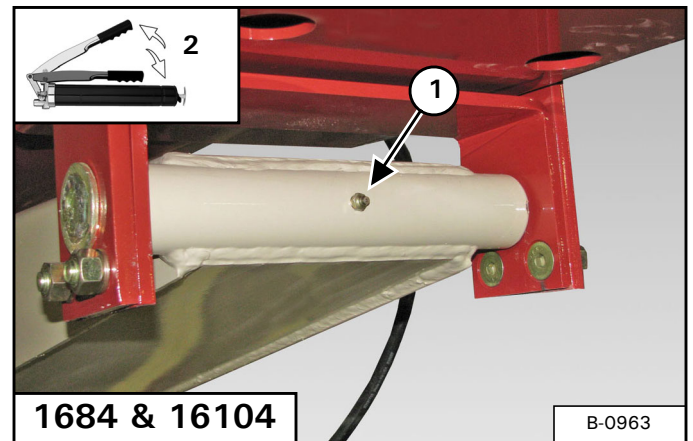


Apply two pumps of grease to the upper undercarriage pivot (Item 1) [Figure 360].

Figure 361

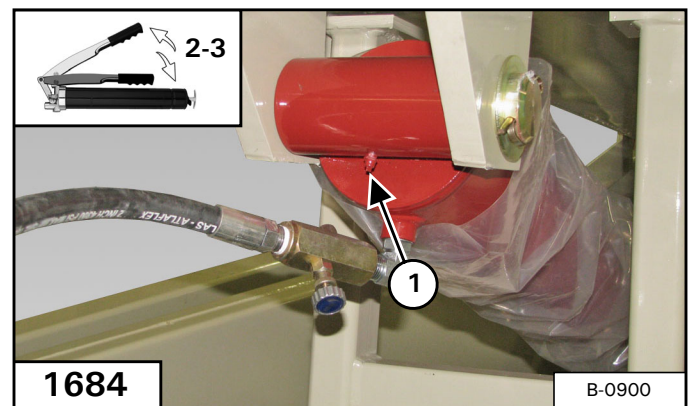


Apply two - three pumps of grease to the base end of the lift cylinder (Item 1) [Figure 361].

Figure 362

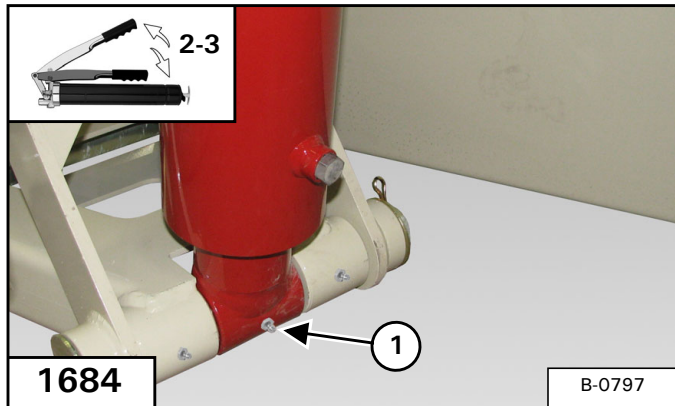


Apply two - three pumps of grease to the rod end of the lift cylinder (Item 1) [Figure 362].

Figure 363

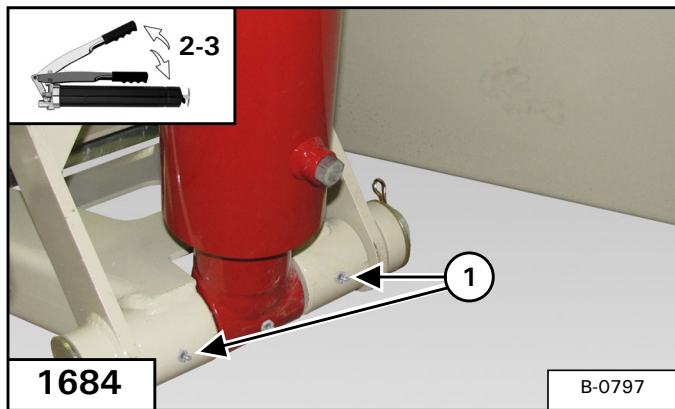


Apply two - three pumps of grease to the connecting link (Item 1) [Figure 363].

Figure 364

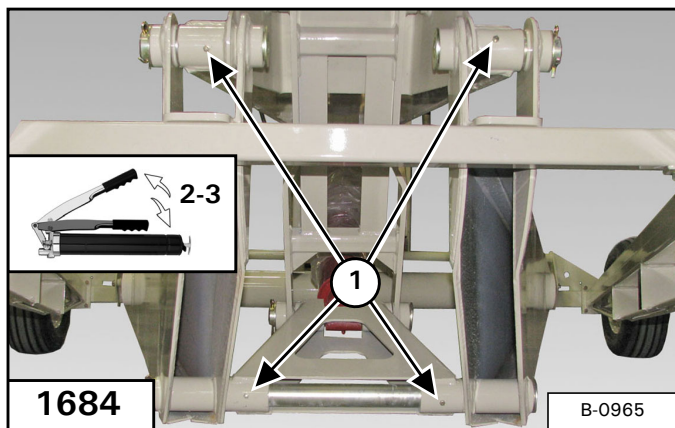


Apply two - three pumps of grease to the LH & RH lower lift arms (Item 1) [Figure 364].

Figure 365

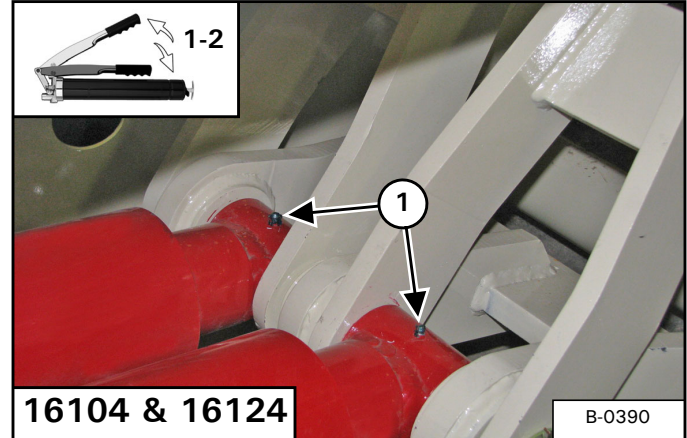


Apply 1-2 pumps of grease to the rod end of each lift cylinder (Item 1) [Figure 365].

Figure 366

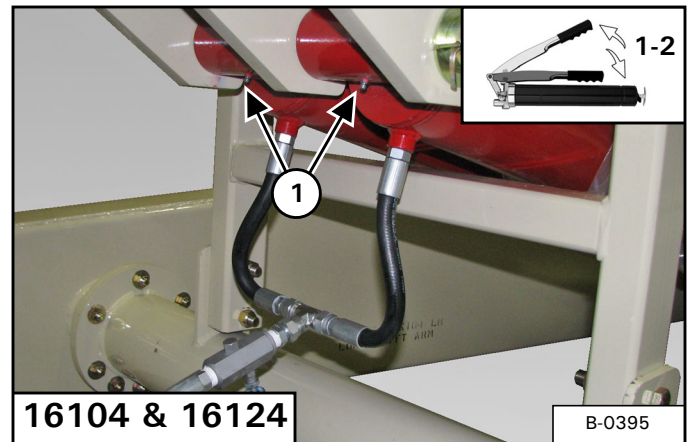


Apply 1-2 pumps of grease to the cylinder base ends (Item 1) [Figure 366].

Figure 367

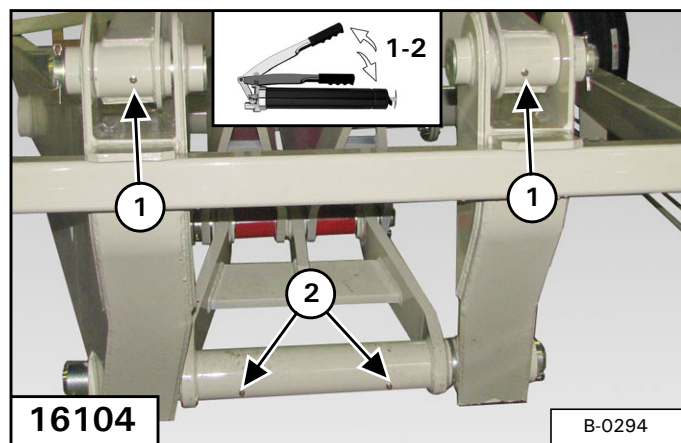


Apply 1-2 pumps of grease to the two front upper lift arm pivots (Item 1) and lower link pivot (Item 2) [Figure 367].

Figure 368

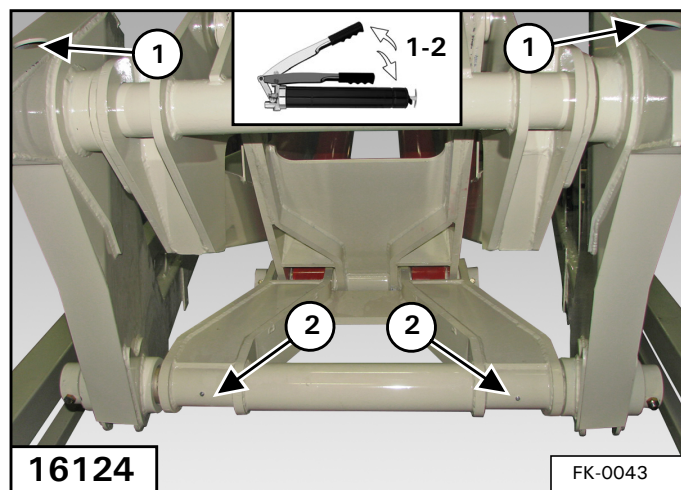


Apply 1-2 pumps of grease to the two front upper lift arm pivots (Item 1) and lower pivot yoke (Item 2) [Figure 368].

Figure 369

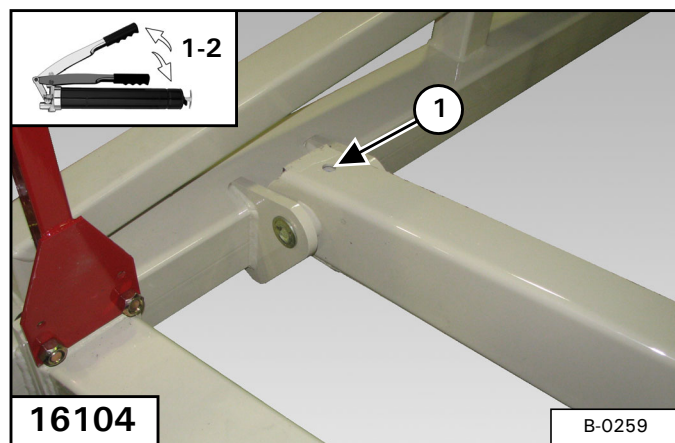


Apply 1-2 pumps of grease to the RH lower lift arm pivot (Item 1) [Figure 369]. Repeat procedure on the LH lower lift arm pivot.

Figure 370

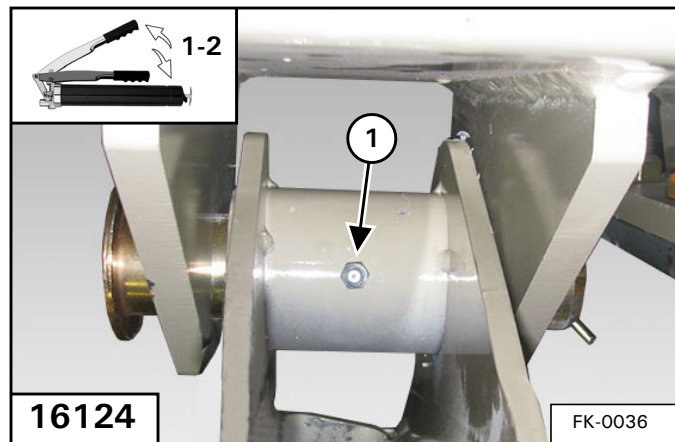


Apply 1-2 pumps of grease to the RH lower lift arm pivot (Item 1) [Figure 370]. Repeat procedure on the LH lower lift arm pivot.

Figure 371

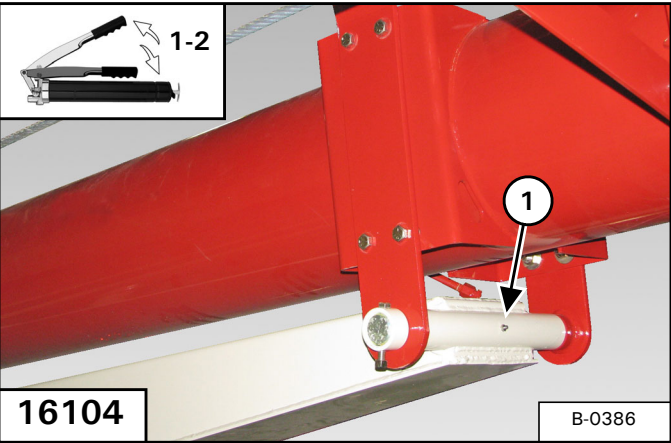


Apply 1-2 pumps of grease to the rear upper lift arm pivot (Item 1) [Figure 371].

Figure 372

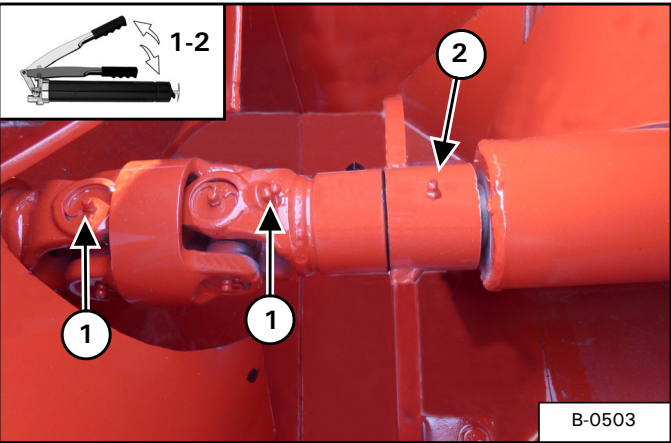


Apply 1-2 pumps of grease to the universal joints (Item 1) on the hopper auger drive shaft and to intake auger hanger mount (Item 2) [Figure 372].

Figure 373

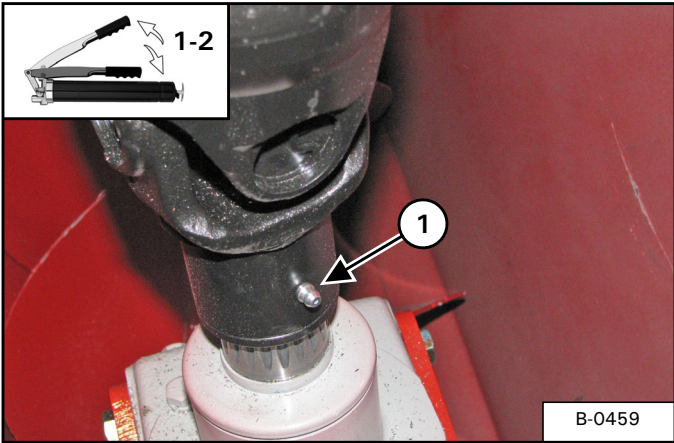


Apply 1-2 pumps of grease to the intake drive shaft slide (Item 1) [Figure 373].

Figure 374

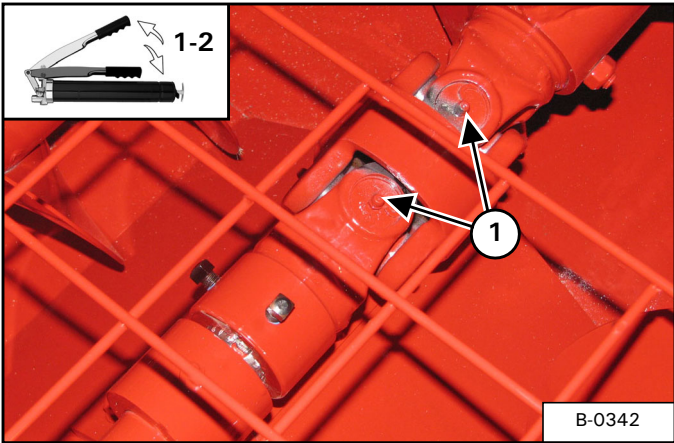


Apply 1-2 pumps of grease to the intake hopper drive shaft (Item 1) [Figure 374].

Figure 375

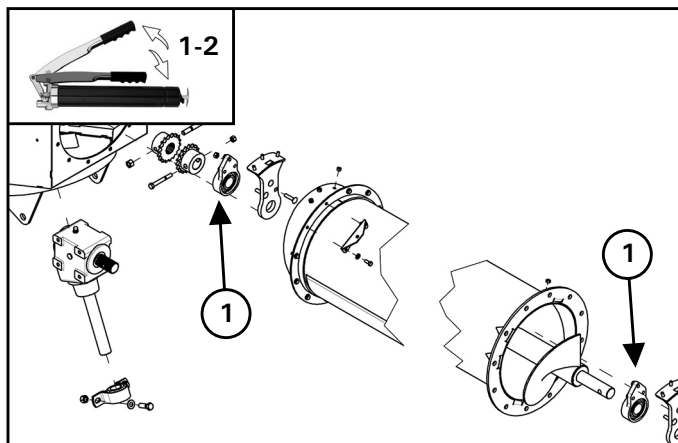


Apply 1-2 pumps of grease to the intake tube shaft bearings (Item 1) [Figure 375].

Figure 376

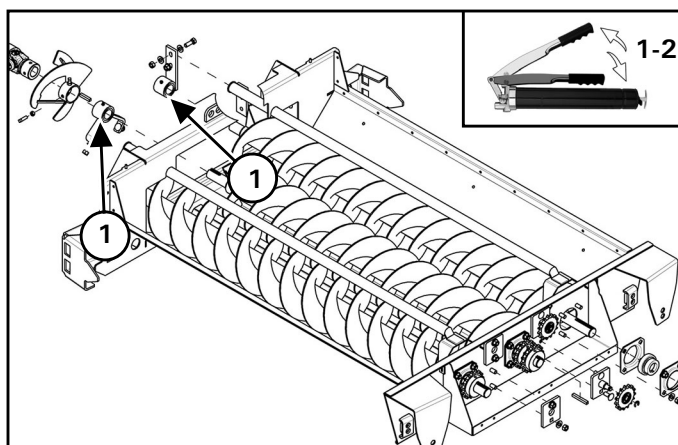


Apply 1-2 pumps of grease to the hopper flighting holders (Item 1) [Figure 376] (three places).

Figure 377

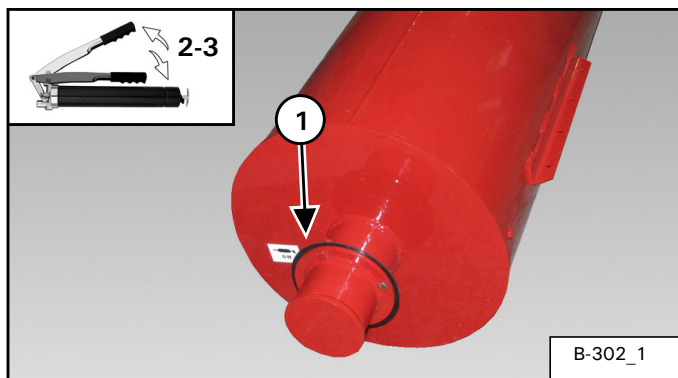


Apply 2-3 pumps of grease to the end bearings (Item 1) [Figure 377] on the discharge end of the auger.

Figure 378

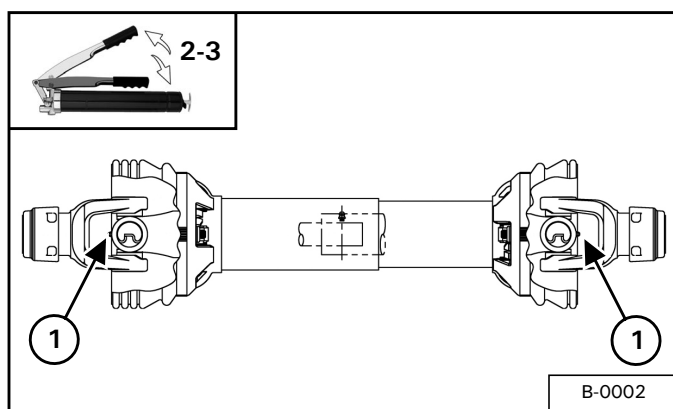

Apply two - three pumps of grease to the cross and bearings (Item 1) [Figure 378] on the PTO driveline.

Figure 379

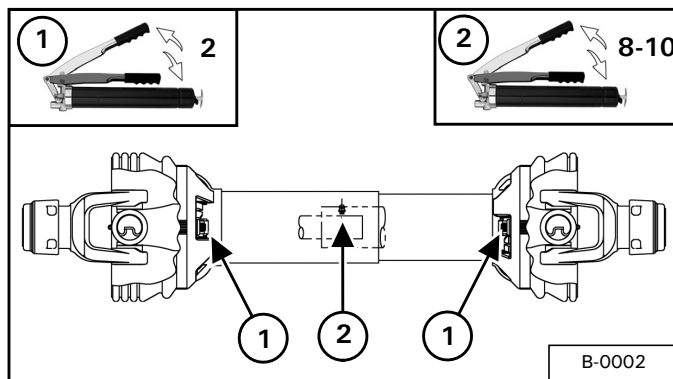


Apply two pumps of grease to the guard bushings (Item 1) [Figure 379].

Apply eight - ten pumps of grease to the telescoping member (Item 2) [Figure 379].

1684 & 16104 Hopper Dual Auger Drive Chains


Figure 380

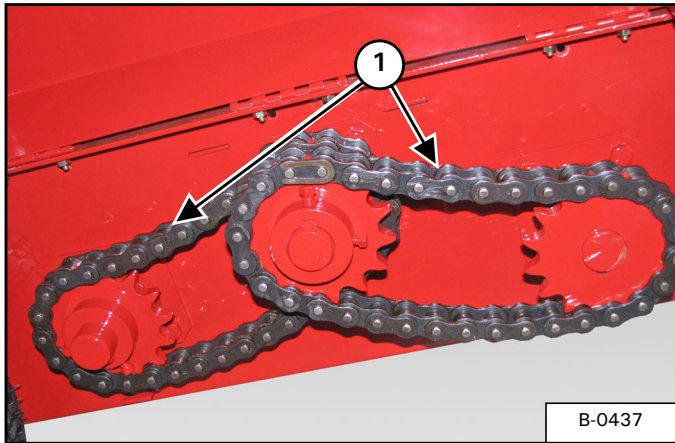

Apply oil to the auger drive chains (Item 1) [Figure 380] daily or every eight hours.

16124 Hopper High Capacity Auger Drive Chains


Figure 381

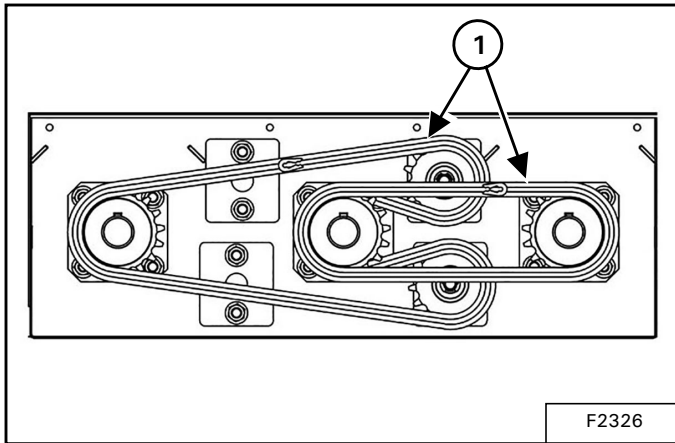

Apply oil to the auger drive chains (Item 1) [Figure 381] daily or every eight hours.

M2000 Helical Gearbox (If Equipped)

Figure 382

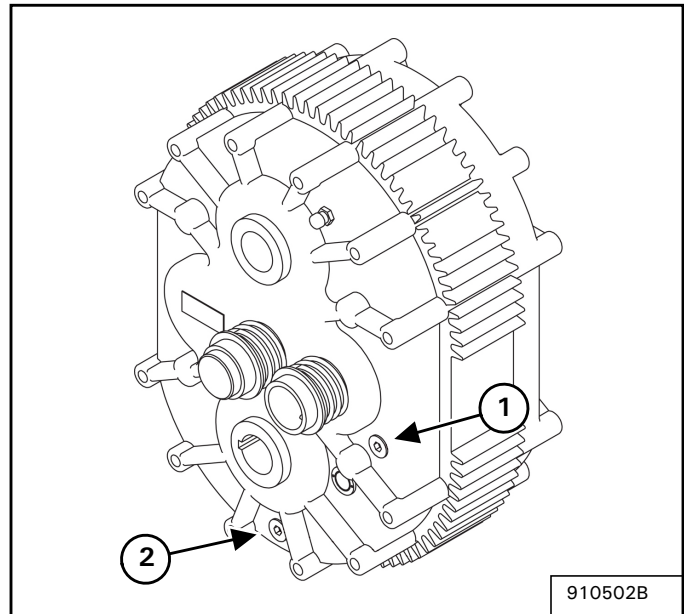

Check the gearbox oil level every 50 hours or weekly.

Remove the fill plug (Item 1) [Figure 382] from the gearbox. Oil level should be at the bottom of the plug hole.

If the oil level is low, add SAE 75W-90 synthetic gear oil until the oil is at the bottom of the hole.


Changing Gear Oil

Remove the drain plug (Item 2) [Figure 382] and allow all the gear oil to be drained. Install drain plug.

Remove the side plug (Item 1) [Figure 382] from the gearbox. Fill with SAE 75W-90 synthetic gear oil to the bottom of the plug hole. Install fill / side plug.

4168 Lower Gearbox

Figure 383

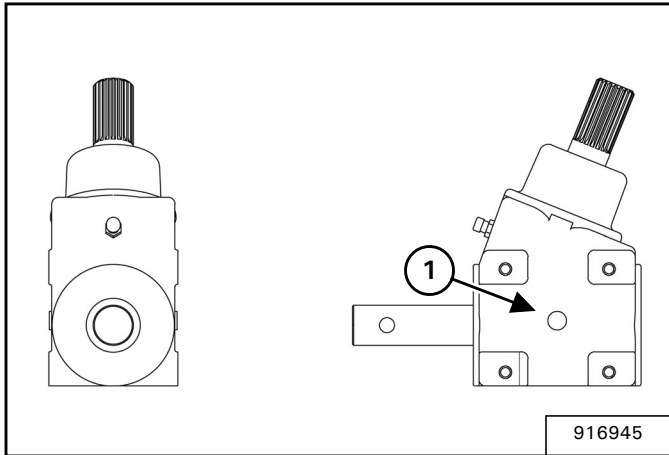

Check the gearbox oil level every 50 hours or weekly.

Remove the fill / drain plug (Item 1) [Figure 383] from the gearbox. Oil level should be at the bottom of the plug hole.

If the oil level is low, add SAE 75W-90 synthetic gear oil until the oil is at the bottom of the hole.


Changing Gear Oil

Remove the fill / drain plug (Item 1) [Figure 383] and siphon all the gear oil from the gearbox.

Fill with SAE 75W-90 synthetic gear oil to the bottom of the plug hole. Install fill / side plug.

4168 Upper Gearbox

Figure 384

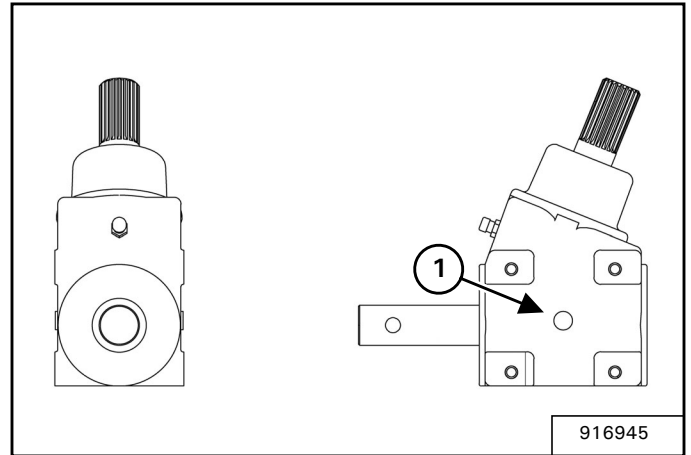

Check the gearbox oil level every 50 hours or weekly.

Remove the fill / drain plug (Item 1) [Figure 384] from the gearbox. Oil level should be at the bottom of the plug hole.

If the oil level is low, add SAE 75W-90 synthetic gear oil until the oil is at the bottom of the hole.

Changing Gear Oil

Remove the fill / drain plug (Item 1) [Figure 384] and siphon all the gear oil from the gearbox.

Fill with SAE 75W-90 synthetic gear oil to the bottom of the plug hole. Install fill / side plug.

Cleaning And Inspection

NOTE: Inspect the driveline components, replace all damaged or worn components.

Use solvent to clean the shaft and tube. Use compressed air to dry and remove excess solvent from the parts.

Apply a light coat of grease to the shaft and the tube end.

Use solvent to clean the slide collars, yokes, crosses and bearings. Use compressed air to dry the parts.

Apply a light coat of grease to the inside of the slide collars.

AXLE

Tire / Wheel Replacement

Empty the Backsaver Auger (if required).



WARNING

AVOID INJURY OR DEATH

Before you leave the operator's position:

- Always park on a flat level surface.
- Place all controls in **NEUTRAL**.
- Engage the park brake.
- Stop the engine and remove the key.
- Wait for all moving parts to stop.

Park the tractor / equipment on a flat level surface.

Place all controls in neutral, engage the park brake, stop the engine and wait for all moving parts to stop. Leave the operator's position.



WARNING

AVOID INJURY OR DEATH


- The parking brake must be engaged before leaving the operator's position. Rollaway can occur because the transmission may not prevent machine movement.
- Always chock tires before performing any maintenance or service.

Place chock blocks behind and in front the auger tire.

Place a jack under the axle frame on the side the wheel is to be replaced. Raise the jack until the wheel is slightly off the ground.

NOTE: Place blocks under the frame to help secure the auger when wheel is raised off the ground.

Figure 385

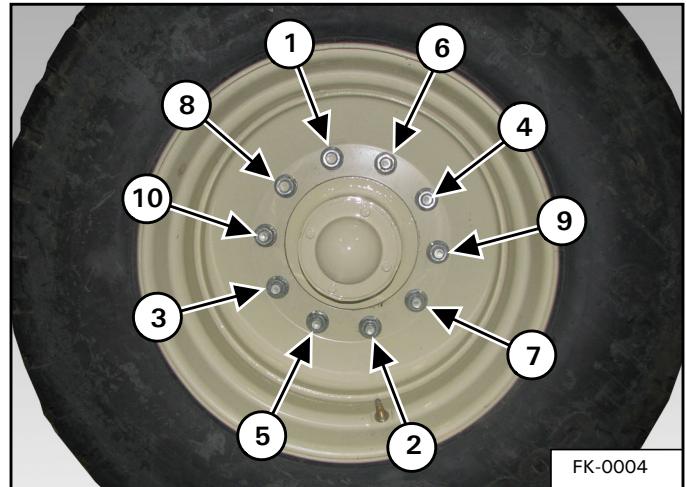

Remove the wheel nuts and tire from the hub.

Install the new tire with the valve stem facing out (both sides). Install the wheel nuts (both sides) [Figure 385].

Tighten wheel nuts in a criss-cross pattern [Figure 385].

Lower the axle and tires to the ground. Remove the strap and lifting device.

Check tire pressure.

Wheel Lug Nut Torque

Check the torque on wheel lug nuts daily.

Ten Bolt Hub - Tighten wheel nuts to 462 lb. ft. (626 N•m) of torque.

Eight Bolt Hub - Tighten wheel nuts to 264 lb. ft. (358 N•m) of torque.

Six Bolt Hub - Tighten wheel nuts to 133 lb. ft. (180 N•m) of torque.

1684 & 16104 BRIDGING CABLES

NOTE: The following images may not show your bridging cable assemblies exactly as they appear but, the procedures are correct.

Cable Inspection

! IMPORTANT

Always wear the proper hand and eye protection when servicing the equipment.

Regularly check the tightness of all cable clamps to avoid slipping. Inspect cables regularly for damage, wear or corrosion.

Cable inspections should be done at the beginning of operation and directly after the auger has been towed or transported.

Use a piece of cloth or rag to slide across the cables to locate broken or frayed wires. Replace cables as needed.

Lubricating

To prevent damage by corrosion, the cables should be kept well lubricated.

Cleaning

Periodic cleaning of cables by using a stiff brush and kerosene or with compressed air or live steam and re-lubricating will help to lengthen cable life and reduce abrasion and wear on sheaves and drums.

Lower And Upper Bridging Cables

! WARNING



AVOID INJURY OR DEATH


Before servicing bridging cables:

- Always park on a flat level surface.
- Fully lower the main auger into the transport position.
- Disconnect the PTO driveline.
- Support the main auger tube with an approved lifting device.
- Chock tires.

! IMPORTANT

Completely unload auger before adjusting bridging cables.

Figure 386

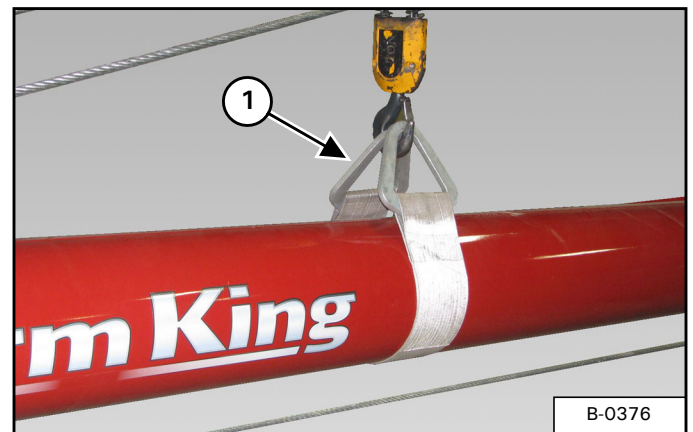


Install a strap (Item 1) [Figure 386] around the #3 tube.

Connect the strap to an approved lifting device.

Raise the lifting device, until tight, to support the auger tube(s).

Figure 387

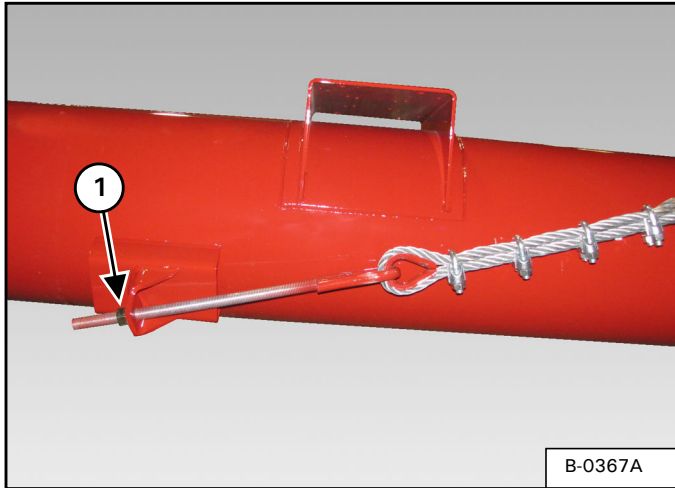

Loosen all cable clamps along the cable being tightened.

Tighten the nut (Item 1) [Figure 387] of the lower / upper bridging cable on tube #1.

Tighten both left and right (lower & upper) cables evenly.

Tighten the upper bridging cable until the discharge end of the tube bows up slightly.

Tighten the lower bridging cable to hold the tube in the slightly raised position.

After tightening the lower and upper cables, check the auger tube is straight. No bend right or left.

To remove the side to side bend tighten side bridging cables. (See "Side Bridging Cables" on page 173.)


NOTE: If the nut is fully tightened and bottoms out against the eye of the adjustment bolt, the cable will need to be loosened and additional adjustments will be made on the opposite end of the cable.

If the nut bottoms out against the eye of the adjustment bolt, loosen the nut (Item 1) [Figure 387].

NOTE: Do not remove the nut from the adjustment bolt.

After adjusting the cable(s), tighten all cable clamps along the cable(s).

Figure 388

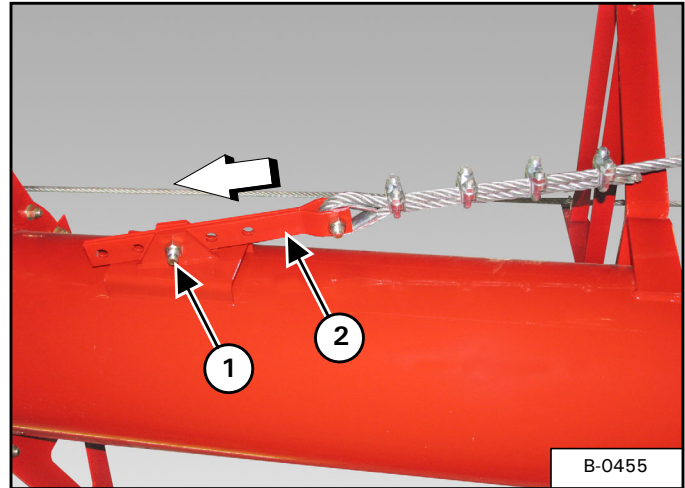

Remove bolt (Item 1) [Figure 388] and lock nut (from mounting bracket (angled up) on the #5 tube), move the yoke (Item 2) back, one hole. Re-install the bolt and lock nut. Tighten until the yoke is securely fastened to the tube mount.

Repeat for adjusting remaining lower and upper bridging cables.


Side Bridging Cables



Before servicing bridging cables:

- Always park on a flat level surface.
- Fully lower the main auger into the transport position.
- Disconnect the PTO driveline.
- Support the main auger tube with an approved lifting device.
- Chock tires.

Figure 389

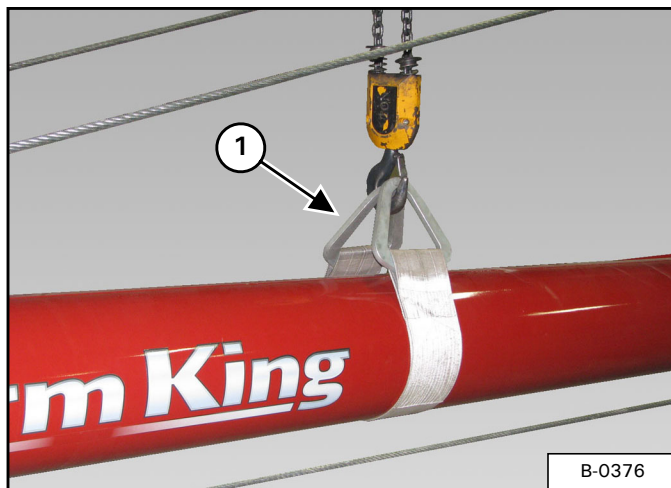

Install a strap (Item 1) [Figure 389] around the #3 tube.


Connect the strap to an approved lifting device.

Raise the lifting device, until tight, to support the auger tube(s).

Loosen all cable clamps on the cable being tightened.

NOTE: Do not remove nuts from cable clamps, leave loose to allow the cable to feed through when tightening.

Figure 390

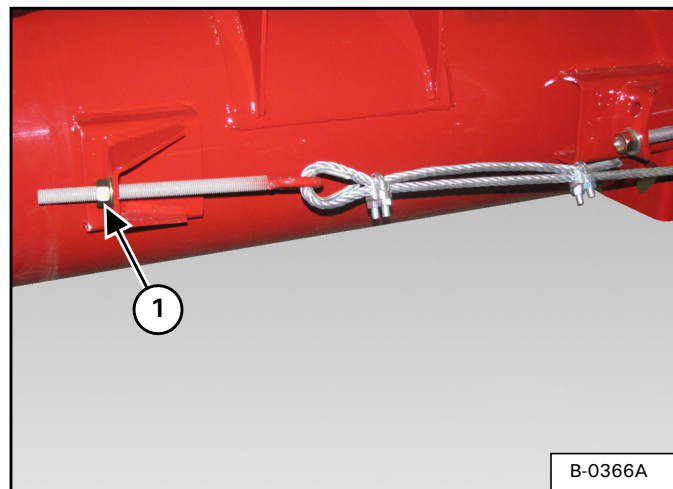

Loosen all cable clamps along the cable being tightened.

Tighten the nut (Item 1) [Figure 390] of the left / right bridging cable on tube #1.

Tighten both left and right side bridging cables evenly.

Sight down the length of the auger tube(s), if the tube bends left or right, loosen the opposite adjustment bolt slightly, then tighten the opposite nut until the tube is straight. Snug opposite adjustment nut securely against the mount.


NOTE: If the nut is fully tightened and bottoms out against the eye of the adjustment bolt, the cable will need to be loosened and additional adjustments will be made on the opposite end of the cable.

If the nut bottoms out against the eye of the adjustment bolt, loosen the nut (Item 1) [Figure 390].

NOTE: Do not remove the nut from the adjustment bolt.

After adjusting the cable(s), tighten all cable clamps along the cable(s).

Figure 391

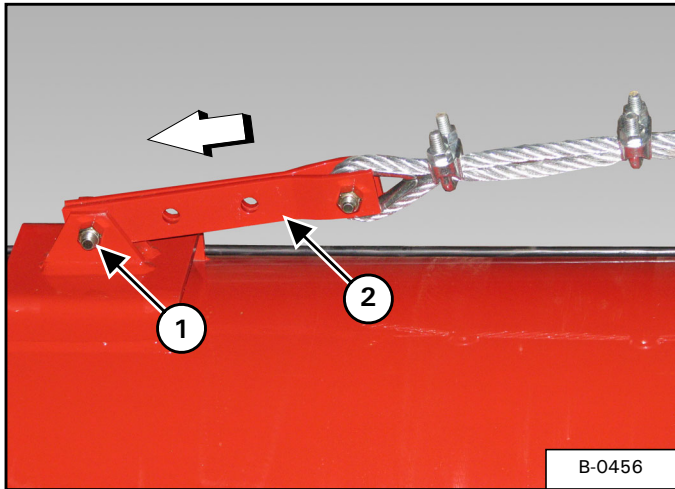

Remove bolt (Item 1) and lock nut (from mounting bracket (parallel with tube) on the #5 tube), move the yoke (Item 2) [Figure 391] back, one hole. Re-install the bolt and lock nut. Tighten until the yoke is securely fastened to the tube mount.

Repeat for adjusting remaining bridging cables.

16124 BRIDGING

Regularly check the truss beams, truss support brackets and all cross braces for cracks or damage. Repair or replace if damaged.

Check and tighten any loose hardware.

SAFETY SIGN (DECAL) INSTALLATION

Procedure

! IMPORTANT

When replacing safety signs (decals), the temperature must be above 10° C (50° F).

- Remove all portions of the damaged safety sign (decal).
- Thoroughly clean the area with glass cleaner. Removing all adhesive residue.
- Allow the area to dry completely before installing the new safety sign (decal).
- Position the safety sign (decal) in the correct location. Remove a small portion of the backing paper on the safety sign (decal).
- Press on the safety sign (decal) where the backing paper has been removed.
- Slowly remove the remaining backing paper, pressing on the safety sign (decal) as the backing paper is removed.
- Using the backing paper, pressing firmly, move the backing paper over the entire safety sign (decal) area.

NOTE: Small air pockets can be pierced with a pin and smoothed out using the piece of the backing paper.

STORAGE AND RETURN TO SERVICE

Storage

Sometimes it may be necessary to store your Farm King Backsaver Auger for an extended period of time. Below is a list of items to perform before storage.



DO NOT permit children to play on or around the stored machine.

- Thoroughly clean the equipment.
- Lubricate the equipment.
- Inspect the hitch and all welds on the equipment for wear and damage.
- Check for loose hardware, missing guards, or damaged parts.
- Check for damaged or missing safety signs (decals). Replace if necessary.
- Replace worn or damaged parts.
- Touch up all paint nicks and scratches to prevent rusting.
- Check the tightness of all cable clamps to avoid slipping.
- Inspect the cables for wear or corrosion. Replace if worn.
- Lubricate the cables.
- If stored outside, lower the auger to its lowest position and block the wheels so the auger will not move.
- Place the equipment flat on the ground.

Return To Service

After the Farm King Backsaver Auger has been in storage, it is necessary to follow a list of items to return the equipment to service.

- Be sure all shields and guards are in place.
- Lubricate the equipment.
- Connect to a tractor and operate equipment, verify all functions operate correctly.
- Check for leaks. Repair as needed.

Farm King



PARTS IDENTIFICATION

GENERAL PARTS INFORMATION	181
16" BACKSAVER AUGER	181
Component Location	181
1684 & 16104 INPUT BOX ASSEMBLY	182
1684 & 16104 INPUT BOX	184
16124 INPUT BOX ASSEMBLY	186
1684 UNDERCARRIAGE	192
16104 UNDERCARRIAGE	194
16124 AXLE	196
16124 UNDERCARRIAGE	198
1684 BRIDGING ASSEMBLY	200
16104 BRIDGING ASSEMBLY	202
16124 BRIDGING ASSEMBLY	204
1684 LIFT ARM ASSEMBLY	208
16104 LOWER LIFT ARM ASSEMBLY	210
16124 LOWER LIFT ARM ASSEMBLY	212
16124 UPPER LIFT ARM ASSEMBLY	214
1684 & 16104 INPUT TUBE AND HOPPER ASSEMBLY	216
1684 & 16104 INTAKE AUGER	218
1684 & 16104 INPUT TUBE ASSEMBLY	220
16124 INTAKE TUBE AND HOPPER ASSEMBLY	222
16124 INTAKE AUGER	224
16124 HIGH CAPACITY INPUT TUBE ASSEMBLY	226

1684 MAIN TUBE ASSEMBLY	228
16104 MAIN TUBE ASSEMBLY	230
16124 MAIN TUBE ASSEMBLY	232
1684 TUBE #4, 16104 TUBE #5 ASSEMBLY	234
16104 TUBE #4 ASSEMBLY	235
1684 & 16104 TUBE #3 ASSEMBLY	235
1684 TUBE #2 ASSEMBLY	236
16104 TUBE #2 ASSEMBLY	236
1684 TUBE #1 ASSEMBLY	237
16104 TUBE #1 ASSEMBLY	237
16124 TUBE #4 ASSEMBLY	238
16124 TUBE #3 ASSEMBLY	239
16124 TUBE #2 ASSEMBLY	239
16124 TUBE #1 ASSEMBLY	240
1684 & 16104 BOOM LIFT ASSEMBLY	241
16124 BOOM LIFT ASSEMBLY	242
1684 & 16104 MULTI-FLIGHTING HOPPER ASSEMBLY	243
16124 HOPPER HIGH CAPACITY ASSEMBLY	246
HOPPER DRIVE WHEEL	250
16124 HYDRAULIC CYLINDERS	251
16124 LIGHT KIT ASSEMBLY	252
16124 LIGHT KIT	254
16124 LOWER YOKE	256

16124 UPPER YOKE	257
16124 ELECTRIC MOVER/WINCH KIT	258
16124 HIGH CAPACITY HYDRAULIC KIT	260
HYDRAULIC KIT ASSEMBLY	264
M2000 HELICAL GEARBOX 910502	268
4168 LOWER GEARBOX 916945	269
4168 UPPER GEARBOX 905881	270

Farm King




GENERAL PARTS INFORMATION

The parts identification section list descriptions, part numbers and quantities for the 16" Backsaver Augers. Contact your Farm King dealer for additional Backsaver Auger parts information.

16" BACKSAVER AUGER


Component Location

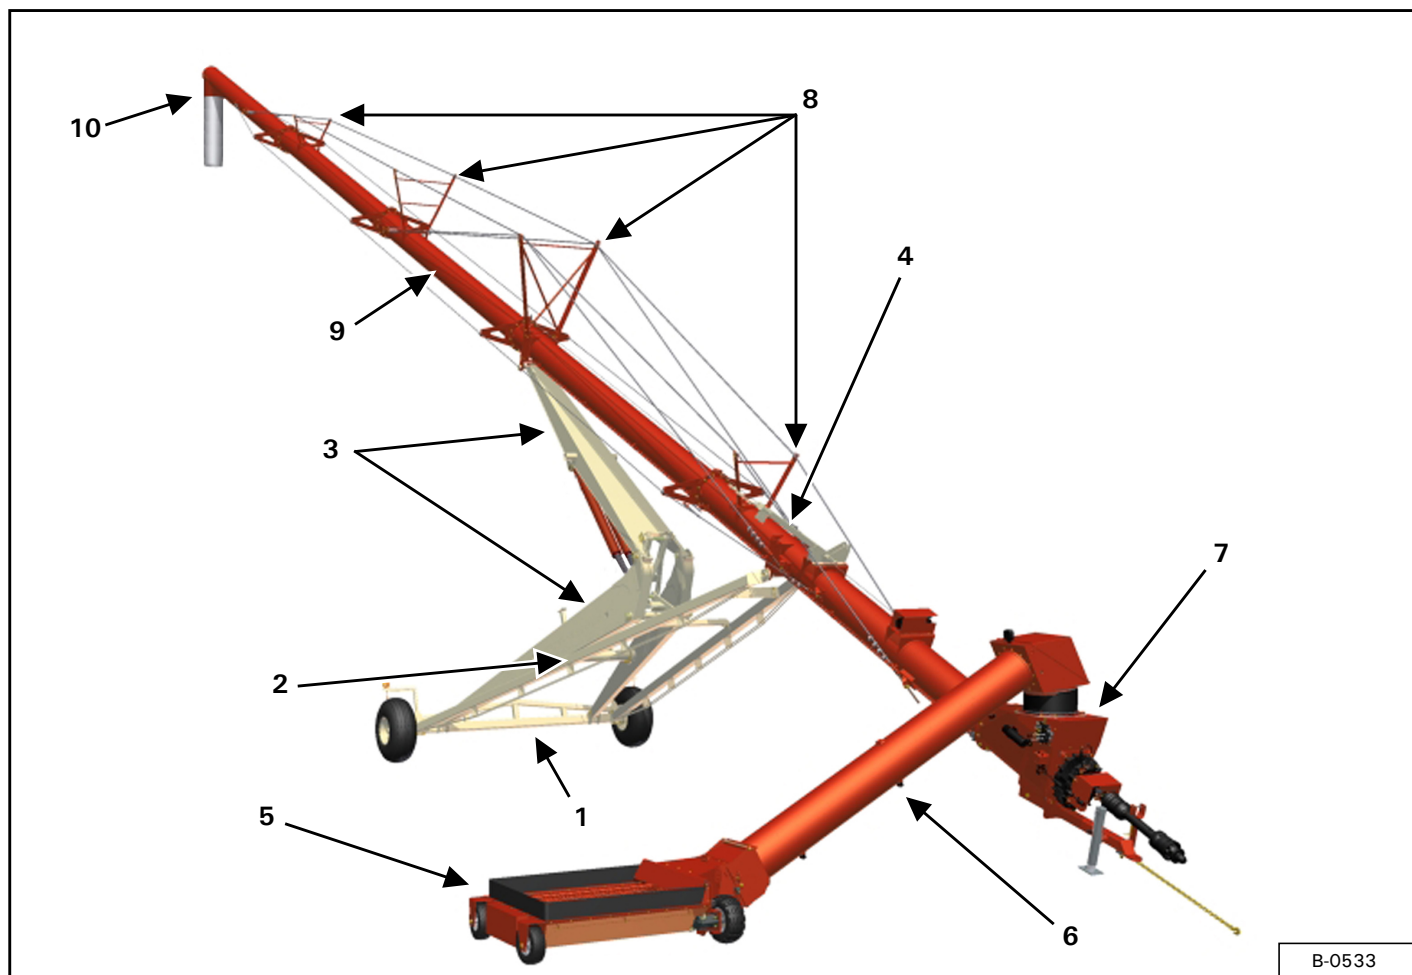

B-0533


ITEM	DESCRIPTION
1	AXLE
2	UNDERCARRIAGE
3	LIFT ARM
4	BOOM
5	HOPPER
6	INTAKE AUGER
7	INPUT BOX
8	BRIDGING
9	MAIN AUGER
10	DISCHARGE SPOUT

1684 & 16104 INPUT BOX ASSEMBLY

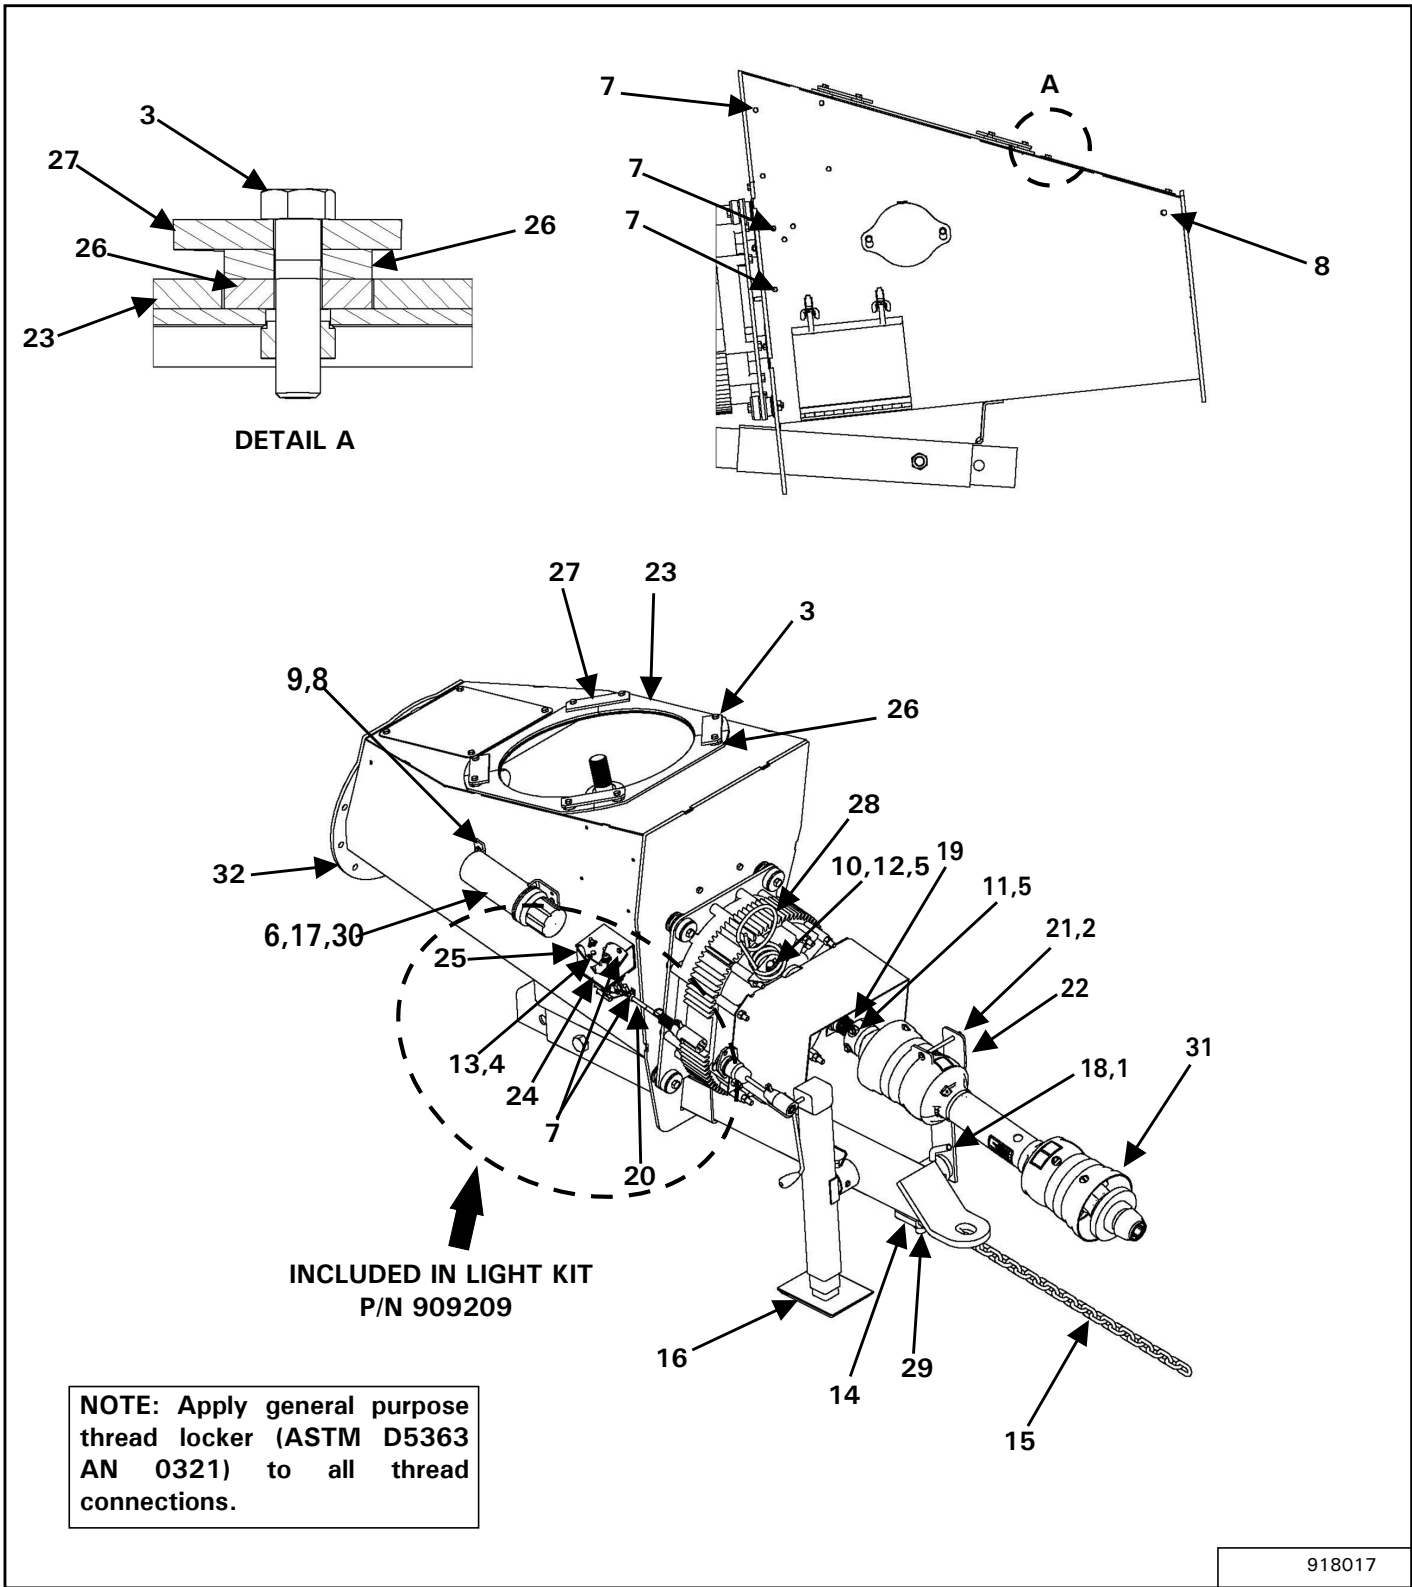


ITEM	PART NUMBER	DESCRIPTION	QTY
1	12779	HAIR PIN CLIP, #9 (PL)	1
2	12780	HAIR PIN CLIP, #7	1
3	811792	BOLT, HEX GR.5 3/8" x 1-1/2" (PL)	8
4	812025	BOLT, HEX 0.250 NC x 4.00 GR5 PL	1
5	812364	LOCK NUT 1/2" (PL)	3
6	814433	WARRANTY REGISTRATION MANUAL	1
7	81525	BOLT, HEX 1/4" x 3/4" (PL)	12
8	81549	BOLT, HEX 5/16"x 3/4" (PL)	3
9	81569	LOCK WASHER 5/16" PL	2
10	81620	BOLT, HEX 1/2" x 1-1/4" PL	1
11	81626	BOLT, HEX 1/2" x 2-3/4" (PL)	2
12	84048	FLAT WASHER, SAE 1/2" (PL)	1
13	84498	LOCK NUT 1/4" (PL)	1
14	904580	SAFETY CHAIN PLATE	1
15	906284	HOOK & SAFETY CHAIN ASSEMBLY	1
16	909195	JACK	1
17	909277	MANUAL HOLDER 3-1/2" x 12"	1
18	910288	LOCKING PIN	1
19	910503	SPLINED STUB SHAFT, M2000	1
20	912831	CABLE CLIP 5/8"	1
21	913029	CLEVIS PIN, WELDMENT	1
22	914566	PTO HOLDER, WELDT	1
23	915902	SPACER-INTAKE	4
24	916910	BRKT-ELEC SWITCHES	1
25	916913	COVER-ELEC SWITCHES	1
26	960494	WASHER, 1/4" W x 13 32" ID x 1-1/4" OD (PL)	16
27	960653	RING CLAMP PL	4
28	966314	HYDRAULIC HOSE HOLDER	1
29	967148	LOCK NUT 1" (PL)	1
30	967458	ADMA PTO SAFETY MANUAL	1
31	F1813	PTO-1-3/8 x 21 CV - 1- 3/4 x 20 CV	1
32	F1962	ASSY-BS16 INPUT BOX	1
-	INCLUDED IN LIGHT KIT P/N #909209 (See "1684, 16104 ELECTRICAL DIAGRAM" on page 273.)		

1684 & 16104 INPUT BOX

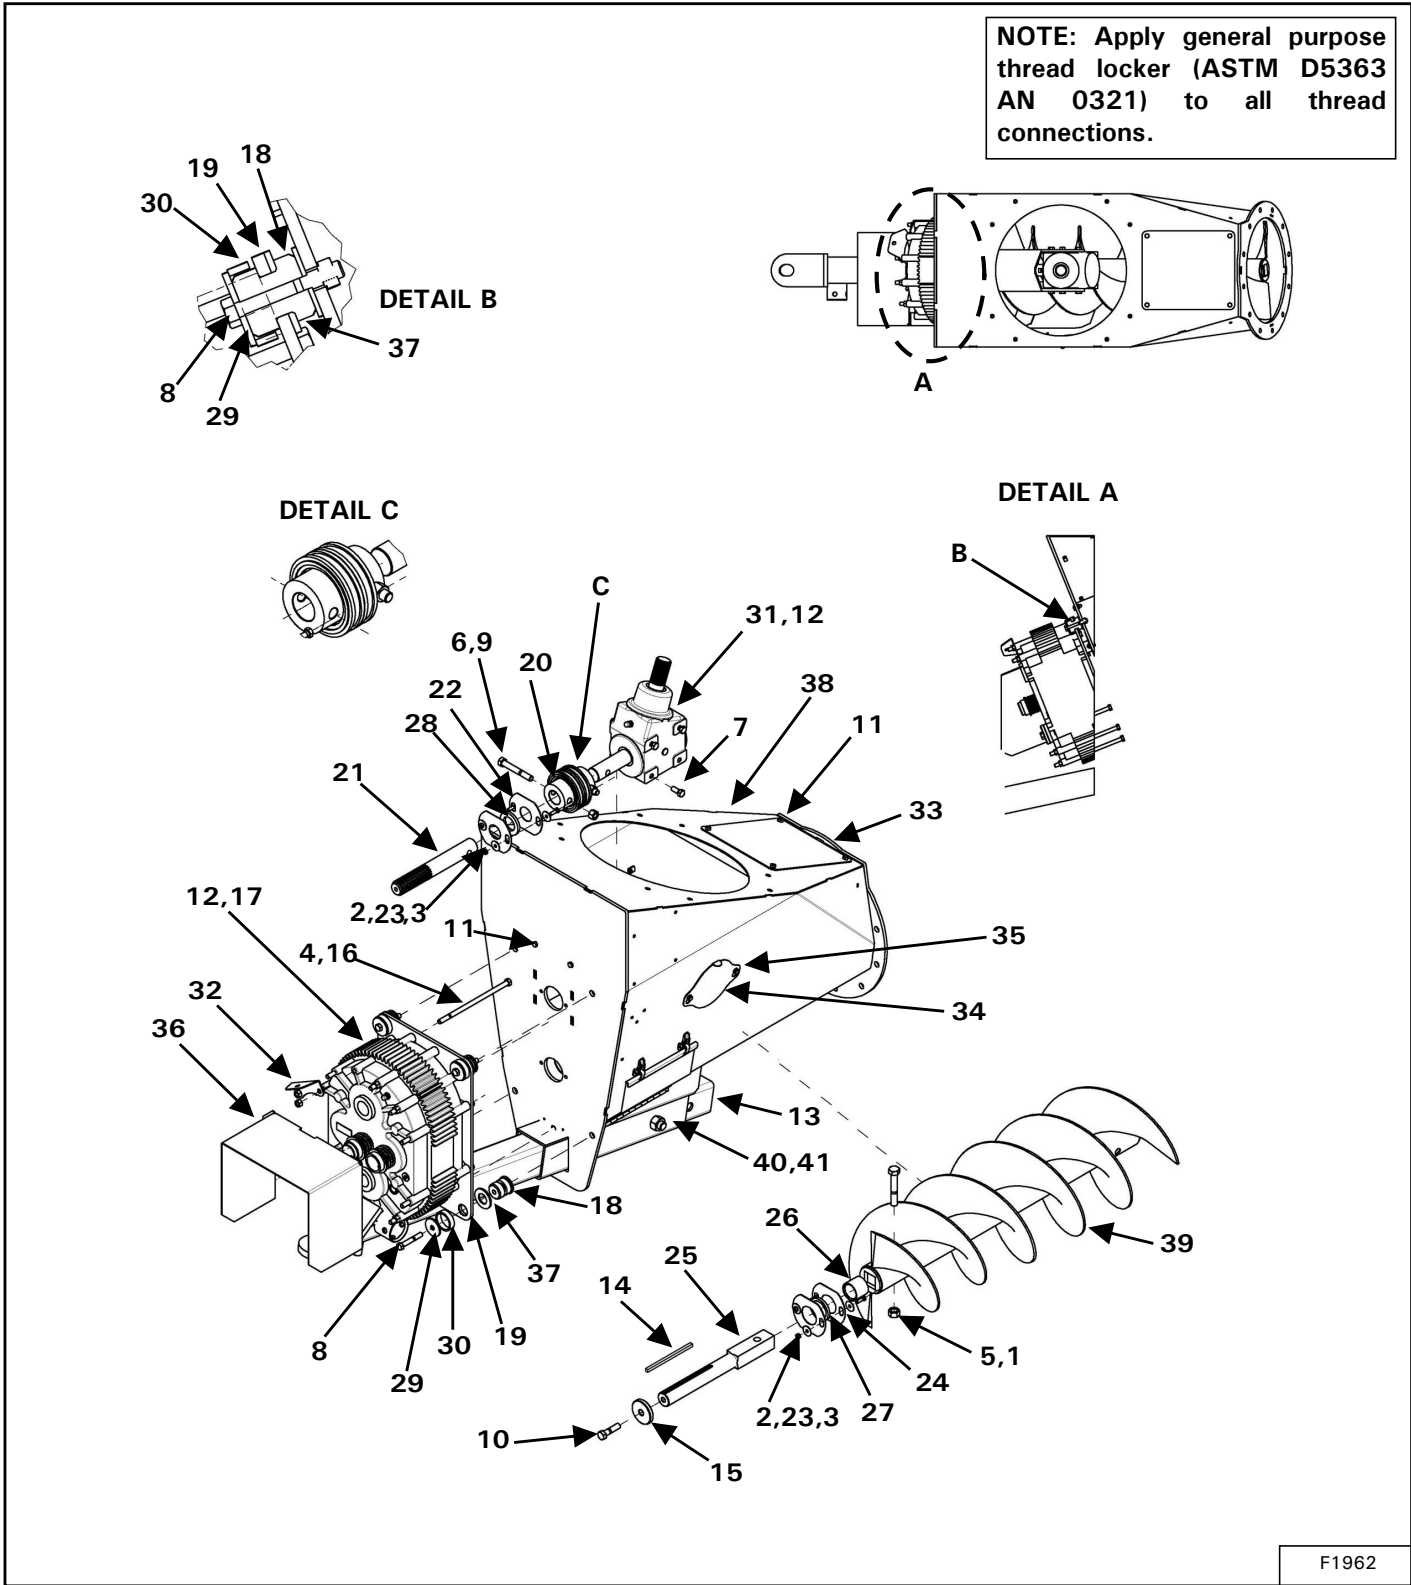


ITEM	PART NUMBER	DESCRIPTION	QTY
1	811790	BOLT, 3/4" x 4-1/2" HEX GR5 (PL)	1
2	812026	BOLT, 5/16" x 1" HEX (PL)	4
3	812362	LOCK NUT, 5/16" (PL)	4
4	812364	LOCK NUT, 1/2" (PL)	12
5	812365	LOCK NUT, 3/4" (PL)	1
6	812482	LOCK NUT, 5/8" (PL)	2
7	81620	BOLT, 1/2" x 1-1/4" HEX (PL)	6
8	81628	BOLT, 1/2" x 3-1/4" HEX (PL)	4
9	81672	BOLT, 5/8" x 4-1/2" HEX (PL)	2
10	84335	BOLT, 5/8" x 2-1/2" HEX (PL)	1
11	86170	BOLT, 3/8" x 1" HEX GR5 (PL)	6
12	904578	GEAR OIL, SAE 75W-90 SYNTHETIC	3.95 L
13	905887	HITCH WELDMENT	1
14	906061	INP BOX DR KEY 3/8" x 3/8" x 7 3/8"	1
15	906073	WASHER - INPUT BOX SHFT 21/32" ID x 3" OD x 1/2"	1
16	910458	HEX BOLT (PL) 1/2" x 11"	12
17	910502	GEARBOX-M2000 HELICAL	1
18	914374	ISOLATOR-TWO PIECE, 240 LB MAX	4
19	914375	PLATE-M2000 GEARBOX MOUNT	1
20	914444	ASSY-COUPLING H6018	1
21	914476	SHAFT-1.75 DIA 20 SPLINE	1
22	914523L	PLATE-INPUT BOX SEAL	2
23	914526	WASHER FLAT 1.25x0.313x0.05 PL	8
24	914543L	PLATE-INPUT BOX SEAL	2
25	916647	SHAFT-INPUT DRIVE	1
26	916871	SPACER-INPUT BOX SHAFT	1
27	916880L	PLATE-INPUT SHAFT SEAL	1
28	916881L	PLATE-INPUT SHAFT SEAL	1
29	916914L	WASHER-ISOLATOR TOP	4
30	916922	TUBE-ISOLATOR LIMIT	4
31	916945	4168 GEARBOX-LOWER	1
32	916956	BRKT-HYD HOSE HOLDER	1
33	916995L	COVER-INPUT BOX	1
34	917446	COVER-GEARBOX ACCESS	1
35	917483	BOLT FL 0.313NC x 1.00 GR5 PL	2
36	917753	GUARD-PTO	1
37	917754	PLATE-ISOLATOR SPACER	4
38	919976	WELDT-INPUT BOX BS16	1
39	929863	WELDT-INPUT FLIGHTING (RH)	1
40	967148	LOCK NUT 1" (PL)	1
41	967229	HEX BOLT 11" x 6" (PL)	1

16124 INPUT BOX ASSEMBLY

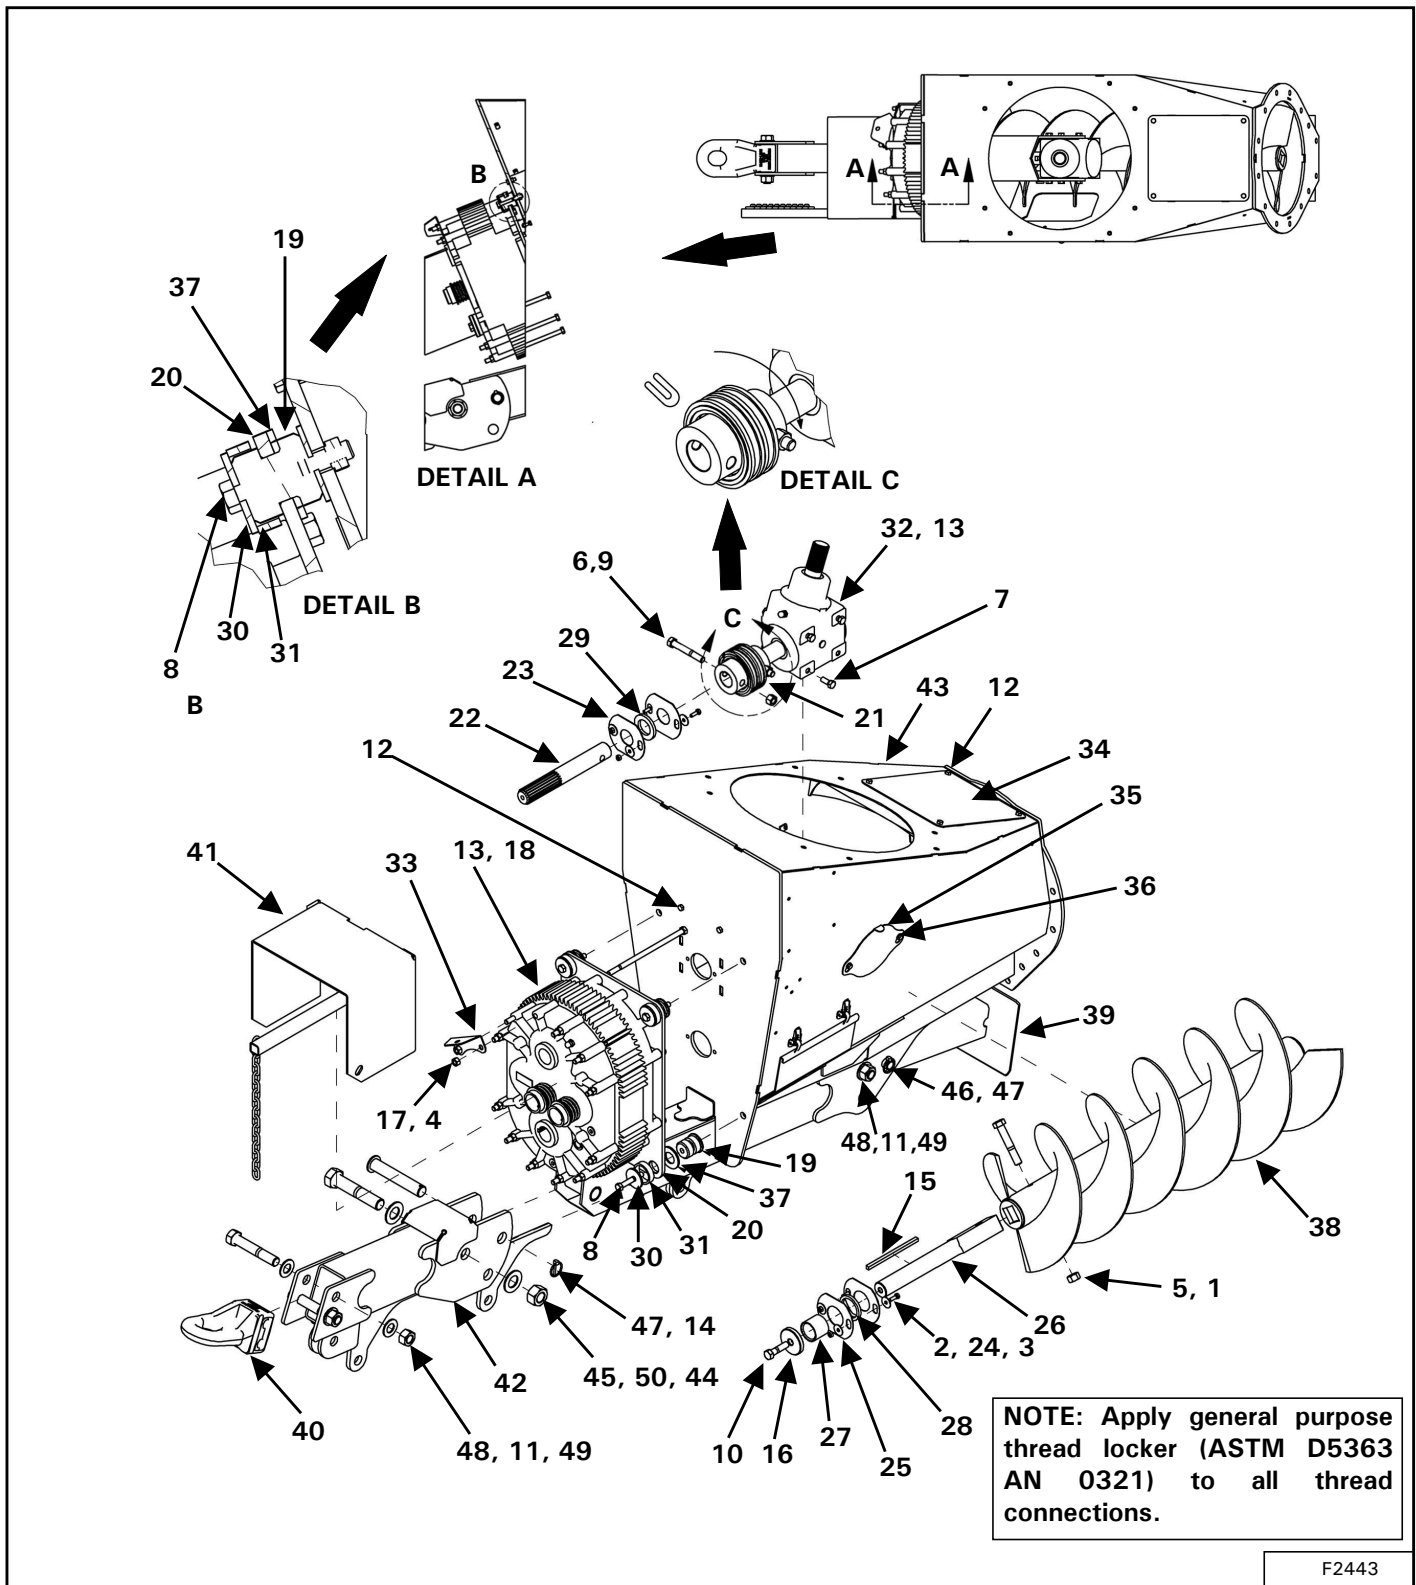


ITEM	PART NUMBER	DESCRIPTION	QTY
1	811790	3/4" x 4-1/2" HEX HEAD BOLT GR5 (PL)	1
2	812026	5/16" x 1" HEX BOLT (PL)	4
3	812362	5/16" LOCK NUT (PL)	4
4	812364	1/2" LOCK NUT (PL)	12
5	812365	3/4" LOCK NUT (PL)	1
6	812482	5/8" LOCK NUT (PL)	2
7	81620	1/2" x 1 1/4" HEX BOLT (PL)	6
8	81628	1/2" x 3 1/4" HEX BOLT (PL)	4
9	81672	5/8" x 4 1/4" HEX BOLT (PL)	2
10	84335	5/8" x 2 1/2" HEX BOLT (PL)	1
11	84522	1" ID SAE FLAT WASHER (PL)	6
12	86170	3/8" x 1" HEX BOLT GR.5 (PL)	6
13	904578	GEAR OIL - SAE 75W-90 SYNTHETIC	3.95 L
14	905779	AXLE PIN WELDT 1.250" DIA	1
15	906061	INP BOX DR KEY 3/8" x 3/8" x 7 3/8"	1
16	906073	WASHER - INPUT BOX SHIFT 21/32" ID x 3" OD x 1/2"	1
17	910458	1/2" x 11" HEX BOLT (PL)	12
18	910502	GEARBOX - M2000 HELICAL	1
19	914374	ISOLATOR - TWO PIECE, 240 LB MAX	4
20	914375	PLATE - M2000 GEARBOX MOUNT	1
21	914444	ASSY - COUPLING H6018	1
22	914476	SHAFT - 1.75 DIA 20 SPLINE	1
23	914523L	PLATE - INPUT BOX SEAL	2
24	914526	WASHER FLAT 1.25 x 0.313 x 0.05 (PL)	8
25	914543L	PLATE - INPUT BOX SEAL	2
26	916647	SHAFT - INPUT DRIVE	1
27	916871	SPACER, INPUT BOX SHAFT	1
28	916880L	PLATE, INPUT SHAFT SEAL	1
29	916881L	PLATE, INPUT SHAFT SEAL	1
30	916914L	WASHER - ISOLATOR TOP	4
31	916922	TUBE - ISOLATOR LIMIT	4
32	916945	4168 GEARBOX - LOWER	1
33	916956	BRACKET - HYD HOSE HOLDER	1

16124 INPUT BOX ASSEMBLY (CONT'D)

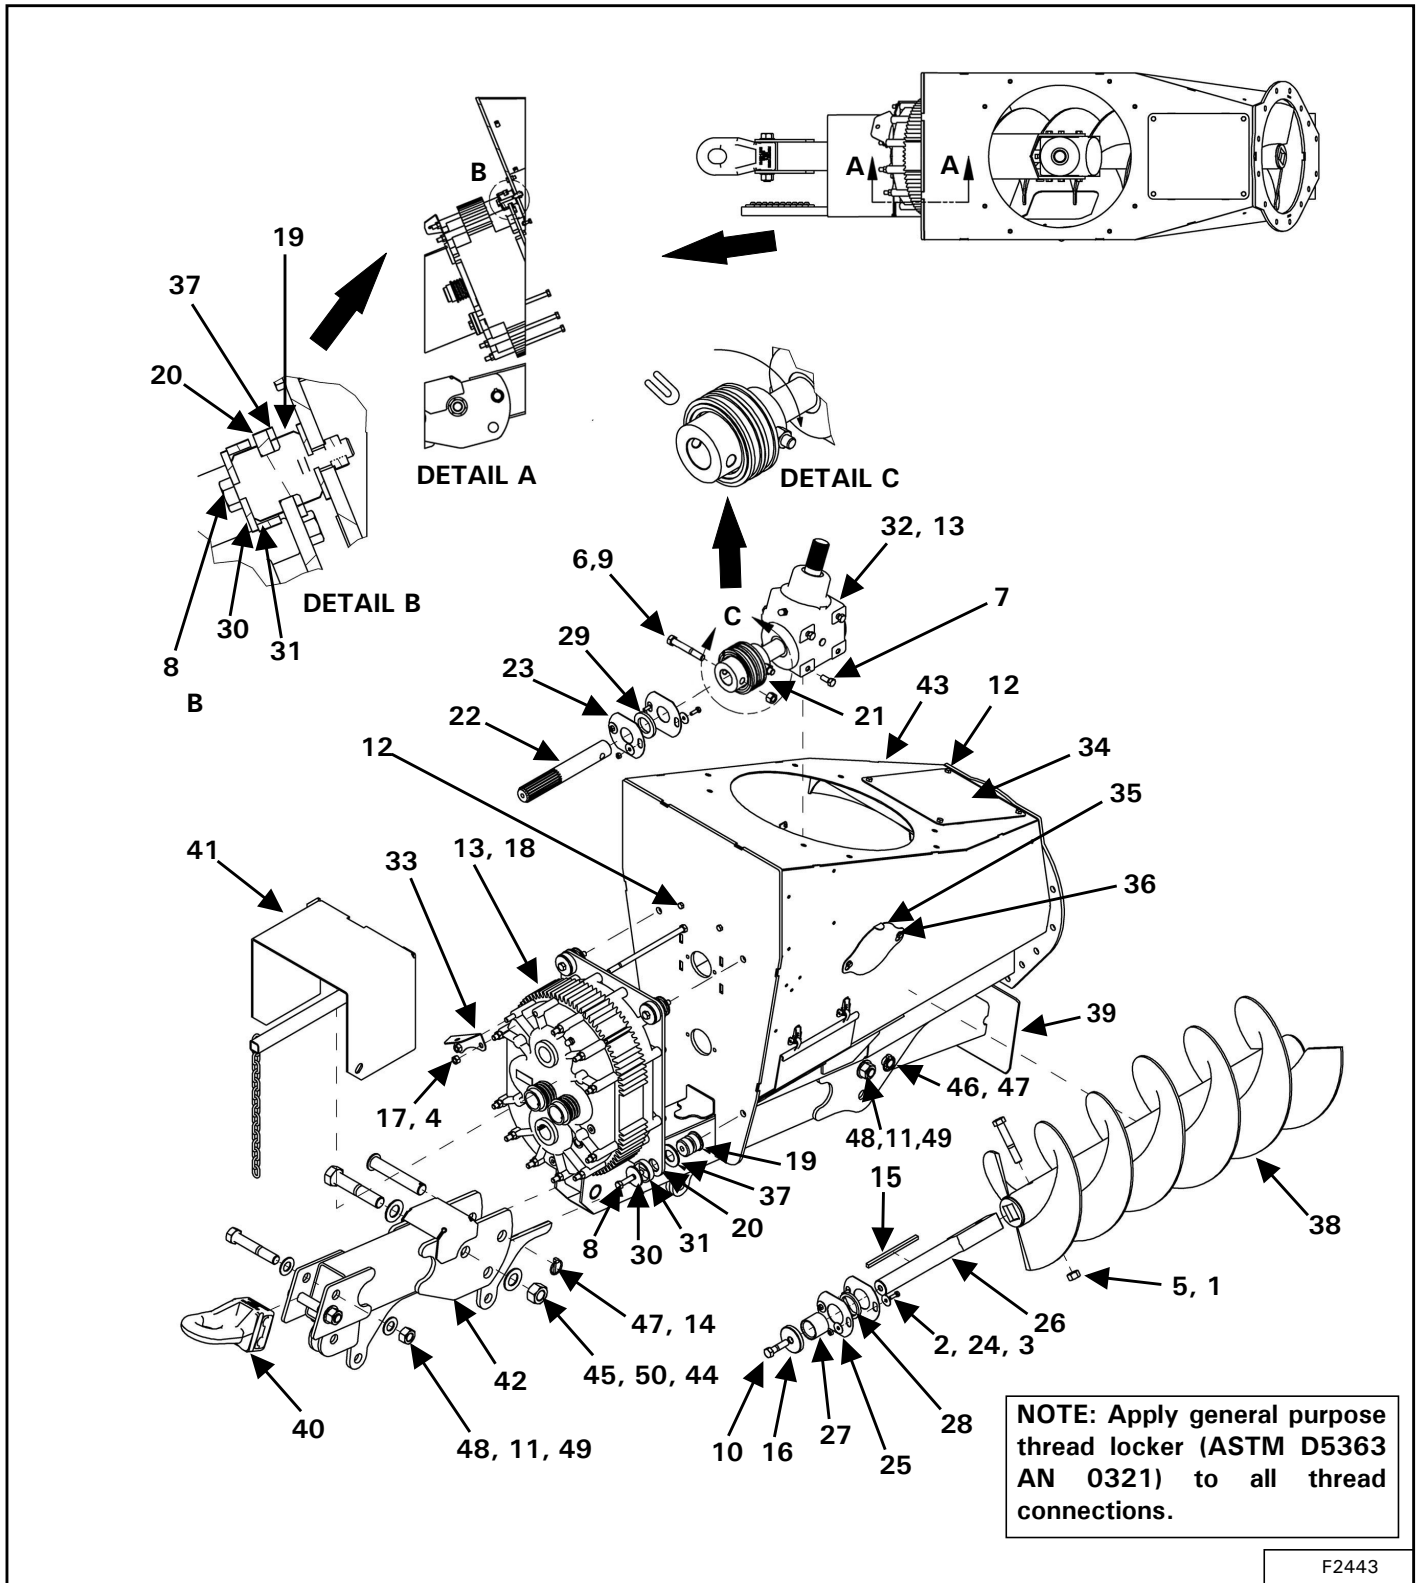

ITEM	PART NUMBER	DESCRIPTION	QTY
34	916995L	COVER - INPUT BOX	1
35	917446	COVER - GEARBOX ACCESS	1
36	917443	BOLT FL 0.313 NC x 1.00 GR5 (PL)	2
37	917754	PLATE - ISOLATOR SPACER	4
38	930525	WELDT - INPUT FLIGHTING (LH)	1
39	931671	WELDT - AUGER STAND	1
40	931676	CAT. 3 PINTLE HITCH BASE	1
41	931718	WELDT - PTO HOLDER	1
42	933040	WELDT - HITCH TUBE	1
43	933041	WELDT - INPUT BOX BS16	1
44	933061	1.25" x 6.50" HEX BOLT (PL)	1
45	933062	1.25" LOCK NUT (PL)	1
46	960631	LIFT ARM CLEVIS PIN WELDT 1.000" DIA	1
47	966729	3/16" LINCH PIN (PL)	2
48	967148	1" LOCK NUT (PL)	3
49	967229	1" x 6" HEX BOLT (PL)	3
50	9812487	1-1/4" x 10GA NARROW RIM WASHER (PL)	2

16124 INPUT BOX ASSEMBLY (CONT'D)

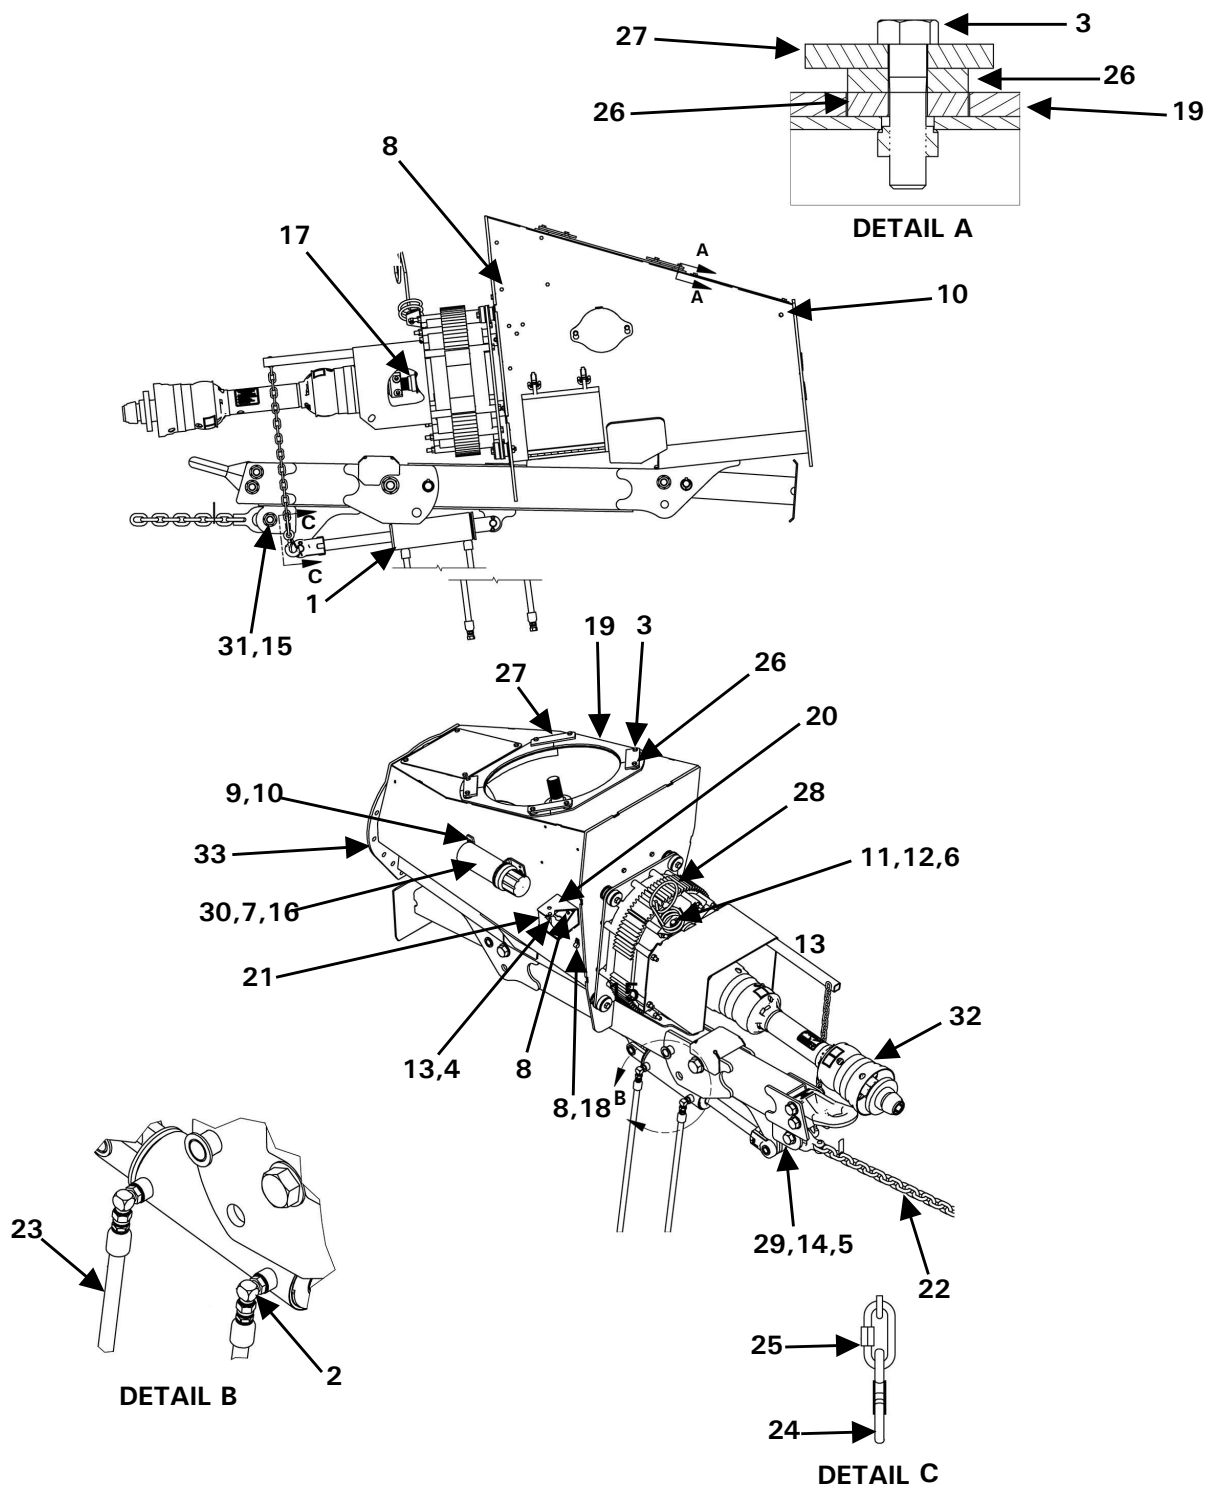


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

933063

ITEM	PART NUMBER	DESCRIPTION	QTY
1	24803M	CYLINDER 3.5 DIA x 8.0 ORB PORT	1
2	811414	ELBOW 90 3/4 MORB X 3/4 MJIC	2
3	811792	3/8" X 1 1/2" HEX BOLT GR.5 (PL)	8
4	812025	BOLT HEX 0.250NC x 4.00 GR5 (PL)	1
5	812303	1" x 3" HEX BOLT (PL)	1
6	812364	1/2" LOCK NUT (PL)	1
7	814433	WARRANTY REGISTRATION MANUAL	1
8	81525	1/4" x 3/4" HEX BOLT (PL)	12
9	81546	5/16" FLAT WASHER (PL)	2
10	81549	5/16" x 3/4" HEX BOLT (PL)	3
11	81620	1/2" x 1-1/4" HEX BOLT PL	1
12	84048	1/2" SAE FLAT WASHER (PL)	1
13	84498	1/4" LOCK NUT (PL)	1
14	14 84522	1" ID SAE FLAT WASHER (PL)	2
15	900705	PIN WELDMENT 1.000" DIA	2
16	909277	MANUAL HOLDER 3-1/2" x 12"	1
17	910503	M2000 SPLINED STUB SHAFT	1
18	912831	5/8" CABLE CLIP	1
19	915902	SPACER-INTAKE	4
20	916910	BRKT-ELEC SWITCHES	1
21	916913	COVER-ELEC SWITCHES	1
22	930420	HOOK & SAFETY CHAIN ASSEMBLY	1
23	931721	HOSE-8 x -8 MPT x -8 FJIC	2
24	960041	HOOK WITH LATCH	1
25	960167	QUICK LINK (PL)	1
26	960494	1/4"W x 13/32" ID x 1-1/4" OD WASHER (PL)	16
27	960653	RING CLAMP PL	4
28	966314	HYDRAULIC HOSE HOLDER	1
29	967148	1" LOCK NUT (PL)	1
30	967458	ADMA PTO SAFETY MANUAL	1
31	9812434	1/4" x 1-1/2" COTTER PIN (PL)	2
32	F1813	PTO-1-3/8 x 21 CV - 1-3/4 x 20 CV	1
33	F2443	ASSY-BS16 INPUT BOX	1

1684 UNDERCARRIAGE

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

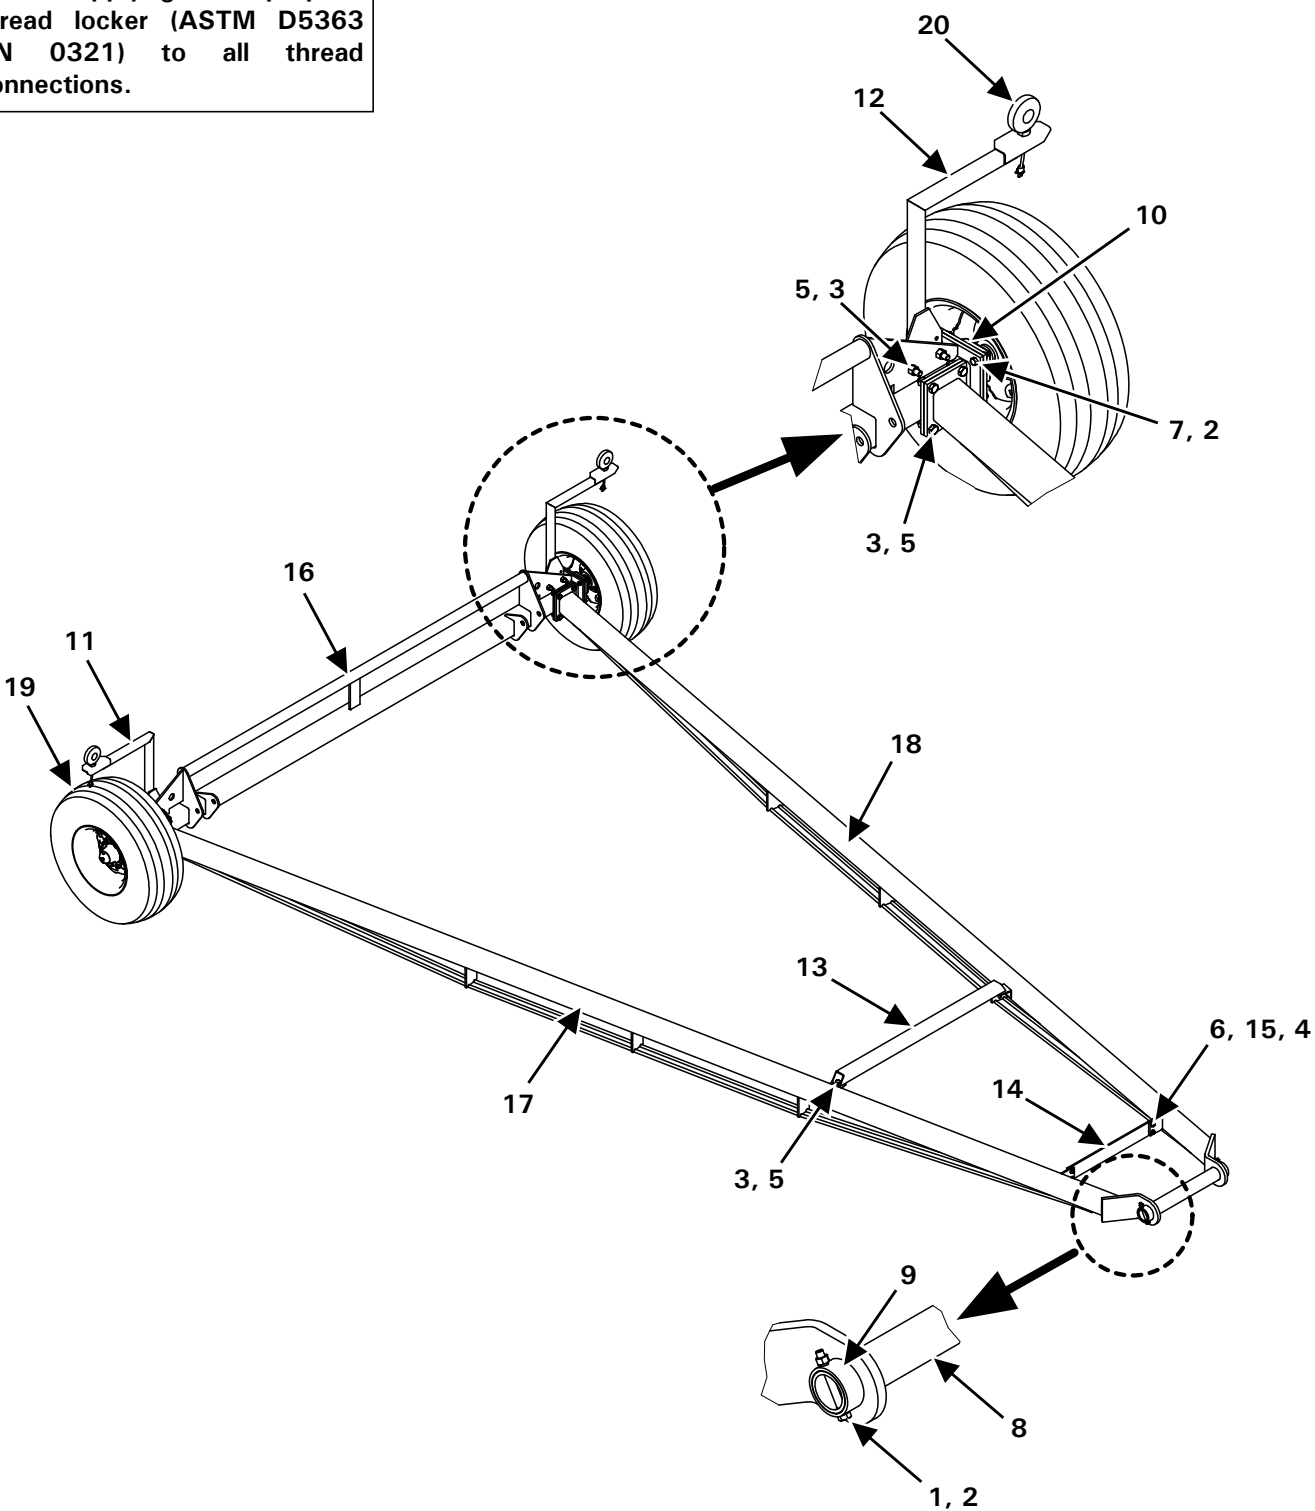


917051

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	BOLT, 1/2" x 4-1/2" HEX (PL)	2
2	812364	LOCK NUT, 1/2" (PL)	10
3	812482	LOCK NUT, 5/8" (PL)	14
4	81599	BOLT, 7/16" x 1-1/2" HEX (PL)	4
5	84299	BOLT, 5/8" x 2" HEX GR 5 (PL)	14
6	86273	LOCK NUT, 7/16" (PL)	4
7	87553	BOLT, 1/2" x 1-3/4" HEX UNC GR 5 (PL)	8
8	905735	UNDERCARRIAGE PIN	1
9	905736	UNDERCARRIAGE PIN SLEEVE, 3-1/6" ID x 3-1/2" OD x 1-1/2"	2
10	906573	STUB AXLE ASSEMBLY	2
11	909226	BLINKER MOUNT WELDMENT - RH	1
12	909227	BLINKER MOUNT WELDMENT - LH	1
13	912793	LIFT ARM REST TUBE	1
14	912794L	BRACE PLATE	1
15	964001	FLAT WASHER, 1" x 7/16" x 10 GA (PL)	4
16	F1460	AXLE TUBE WELDT (134 1/2" LG)	1
17	F1480	RIGHT UNDERCARRIAGE ARM	1
18	F1481	LEFT UNDERCARRIAGE ARM	1
19	F1808	IMPLEMENT TIRE & RIM MTD W / VALVE, 12.5L - 15FL (TL)	2
20	INCLUDED IN LIGHT KIT P/N #913051 (See "1684, 16104 ELECTRICAL DIAGRAM" on page 273.)		

16104 UNDERCARRIAGE

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

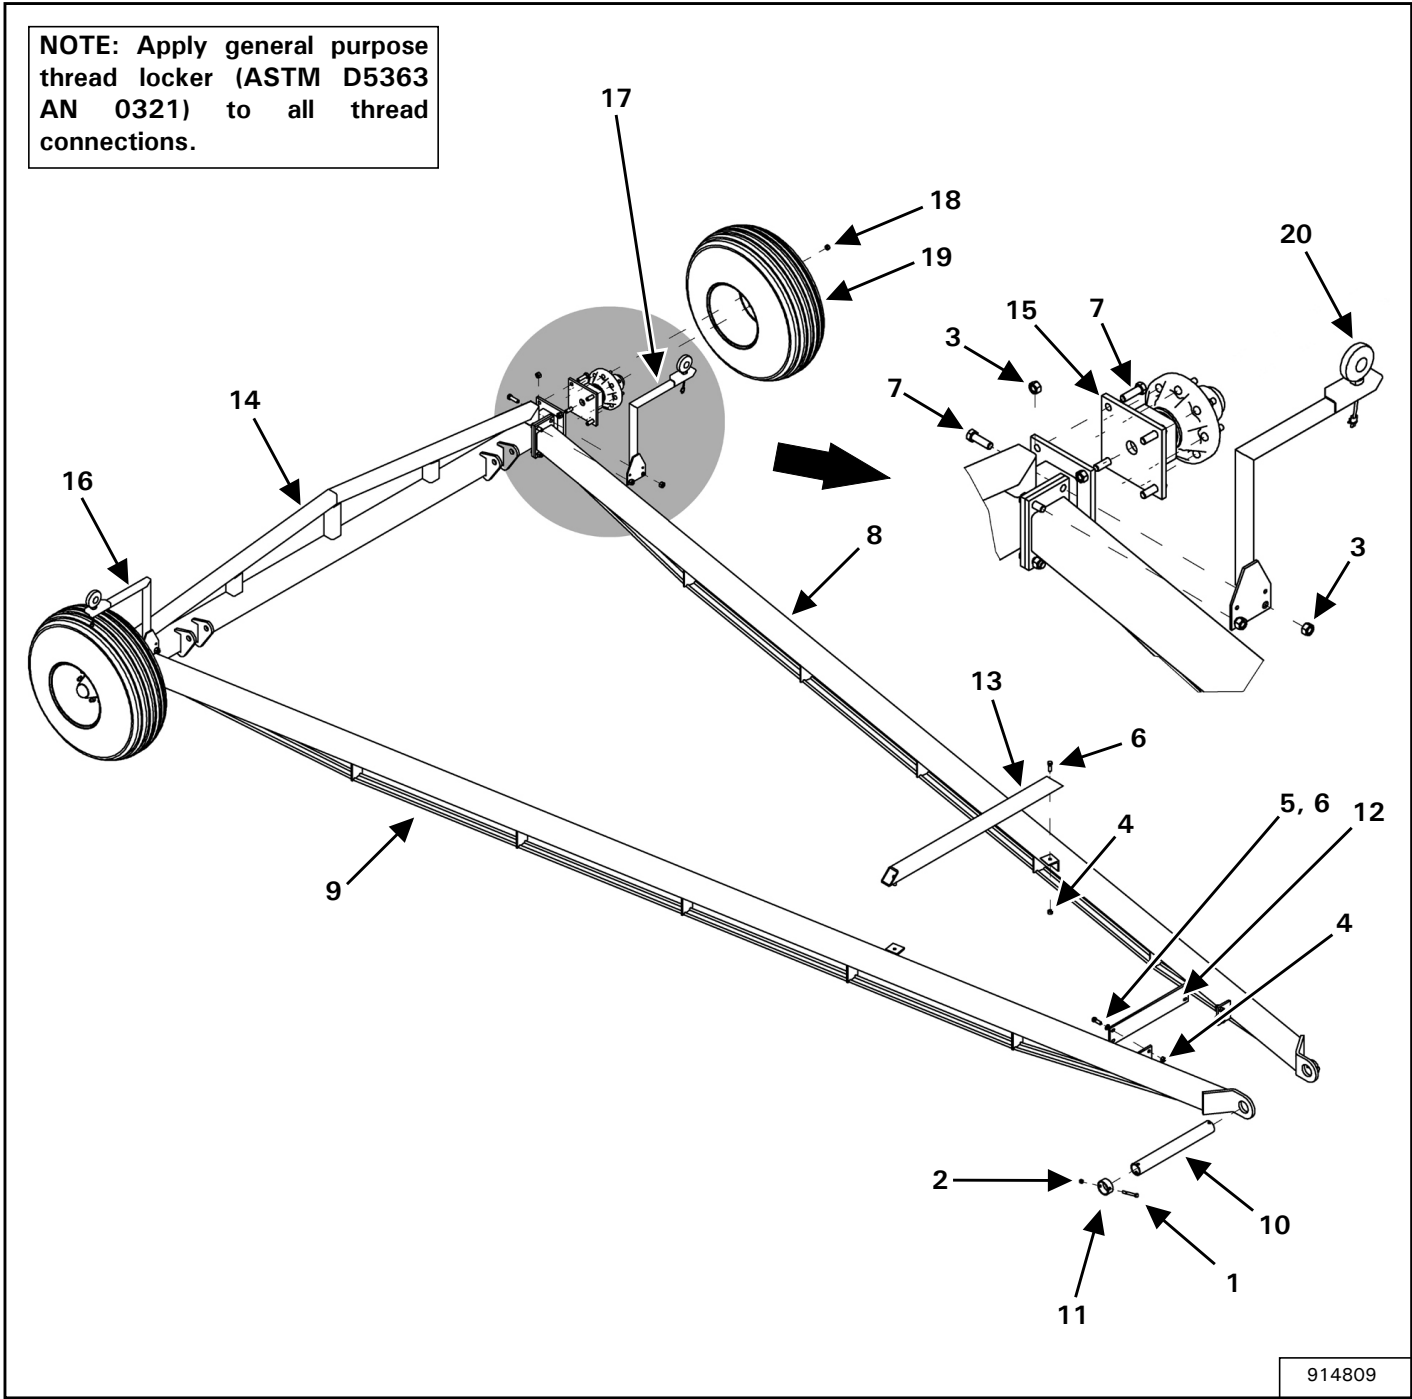


914809

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	BOLT, 1/2" x 4-1/2" HEX (PL)	2
2	812364	LOCK NUT, 1/2" (PL)	2
3	812365	LOCK NUT, 3/4" (PL)	16
4	812482	LOCK NUT, 5/8" (PL)	6
5	812639	FLAT WASHER, 5/8" SAE (PL)	4
6	84299	BOLT, 5/8" x 2" HEX GR5 (PL)	6
7	84346	BOLT, 3/4" x 2-1/2" HEX (PL)	16
8	905732	LEFT UNDERCARRIAGE ARM, WELDMENT	1
9	905733	RIGHT UNDERCARRIAGE ARM, WELDMENT	1
10	905735	UNDERCARRIAGE PIN	1
11	905736	UNDERCARRIAGE PIN SLEEVE, 3-1/6" ID x 3-1/2" OD x 1-1/2"	2
12	905737L	BRACE PLATE, 1/2" x 5" x 25-3/4"	1
13	905738	LIFT ARM REST, 1/4" W x 3" x 3" x 57-1/2"	1
14	905745	AXLE WELDMENT (16" BS)	1
15	909191	STUB SHAFT AND HUB ASSEMBLY, BS16104	2
16	909226	RH BLINKER MOUNT WELDMENT	1
17	909227	LH BLINKER MOUNT WELDMENT	1
18	909779	WHEEL NUT, 5/8" NF	16
19	F0679	WHEEL, TIRE, & VALVE ASSEMBLY	2
20	INCLUDED IN LIGHT KIT P/N #909209 (See "1684, 16104 ELECTRICAL DIAGRAM" on page 273.)		

16124 AXLE

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

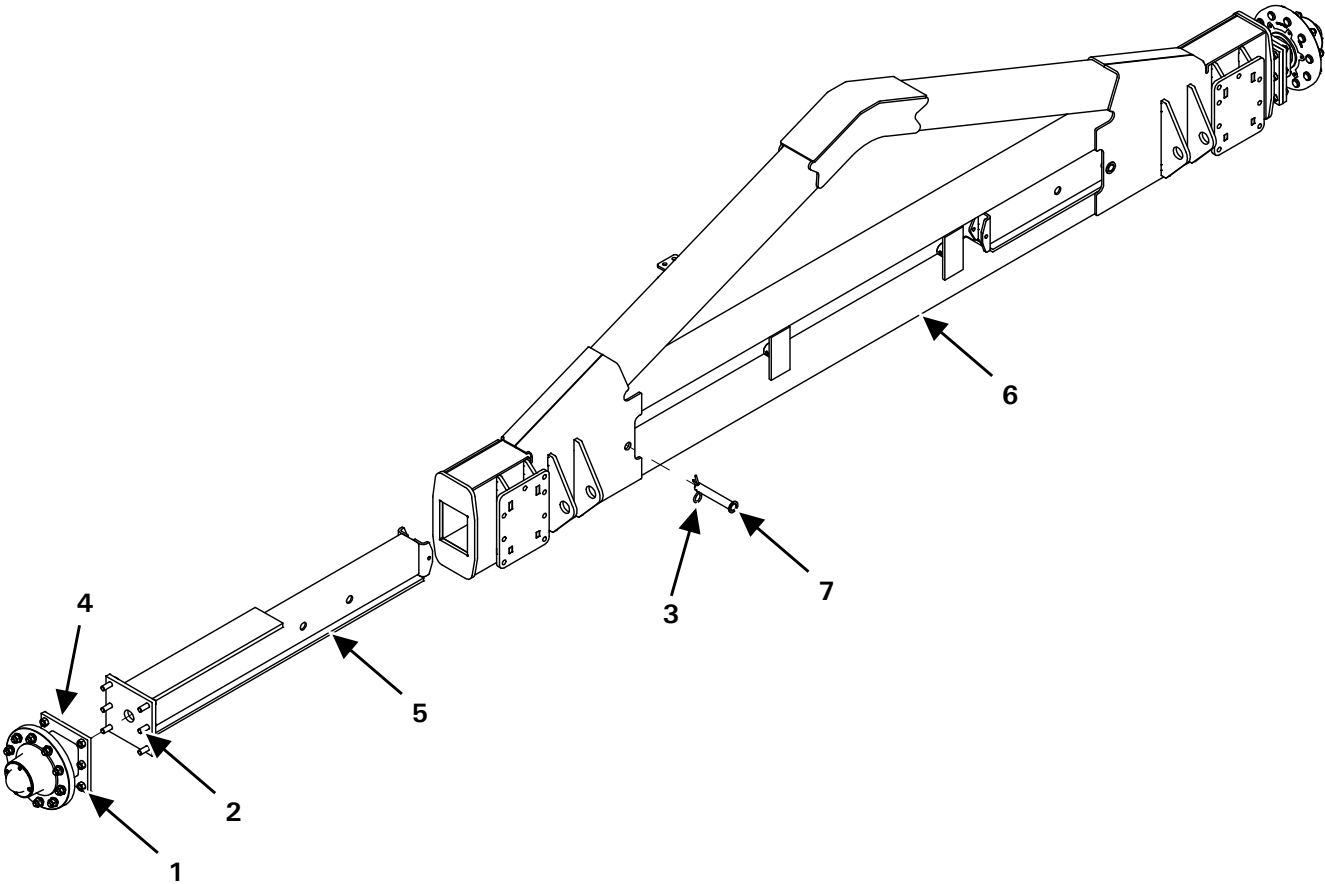


F2322

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812365	3/4" LOCK NUT (PL)	12
2	84346	3/4" x 2-1/2" HEX BOLT (PL)	12
3	926917	1/4 HAIR PIN CLIP (PL)	2
4	930233	ASSEMBLY - OUTER EXT. AXLE	2
5	931480	WELDMENT - INNER EXTENSION AXLE	2
6	931457	WELDMENT - BS16124 AXLE	1
7	960113	CYLINDER PIN WELDMENT 1.250" DIA	2

16124 UNDERCARRIAGE


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

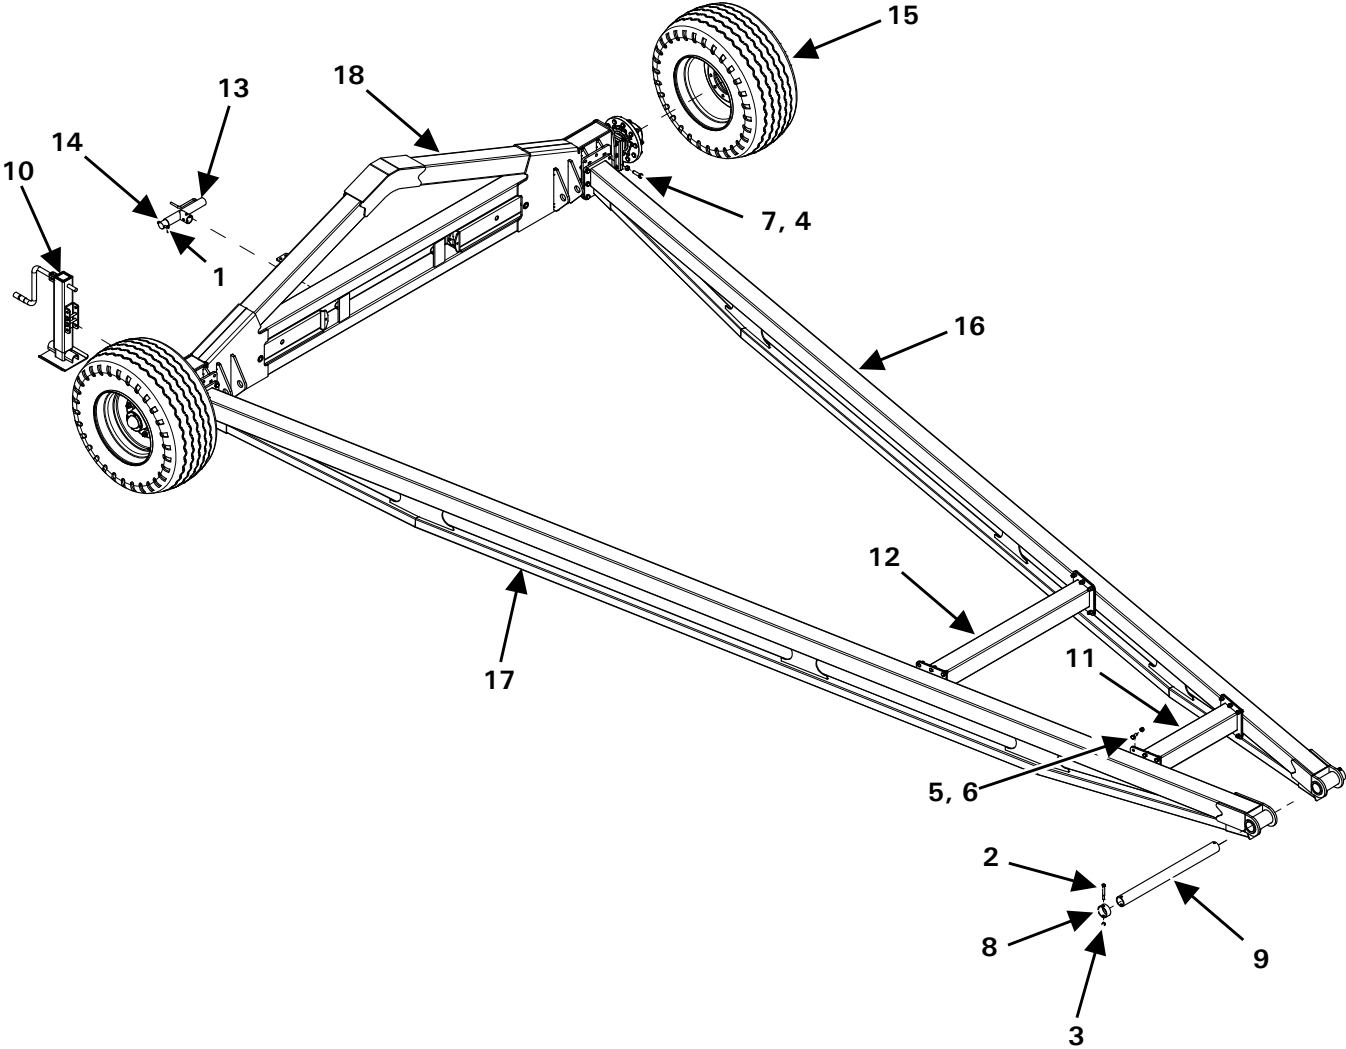

929850


ITEM	PART NUMBER	DESCRIPTION	QTY
1	12780	#7 HAIR PIN CLIP	1
2	811691	1/2" x 4-1/2" HEX BOLT (PL)	2
3	812364	1/2" LOCK NUT (PL)	2
4	812365	3/4" LOCK NUT (PL)	12
5	812482	5/8" LOCK NUT (PL)	24
6	84268	5/8" x 1-1/2" HEX BOLT (PL)	24
7	84346	3/4" x 2-1/2" HEX BOLT (PL)	12
8	905736	UNDERCARRIAGE PIN SLEEVE 3-1/6" ID x 3-1/2" OD x 1-1/2"	2
9	926604	TUBE-UNDERCARRIAGE PIN	1
10	926683	JACK-SIDE WIND W/DROP LEG	1
11	930276	WELDMENT - CROSSBRACE	1
12	931422	WELDMENT - CROSSBRACE	1
13	931535	JACK-2000 LB	1
14	961011	Ø1/2" x 3-1/2" CLEVIS PIN (PL)	1
15	F2145	TIRE AND WHEEL-FS24 480/55R22.5	2
16	F2299	WELDMENT - LH UNDERCARRIAGE ARM	1
17	F2300	WELDMENT - RH UNDERCARRIAGE ARM	1
18	F2322	ASSY-16124 AXLE	1

1684 BRIDGING ASSEMBLY

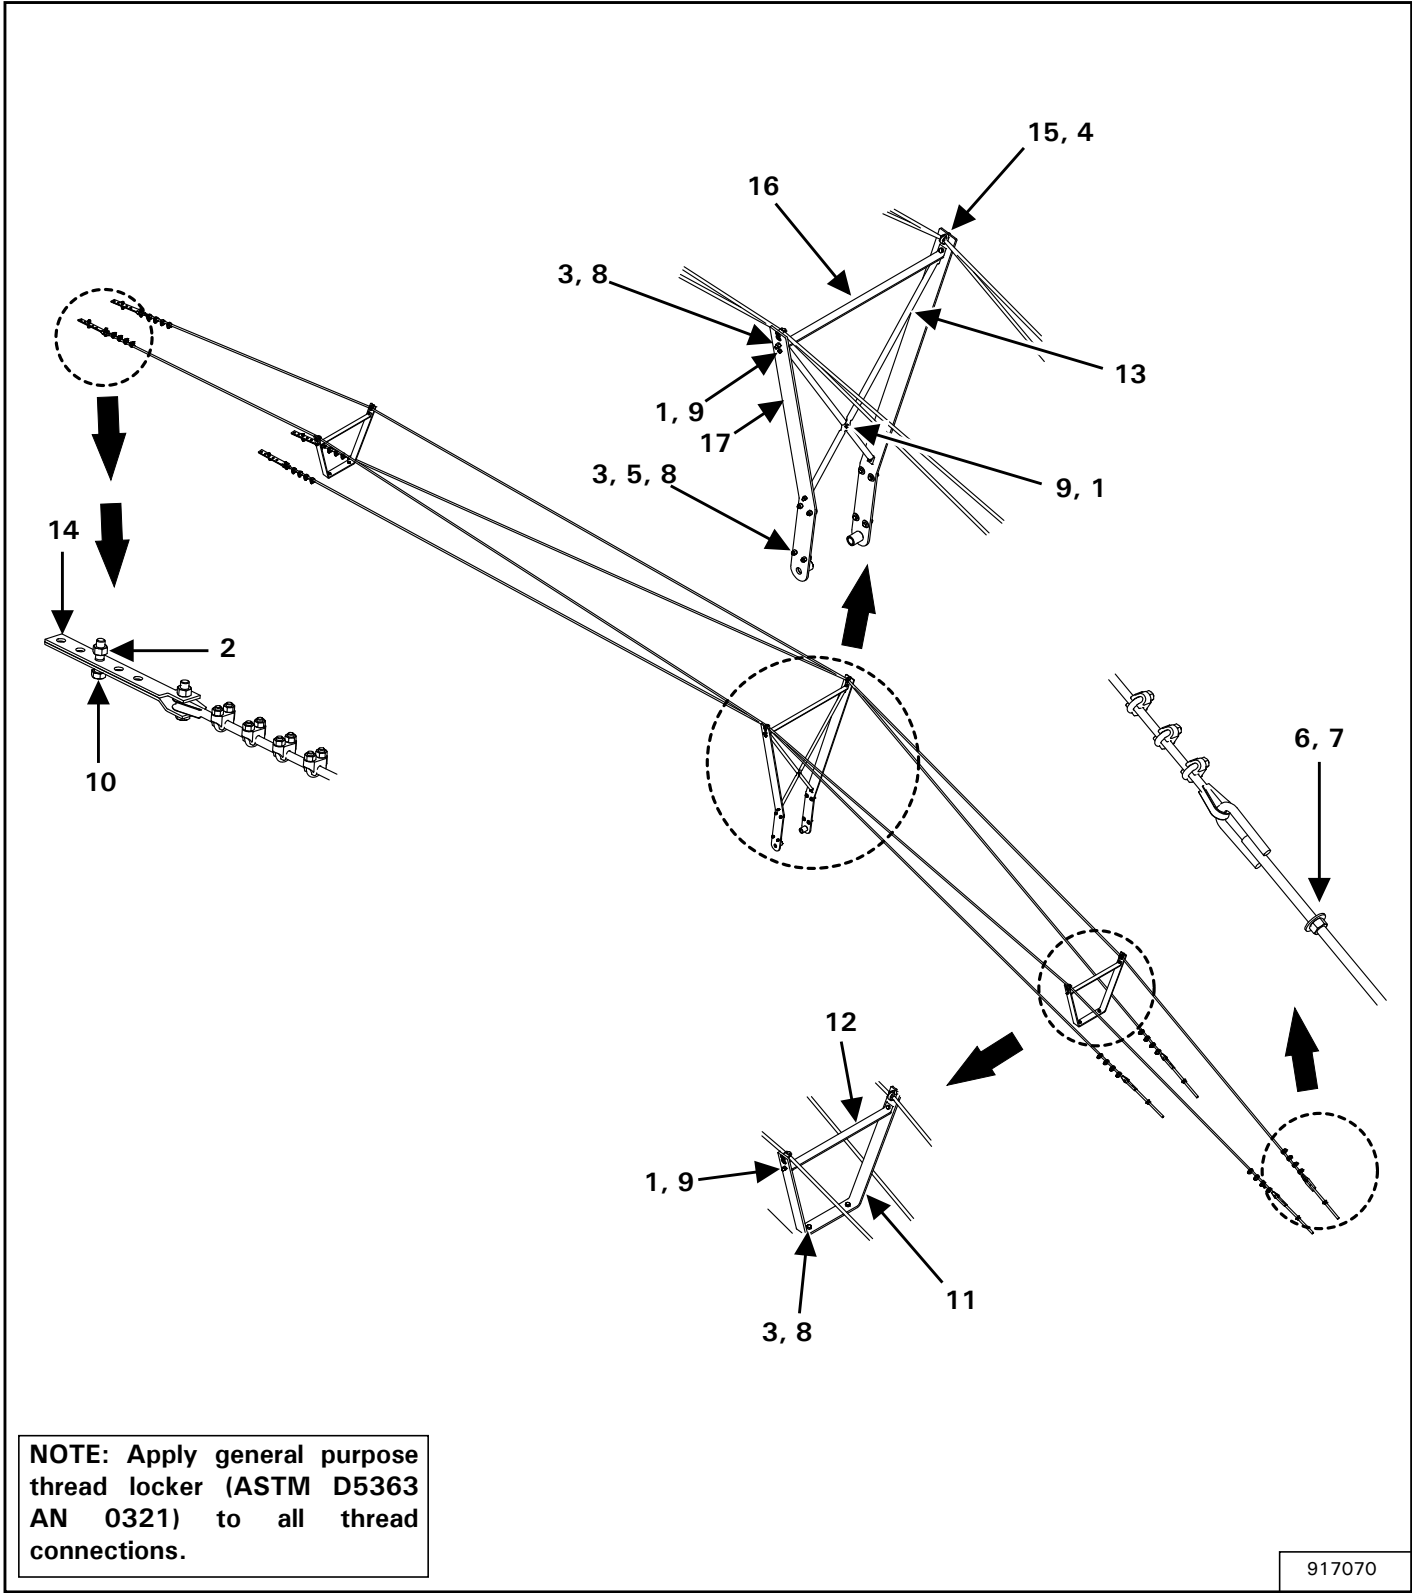


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812364	LOCK NUT, 1/2" (PL)	9
2	812365	LOCK NUT, 3/4" (PL)	8
3	812482	LOCK NUT, 5/8" (PL)	14
4	81638	FLAT WASHER, 1/2" BS (PL)	12
5	81678	FLAT WASHER, 11/16" STD (PL)	8
6	81722	NUT, 7/8 HEX (PL)	4
7	81972	WASHER, 7/8" SAE	4
8	84299	BOLT, 5/8" x 2" HEX GR 5 (PL)	14
9	87553	BOLT, 1/2" x 1-3/4" HEX UNC GR5 (PL)	9
10	88742	BOLT, 3/4" x 3" HEX GR 5 (PL)	8
11	905816	BRIDGING YOKE PLATE	2
12	905817	BRIDGING BRACE PL	2
13	905827	BRIDGING BRACE	2
14	905853	CABLE YOKE PLATE	8
15	909194	CABLE CLAMP, 3/4" (PL)	6
16	909783	BRIDGING CROSS BRACE, 3/8" x 2" x 53-1/4"	1
17	912797	BRIDGING PLATE WELDMENT	2
18	912840	UPPER CABLE ASSEMBLY	2
19	912841	LOWER CABLE ASSEMBLY	2

16104 BRIDGING ASSEMBLY

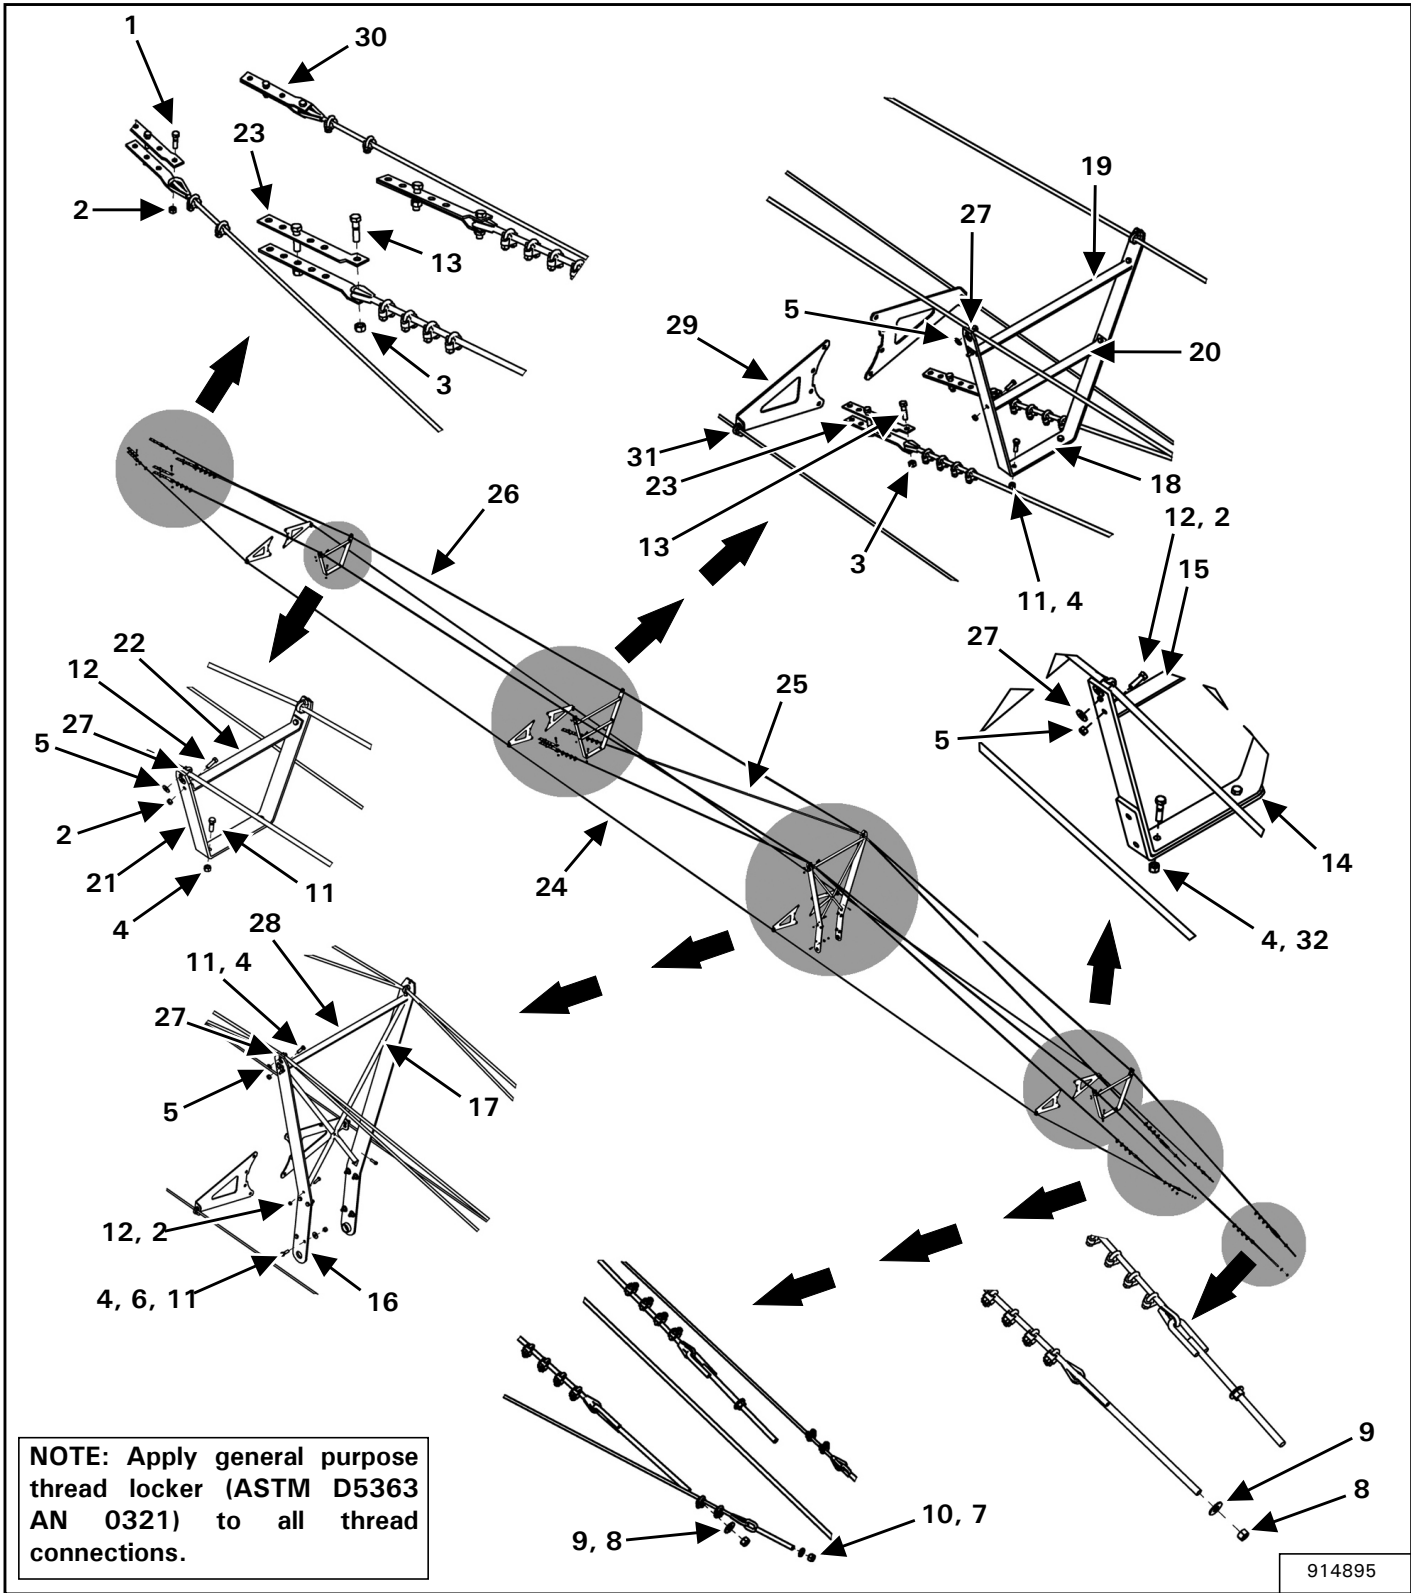


ITEM	PART NUMBER	DESCRIPTION	QTY
1	811791	BOLT, 1/2" x 2" HEX (PL)	4
2	812364	LOCK NUT, 1/2" (PL)	17
3	812365	LOCK NUT, 3/4" (PL)	8
4	812482	LOCK NUT, 5/8" (PL)	16
5	81638	FLAT WASHER, 1/2" BS (PL)	16
6	81678	FLAT WASHER, 11/16" STD (PL)	8
7	81700	NUT, 3/4" HEX (PL)	2
8	81722	NUT, 7/8" HEX (PL)	4
9	81972	WASHER, 7/8" SAE	4
10	84050	FLAT WASHER, 3/4" SAE (PL)	2
11	84299	BOLT, 5/8" x 2" HEX GR5 (PL)	14
12	87553	BOLT, 1/2" x 1.75" HEX UNC GR5 (PL)	13
13	88742	BOLT, 3/4" x 3" HEX GR5 (PL)	8
14	917934	LOWER BRIDGING YOKE	1
15	905817	BRIDGING BRACE PLATE	1
16	905826	BRIDGING PLATE WELDMENT (TUBE #2)	2
17	905827	BRIDGING BRACE	2
18	905828	BRIDGING PLATE, TUBE #3 (1/2" x 3" x 103")	1
19	905829	BRIDGING BRACE, TUBE #3 (3/8" x 2" x 43")	1
20	905830	BRIDGING BRACE, TUBE #3 (3/8" x 2" x 31-5/8")	1
21	905831	BRIDGING PLATE, TUBE #4 (1/2" x 3" x 60")	1
22	905832	BRIDGING BRACE, TUBE #4 (3/8" x 2" x 27-3/4")	1
23	905853	CABLE YOKE PLATE	8
24	906045	SIDE BRIDGING CABLE ASSEMBLY BS16104	2
25	906057	LOWER BRIDGING CABLE ASSEMBLY BS16104	2
26	906059	UPPER BRIDGING CABLE ASSEMBLY BS16104	2
27	909194	CABLE CLAMP, 3/4" (PL)	8
28	909783	BRIDGING CROSS BRACE, 3/8" x 2" x 53-1/4"	1
29	914769	SIDE BRIDGING BRACKET	8
30	960244	CABLE YOKE	4
31	964565	CABLE CLAMP, 1/2" (PL)	8
32	84335	BOLT, 5/8" x 2-1/2" HEX (PL)	2

16124 BRIDGING ASSEMBLY

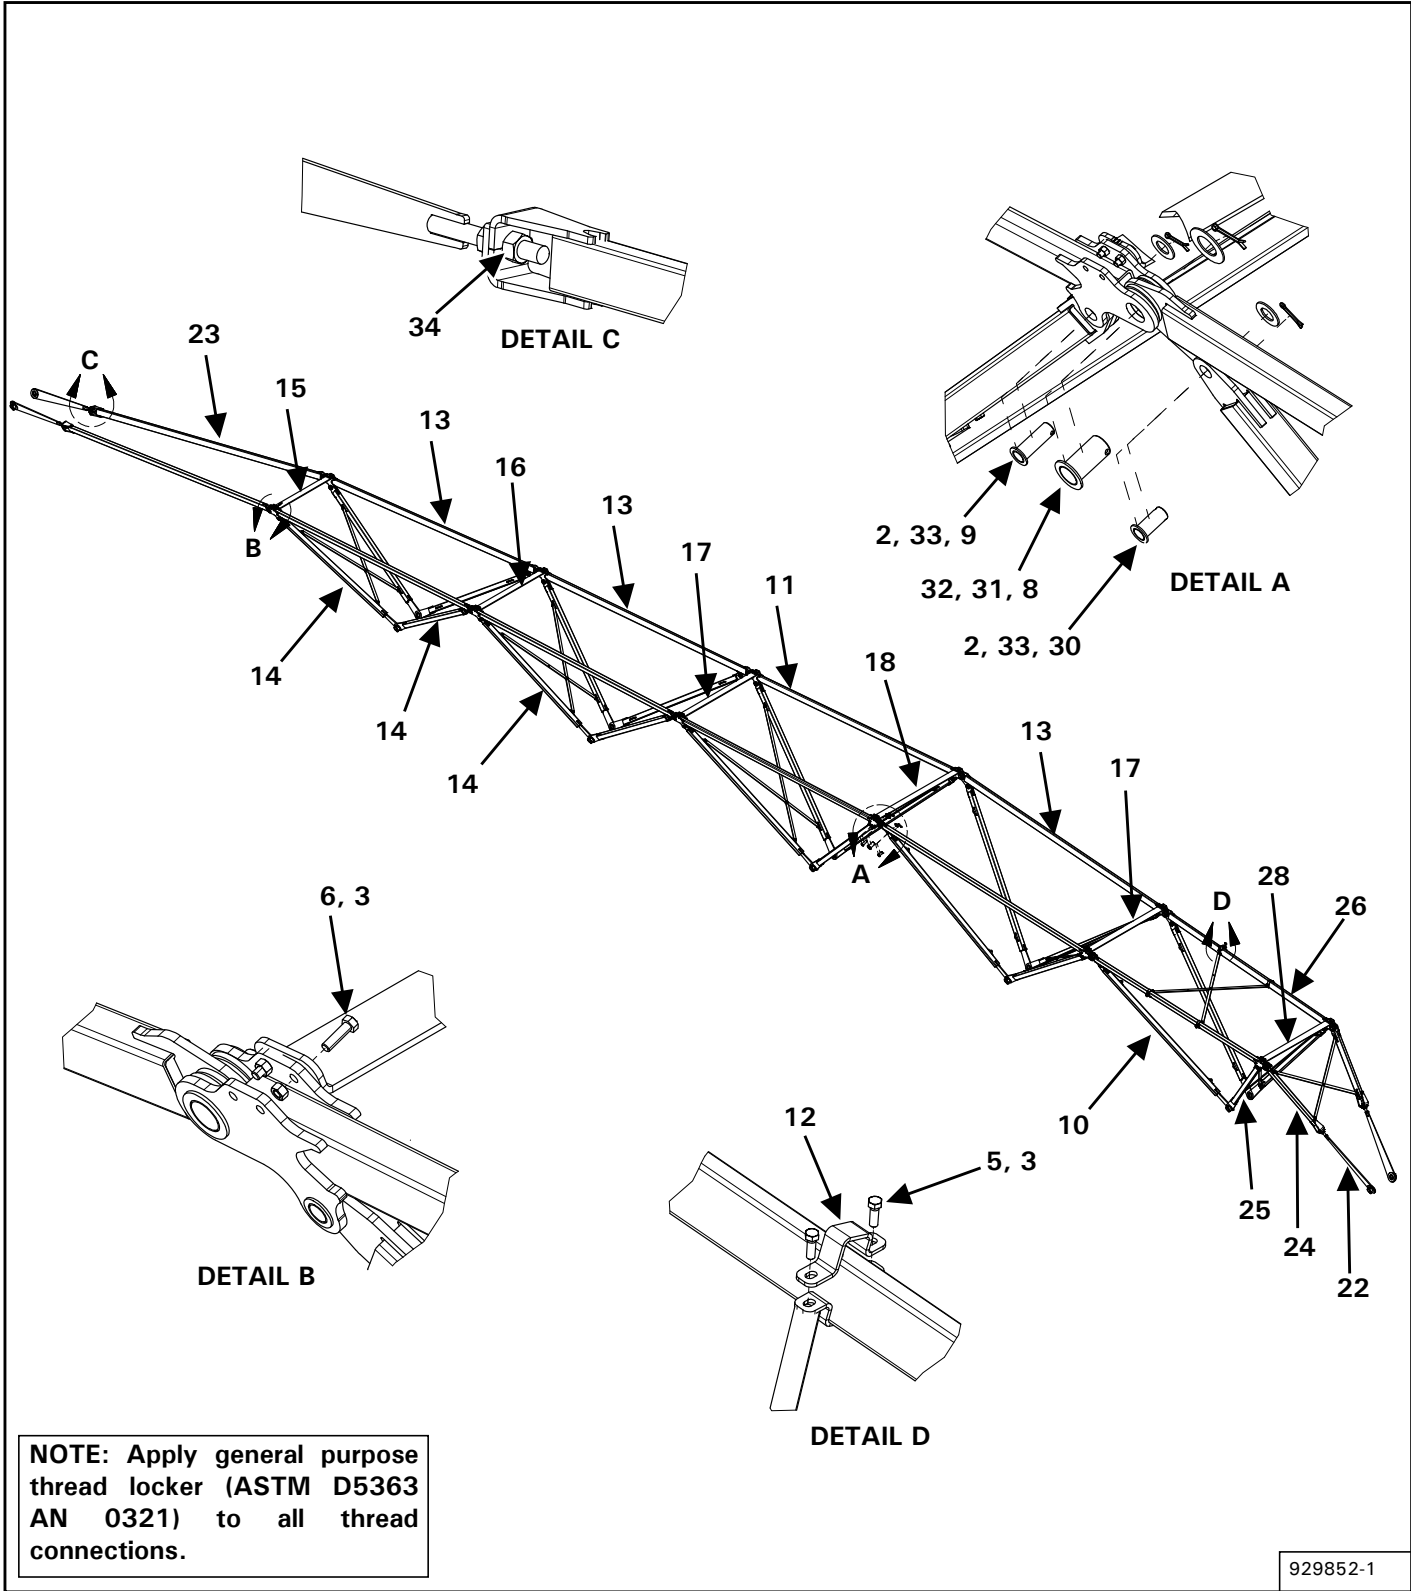

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	1/2"x 4-1/2" HEX BOLT (PL)	14
2	81210	1/4" x 2" COTTER PIN (PL)	20
3	812364	1/2" LOCK NUT (PL)	82
4	84048	1/2" SAE FLAT WASHER (PL)	6
5	84277	1/2" x 1-1/2" HEX BOLT (PL)	44
6	87553	1/2" x 1.75" HEX BOLT UNC GR5 (PL)	24
7	905736	UNDERCARR PIN SLEEVE 3-1/6" ID x 3 1/2" OD x 1-1/2"	14
8	927850	WELDMENT - TRUSS PIN	12
9	927852	WELDMENT - TRUSS PIN	12
10	928096	WELDMENT - TRUSS BEAM	12
11	929131	WELDMENT - TRUSS BEAM	2
12	929746	BRACKET - CROSS BRACE HOLDER	8
13	929861	WELDMENT - TRUSS BEAM	6
14	929866	WELDMENT - TRUSS BEAM	6
15	930056	BRACKET - TRUSS SUPPORT	1
16	930065	BRACKET - TRUSS SUPPORT	1
17	930066	BRACKET - TRUSS SUPPORT	2
18	930067	BRACKET - TRUSS SUPPORT	1
19	930068L	PLATE-CROSS BRACE	6
20	930069L	PLATE-CROSS BRACE	4
21	930074L	PLATE-CROSS BRACE	2
22	930625	WELDMENT - TRUSS FASTENER	4
23	930641	WELDMENT - TRUSS BEAM	2
24	931490	WELDMENT - TRUSS BEAM	2
25	931492	WELDMENT - TRUSS BEAM	2
26	931494	WELDMENT - TRUSS BEAM	2
27	931496L	PLATE-CROSS BRACE	2
28	931531	BRACKET - TRUSS SUPPORT	1
29	932949L	PLATE-CROSS BRACE	2
30	960108	LIFT ARM CLEVIS PIN WELDMENT 1.250" DIA	8
31	967153	2" x 10GA NARROW RIM WASHER (PL)	12
32	967162	5/16" x 3" COTTER PIN (PL)	12
33	9812487	1-1/4" x 10GA NARROW RIM WASHER (PL)	20
34	EZBN125	NUT HEX 1-1/4 NC GR2 ZNCR	8

16124 BRIDGING ASSEMBLY (CONT'D)

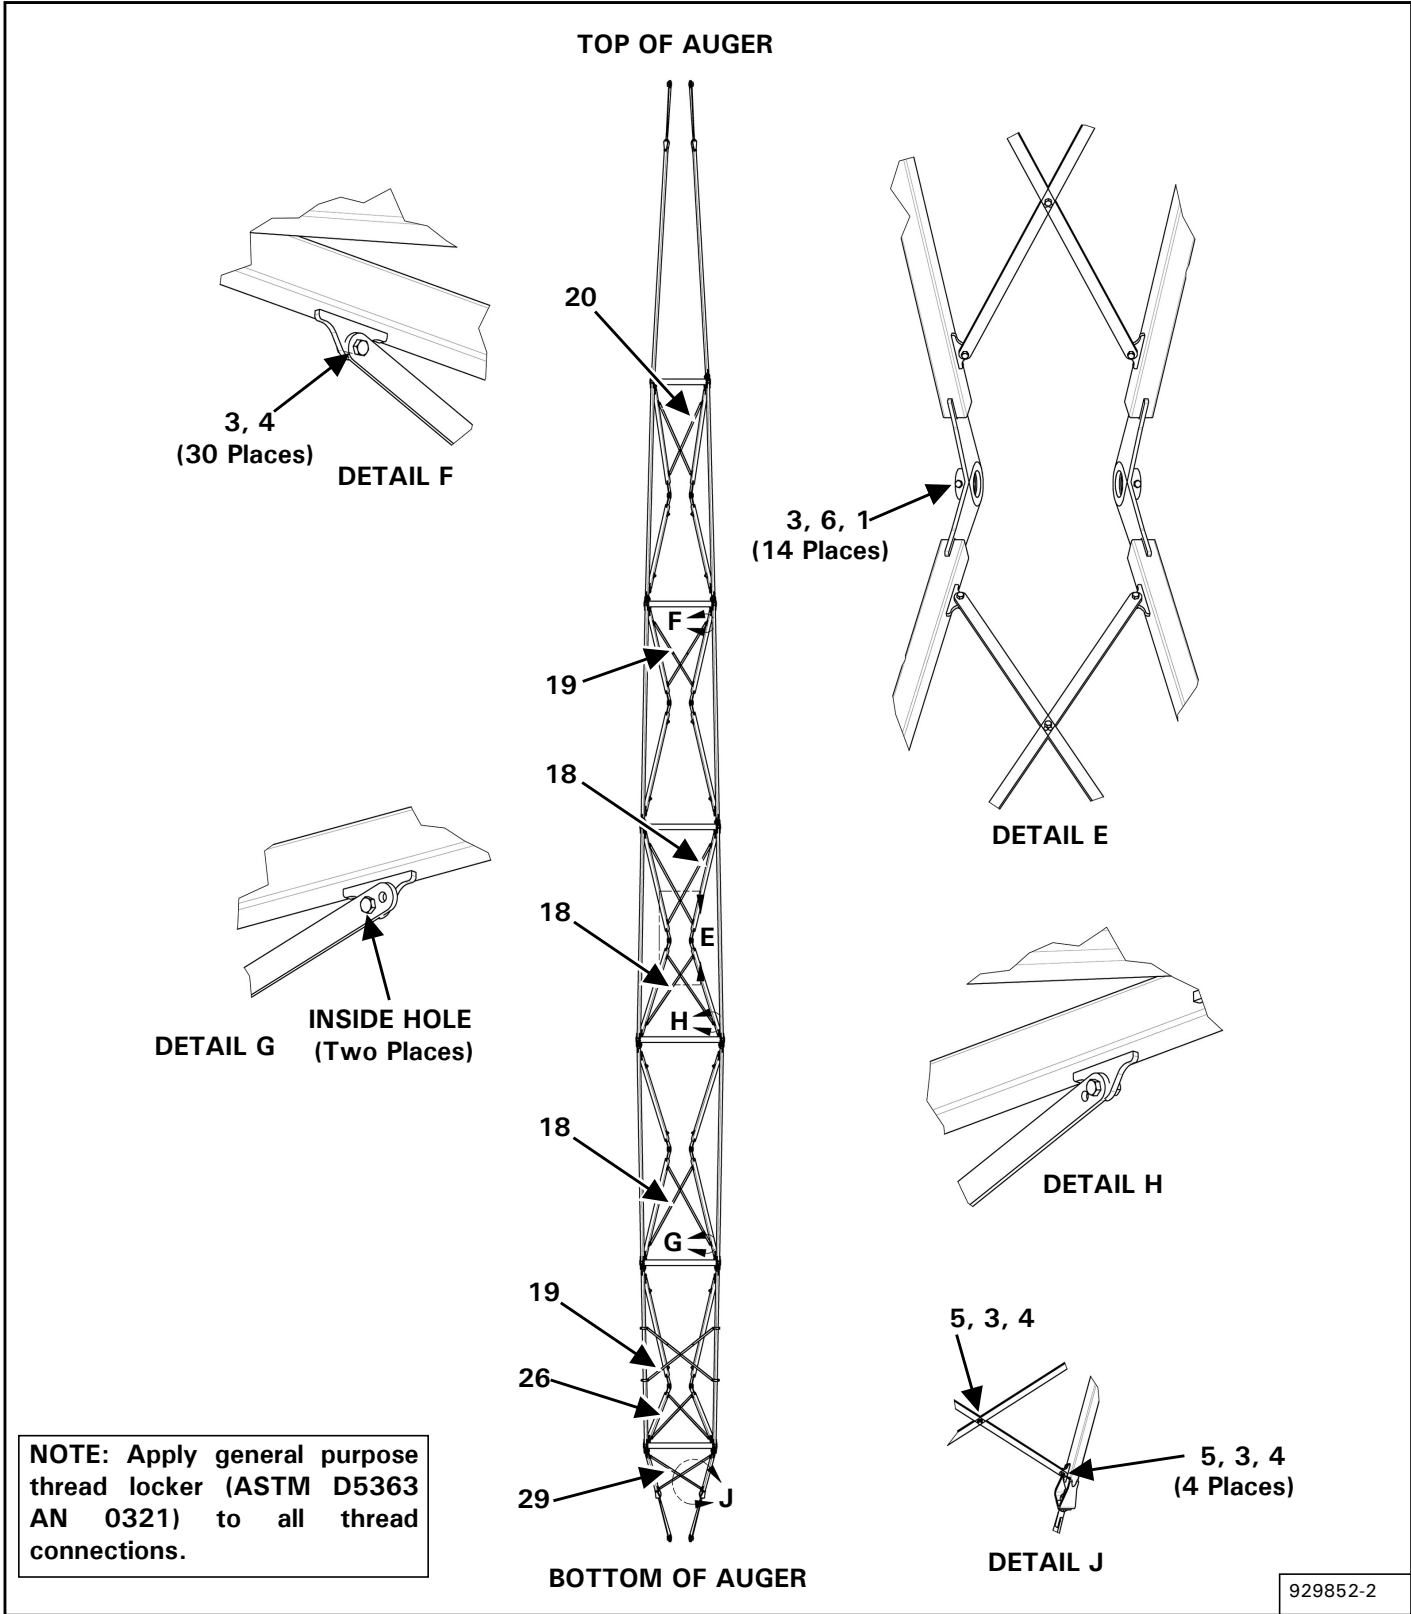

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	1/2" x 4-1/2" HEX BOLT (PL)	14
2	81210	1/4" x 2" COTTER PIN (PL)	20
3	812364	1/2" LOCK NUT (PL)	82
4	84048	1/2" SAE FLAT WASHER (PL)	6
5	84277	1/2" x 1-1/2" HEX BOLT (PL)	44
6	87553	1/2" x 1.75" HEX BOLT UNC GR5 (PL)	24
7	905736	UNDERCARR PIN SLEEVE 3-1/6" ID x 3-1/2" OD x 1-1/2"	14
8	927850	WELDMENT - TRUSS PIN	12
9	927852	WELDMENT - TRUSS PIN	12
10	928096	WELDMENT - TRUSS BEAM	12
11	929131	WELDMENT - TRUSS BEAM	2
12	929746	BRACKET - CROSS BRACE HOLDER	8
13	929861	WELDMENT - TRUSS BEAM	6
14	929866	WELDMENT - TRUSS BEAM	6
15	930056	BRACKET - TRUSS SUPPORT	1
16	930065	BRACKET - TRUSS SUPPORT	1
17	930066	BRACKET - TRUSS SUPPORT	2
18	930067	BRACKET - TRUSS SUPPORT	1
19	930068L	PLATE-CROSS BRACE	6
20	930069L	PLATE-CROSS BRACE	4
21	930074L	PLATE-CROSS BRACE	2
22	930625	WELDMENT - TRUSS FASTENER	4
23	930641	WELDMENT - TRUSS BEAM	2
24	931490	WELDMENT - TRUSS BEAM	2
25	931492	WELDMENT - TRUSS BEAM	2
26	931494	WELDMENT - TRUSS BEAM	2
27	931496L	PLATE-CROSS BRACE	2
28	931531	BRACKET - TRUSS SUPPORT	1
29	932949L	PLATE-CROSS BRACE	2
30	960108	LIFT ARM CLEVIS PIN WELDMENT 1.250" DIA	8
31	967153	2" x 10GA NARROW RIM WASHER (PL)	12
32	967162	5/16" x 3" COTTER PIN (PL)	12
33	9812487	1-1/4" x 10GA NARROW RIM WASHER (PL)	20
34	EZBN125	NUT HEX 1-1/4 NC GR2 ZNCR	8


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.



ITEM	PART NUMBER	DESCRIPTION	QTY
1	811791	BOLT, 1/2" x 2" HEX (PL)	16
2	81210	COTTER PIN, 1/4" x 2 (PL)	4
3	812364	LOCK NUT, 1/2" (PL)	16
4	812482	LOCK NUT, 5/8" (PL)	4
5	81638	FLAT WASHER, 1/2" BS (PL)	32
6	84299	BOLT, 5/8" x 2' HEX GR 5 (PL)	4
7	907342	YOKE WELDMENT (13" BS)	1
8	912751	HYDRAULIC ROUTING	1
9	912800	TOP YOKE PIN WELDT 1.500" DIA	1
10	913053	UPPER LIFT ARM CRADLE ASSEMBLY	1
11	914956	LIFT ARM TORQUE TUBE WELDMENT	1
12	960688	13" LINK WELDMENT	1
13	960690	BOTTOM CYLINDER PIN WELDMENT, 2" DIA	1
14	960692	TOP CYLINDER PIN WELDMENT, 2" DIA	3
15	960694	TOP YOKE PIN WELDMENT, 1-1/2" DIA	1
16	960695	LIFT ARM CLEVIS PIN, 1" DIA	2
17	967135	RIM WASHER, 1-1/2" x 10 GA (PL)	2
18	967140	NARROW RIM WASHER, 1" x 10 GA (PL)	2
19	967153	NARROW RIM WASHER, 2" x 10 GA (PL)	5
20	967162	COTTER PIN, 5/16" x 3" (PL)	5
21	967164	DRIVE-IN GREASE ZERK	9
22	967908	PLUG, 8 ORB VENT	1
23	F0035	CONNECTING LINK PIN WELDMENT, 2" DIA	1
24	F0445M	CYLINDER, 5.0" x 51.351"	1
25	F1769	LOWER LIFT ARM - LEFT HAND	1
26	F1770	RIGHT HAND LOWER LIFT ARM	1
27	F1943	UPPER LIFT ARM WELDMENT	1

16104 LOWER LIFT ARM ASSEMBLY


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

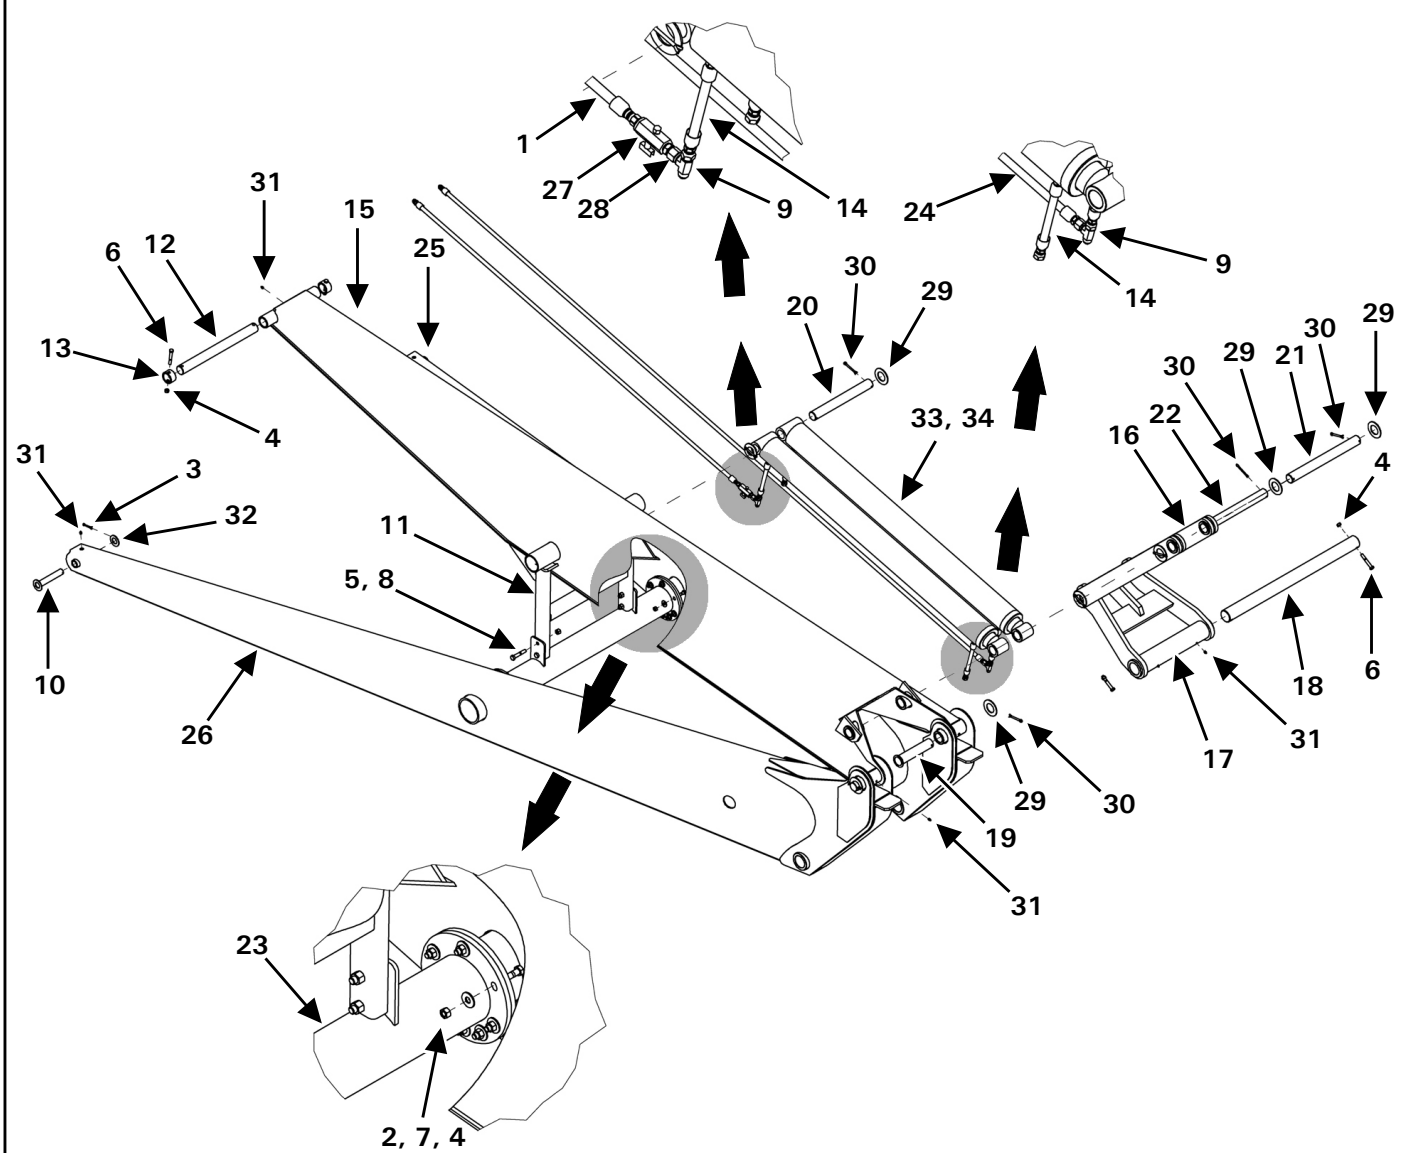

914883


ITEM	PART NUMBER	DESCRIPTION	QTY
1	116938	HOSE, #8 x #10 MJIC x #8 MPT	1
2	811791	BOLT, 1/2" x 2" HEX (PL)	16
3	81210	COTTER PIN, 1/4" x 2" (PL)	2
4	812364	LOCK NUT, 1/2" (PL)	20
5	812482	LOCK NUT, 5/8" (PL)	4
6	81629	BOLT, 1/2" x 3 1/2" HEX (PL)	4
7	81638	FLAT WASHER, 1/2" BS (PL)	32
8	81669	BOLT, 5/8" x 3-1/2" HEX (PL)	4
9	865341	TEE, #10 MJIC x #10 MJIC x #10 FJIC	2
10	905779	AXLE PIN WELDMENT, 1-1/4" x 7 1/8"	2
11	905786	CRADLE REST WELDMENT (16" BS)	1
12	905806	UPPR LIFT ARM PIN	1
13	905807	UPPER LIFT ARM PIN COLLAR	2
14	906103	HOSE, #8 x #8 MORB x #10 JIC	4
15	908445	UPPER LIFT ARM WELDMENT (16104)	1
16	908464	YOKE ARM WELDMENT (16104 BS)	2
17	908472	LINK WELDT	1
18	908474	CONNECTING YOKE PIN, 2-3/4" x 39"	1
19	908476	LIFT ARM PIN WELDMENT	2
20	908478	CYL PIN ROD	1
21	908480	UPPER LIFT ARM PIN ROD	1
22	908490	LIFT PIN ROD	1
23	914760	LIFT ARM TORQUE TUBE WELDMENT (1305 mm LG)	1
24	914926	HOSE, #8 x #10 MJIC x #10 MJIC	1
25	F1767	LEFT LOWER LIFT ARM WELDMENT	1
26	F1768	RIGHT LOWER LIFT ARM WELDMENT	1
27	960118	FLOW CONTROL VALVE, #8 FNPT (ONE WAY) (STEEL)	1
28	960152	ADAPTOR, STRAIGHT #10 MJIC x #8 MNPT	1
29	967153	NARROW RIM WASHER, 2" x 10 GA (PL)	8
30	967162	COTTER PIN, 5/16" x 3" (PL)	8
31	967164	GREASE ZERK, DRIVE-IN	7
32	9812487	NARROW RIM WASHER, 1-1/4" x 10 GA (PL)	2
33	F0664M	CYLINDER, 5.00" x 55.35" W / 3-1/2" SHAFT	2
34	X2909	SEAL KIT CYL 5.0" x 3.5"	1

16124 LOWER LIFT ARM ASSEMBLY

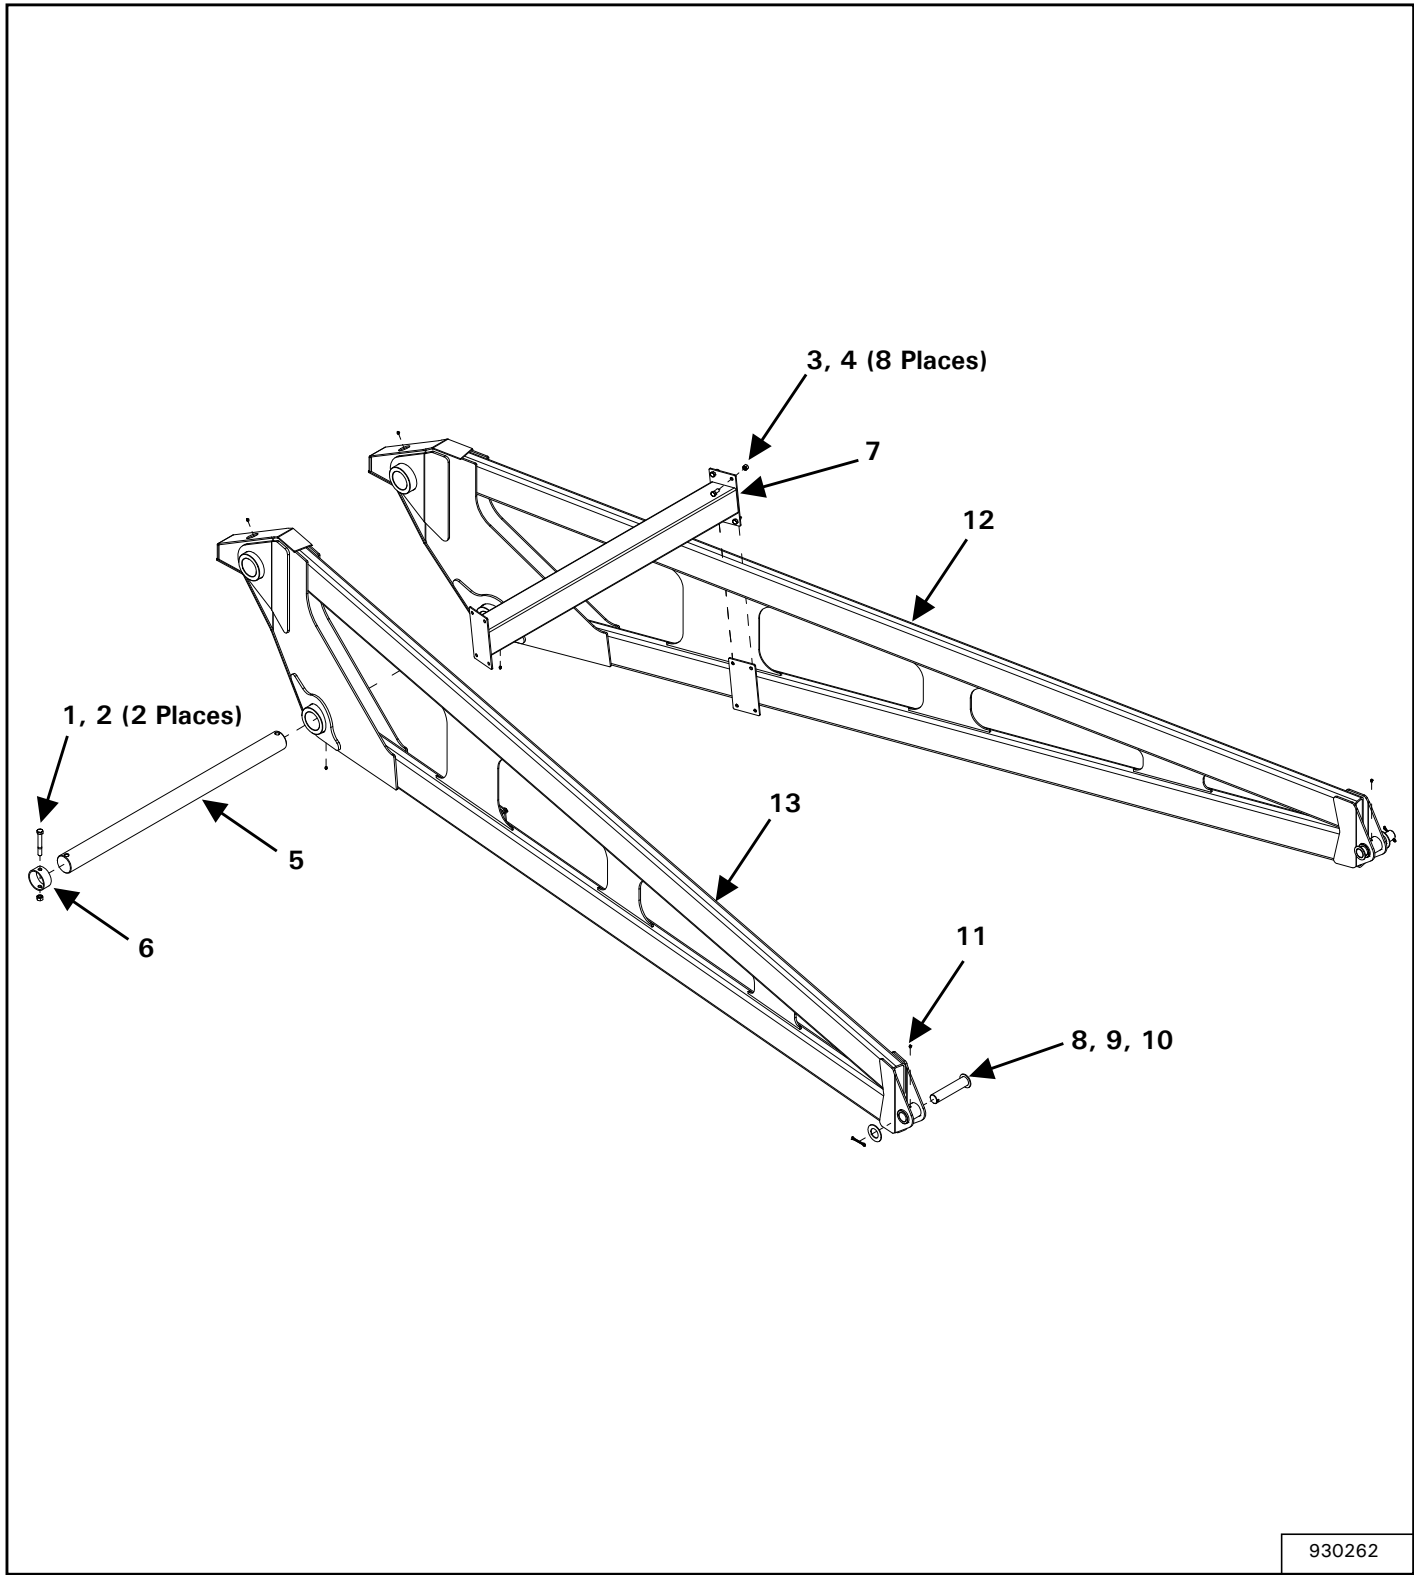


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812114	3/4" x 5-1/2" HEX BOLT (PL)	2
2	812365	3/4" LOCK NUT (PL)	2
3	812482	5/8" LOCK NUT (PL)	8
4	84268	5/8" x 1-1/2" HEX BOLT (PL)	8
5	929943	PIN-4.000" DIA	1
6	930113	TUBE-PIN SLEEVE	2
7	930267	WELDT-SUPPORT BRACE	1
8	960692	TOP CYLINDER PIN WELDT 2.000" DIA	2
9	967153	2" x 10GA NARROW RIM WASHER (PL)	2
10	967162	5/16" x 3" COTTER PIN (PL)	2
11	967164	DRIVE-IN GREASE ZERK	6
12	F2287	WELDT-RH LOWER LIFT ARM	1
13	F2288	WELDT-LH LOWER LIFT ARM	1

16124 UPPER LIFT ARM ASSEMBLY

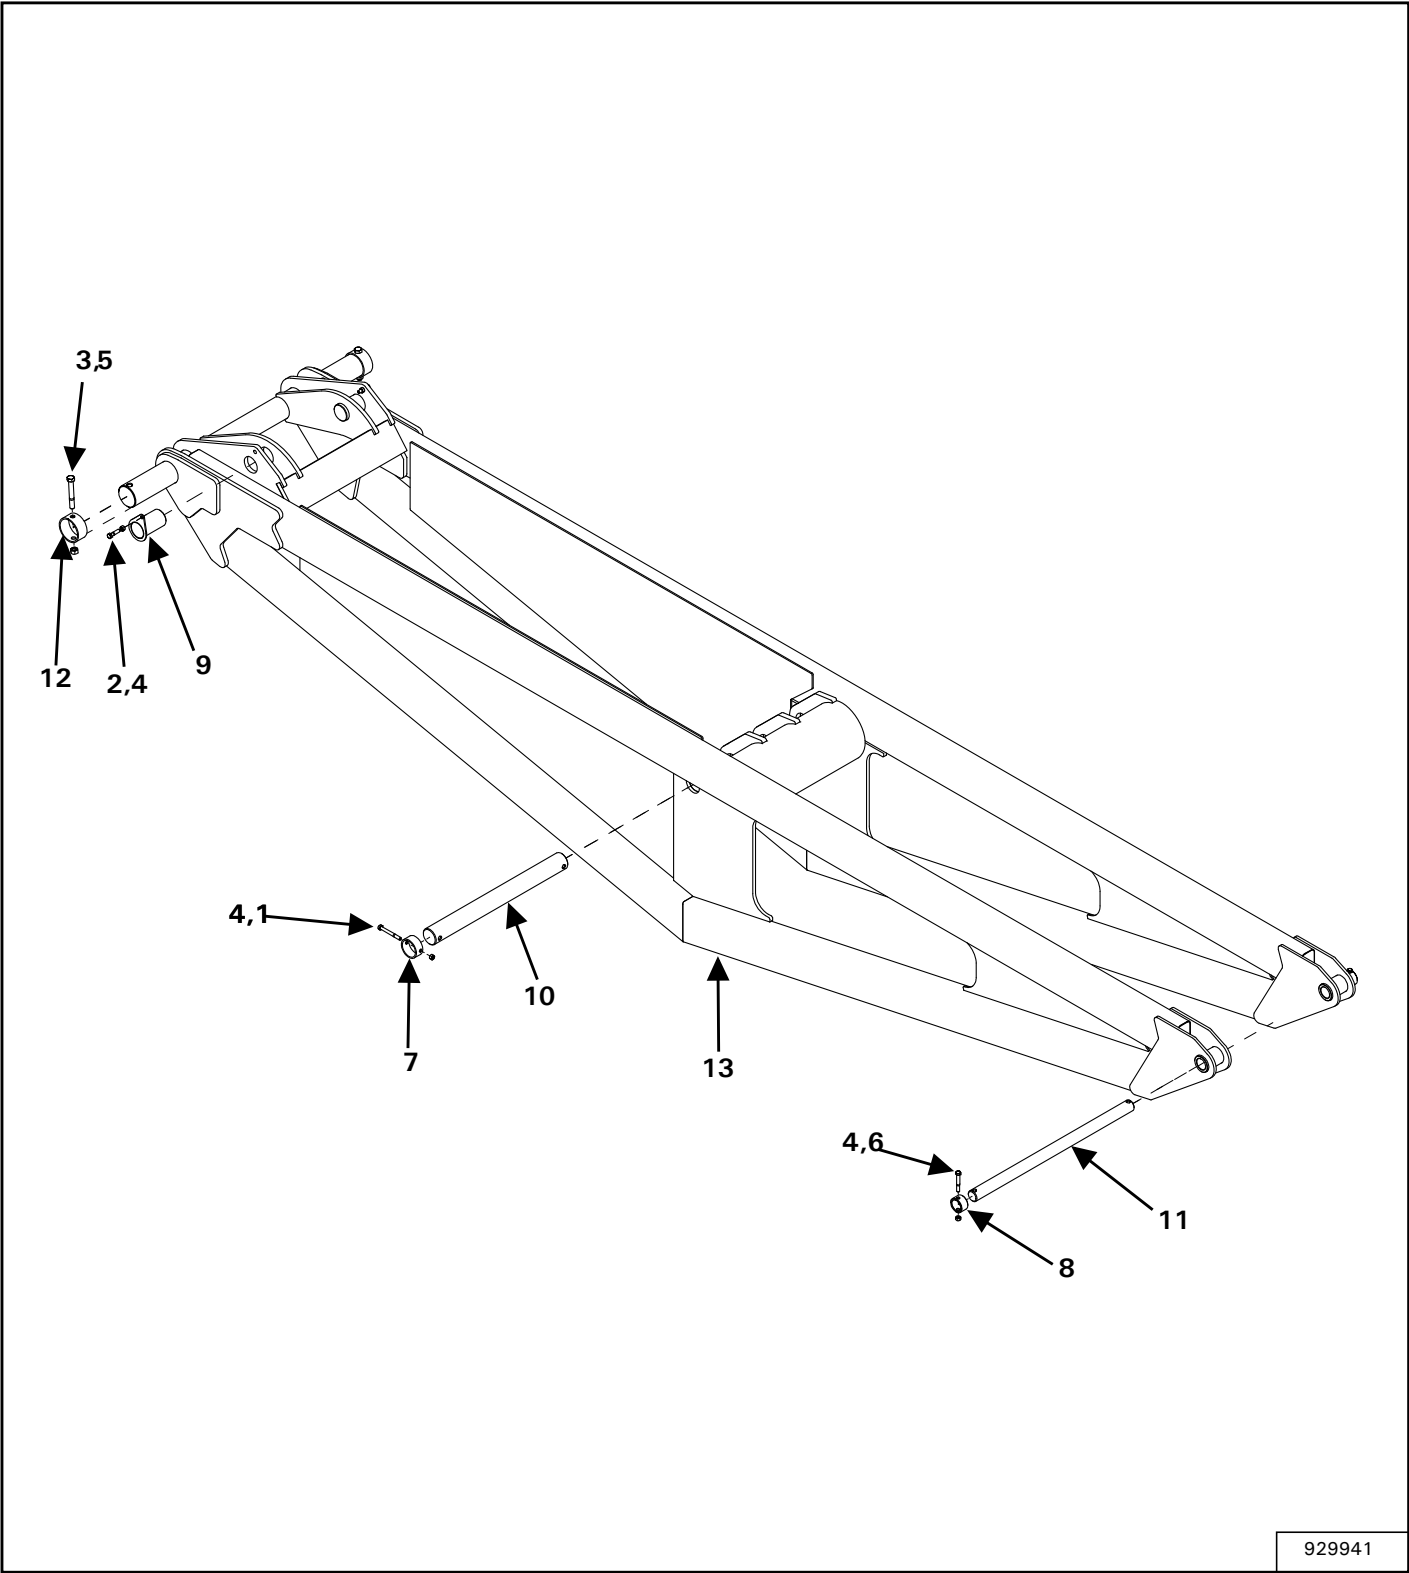

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	1-1/2" x 4-1/2" HEX BOLT (PL)	2
2	811791	1/2" x 2" HEX BOLT (PL)	2
3	812114	3/4" x 5-1/2" HEX BOLT (PL)	2
4	812364	1/2" LOCK NUT (PL)	6
5	812365	3/4" LOCK NUT (PL)	2
6	81629	1/2" x 3-1/2" HEX BOLT (PL)	2
7	905736	UNDERCARR PIN SLEEVE 3-1/6" ID x 3-1/2" OD X 1 1/2"	2
8	905807	UPPER LIFT ARM PIN COLLAR	2
9	929630	WELDT-3.000" DIA PIN	2
10	929942	PIN-3.000" DIA	1
11	930057	PIN-2.000" DIA	1
12	930113	TUBE-PIN SLEEVE	2
13	F2283	WELDT-UPPER LIFT ARM	1

1684 & 16104 INPUT TUBE AND HOPPER ASSEMBLY

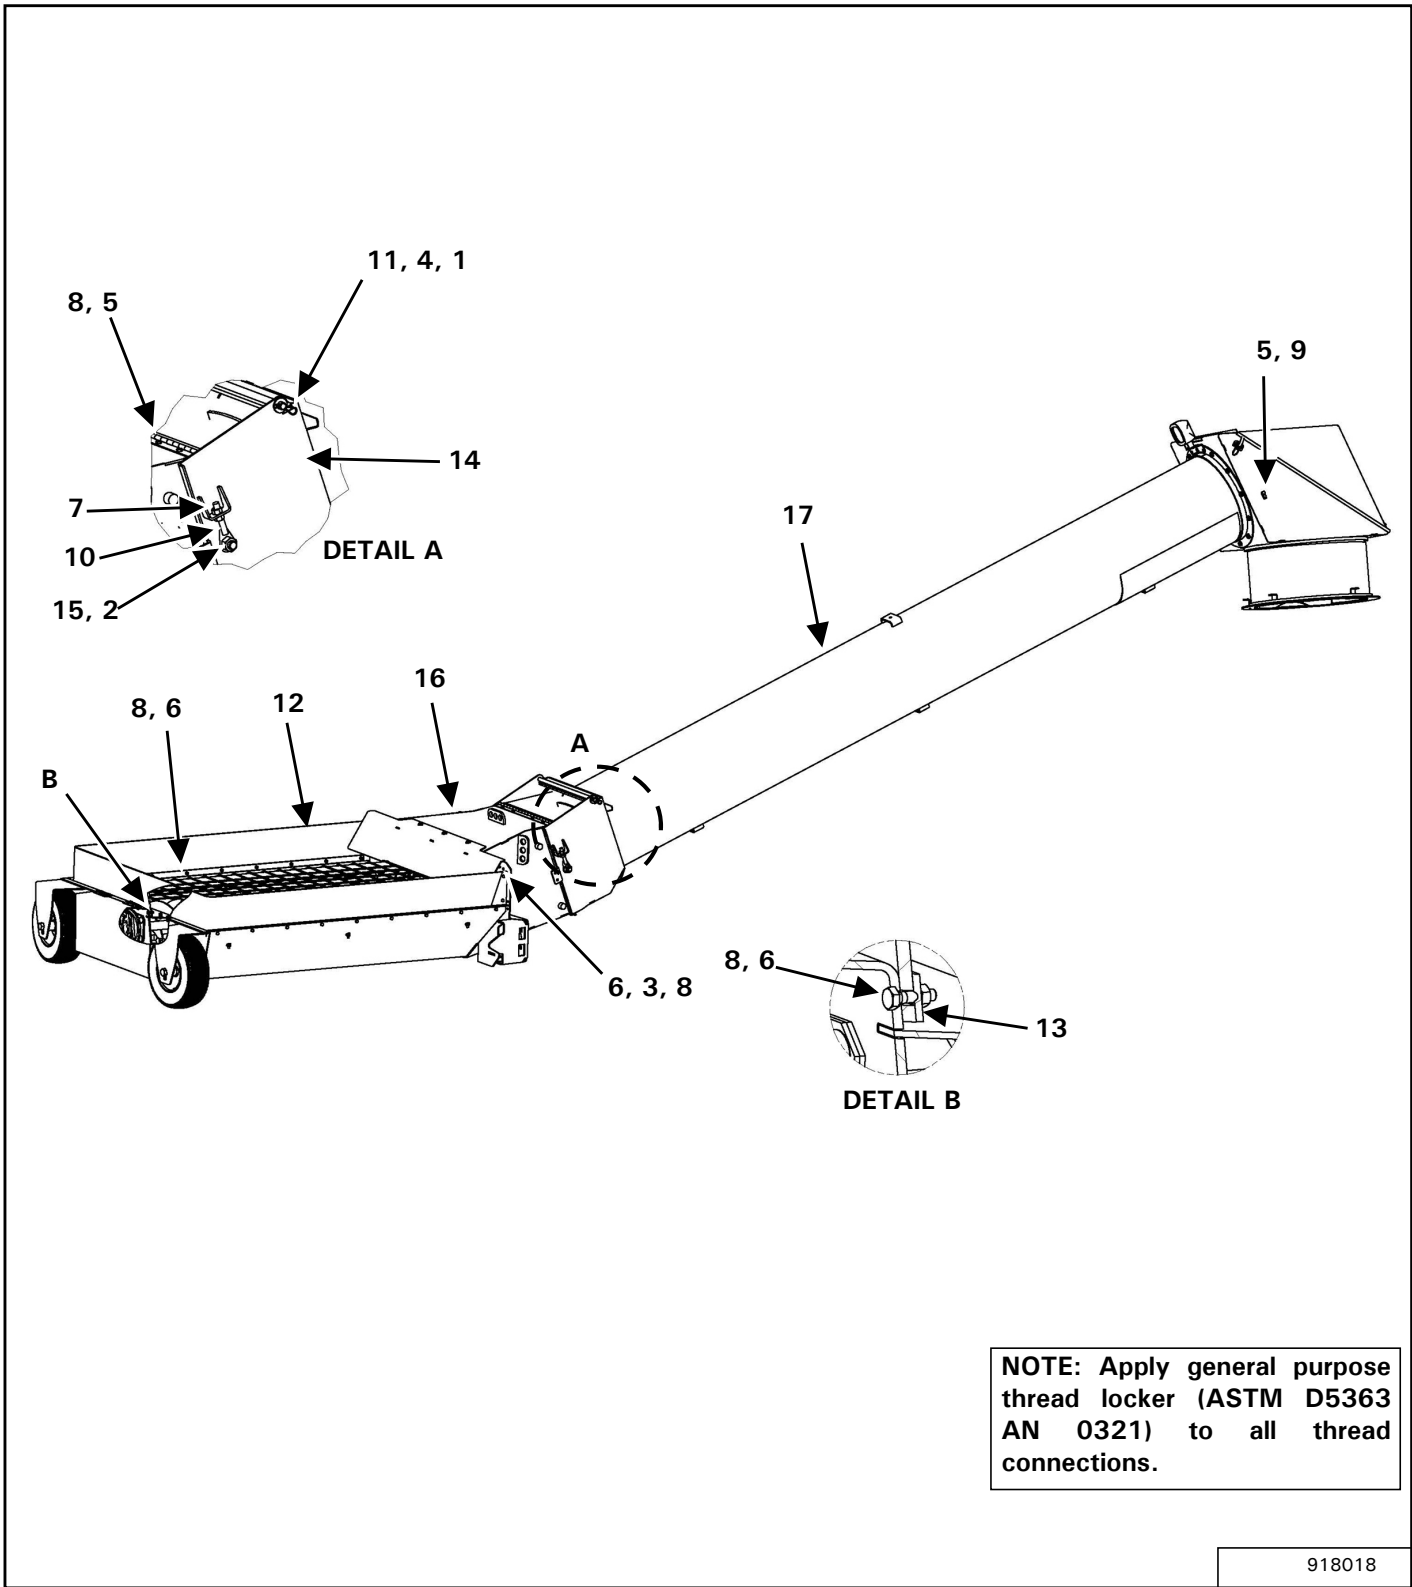

ITEM	PART NUMBER	DESCRIPTION	QTY
1	12780	HAIR PIN CLIP, #7	1
2	812365	LOCK NUT 3/4" (PL)	2
3	812624	FLAT WASHER 1/4" (PL)	4
4	812639	WASHER 0.625 SAE FLAT BS PL	1
5	81525	BOLT, HEX 1/4" x 3/4" (PL)	6
6	81527	BOLT, HEX 1/4" x 1" (PL)	28
7	81636	NUT, HEX 1/2" (PL)	4
8	84498	LOCK NUT 1/4" (PL)	32
9	912832	CABLE CLIP 7/16"	1
10	914449	HOPPER ADJUSTMENT, WELDT	2
11	916997	PIVOT COVER PIN WELDMENT 0.625" DIA	1
12	917748	RUBBER, HOPPER EDGING	1
13	917749L	PLATE, RUBBER REINFORCEMENT	3
14	920093	HINGED COVER, WELDT	1
15	967437	BOLT, HEX 3/4" x 1-5/8" (PL)	2
16	F1825	MULTI FLIGHTING HOPPER 16" ASSY	1
17	F1888*	INTAKE AUGER, ASSY	1


*See the following page for individual part break downs.

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812037	SETSCREW, SQ HD CUP 3/8" x 3/4" (PL)	2
2	812365	LOCK NUT 3/4" (PL)	2
3	81525	BOLT, HEX 1/4" x 3/4" (PL)	5
4	84050	FLAT WASHER 3/4" S.A.E. (PL)	4
5	84467	BOLT, HEX 3/4" x 2" (PL)	2
6	904578	GEAR OIL - SAE 75W-90 SYNTHETIC	1
7	909294	KEY - INT AUG TO MAIN AUG 3/8" x 3/8" x 1 - 1/4"	1
8	912503	UNDERCARRIAGE SPACER	2
9	914405	WELDT-INPUT BOX PIVOT	1
10	914429	CLAMP HOSE-2.06 TO 21.25	2
11	914443	CHAIN-COUPLING DOUBLE 60H	1
12	916894	WELDT-ELBOW ACCESS DOOR	1
13	917038	COVER-INPUT BOX PIVOT	1
14	918019*	ASSY-BS16 INPUT TUBE	1
15	930526	DOUBLE JOINT - 50 DEGREE CAT 4	1


*See the following page for individual part break downs.

1684 & 16104 INPUT TUBE ASSEMBLY

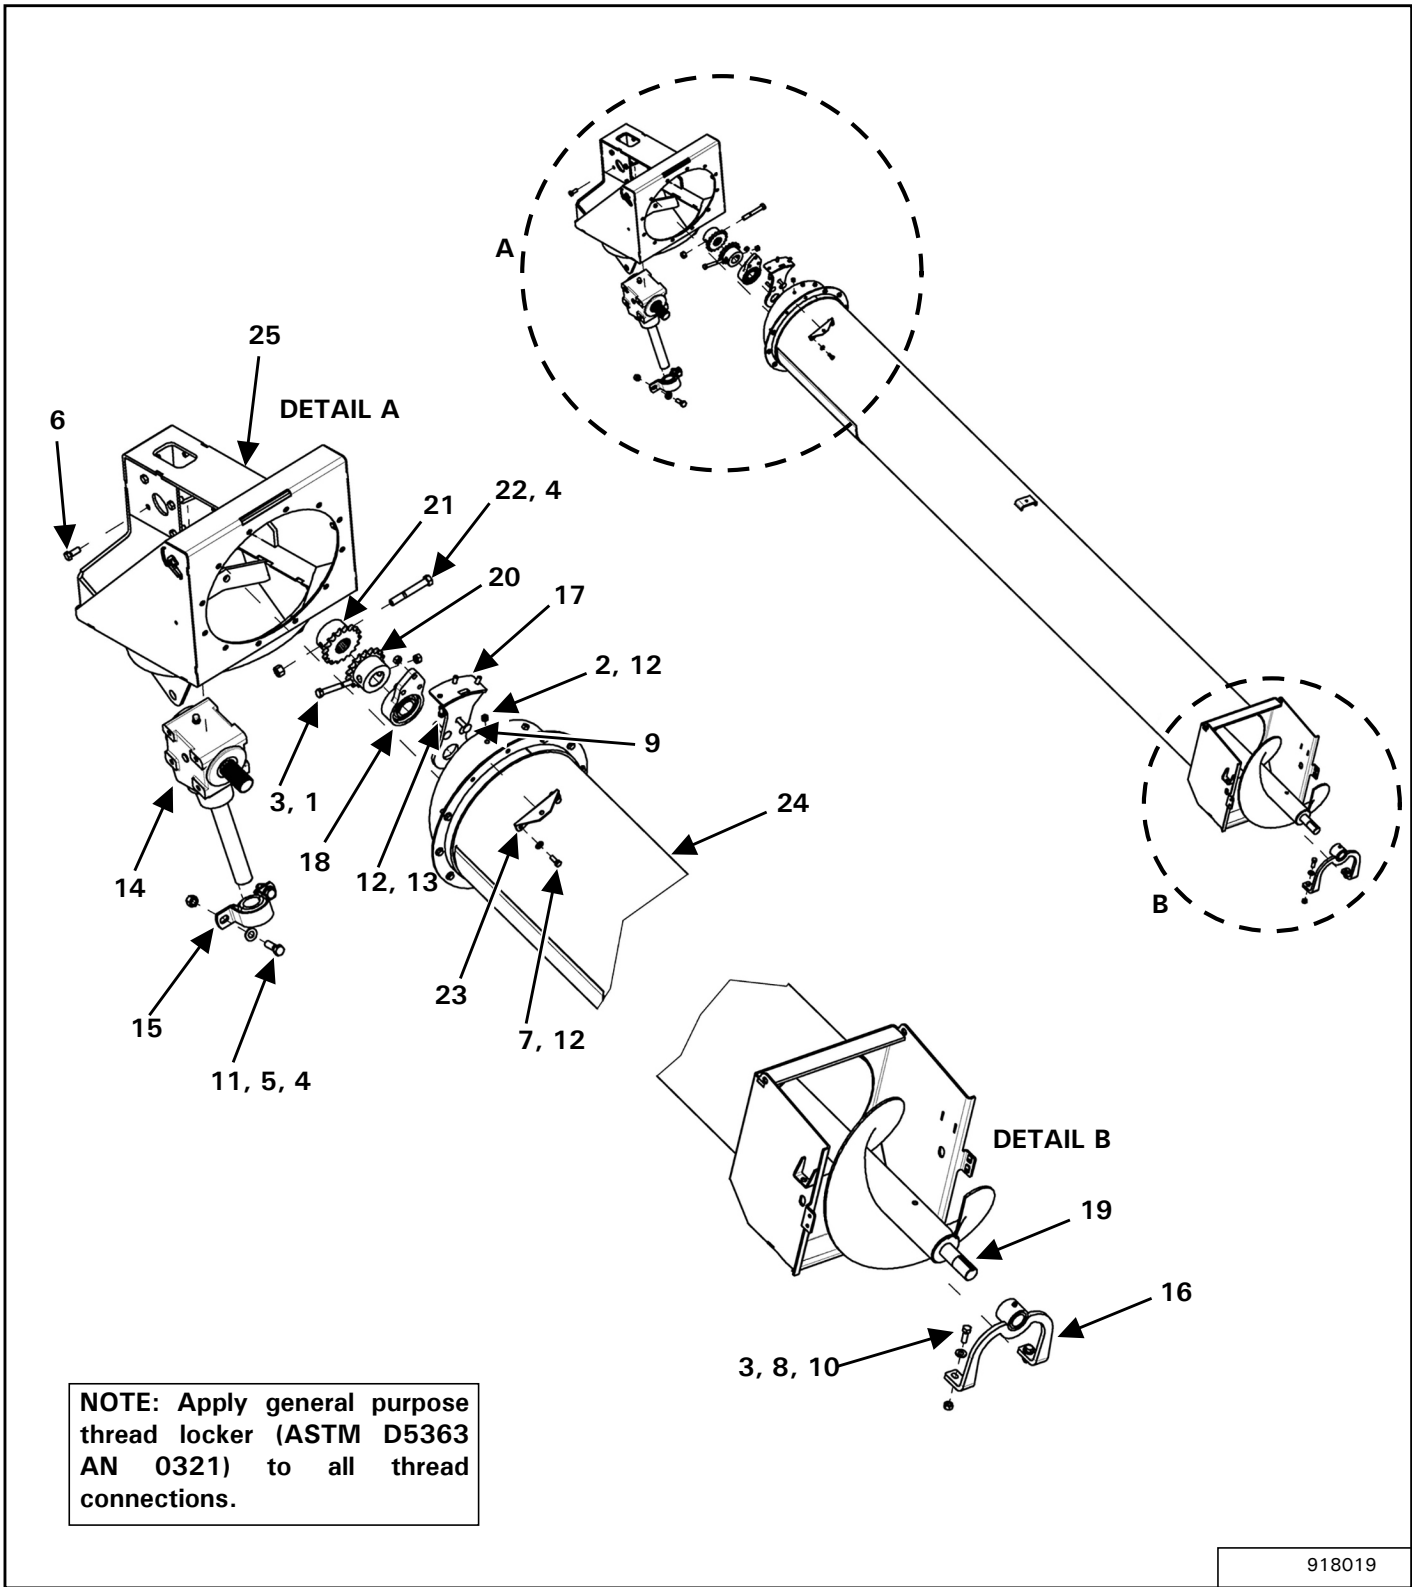


ITEM	PART NUMBER	DESCRIPTION	QTY
1	811752	BOLT, HEX 1/2" x 4" (PL)	1
2	812363	LOCK NUT 3/8" (PL)	3
3	812364	LOCK NUT 1/2" (PL)	3
4	812482	LOCK NUT 5/8" (PL)	3
5	812639	WASHER 0.625 SAE FLAT BS PL	2
6	81620	BOLT, HEX 1/2" x 1-1/4" (PL)	8
7	84039	FLAT WASHER, SAE 3/8" (PL)	12
8	84048	FLAT WASHER, SAE 1/2" (PL)	2
9	84243	BOLT, CARRIAGE GR5 7/16" x 2" (PL)	3
10	84277	BOLT, HEX 1/2" x 1-1/2" (PL)	2
11	84299	BOLT, HEX GR.5 5/8" x 2" (PL)	2
12	86170	BOLT, HEX GR.5 3/8" x 1" (PL)	15
13	86273	LOCK NUT 7/16" (PL)	3
14	905881	GEARBOX-UPPER, 4168	1
15	905951	BRG & FLANGE SET WOODEN 1-3/4"	1
16	914462	INTAKE FLTG HOLDER, WELDT	1
17	914731	HANGER BRKT, WELDT	1
18	914744	BEARING-1.75 ID FLANGE	1
19	915954	INTAKE FLTG, WELDT	1
20	917026	SPROCKET-COUPPLING 60H W/BORE	1
21	917027	SPROCKET-COUPPLING 60H W/SPLINE	1
22	917936	BOLT, HEX GR8 5/8" x 4-1/2" (PL)	1
23	918383	BRKT-INTAKE LIGHT MOUNT	1
24	924669	INT AUG TUBE, WELDT	1
25	930507	INPUT BOX ELBOW, WELDT	1

16124 INTAKE TUBE AND HOPPER ASSEMBLY

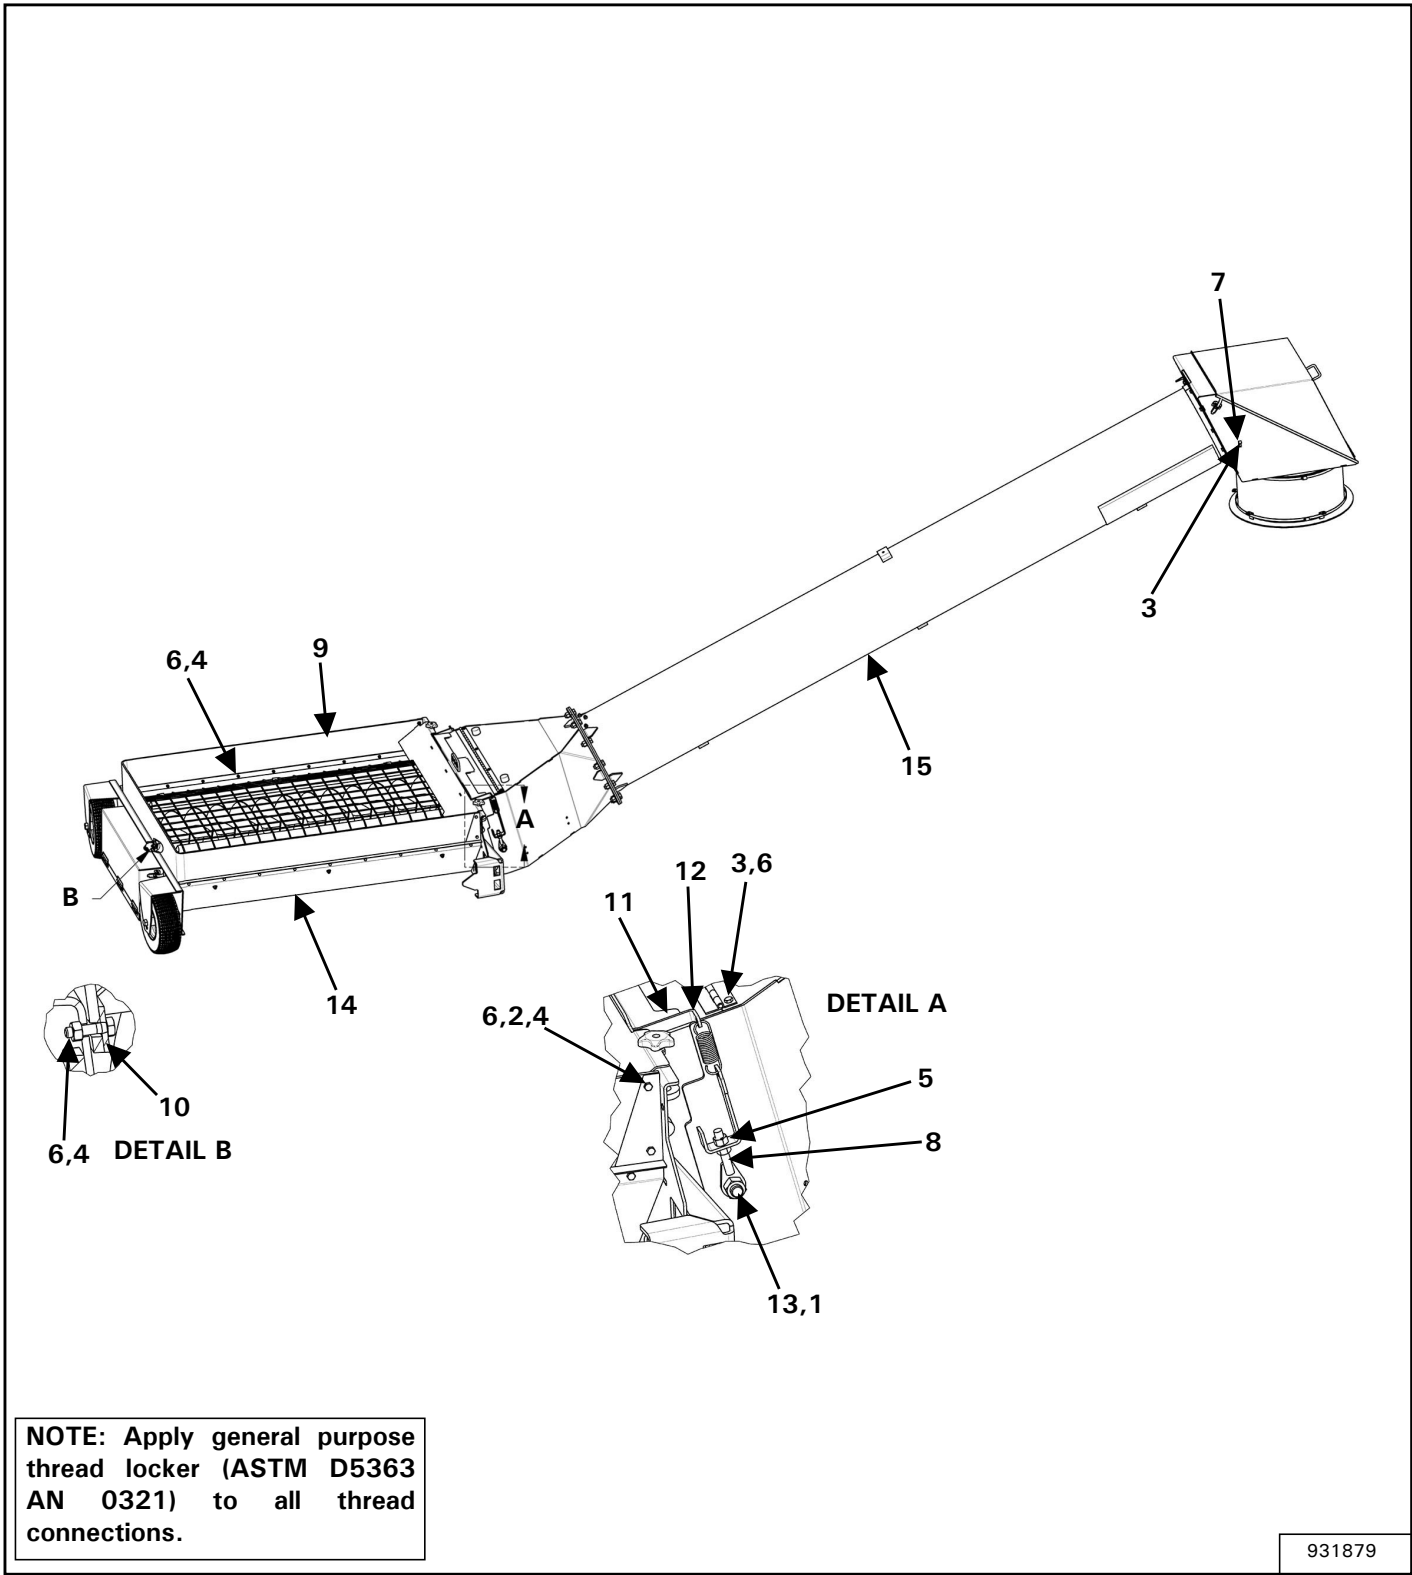


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812365	3/4" LOCK NUT (PL)	2
2	812624	1/4" FLAT WASHER PL	4
3	81525	1/4" x 3/4" HEX BOLT (PL)	6
4	81527	1/4" x 1" HEX BOLT (PL)	28
5	81636	1/2" HEX NUT (PL)	4
6	84498	1/4" LOCK NUT (PL)	32
7	912832	7/16" CABLE CLIP	1
8	914449	WELDT - HOPPER ADJUSTMENT	2
9	917748	RUBBER-HOPPER EDGING	1
10	917749L	PLATE: RUBBER REINFORCEMENT	3
11	9295511	WELDT-PIVOT COVER	1
12	929641	SPRING	2
13	967437	3/4" x 1-5/8" HEX BOLT (PL)	2
14	F2326	ASSY-16" LH HC HOPPER	1
15	F2327	ASSY-BS16 LH HC INTAKE AUGER	1

16124 INTAKE AUGER

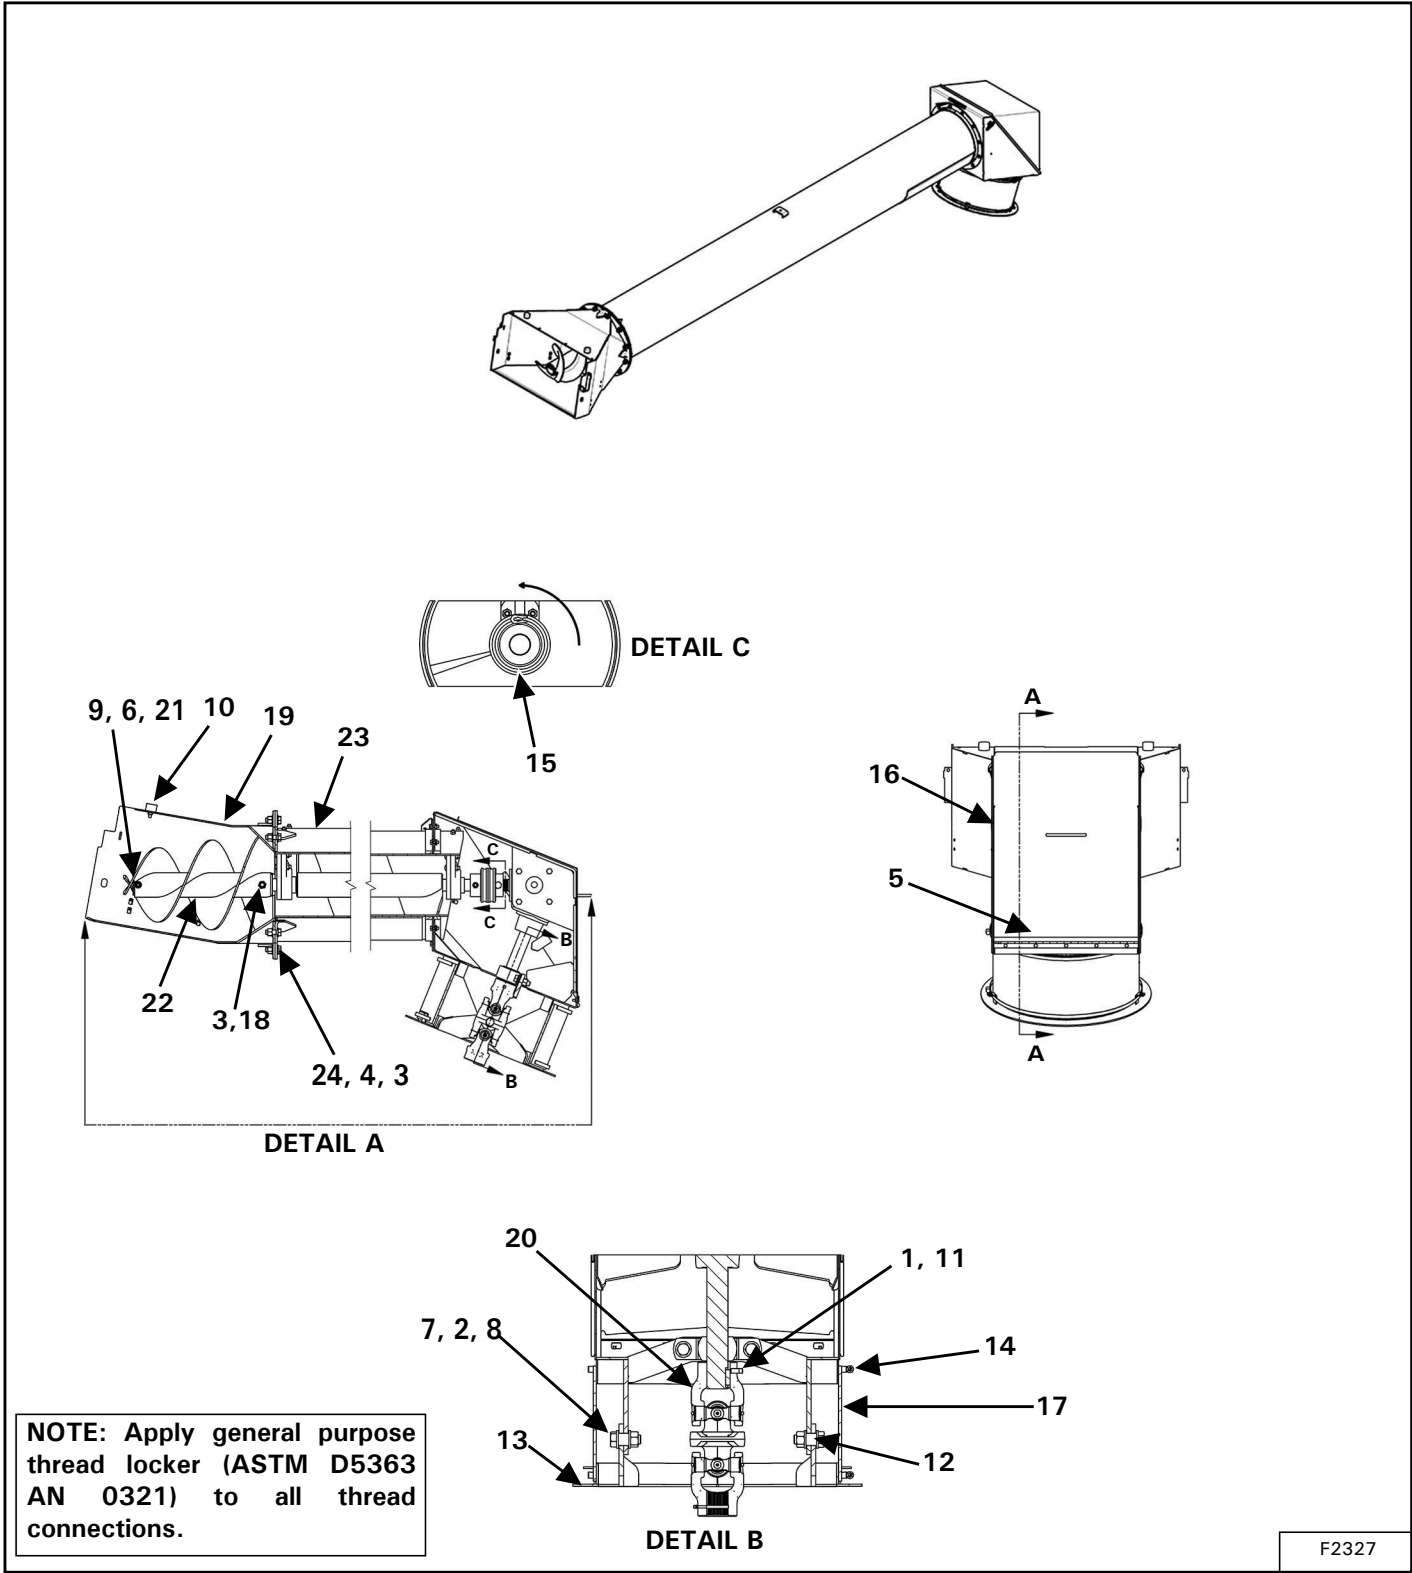


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812037	SETSCREW 3/8" x 3/4" SQ HD CUP (PL)	2
2	812365	LOCK NUT 3/4" (PL)	2
3	812482	LOCK NUT 5/8" (PL)	13
4	812639	WASHER 0.625 SAE FLAT BS PL	24
5	81525	BOLT, HEX 1/4" X 3/4" (PL)	5
6	84041	FLAT WASHER, SAE 7/16" (PL)	3
7	84050	FLAT WASHER, SAE 3/4"(PL)	4
8	84467	BOLT, HEX 3/4" x 2" (PL)	2
9	86273	LOCK NUT 7/16" (PL)	1
10	902248	RUBBER STOP BLOCK 1.5" x 1.0"	2
11	909294	KEY - INT AUG TO MAIN AUG 3/8" x 3/8" x 1-1/4"	1
12	912503	UNDERCARRIAGE SPACER	2
13	914405	INPUT BOX PIVOT, WELDT	1
14	914429	CLAMP HOSE-2.06 TO 21.25	2
15	914443	CHAIN-COUPLING DOUBLE 60H	1
16	916894	ELBOW ACCESS DOOR, WELDT	1
17	917038	COVER-INPUT BOX PIVOT	1
18	917936	BOLT, 5/8" x 4-1/2" (PL) GR8	1
19	929560	TRANSITION,WELDT	1
20	930526	DOUBLE JOINT - 50 DEGREE CAT 4	1
21	931821	BOLT, HEX 7/16" x 5" (PL) GR8	1
22	931858	WELDT-LH TRANSITION FLIGHTING	1
23	931863	LH HC INPUT TUBE ASSY	1
24	967285	BOLT, HEX 5/8" x 1-3/4" GR8 (PL)	12

16124 HIGH CAPACITY INPUT TUBE ASSEMBLY

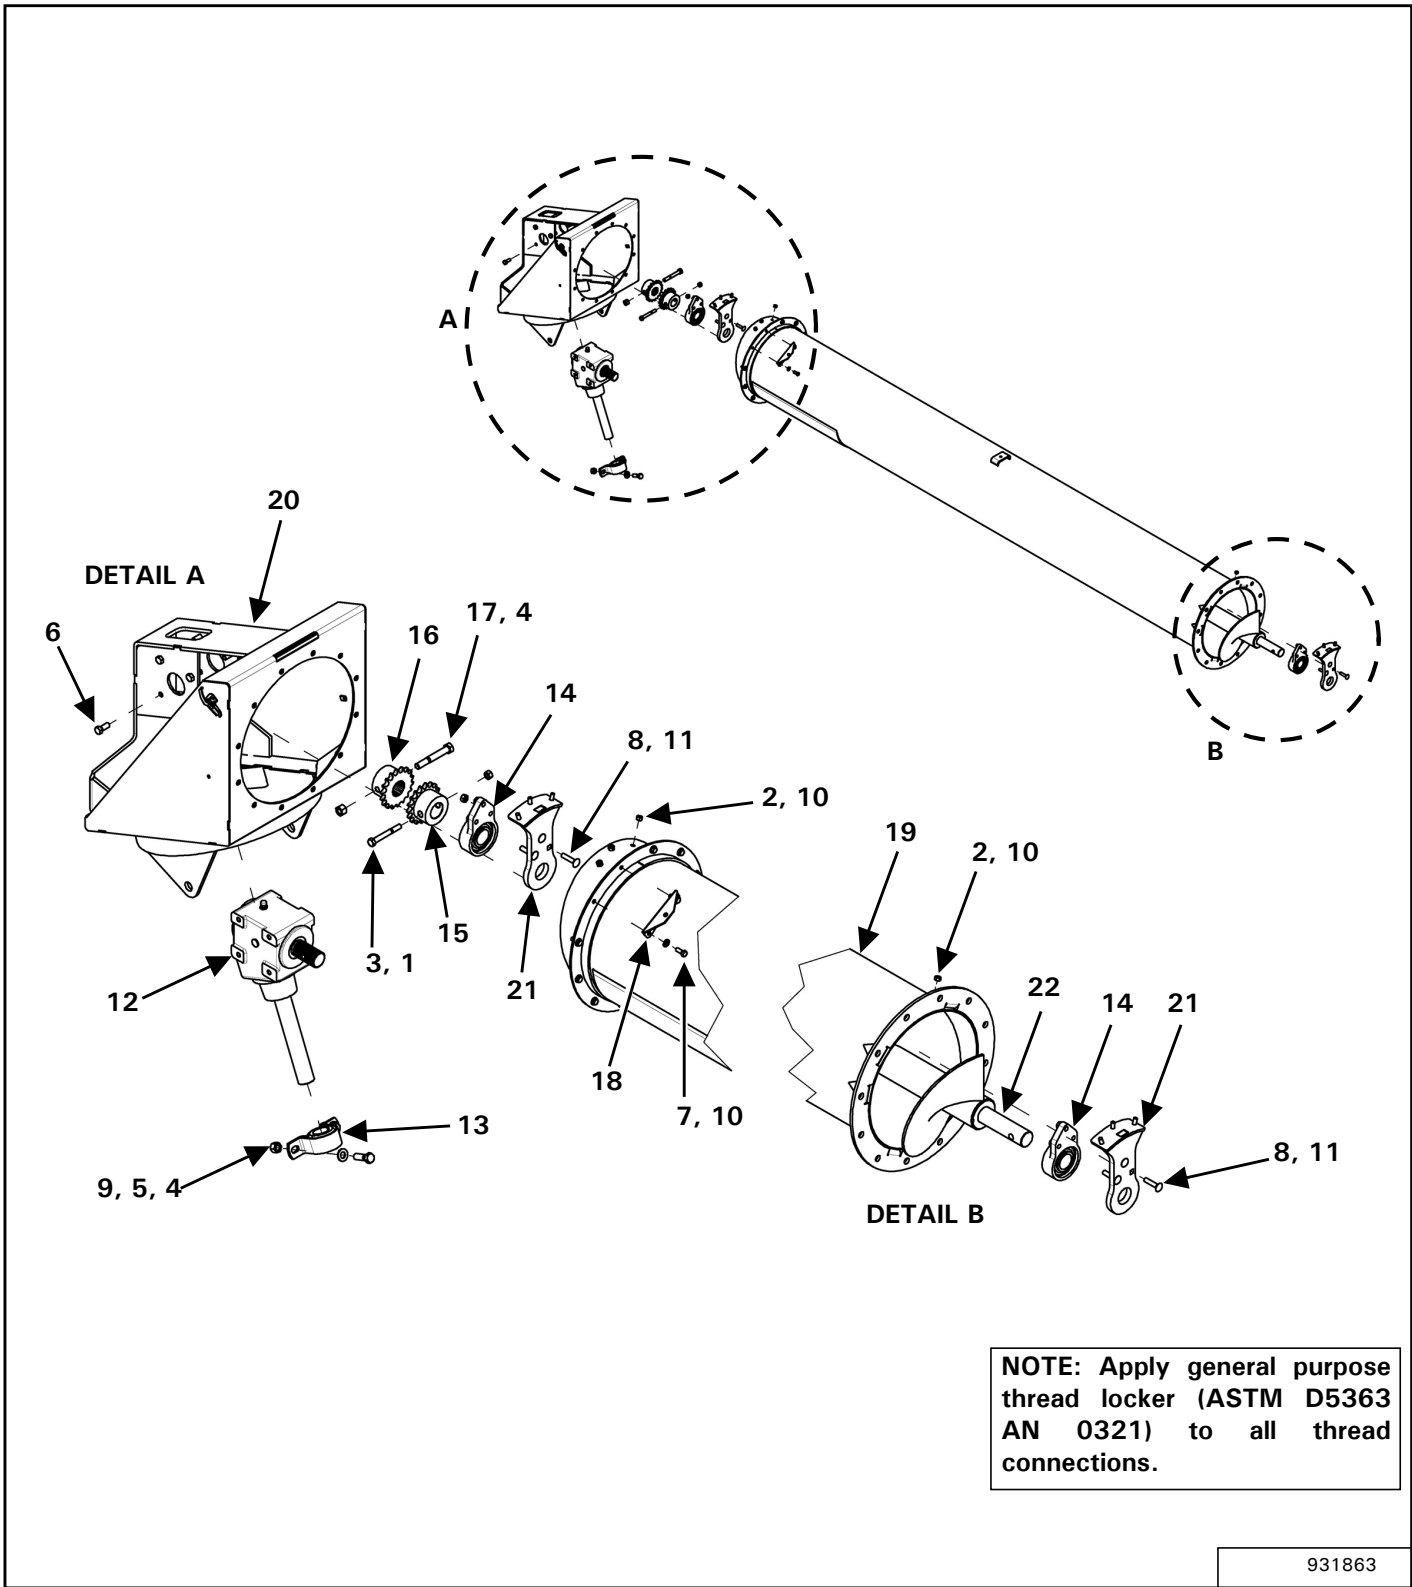

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811752	BOLT, HEX 1/2" x 4" (PL)	1
2	812363	LOCK NUT 3/8" (PL)	6
3	812364	LOCK NUT 1/2" (PL)	1
4	812482	LOCK NUT 5/8" (PL)	3
5	812639	WASHER 0.625 SAE FLAT BS PL	2
6	81620	BOLT, HEX 1/2" x 1-1/4" PL	8
7	84039	WASHER - 3/8" SAE FLAT (PL)	12
8	84243	BOLT, CARRIAGE 7/16" x 2" GR5 (PL)	6
9	84299	BOLT, HEX GR.5 5/8"x 2" (PL)	2
10	86170	BOLT, HEX GR.5 3/8" x 1" (PL)	18
11	86273	LOCK NUT 7/16" (PL)	6
12	905881	GEARBOX-UPPER, 4168	1
13	905951	BRG & FLANGE SET WOODEN 1-3/4"	1
14	914744	BEARING-1.75 ID FLANGE	2
15	917026	SPROCKET-COUPLING 60H W/BORE	1
16	917027	SPROCKET-COUPLING 60H W/SPLINE	1
17	917936	BOLT, HEX GR 8 - 5/8" x 4-1/2" (PL)	1
18	918383	BRKT-INTAKE LIGHT MOUNT	1
19	929622	HC INT AUGER TUBE, WELDT	1
20	930507	INPUT BOX ELBOW, WELDT	1
21	930660	HANGER BRKT, WELDT	2
22	931862	LH INTAKE FLTG, WELDT	1


1684 MAIN TUBE ASSEMBLY

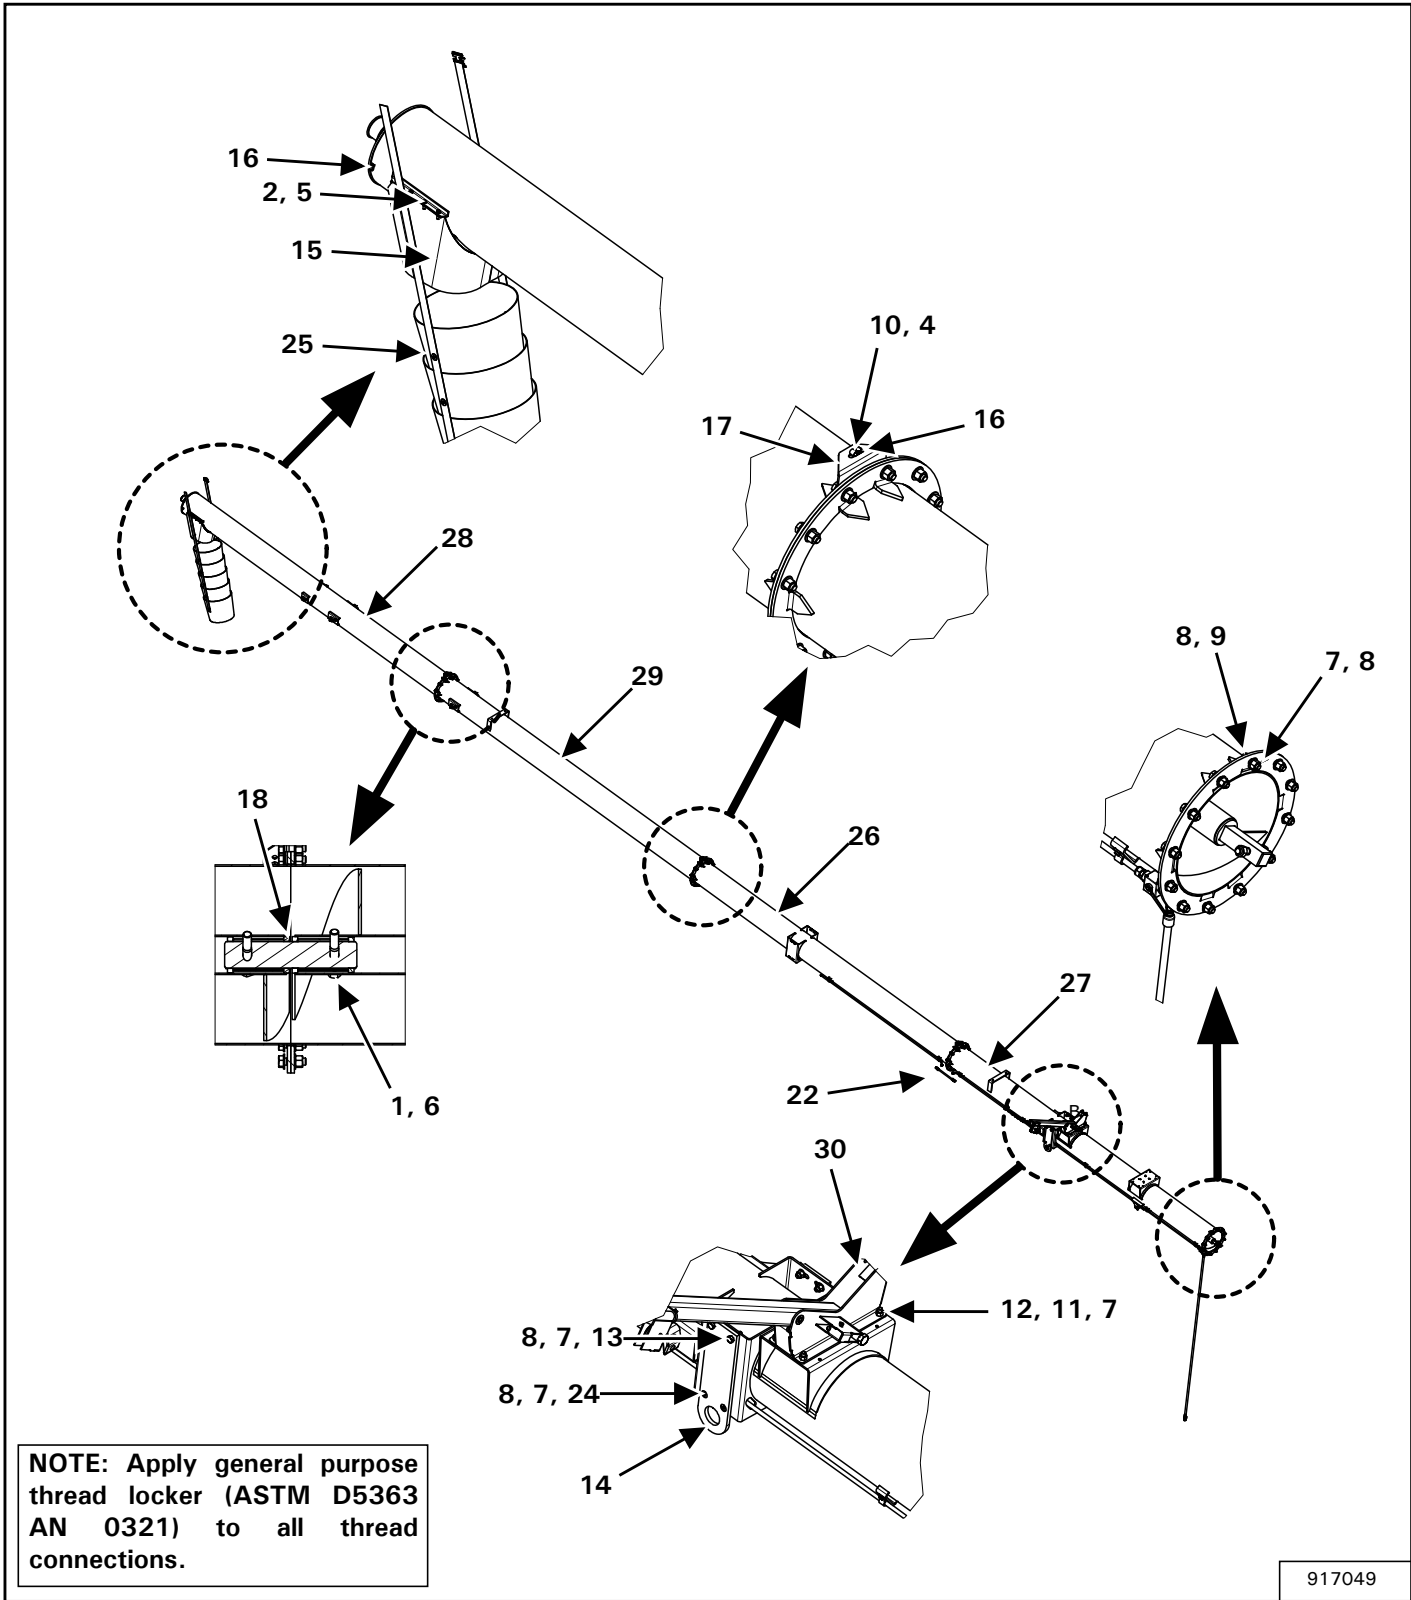

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811790	BOLT, 3/4" x 4-1/2" HEX GR 5 (PL)	8
2	811792	BOLT, 3/8" x 1-1/2" HEX GR.5 (PL)	8
3	812208	QUICK CONNECT NIPPLE, 1/2" BODY 1/2"-14 NPTF	1
4	812362	LOCK NUT, 5/16" (PL)	3
5	812363	LOCK NUT, 3/8" (PL)	8
6	812365	LOCK NUT, 3/4" (PL)	8
7	812482	LOCK NUT, 5/8" (PL)	60
8	812639	FLAT WASHER, 0.625 SAE BS (PL)	104
9	812946	BOLT, 0.625 UNC x 2.00 HEX GR 8 (PL)	48
10	81549	BOLT, 5/16" x 3/4" HEX (PL)	3
11	81678	FLAT WASHER, 5/8" STD (PL)	4
12	84270	BOLT, 5/8" x 1-3/4" HEX (PL)	4
13	84299	BOLT, 5/8" x 2" HEX GR 5 (PL)	4
14	904736	UNDRRCARRIAGE CONNECTOR PLATE, 5/8" x 6" x 20-1/2"	2
15	906130	SPOUT	1
16	912832	CABLE CLIP, 7/16"	4
17	914882	CABLE MOUNT BRACKET, BS16104	3
18	915939	SQUARE FLIGHTING SHAFT	4
19	917746	HOSE, 08 x 08 MNPT x 08 MNPT	1
20	960057	2 WAY BALL VALVE, 08 FNPT	1
21	960152	STRAIGHT ADAPTOR, 10 MJIC x 08 MNPT	1
22	960162	HOSE, 08 x 10 MJIC x 10 MJIC	1
23	960585	90 DEGREE STREET ELBOW, 1/2" (STEEL)	1
24	967284	BOLT, 5/8" x 1-3/4" FLAT HEAD SOCKET (PL)	4
25	F0678	16" DOWNSPOUT ASSEMBLY	1
26	F1471 *	#2 TUBE ASSEMBLY	1
27	F1472 *	#1 TUBE ASSEMBLY	1
28	F1626 *	#4 TUBE ASSEMBLY	1
29	F1628 *	#3 TUBE ASSEMBLY	1
30	F1632 *	BOOM LIFT ASSEMBLY	1

*See the following pages for individual part break downs.

16104 MAIN TUBE ASSEMBLY

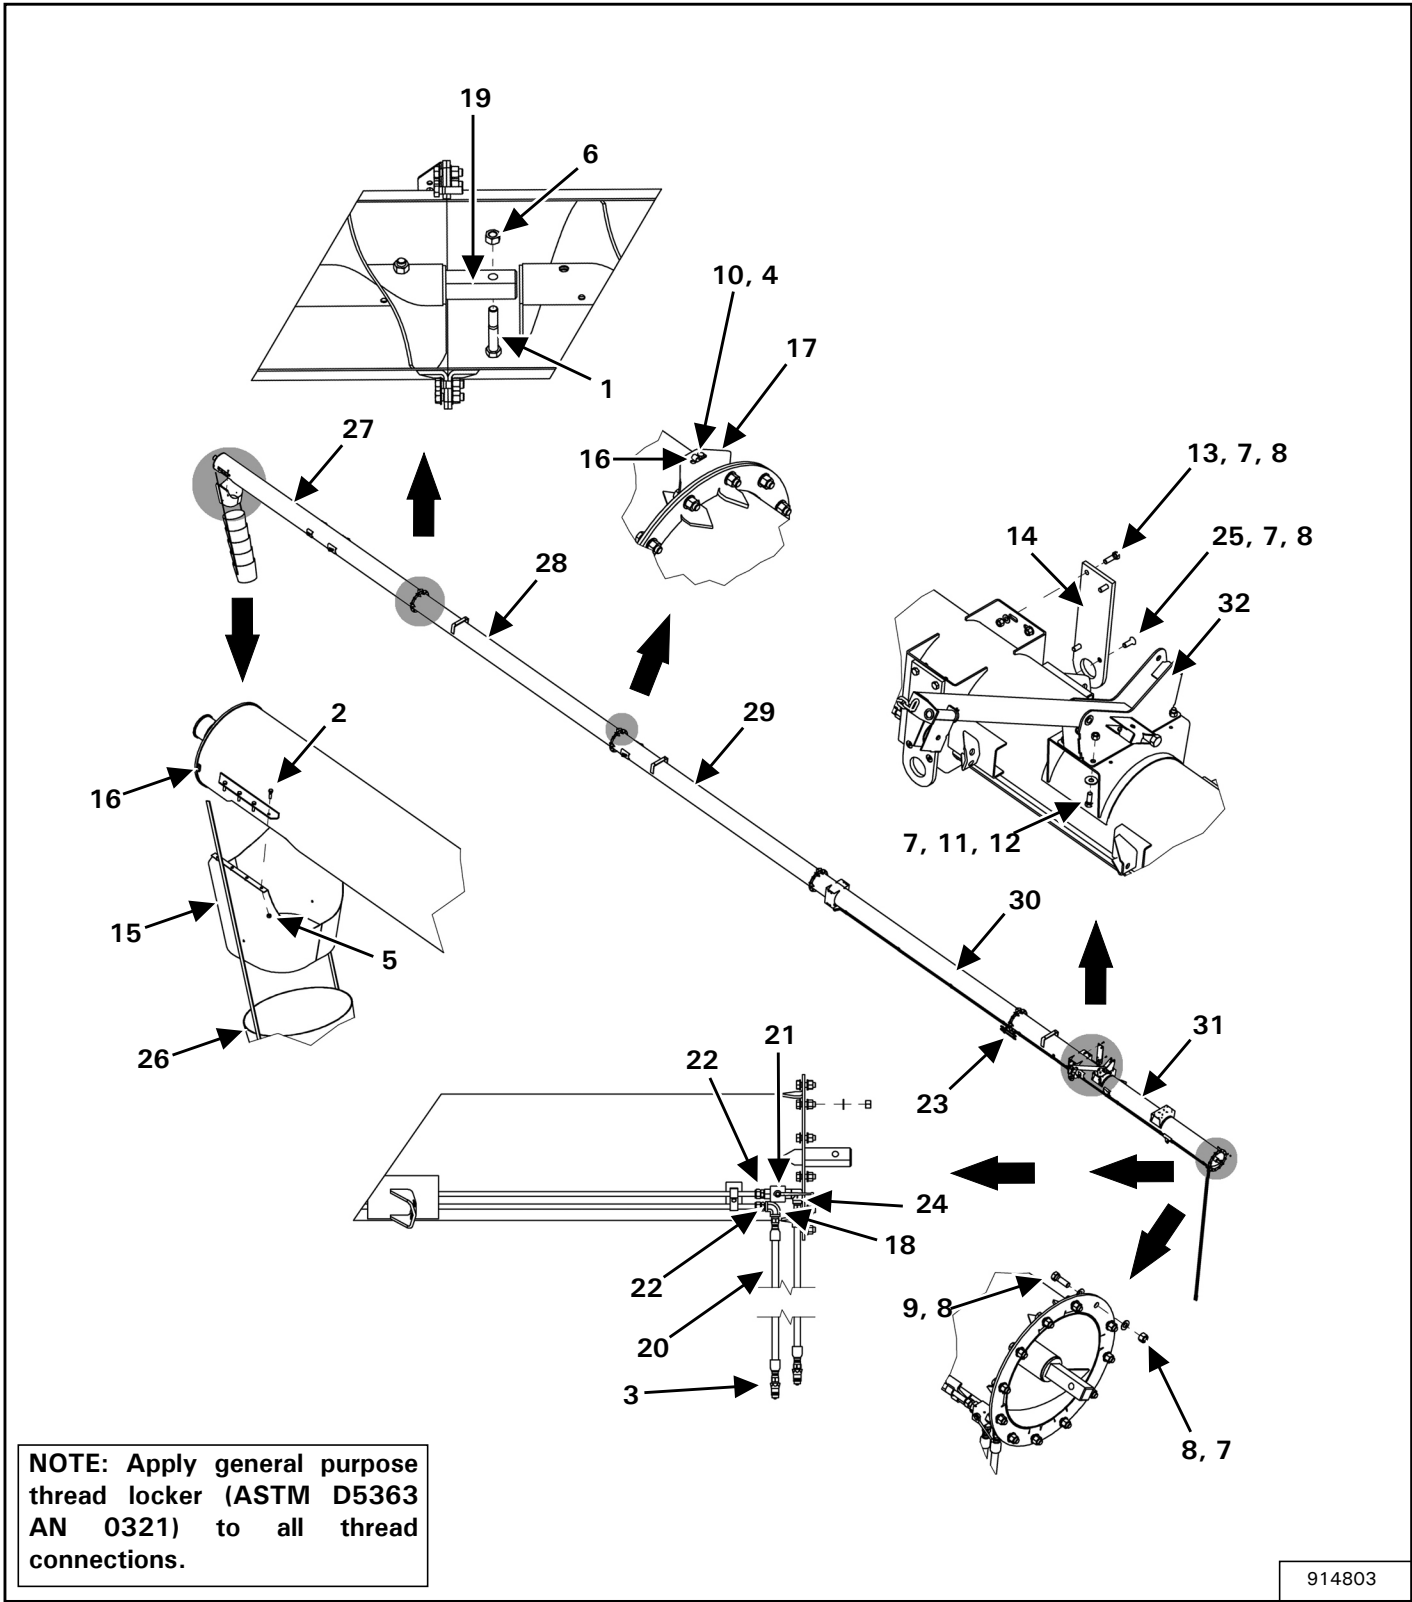

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811790	BOLT, 3/4" x 4-1/2" HEX GR5 (PL)	9
2	811792	BOLT, 3/8" x 1-1/2" HEX GR5 (PL)	8
3	812208	QUICK CONNECT NIPPLE, 1/2" BODY 1/2"-14 NPTF	2
4	812362	LOCK NUT, 5/16" (PL)	4
5	812363	LOCK NUT, 3/8" (PL)	8
6	812365	LOCK NUT, 3/4" (PL)	9
7	812482	LOCK NUT, 5/8" (PL)	72
8	812639	FLAT WASHER, 5/8" SAE (PL)	128
9	812946	BOLT, 5/8" UNC x 2.00" HEX GR8 (PL)	60
10	81549	BOLT, 5/16" x 3/4" HEX (PL)	4
11	81678	FLAT WASHER, 5/8" STD (PL)	4
12	84270	BOLT, 5/8" x 1-3/4" HEX (PL)	4
13	84299	BOLT, 5/8" x 2" HEX GR5 (PL)	4
14	904736	UNDERCARRIAGE CONNECTOR PLATE, 5/8" x 6" x 20-1/2"	2
15	906130	SPOUT	1
16	912832	CABLE CLIP, 7/16"	5
17	914882	CABLE MOUNT BRACKET, BS16104	4
18	914930	ELBOW, #8 FPT x #8 FPT	1
19	915939	SHAFT, FLIGHTING SQUARE	5
20	917746	HOSE, #8 x #8 MNPT x #8 MNPT	2
21	960057	2 WAY BALL VALVE, #8 FNPT	1
22	960152	ADAPTOR, STRAIGHT #10 MJIC x #8 MNPT	2
23	960162	HOSE, #8 x #10 MJIC x #10 MJIC	2
24	960585	1/2" x 90 DEGREE STREET ELBOW (STEEL)	1
25	967284	BOLT, FLAT HEAD SOCKET 5/8" x 1-3/4" (PL)	4
26	F0678	16" DOWNSPOUT ASSEMBLY	1
27	F1626*	TUBE #5 ASSEMBLY	1
28	F1627*	TUBE #4 ASSEMBLY	1
29	F1628*	TUBE #3 ASSEMBLY	1
30	F1629*	TUBE #2 ASSEMBLY	1
31	F1633*	TUBE #1 ASSEMBLY	1
32	F1632*	BOOM LIFT ASSEMBLY	1

*See the following pages for individual part break downs.

This diagram illustrates the exploded view of a mechanical assembly. The main components are numbered as follows:

- 26**: Main shaft or arm.
- 25**: Longitudinal component, possibly a guide or support.
- 24**: Component at the lower end of the shaft.
- 23**: Component at the bottom of the assembly.
- 27**: Component at the top right of the assembly.
- 2**, **4**: Components near the top left.
- 13**: Component on the left side.
- 22**: Component on the left side, below 13.
- 6**, **8**, **9**: Components at the top right, near detail B.
- 6**, **11**, **12**: Components near detail E.
- 7**, **10**, **17**: Components near detail H.
- 14**, **18**, **19**, **21**: Components near detail F.
- 15**, **20**: Components near detail C and D.


The diagram includes eight detailed callouts:

- DETAIL A**: Shows a close-up of the top left assembly with parts 2, 4, and 13.
- DETAIL B**: Shows a close-up of the top right assembly with parts 6, 8, and 9.
- DETAIL C**: Shows a close-up of the middle left assembly with parts 15 and 20.
- DETAIL D**: Shows a close-up of the middle left assembly with parts 15 and 20.
- DETAIL E**: Shows a close-up of the middle right assembly with parts 6, 11, and 12.
- DETAIL F**: Shows a close-up of the bottom left assembly with parts 14, 18, 19, and 21.
- DETAIL H**: Shows a close-up of the bottom right assembly with parts 7, 10, and 17.

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.


929851

ITEM	PART NUMBER	DESCRIPTION	QTY
1	811790	BOLT, 3/4" x 4-1/2" HEX GR5 (PL)	8
2	811792	BOLT, 3/8" x 1-1/2" HEX GR5 (PL)	8
3	812208	QUICK CONNECT NIPPLE, 1/2" BODY 1/2"-14 NPTF	2
4	812363	LOCK NUT, 3/8" (PL)	8
5	812365	LOCK NUT, 3/4" (PL)	8
6	812482	LOCK NUT, 5/8" (PL)	54
7	812624	1/4" FLAT WASHER PL	2
8	812639	FLAT WASHER, 5/8" SAE (PL)	100
9	812946	BOLT, 5/8" UNC x 2.00" HEX GR8 (PL)	50
10	81525	1/4" x 3/4" HEX BOLT (PL)	2
11	81678	FLAT WASHER, 5/8" STD (PL)	4
12	84270	BOLT, 5/8" x 1-3/4" HEX (PL)	4
13	906130	SPOUT	1
14	914930	ELBOW, #8 FPT x #8 FPT	1
15	915939	SHAFT, FLIGHTING SQUARE	4
16	917746	HOSE, #8 x #8 MNPT x #8 MNPT	2
17	933069L	PLATE-COVER	1
18	960057	2 WAY BALL VALVE, #8 FNPT	1
19	960152	ADAPTOR, STRAIGHT #10 MJIC x #8 MNPT	2
20	960162	HOSE, #8 x #10 MJIC x #10 MJIC	2
21	960585	1/2" x 90 DEGREE STREET ELBOW (STEEL)	1
22	F0678	16" DOWNSPOUT ASSEMBLY	1
23	F2455	TUBE #1 ASSEMBLY	1
24	F2276	TUBE #2 ASSEMBLY	1
25	F2277	TUBE #3 ASSEMBLY	1
26	F2278	TUBE #4 ASSEMBLY	1
27	F2464	BOOM LIFT ASSEMBLY	1

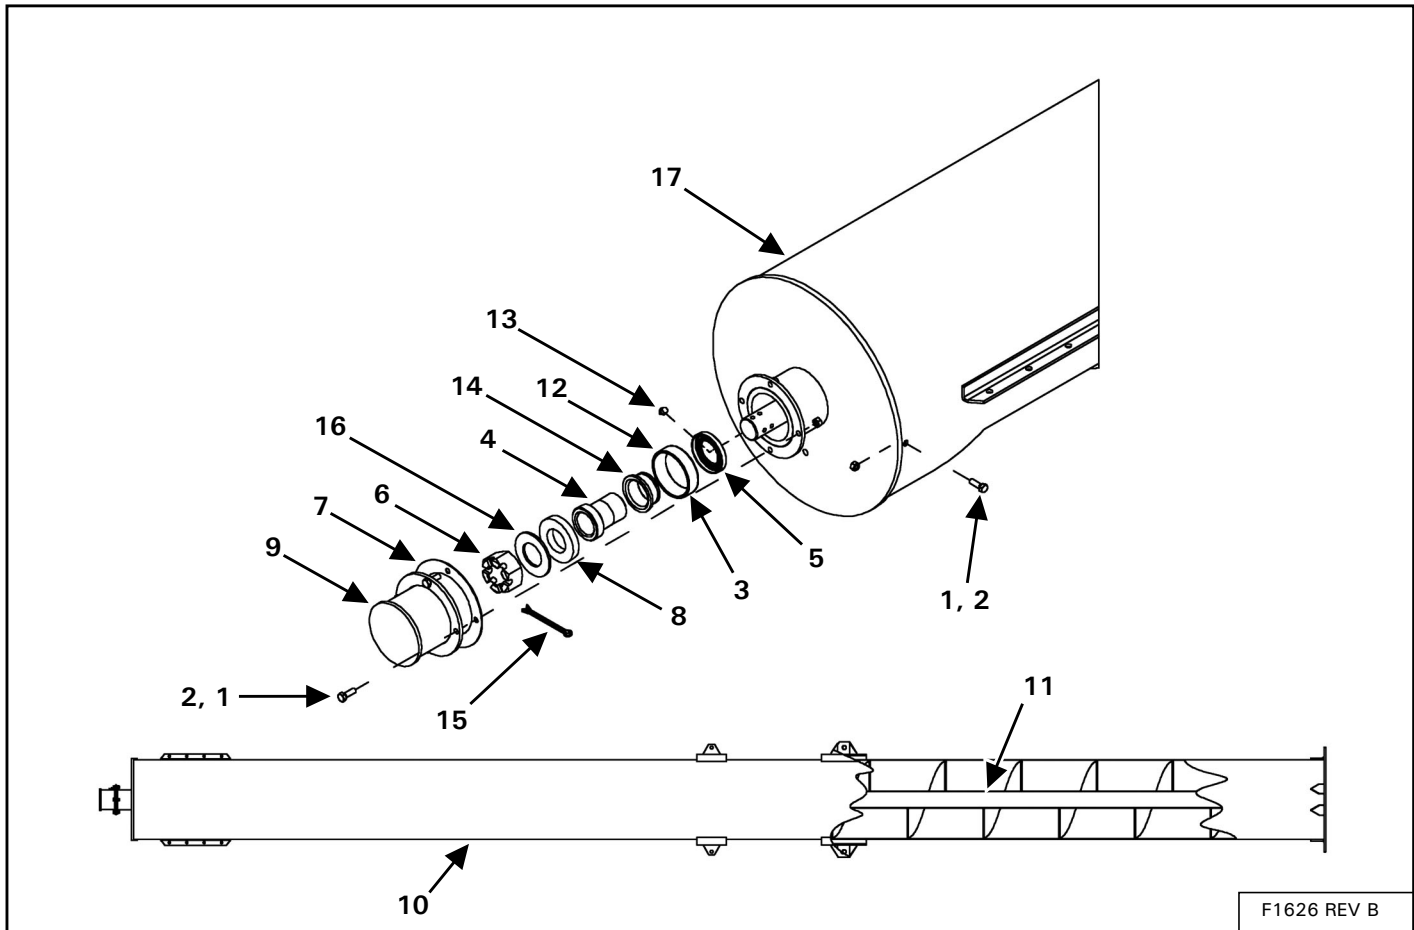1684 TUBE #4, 16104 TUBE #5 ASSEMBLY


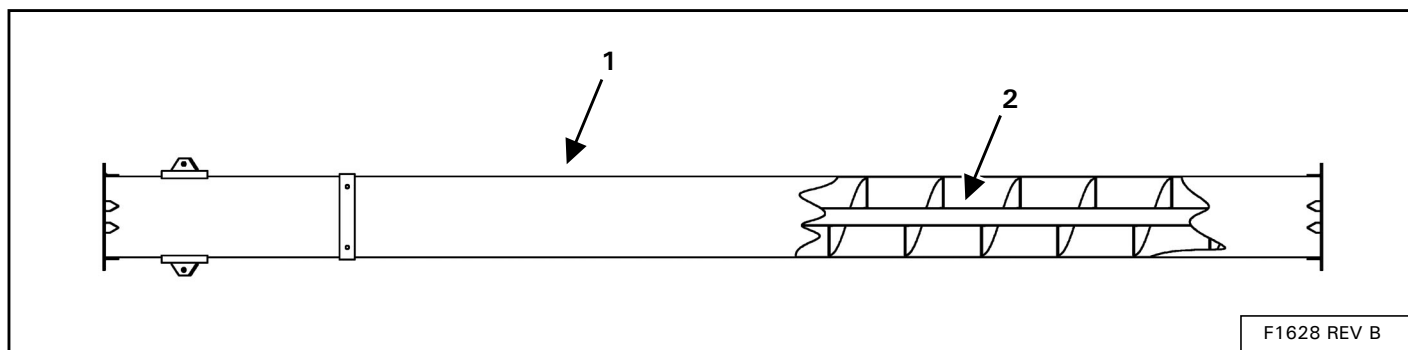
ITEM	PART NUMBER	DESCRIPTION	QTY
1	812026	5/16" x 1" HEX BOLT (PL)	6
2	812362	5/16" LOCK NUT (PL)	6
3	904902	GREASE GRADE 2	10 g
4	905906	END BEARING SLEEVE 1.515" ID x 2-1/4" OD x 2.88"	1
5	907052	OIL SEAL (CR17617)	1
6	907053	NUT, 1-1/2" SLOTTED HEX NF GR 2 (BR)	1
7	907642	RUBBER GASKET (CTD SE49)	1
8	914550L	PLATE - SPACER	1
9	914556	TOP FLANGE CAP WELDMENT	1
10	914637	TUBE #4 1684, #5 16104 WELDMENT	1
11	929865	FLIGHTING WELDMENT	1
12	965252	INNER BEARING CUP (25520)	1
13	967164	DRIVE-IN GREASE ZERK	1
14	967205	INNER BEARING CONE (25580)	1
15	9812436	COTTER PIN, 1/4" x 1-1/2" (PL)	1
16	9812445	NARROW RIM WASHER, 1-1/2" x 10 GA (BR)	1
17	914554	TOP COVER, WELDMENT	1

16104 TUBE #4 ASSEMBLY

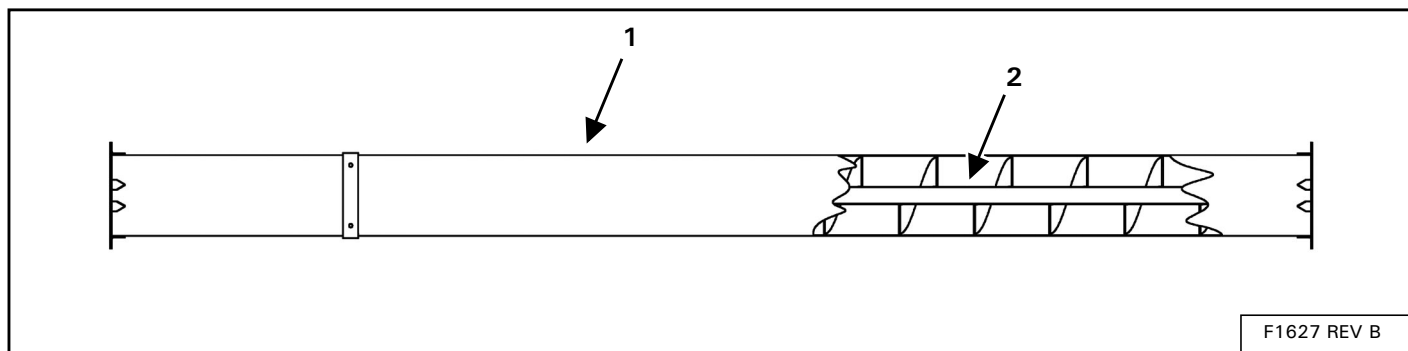


ITEM	PART NUMBER	DESCRIPTION	QTY
1	914636	TUBE #4 WELDMENT	1
2	929864	FLIGHTING WELDMENT	1

1684 & 16104 TUBE #3 ASSEMBLY




ITEM	PART NUMBER	DESCRIPTION	QTY
1	914635	TUBE #3 WELDMENT	1
2	929864	FLIGHTING WELDMENT	1

1684 TUBE #2 ASSEMBLY

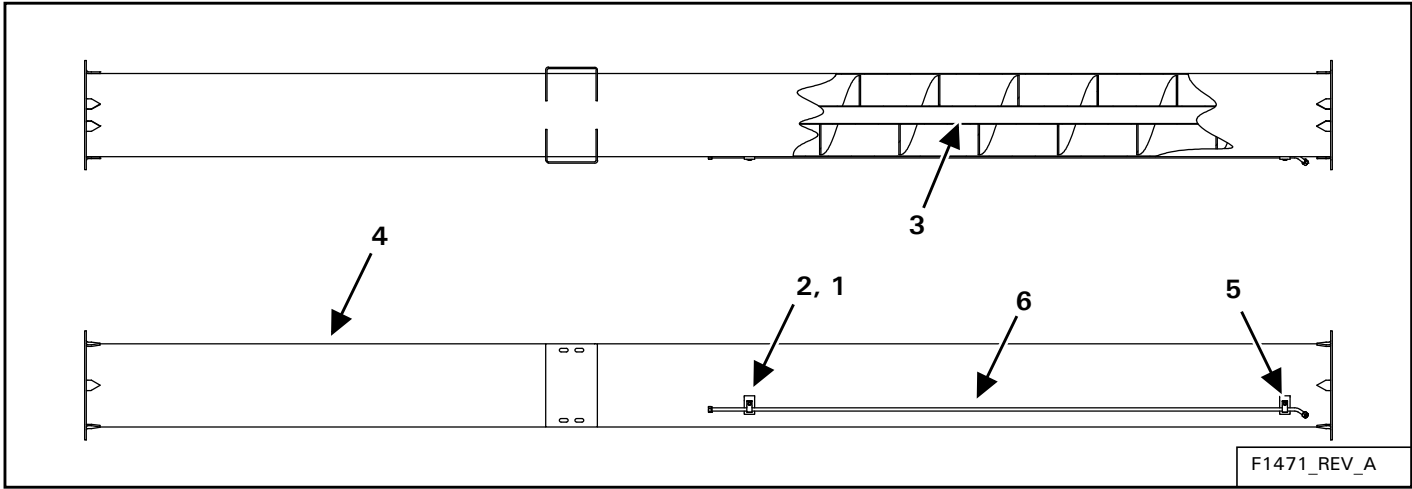


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812363	LOCK NUT, 3/8" (PL)	2
2	86170	BOLT, 3/8" x 1" HEX GR 5 (PL)	2
3	929864	FLIGHTING WELDMENT	1
4	917066	TUBE WELDMENT #2	2
5	960140	HYDRAULIC LINE CLAMP	2
6	960200	HYDRAULIC LINE, 5/8" OD x 9'-7"	1

16104 TUBE #2 ASSEMBLY

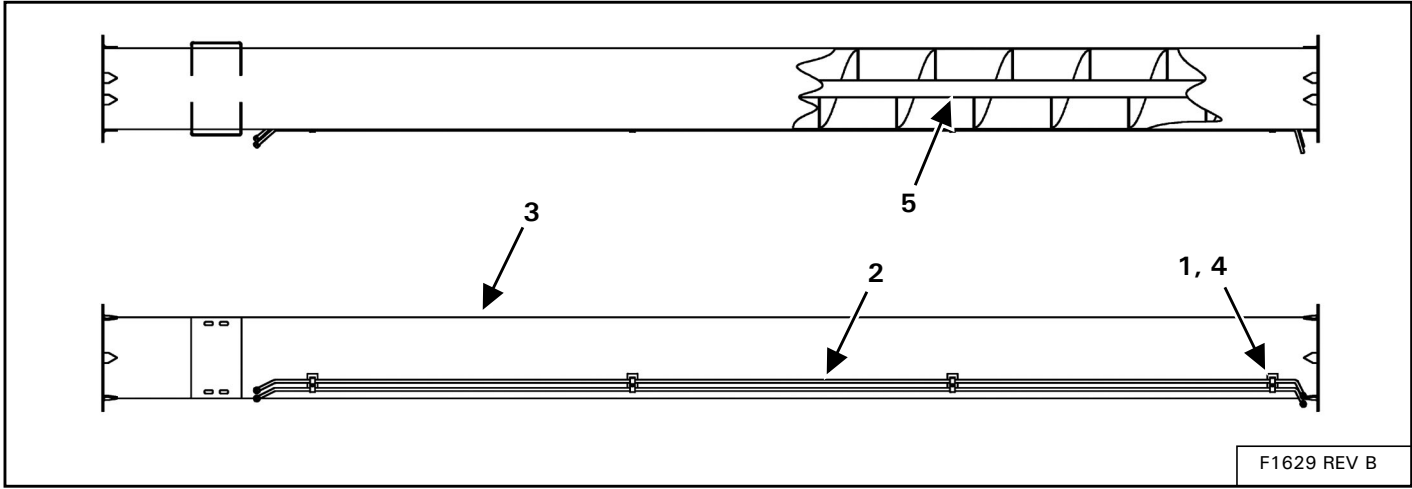


ITEM	PART NUMBER	DESCRIPTION	QTY
1	81549	BOLT, 5 16" x 3/4" HEX (PL)	4
2	906105	HYDRAULIC LINE, 5 8" OD x 19'-2"	2
3	914634	TUBE WELDMENT #2	1
4	914818	BRACKET, HYDRAULIC HOSE CLAMP	4
5	929864	FLIGHTING WELDMENT	1

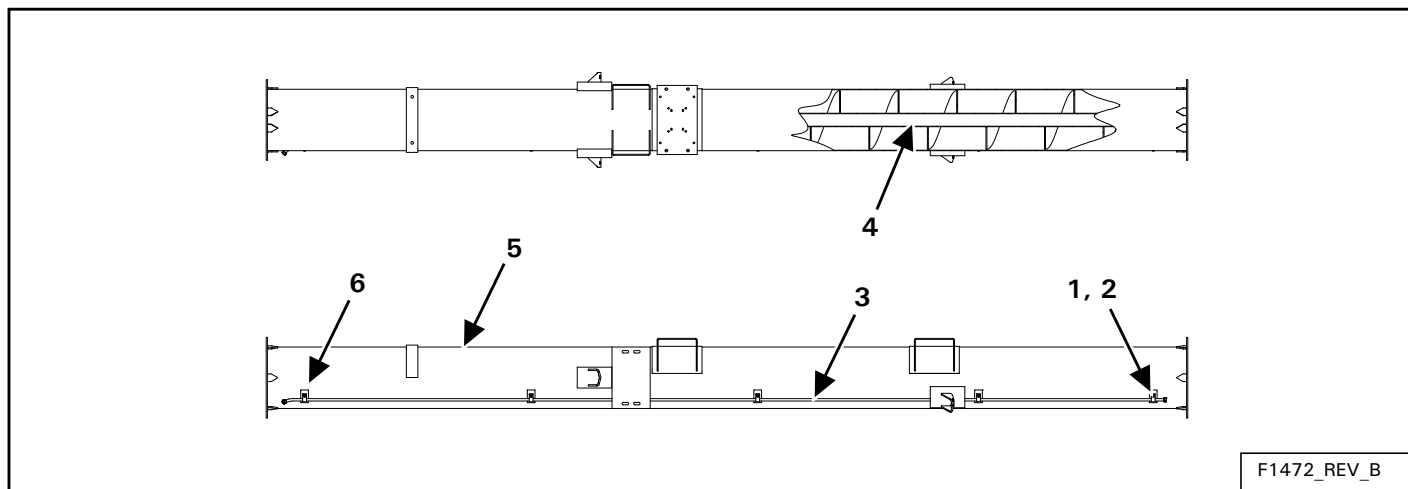1684 TUBE #1 ASSEMBLY


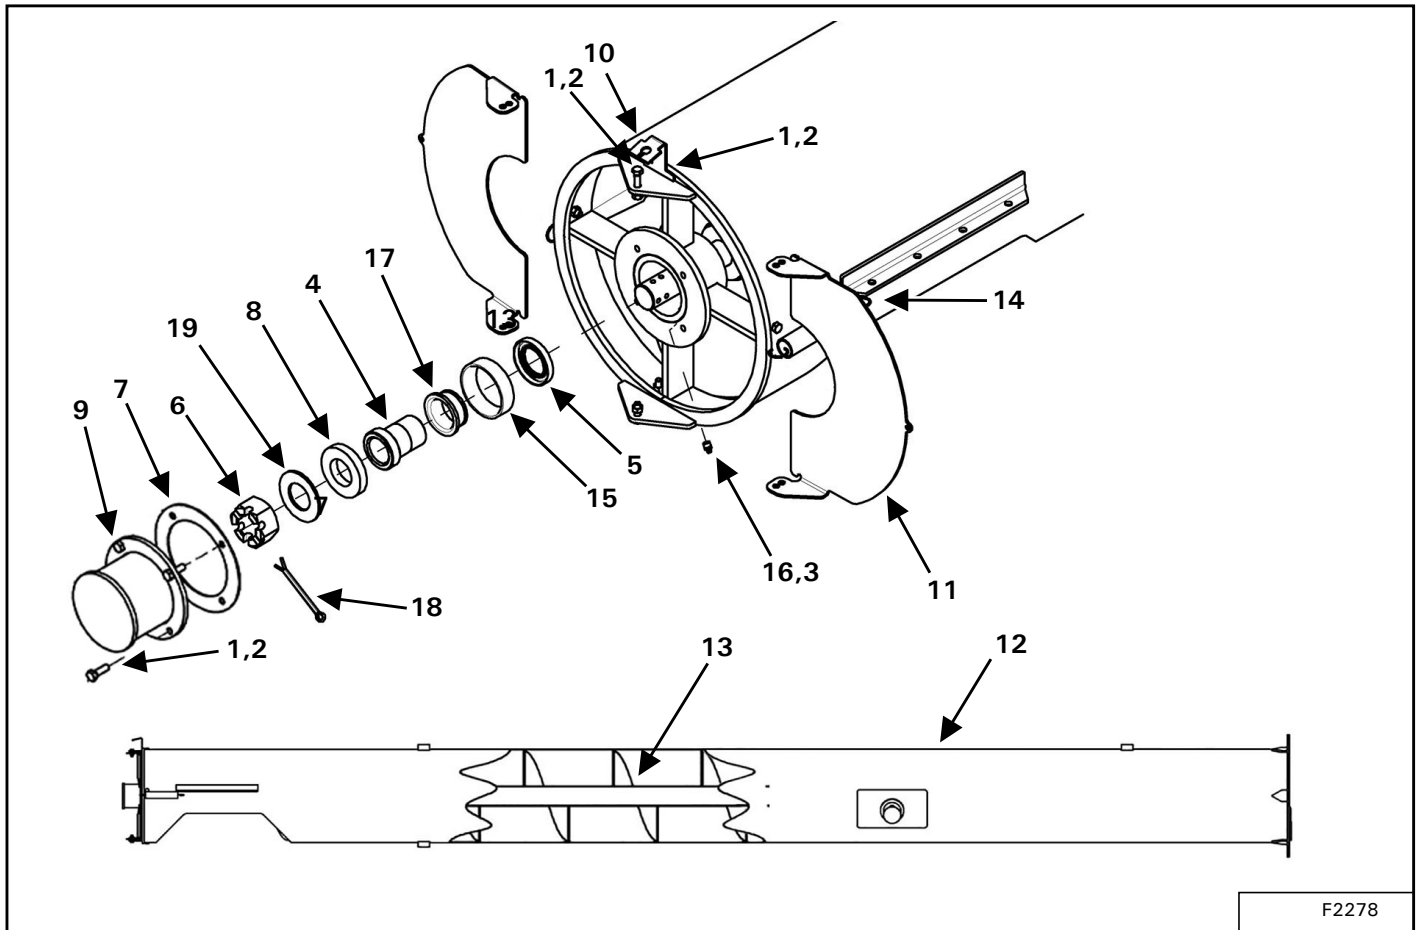
F1472_REV_B

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812363	LOCK NUT, 3/8" (PL)	5
2	86170	BOLT, 3/8" x 1" HEX GR 5 (PL)	5
3	906104	HYDRAULIC LINE, 5/8" OD x 19'-2"	1
4	929864	FLIGHTING WELDMENT	1
5	917068	TUBE WELDMENT #1	1
6	960140	HYDRAULIC LINE CLAMP	5

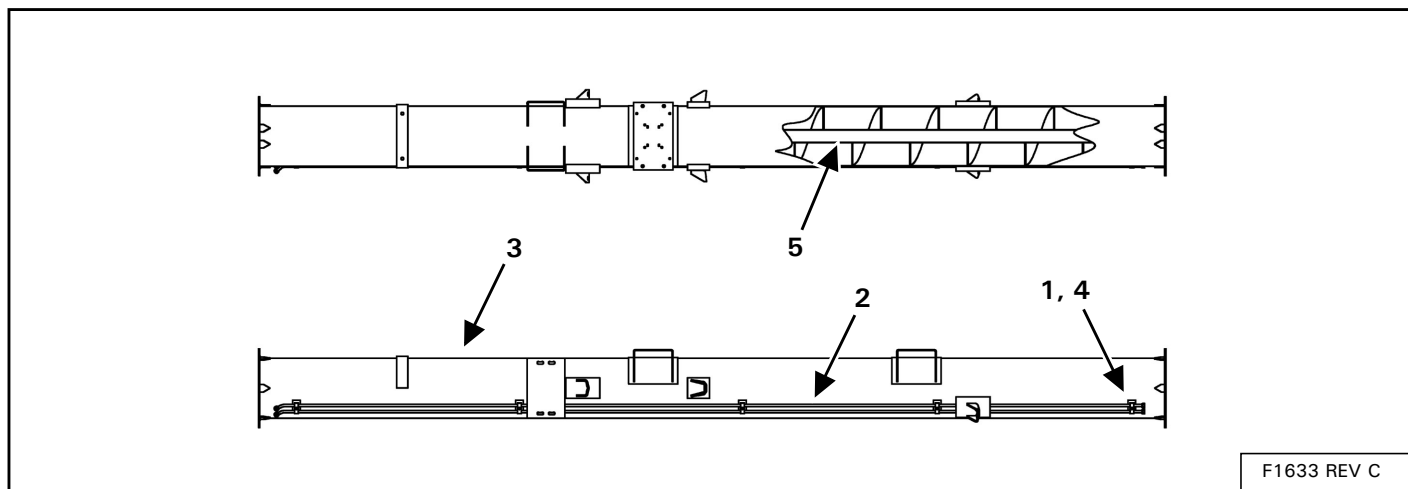
16104 TUBE #1 ASSEMBLY


F1633 REV C


ITEM	PART NUMBER	DESCRIPTION	QTY
1	81549	BOLT, 5 16" x 3/4" HEX (PL)	5
2	906104	HYDRAULIC LINE, 5/8" OD x 19'-2"	2
3	914629	TUBE WELDMENT #1	1
4	914818	BRACKET, HYDRAULIC HOSE CLAMP	5
5	929864	FLIGHTING WELDMENT	1

16124 TUBE #4 ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812026	5/16" x 1" HEX BOLT (PL)	10
2	812362	5/16" LOCK NUT (PL)	10
3	904902	GREASE GRADE 2	10 g
4	905906	END BEARING SLEEVE 1.515" ID x 2-1/4" OD x 2.88"	1
5	907052	OIL SEAL (CR17617)	1
6	907053	NUT, 1-1/2" SLOTTED HEX NF GR 2 (BR)	1
7	907642	RUBBER GASKET (CTD SE49)	1
8	914550L	PLATE - SPACER	1
9	914556	WELDT - TOP FLANGE CAP	1
10	929723	WELDT - OVERFLOW END CAP	1
11	929730	BRACKET- OVERFLOW DOOR	1
12	929876	TUBE WELDT #4	1
13	929877	WELDT- LH END FLIGHTING	1
14	931497	SPRING - OVERFLOW DOOR	1
15	965252	INNER BEARING CUP (25520)	1
16	967164	DRIVE-IN GREASE ZERK	1
17	967205	INNER BEARING CONE (25580)	1
18	9812436	COTTER PIN, 1/4" x 1-1/2" (PL)	1
19	9812445	1 1/2" X 10GA NARROW RIM WAS (BR)	1

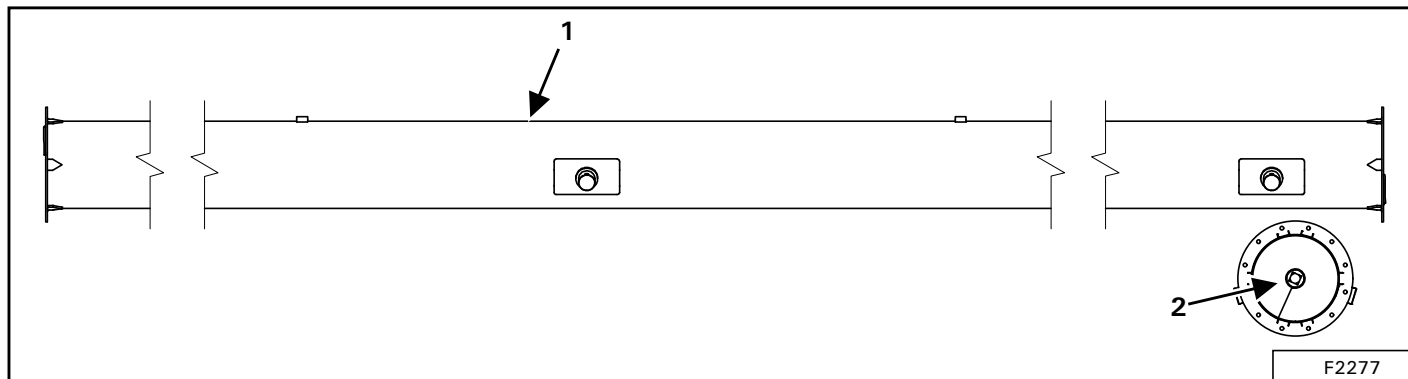
16124 TUBE #3 ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY
1	929875	TUBE #3 WELDMENT	1
2	929871	FLIGHTING LH, WELDMENT	1

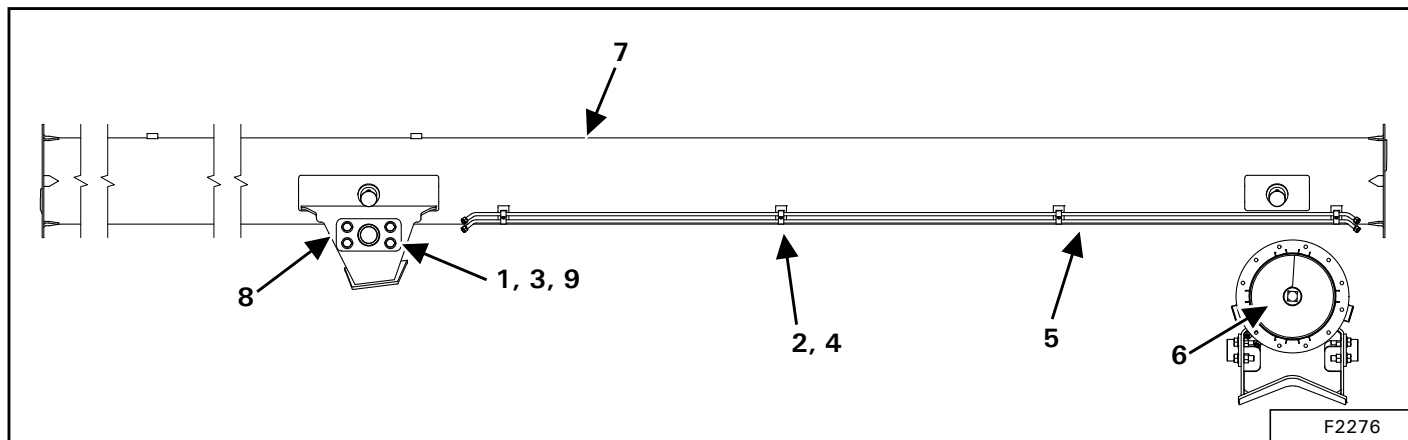
16124 TUBE #2 ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812303	1" x 3" HEX BOLT (PL)	8
2	81549	5/16" x 3/4" HEX BOLT (PL)	4
3	84522	1" ID SAE FLAT WASHER (PL)	8
4	914818	BRKT - HYD HOSE CLAMP	4
5	929151	HYD LINE 5/8" OD x 14'	2
6	929871	FLIGHTING LH, WELDMENT	1
7	929874	TUBE #2 WELDMENT	1
8	930031	WELDT-LIFT ARM PIVOT MOUNT	2
9	967148	1" LOCK NUT (PL)	8

16124 TUBE #1 ASSEMBLY

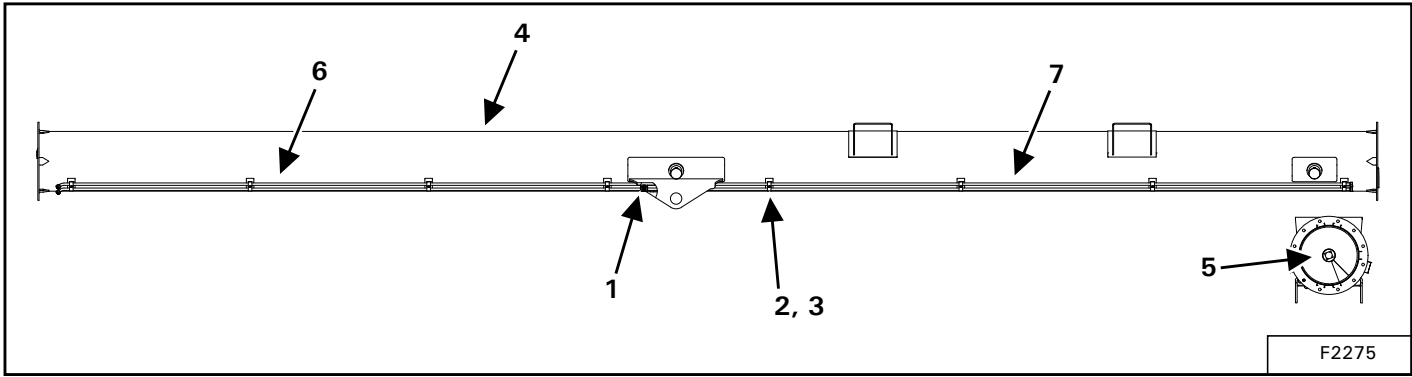


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812711	JIC UNION -10-10	2
2	81549	5/16" x 3/4" HEX BOLT (PL)	8
3	914818	BRACKET - HYD HOSE CLAMP	8
4	927109	TUBE #1 WELDMENT	1
5	929871	FLIGHTING LH, WELDMENT	1
6	930041	5/8" X 13' HYD LINE (JIC FEMALE ENDS)	2
7	960467	HYD LINE 5/8" x 15'-10"	2

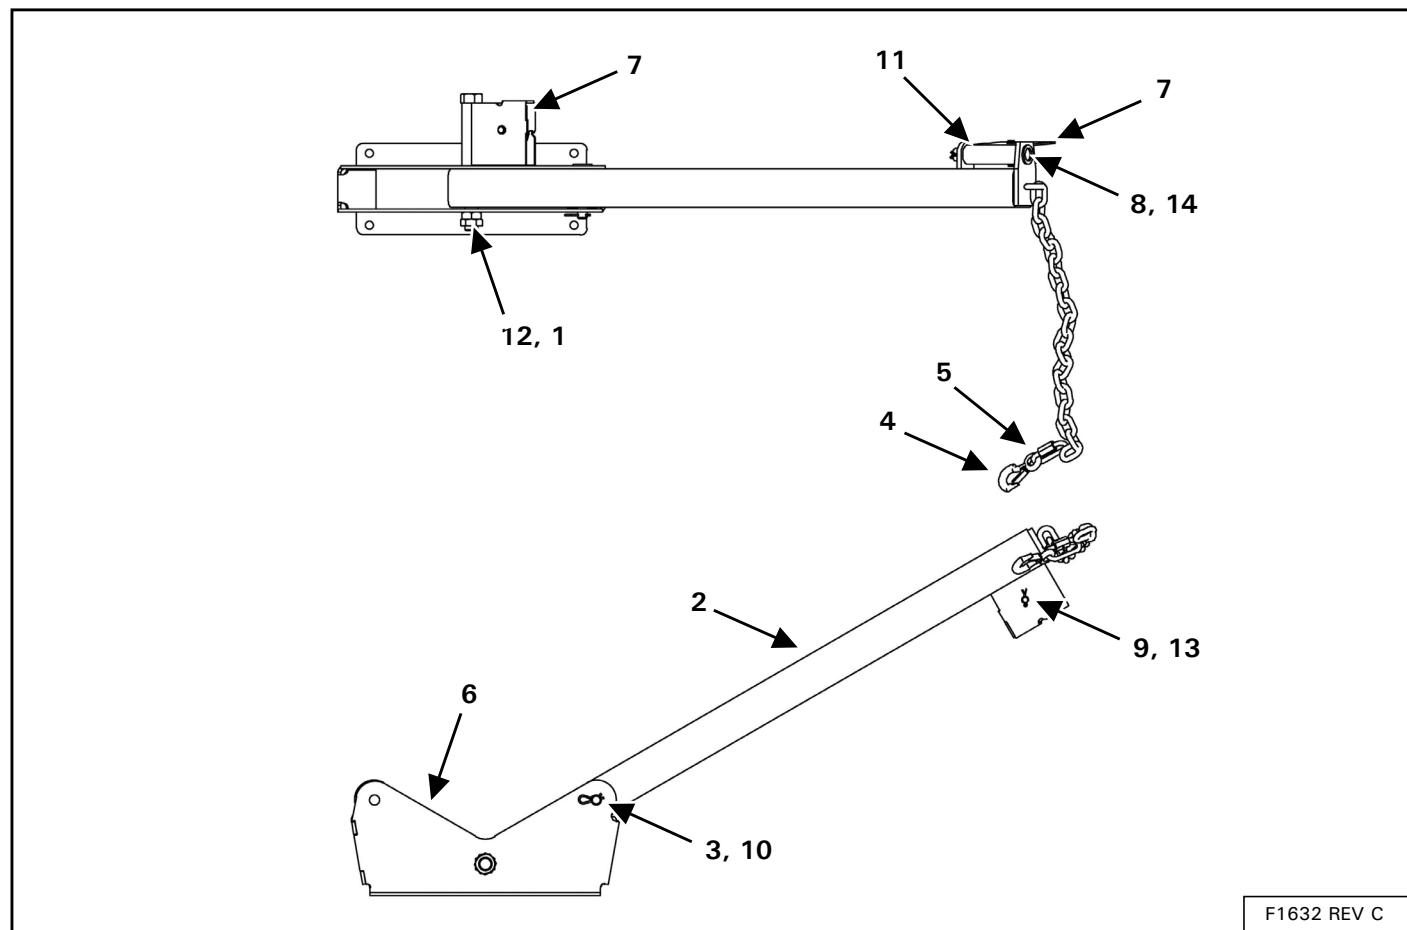
1684 & 16104 BOOM LIFT ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY
1	84051	JAM NUT, 1" HEX GR	2
2	905815	ARM WELDMENT	1
3	905821	PIN ROD WELDMENT	1
4	909171	CABLE HOOK ASSEMBLY (1 TON)	1
5	909172	3/8" QUICK LINK	1
6	914597	HOPPER LIFT ARM MOUNT WELDMENT	1
7	914619	PULLEY HOLDERWELDMENT	2
8	960111	CYLINDER PIN WELDMENT	1
9	960913	CLEV PIN, 1/2" x 1-13/16" (PL)	2
10	961012	HAIR PIN CLIP, 16	1
11	961846	CABLE PULLEY, 1/2" ID x 3-1/2" OD x 1-1/8"	2
12	967233	BOLT, 1" x 10" HEX (PL)	1
13	9812430	COTTER PIN, 3/16" x 1" (PL)	2
14	9812433	COTTER PIN, 3/16" x 1-1/2"	1

16124 BOOM LIFT ASSEMBLY

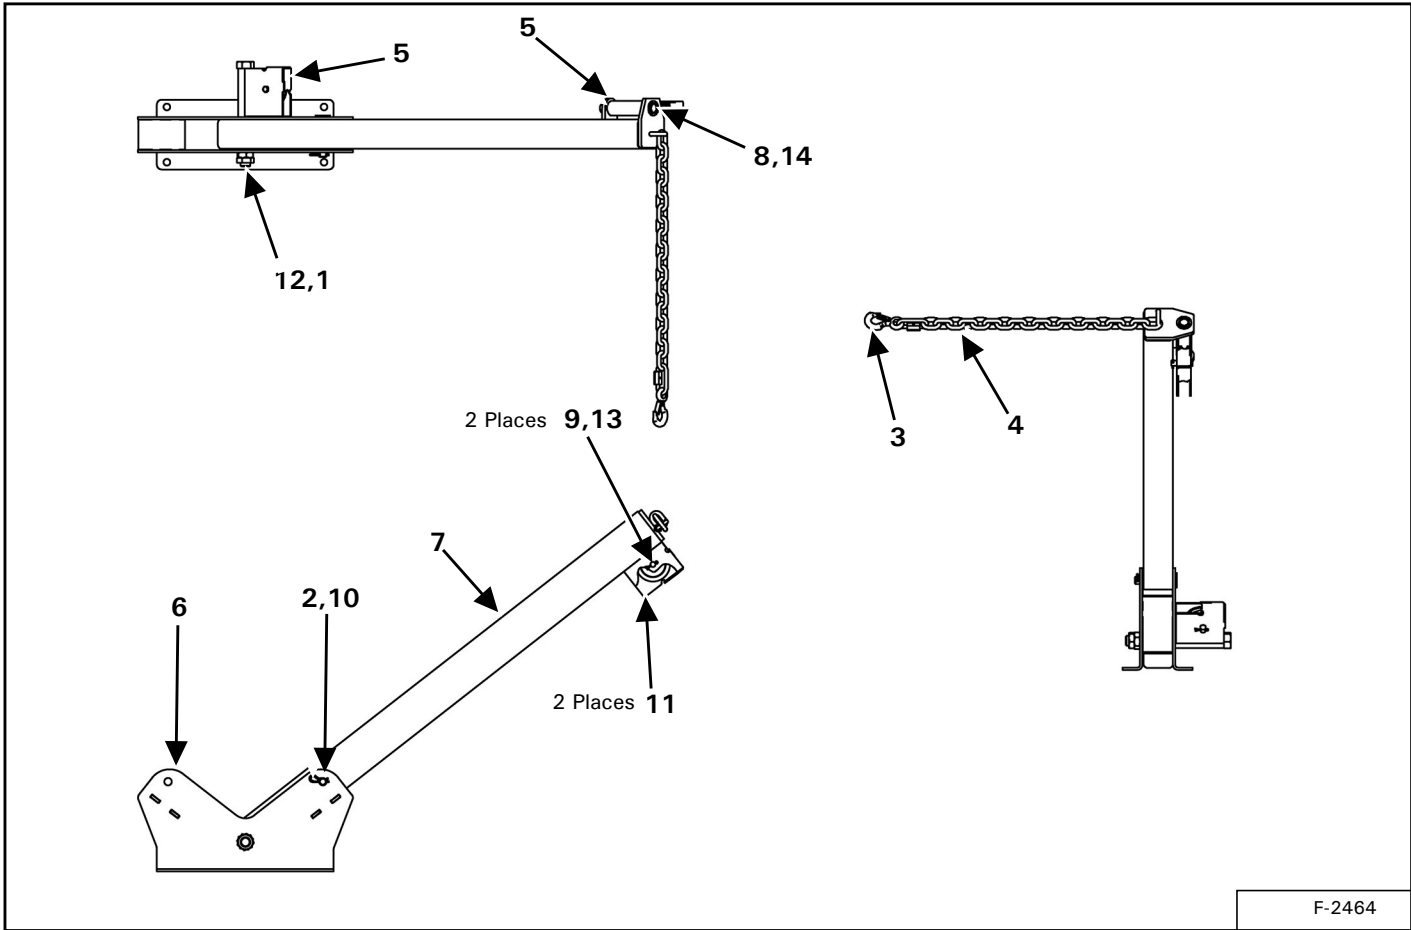


ITEM	PART NUMBER	DESCRIPTION	QTY
1	84051	JAM NUT, 1" HEX GR2	2
2	905821	PIN WELDMENT 0.750" DIA	1
3	909171	CABLE HOOK ASSEMBLY (1 TON)	1
4	909172	QUICK LINK, 3/8"	1
5	914619	WELDT-PULLEY HOLDER	2
6	933706	WELDT-LIFT ARM MOUNT	1
7	933711	ARM WELDT	1
8	960111	CYLINDER PIN WELDT 1.000" DIA	1
9	960913	CLEVIS PIN, 1/2" x 2" (PL)	2
10	961012	HAIR PIN CLIP, #16	1
11	961846	CABLE PULLEY, 11-1/2" ID x 3-1/2" OD x 1-1/8"	2
12	967233	BOLT, 1" x 10" HEX (PL)	1
13	9812430	COTTER PIN, 1/8" x 1" (PL)	2
14	9812433	COTTER PIN, 3/16" x 1 1/2"	1

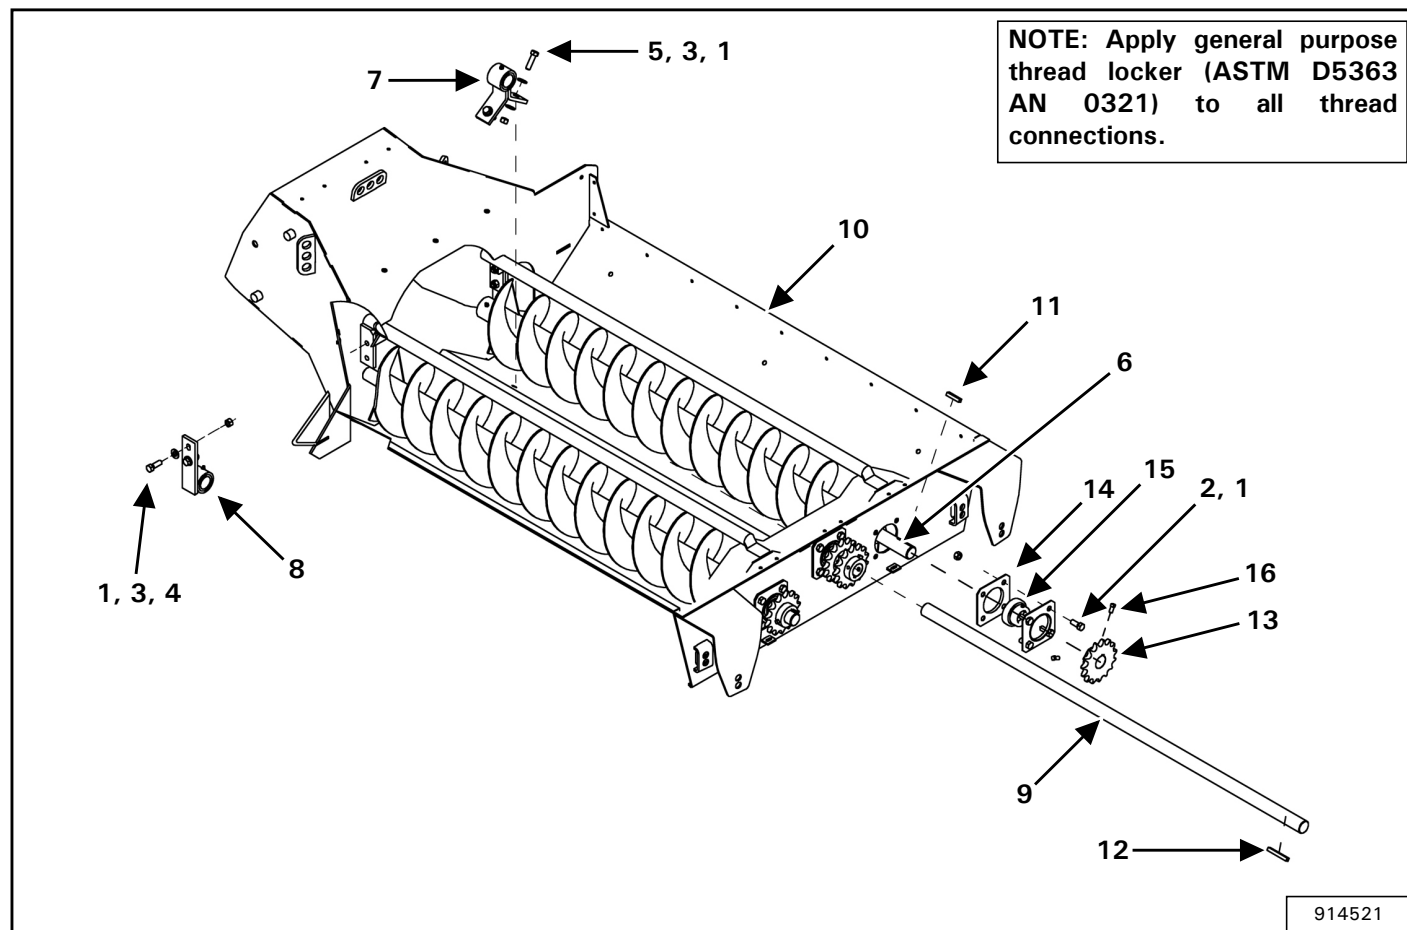1684 & 16104 MULTI-FLIGHTING HOPPER ASSEMBLY


ITEM	PART NUMBER	DESCRIPTION	QTY
1	812364	LOCK NUT, 1/2" (PL)	18
2	81620	BOLT, 1/2" x 1-1/4" HEX (PL)	12
3	84048	FLAT WASHER, 1/2" SAE (PL)	8
4	84277	BOLT, 1/2" x 1-1/2" HEX (PL)	4
5	87553	BOLT, 1/2" x 1 3/4" HEX UNC GR5 (PL)	2
6	905980	OUTER FLIGHTING WELDMENT	2
7	906003	CENTER SHAFT HOLDER	1
8	906007	OUTER FLIGHTING HOLDER	2
9	914479	CENTER DRIVE SHAFT, 1-1/2" x 59 7/8"	1
10	914520	HOPPER WELDMENT	1
11	914643	KEY, 3/8" x 3/8" x 2"	2
12	914739	KEY, 3/8" x 3/8" x 3"	1
13	960719	SPROCKET, H80B15 (1.5" BORE)	4
14	967260	1-1/2" BRG FLG	6
15	968627	1-1/2" BRG W/ COLLAR	3
16	9812378	SET SCREW, 3/8" x 3/4" SQ HD SER	8

1684 & 16104 MULTI-FLIGHTING HOPPER ASSEMBLY (CONT'D)

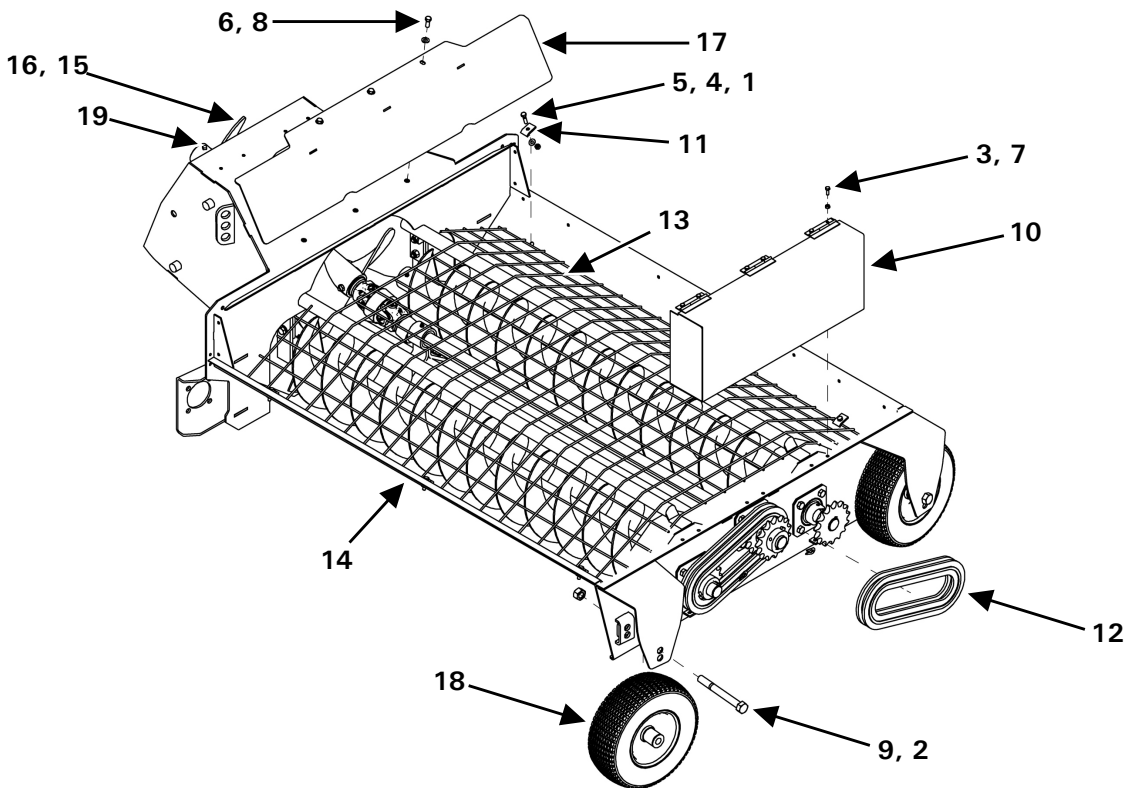


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

F1825

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812362	LOCK NUT, 5/16" (PL)	6
2	812365	LOCK NUT, 3/4" (PL)	2
3	81525	BOLT, 1/4" x 3/4" HEX (PL)	6
4	81546	FLAT WASHER, 5/16" (PL)	6
5	81552	BOLT, 5/16" x 1-1/4" HEX (PL)	6
6	84039	FLAT WASHER, 3/8" (PL)	3
7	84498	LOCK NUT, 1/4" (PL)	6
8	86170	BOLT, 3/8" x 1" HEX GR5 (PL)	3
9	902615	BOLT, 3/4" x 7" HEX (PL)	2
10	906011	CHAIN GUARD COVER WELDMENT	1
11	910898	CAGE MOUNTING PLATE	6
12	914372	ROLLER CHAIN - 80H	2
13	914506	HOPPER FLIGHTING GUARD	1
14	914521	16"MULTI FLIGHTING HOPPER ASSEMBLY	1
15	914569	PIVOT FLIGHTING ASSEMBLY	1
16	914643	KEY, 3/8" x 3/8" x 2"	2
17	916936	HYDRAULIC HOSE SHIELD WELDMENT	1
18	966851	TIRE, W / WHEEL 13 / 500 x 6	2
19	9812378	SET SCREW, 3/8" x 3/4" SQ HD SER	4


16124 HOPPER HIGH CAPACITY ASSEMBLY

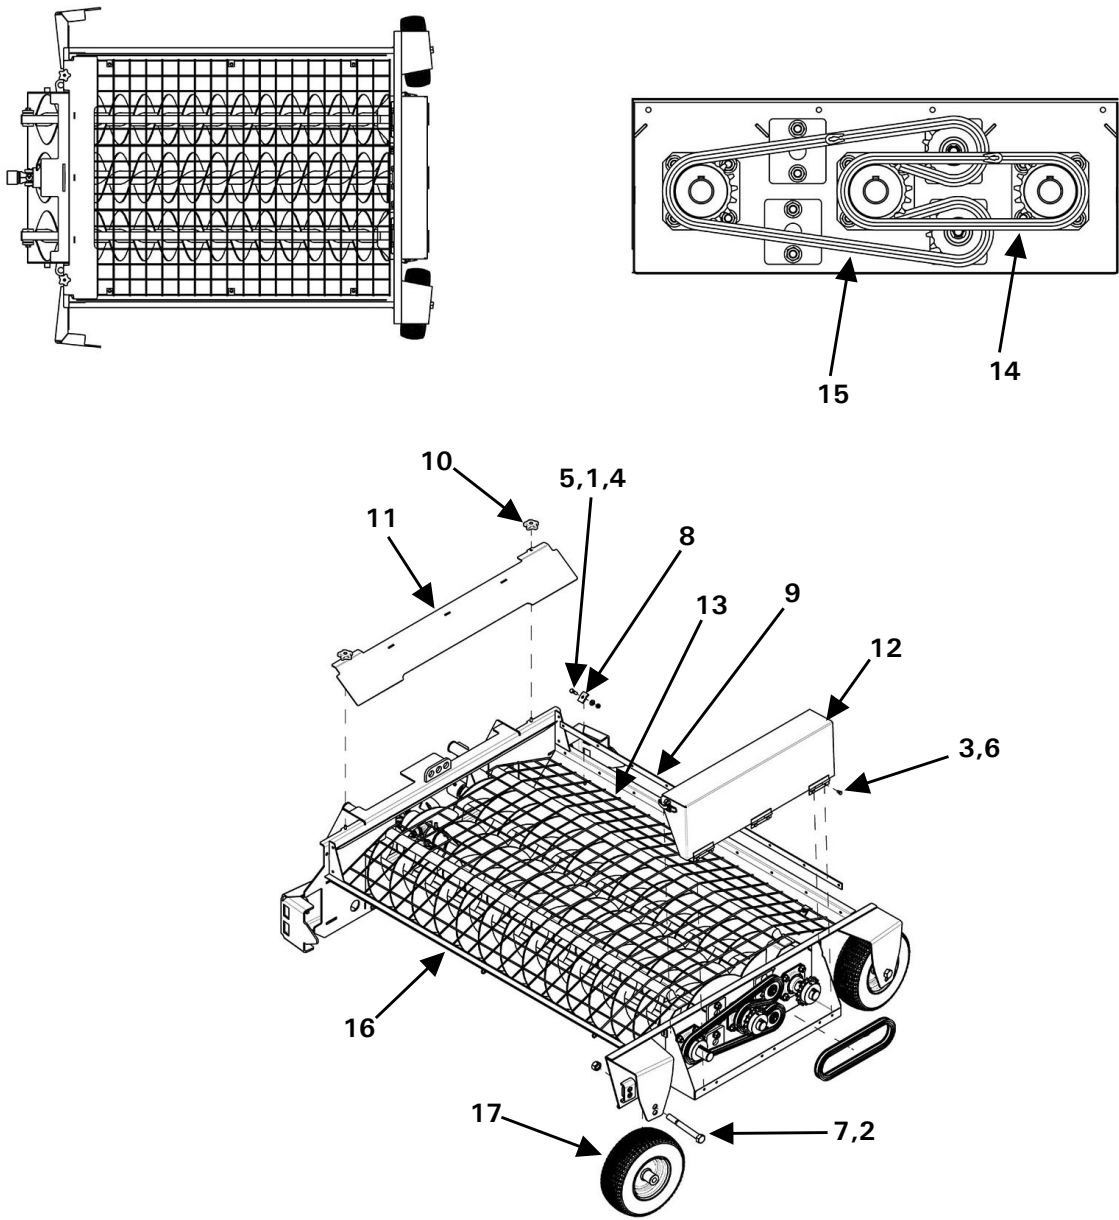

NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812362	5/16" LOCK NUT (PL)	6
2	812365	3/4" LOCK NUT (PL)	2
3	81523	1/4" x 1/2" HEX BOLT (PL)	6
4	81546	5/16" FLAT WASHER (PL)	6
5	81552	5/16" x 1-1/4" HEX BOLT (PL)	6
6	84498	1/4" LOCK NUT (PL)	6
7	902615	HEX BOLT, 3/4" x 7-3/4"(PL)	2
8	910898	CAGE MOUNTING PL	6
9	914768L	RUBBER REINFORCEMENT	2
10	920986	KNOB-2.25 3/4" DIA THROUGH HOLE	2
11	929547	WELDT-SPRAY SHIELD	1
12	929578	WELDT-CHAIN GUARD TOP	1
13	929580	GUARD-HOPPER FLTG	1
14	929595	ROLLER CHAIN - H60	1
15	929596	ROLLER CHAIN - H60	1
16	931856	ASSY - 16-3/4" LH HC HOPPER	1
17	966851	TIRE W/WHEEL 13/500x6	2

16124 HOPPER HIGH CAPACITY ASSEMBLY (CONT'D)

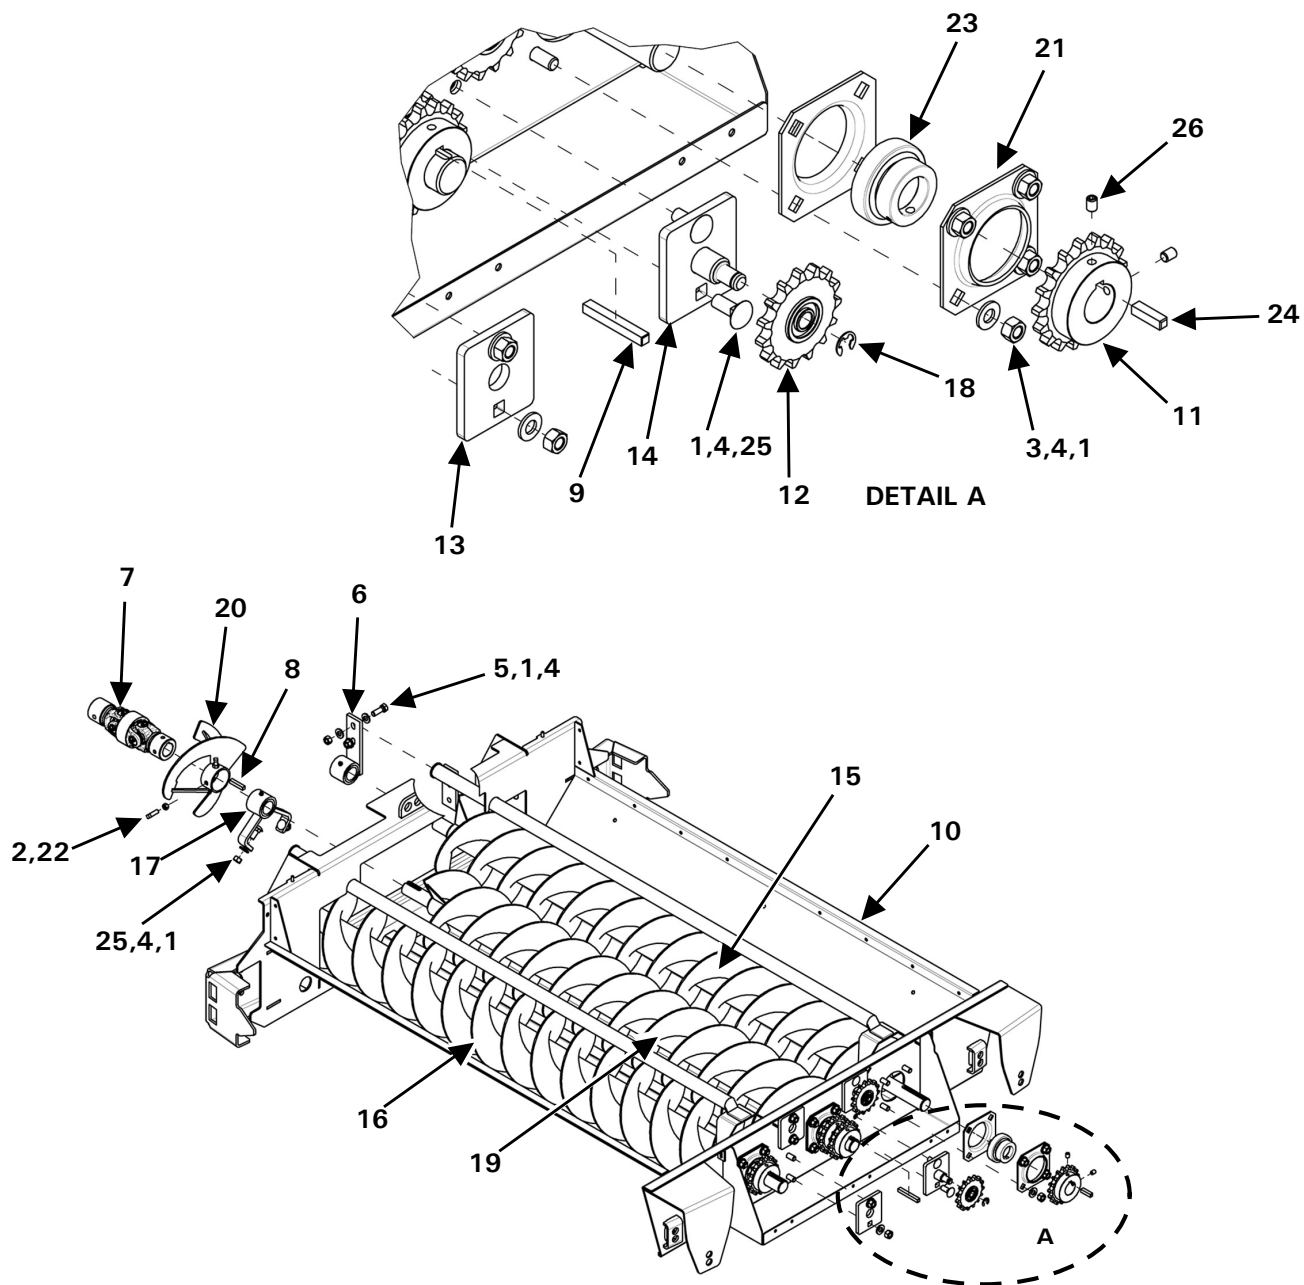


NOTE: Apply general purpose thread locker (ASTM D5363 AN 0321) to all thread connections.


931856

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812364	LOCK NUT (PL) 1/2"	26
2	81592	NUT, HEX (PL) 3/8"	2
3	81620	BOLT, HEX PL 1/2" x 1-1/4"	16
4	84048	FLAT WASHER SAE (PL) 1/2"	46
5	84277	BOLT, HEX (PL) 1/2" x 1-1/2"	4
6	906007	OUTER FLIGHTING HOLDER	2
7	914565	CV JOINT - CAT 3, 50 DEG E4BL	1
8	914643	KEY, 3/8" x 3/8" x 2"	1
9	914739	KEY, 3/8" x 3/8" x 3"	1
10	929357	HC HOPPER, WELDT	1
11	929377	SPROCKET, H60B17	4
12	929378	IDLER SPROCKET, HB60C15	2
13	929381	PLATE-IDLER MOUNT	2
14	929383	IDLER SHAFT, WELDT	2
15	929409	OUTSIDE FLTG LH, WELDT	1
16	929420	OUTSIDE FLTG, WELDT	1
17	929544	CENTER FLTG HOLDER, WELDT	1
18	929586	SIDE-MOUNT EXTERNAL RETAINING RING	2
19	931855	LH CENTER FLGHT, WELDT	1
20	931861	LH JOINT FLIGHTING, WELDT	1
21	967260	BEARING FLANGE 3.15"	6
22	967464	SET SCREW, SQ HD (BR) 3/8" x 1-1/4"	2
23	968627	BRG W/ COLLAR 1-1/2"	3
24	968807	KEY, 3/8" x 3/8" x 1-1/2"	2
25	9812288	BOLT, CARR (PL) 1/2" x 1-1/4"	6
26	985639	SOCKET SET SCREW (BR) 3/8" x 1/2"	8

HOPPER DRIVE WHEEL

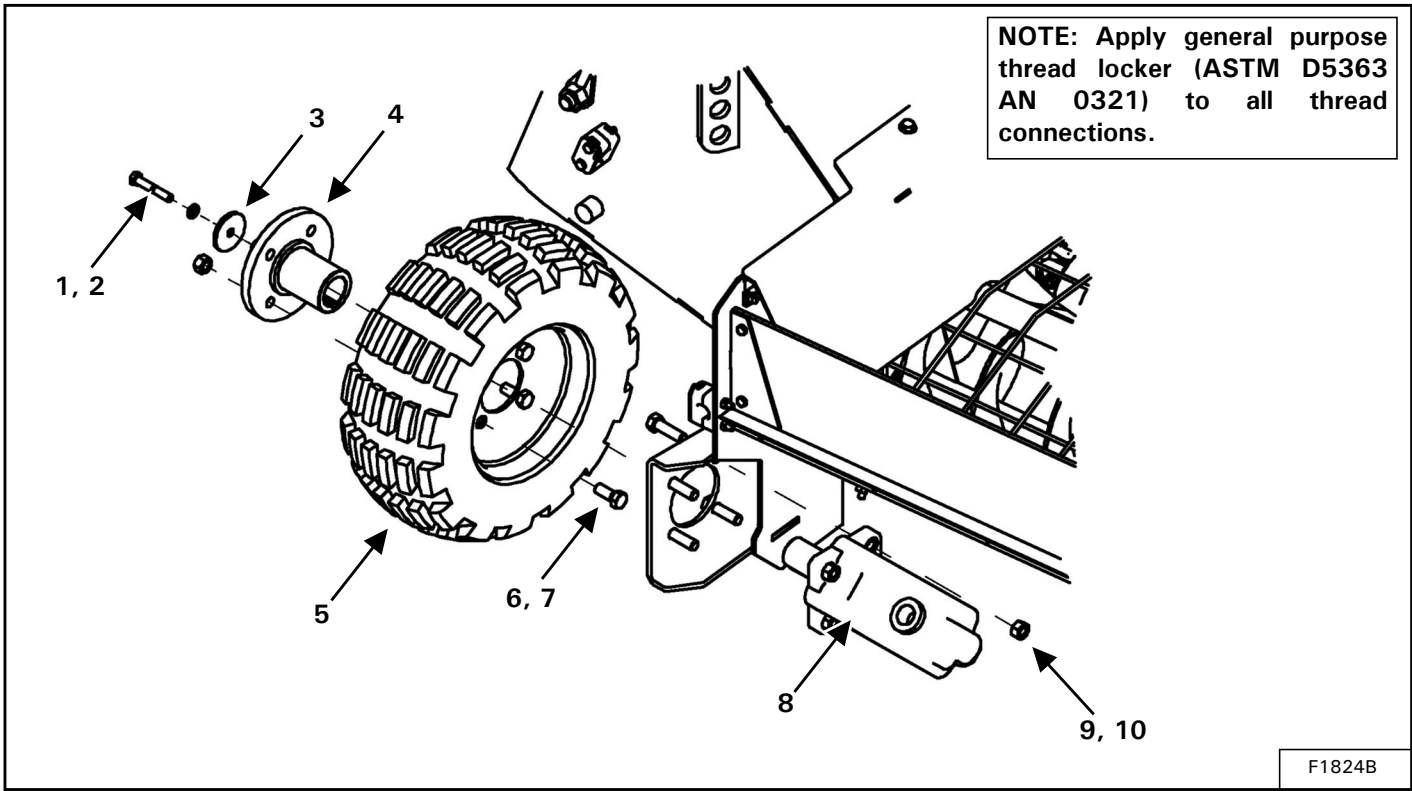


ITEM	PART NUMBER	DESCRIPTION	QTY
1	81593	LOCK WASHER, 3/8" (PL)	2
2	810958	BOLT, 3/8" x 2 1/4" HEX (PL)	2
3	909180L	FLAT WASHER, 7 GA x 13/32" ID x 2" OD	2
4	909179	HUB WELDMENT	2
5	960800	TIRE W/WHEEL 16/650 x 8	2
6	967105	WHEEL NUT, 1/2" (STEEL)	8
7	968404	WHEEL BOLT, 1/2" x 1-1/4" (PL)	8
8	909193	HYDRAULIC MOTOR 169-0093-001	2
9	812364	LOCK NUT, 1/2" (PL)	8
10	87553	BOLT, 1/2" x 1.75" HEX UNC GR5 (PL)	8

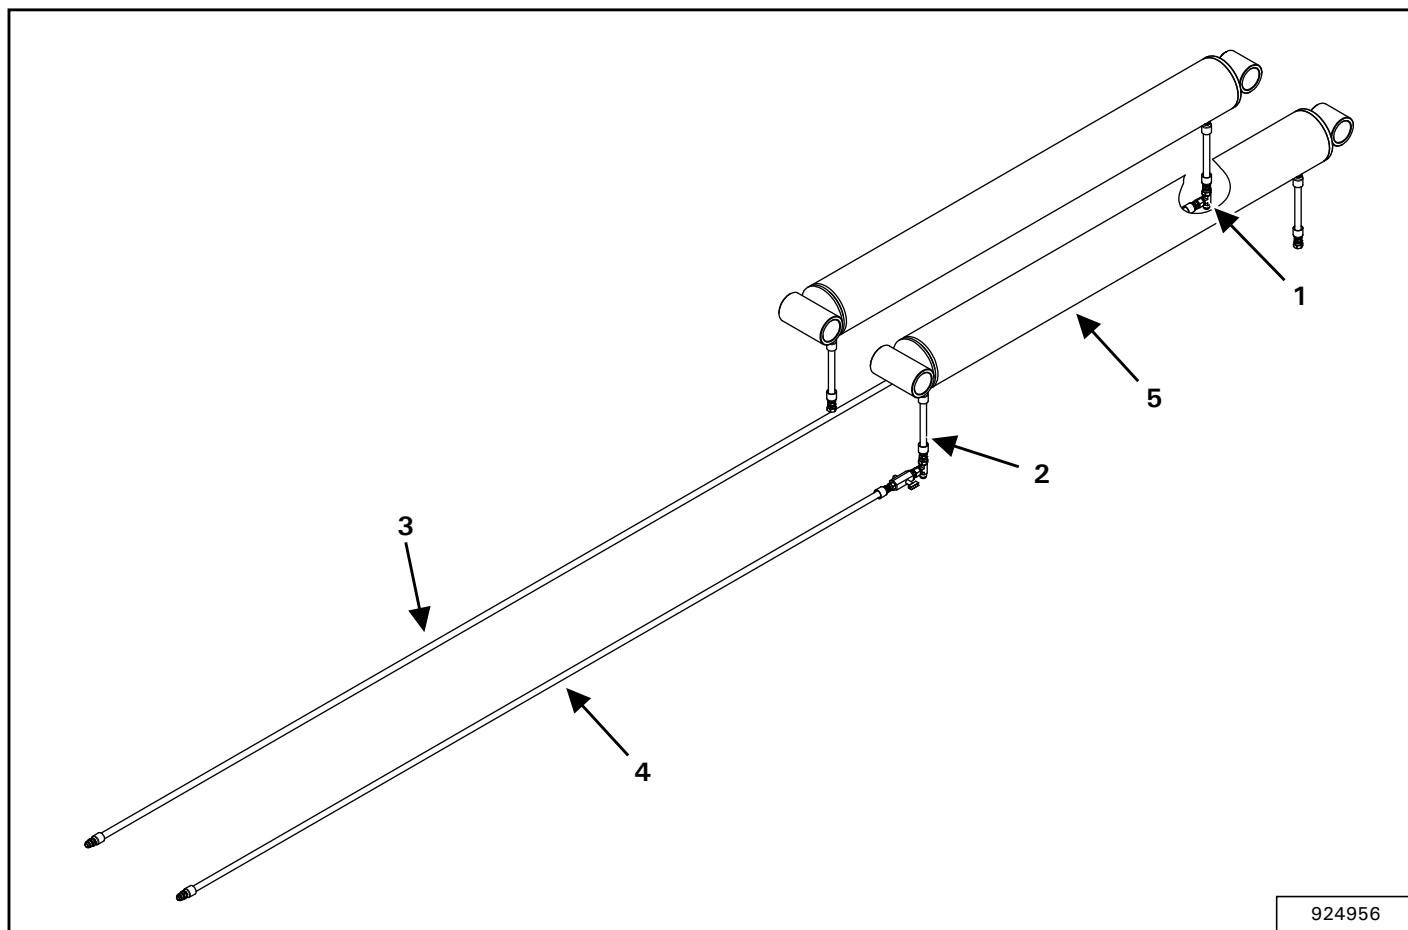16124 HYDRAULIC CYLINDERS


924956

ITEM	PART NUMBER	DESCRIPTION	QTY
1	865341	TEE-10MJIC X -10MJIC X -10 FJIC	1
2	906103	HOSE-8 X -8MORB X -10JIC	4
3	930167	HOSE-8 X -10MJIC X -10MJIC	1
4	930172	HYDRAULIC ROUTING	1
5	F2279	CYLINDER-6.5 X 62	2


16124 LIGHT KIT ASSEMBLY

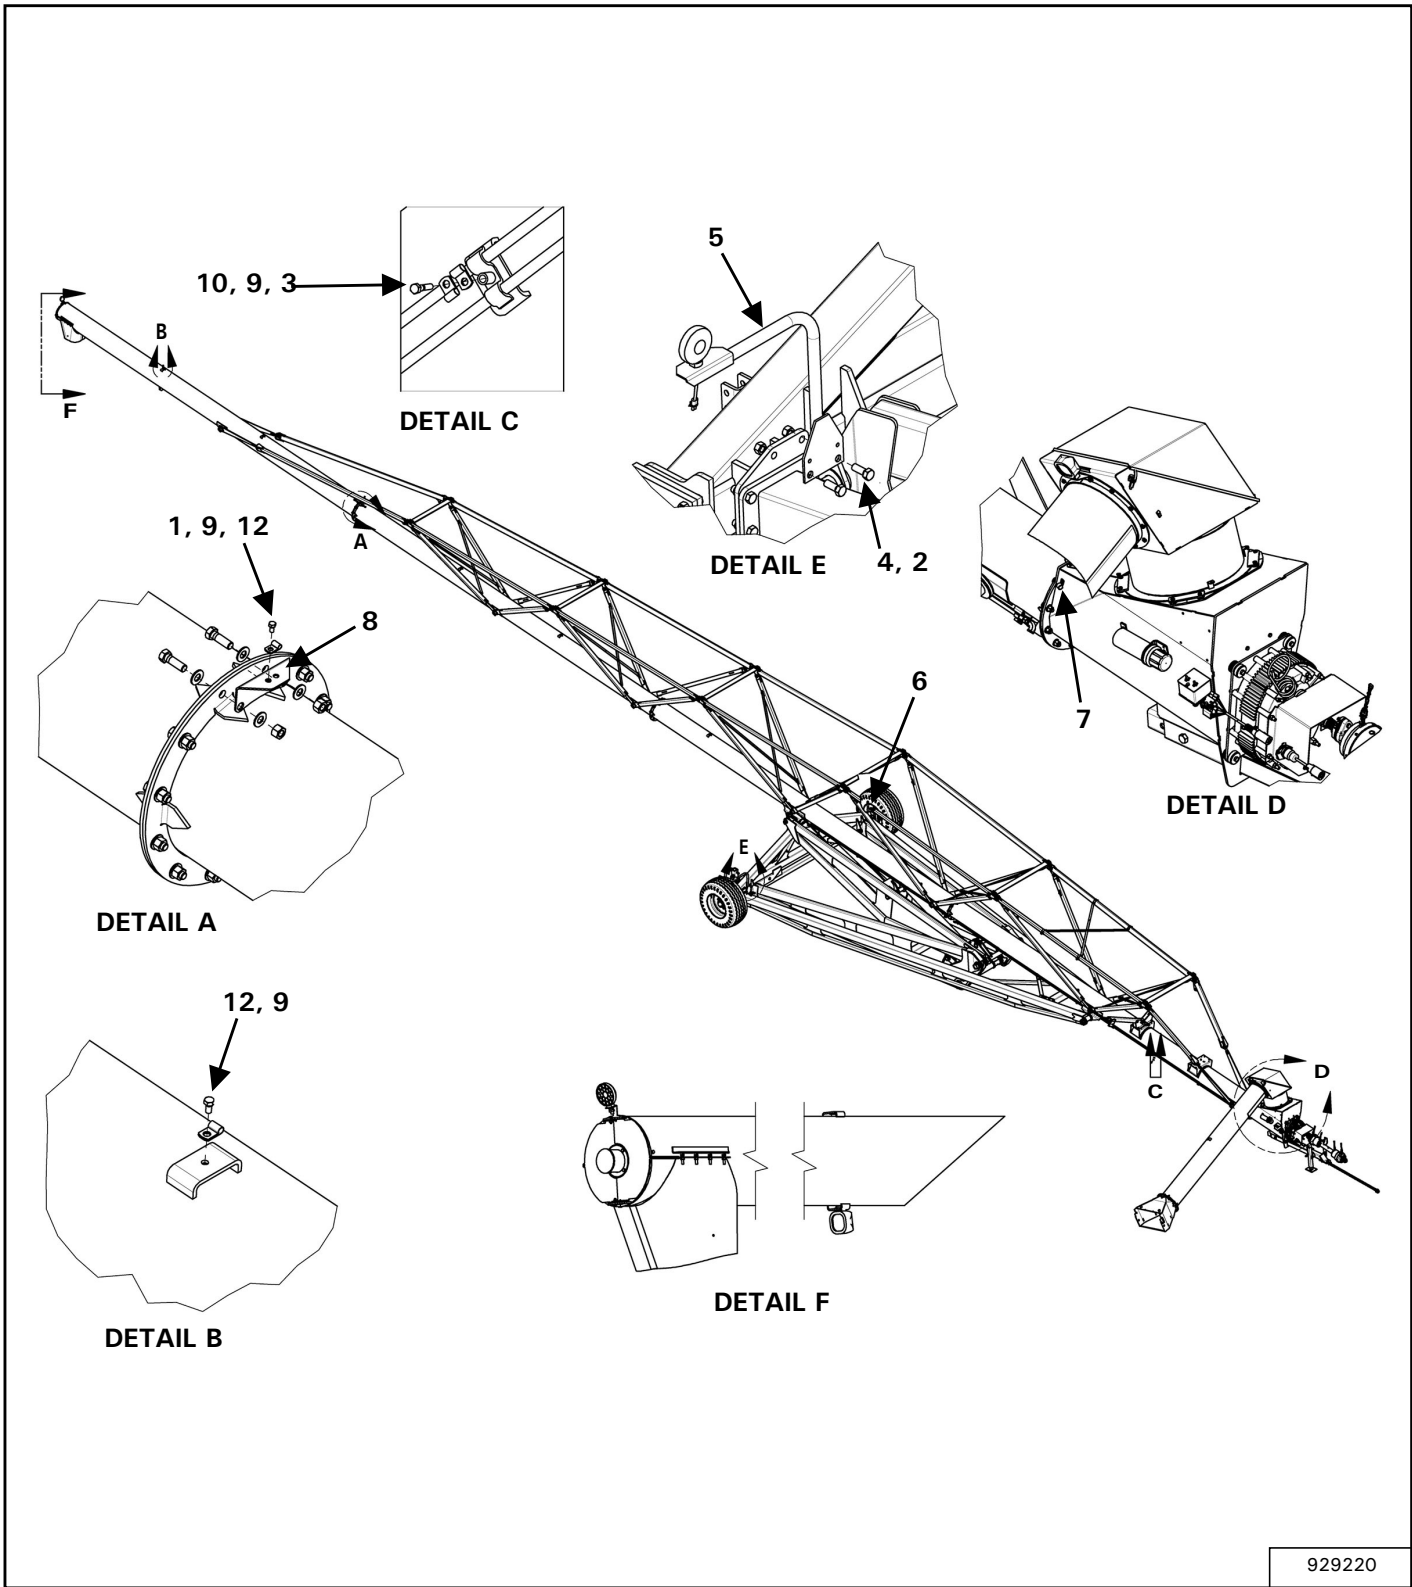

929220

ITEM	PART NUMBER	DESCRIPTION	QTY
1	812362	5/16" LOCK NUT (PL)	2
2	812365	3/4" LOCK NUT (PL)	4
3	81553	5/16" x 1-1/2" HEX BOLT (PL)	12
4	84467	3/4" x 2" HEX BOLT (PL)	4
5	909226	BLINKER MOUNT WELDT - RH	1
6	909227	BLINKER MOUNT WELDMENT - LH	1
7	913193	P-CLIP 0.75	1
8	914882	BRKT-CABLE MOUNT BS16104	2
9	919485	SUPPORT CLAMP-3/8 DIA	24
10	927998	LIGHT KIT BUSHING	12
11	929222	BS16124 LIGHT KIT	1
12	BU500397-6	HEX BOLT 5/16 x 5/8" (PL)	8


16124 LIGHT KIT

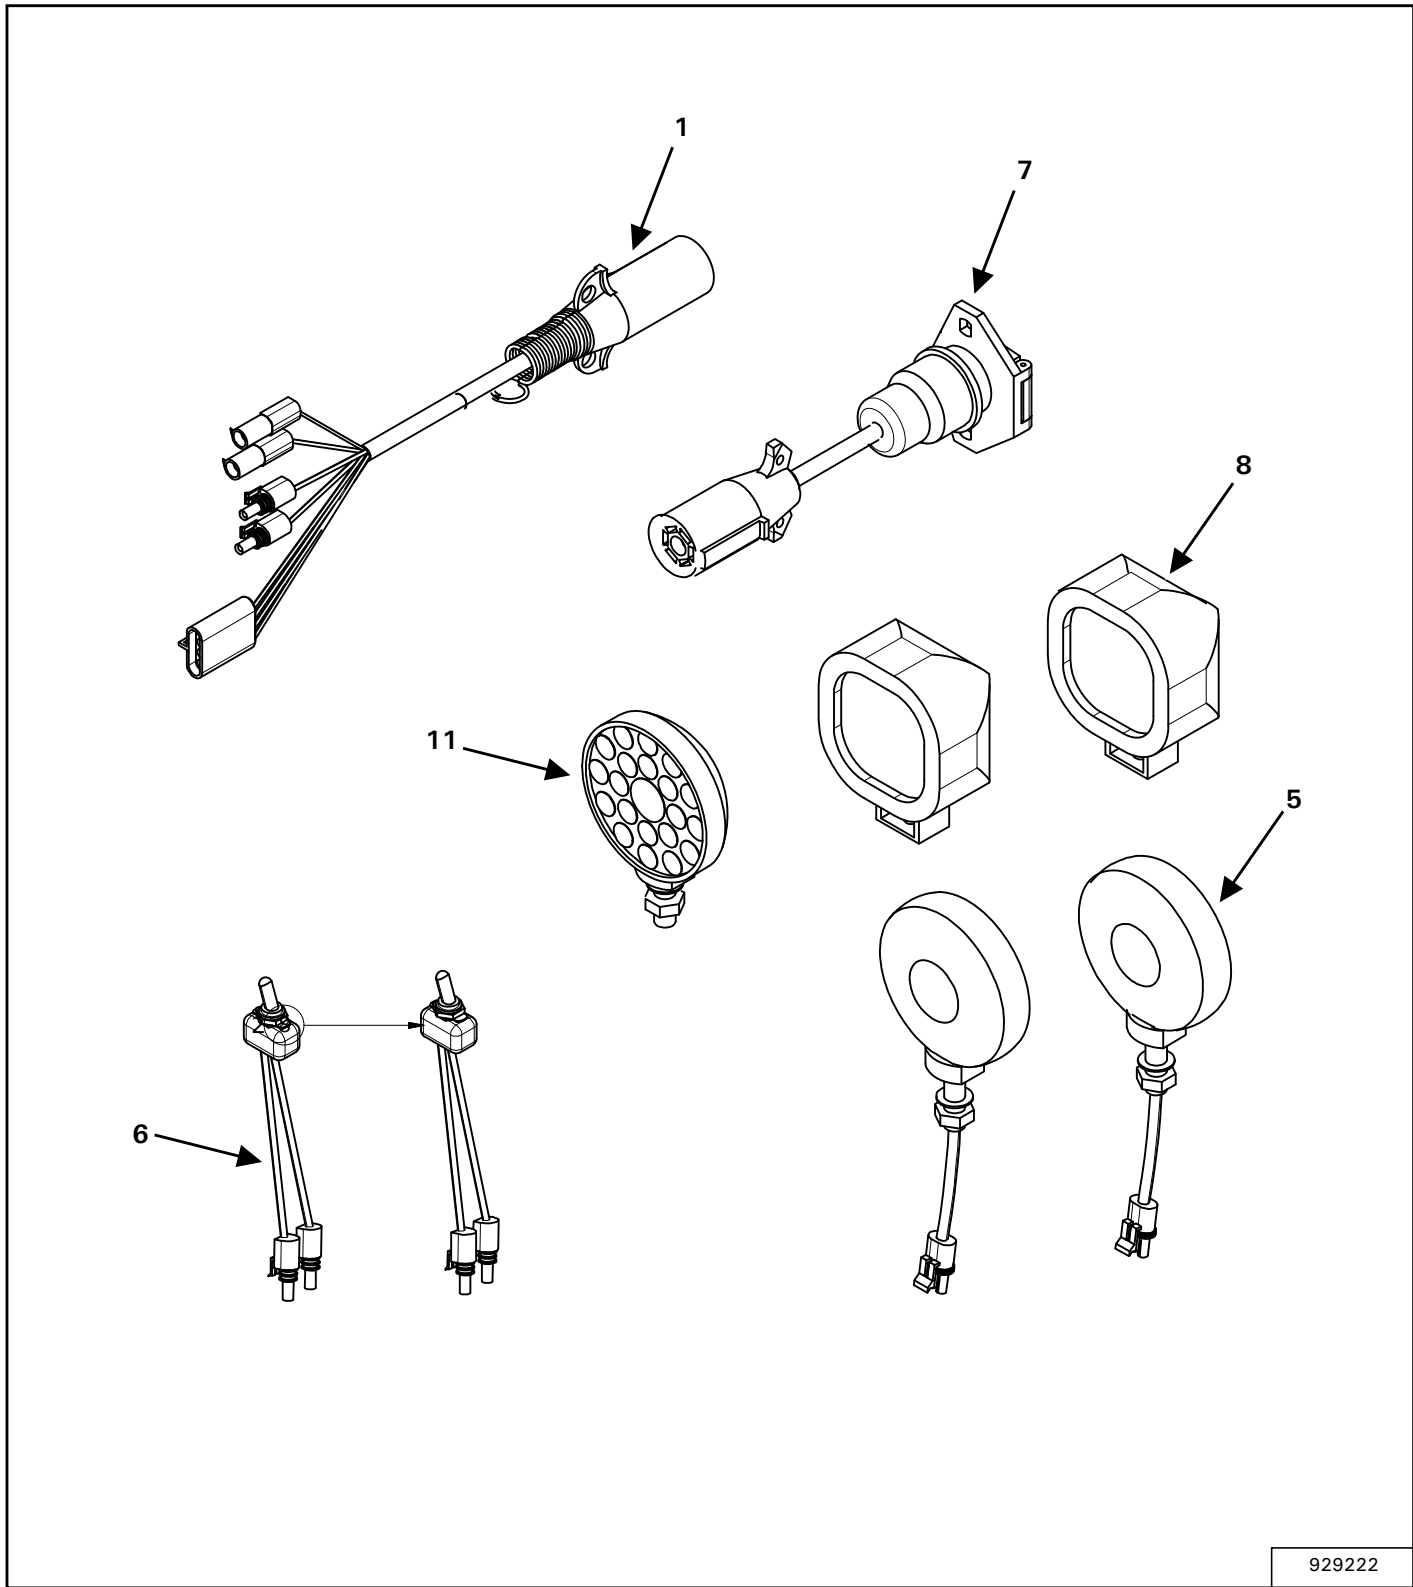

929222


ITEM	PART NUMBER	DESCRIPTION	QTY
1	909414	HARNESS-BS MAIN	1
2	909415	HARNESS-BS INPUT TUBE LIGHT	1
3	909418	HARNESS-BS AMBER LIGHT EXT	1
4	909419	HARNESS-AMBER LIGHT SHORT EXTENSION	1
5	909420	LIGHT-AMBER	2
6	909422	WITCH-WEATHER PROOF	2
7	909423	HARNESS-7 PIN RD TO 7 PIN FLAT ADAPTOR	1
8	928875	WORK LIGHT-LED	2
9	929233	HARNESS-BS16124 TOP TUBE LIGHT [127']	1
10	929234	HARNESS-BS16124 AMBER LIGHTS [53']	1
11	929235	LIGHT-RED	1

16124 LOWER YOKE

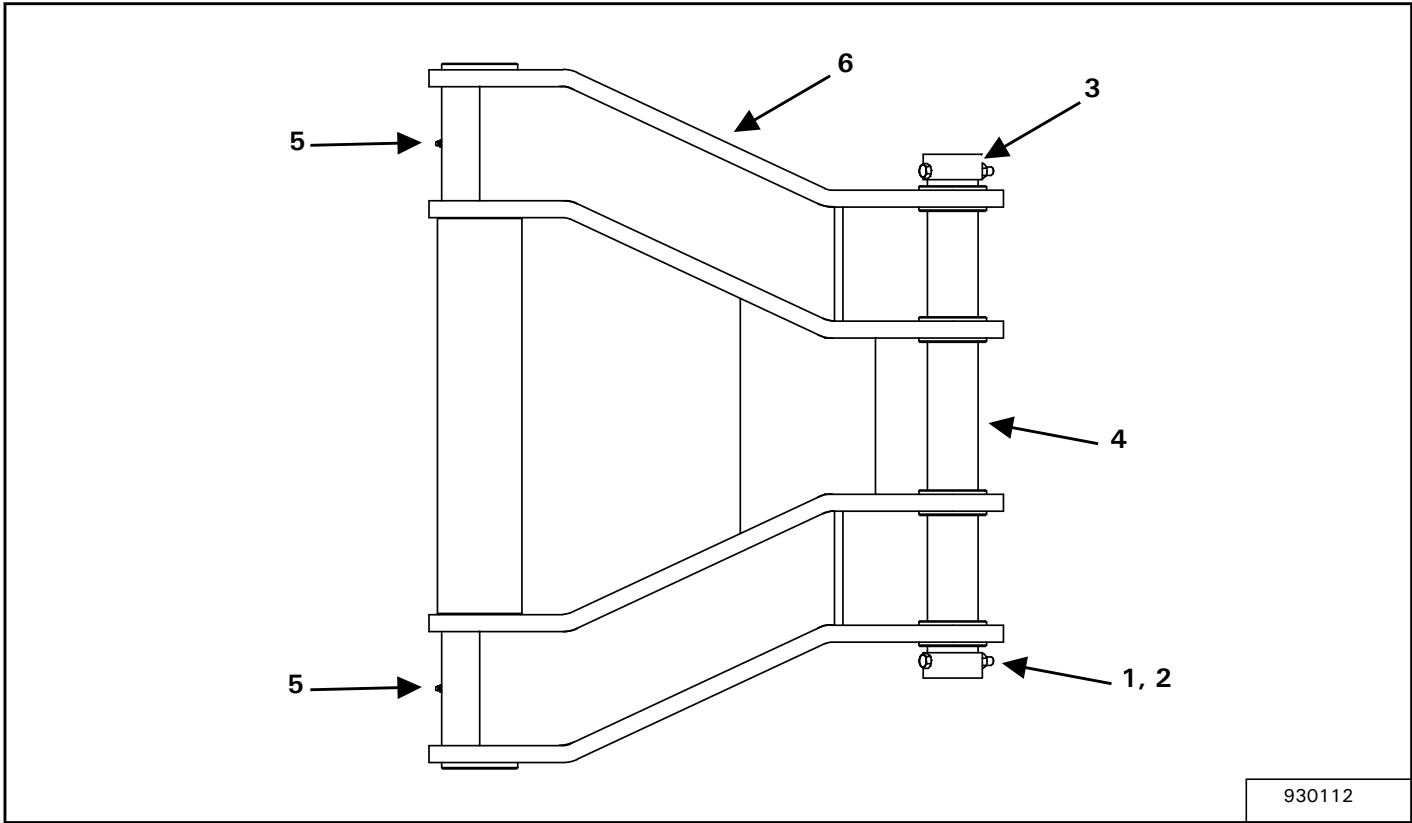


ITEM	PART NUMBER	DESCRIPTION	QTY
1	811691	1/2" x 4 1/2" HEX BOLT (PL)	2
2	812364	1/2" LOCK NUT (PL)	2
3	905736	UNDERCARR PIN SLEEVE 3 1/6" ID x 3 1/2" OD x 1 1/2"	2
4	929942	PIN-3.000" DIA	1
5	967164	DRIVE-IN GREASE ZERK	2
6	F2298	WELDT-LOWER YOKE	1

16124 UPPER YOKE

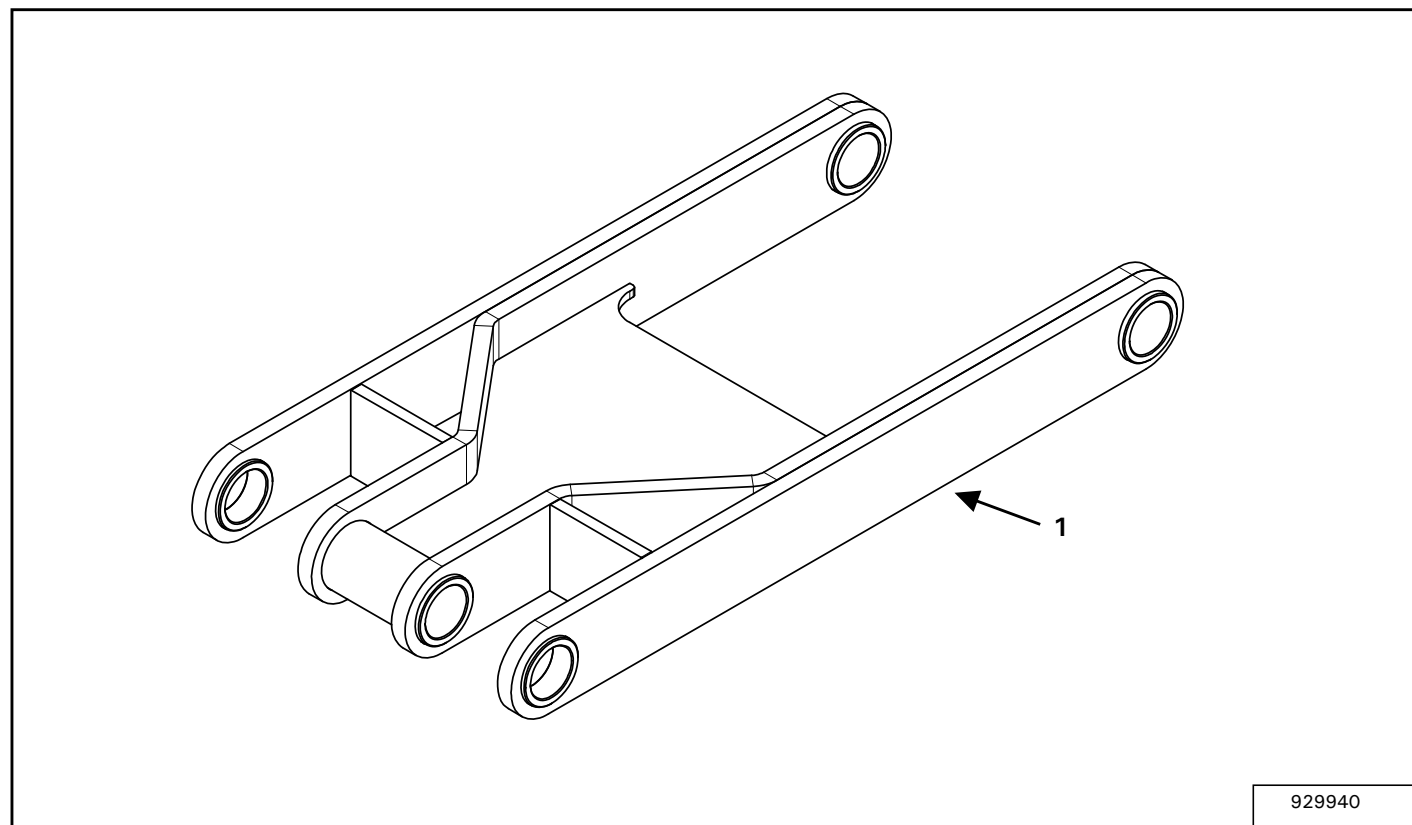

ITEM	PART NUMBER	DESCRIPTION	QTY
1	F2297	WELDT-UPPER YOKE	1


16124 ELECTRIC MOVER/WINCH KIT

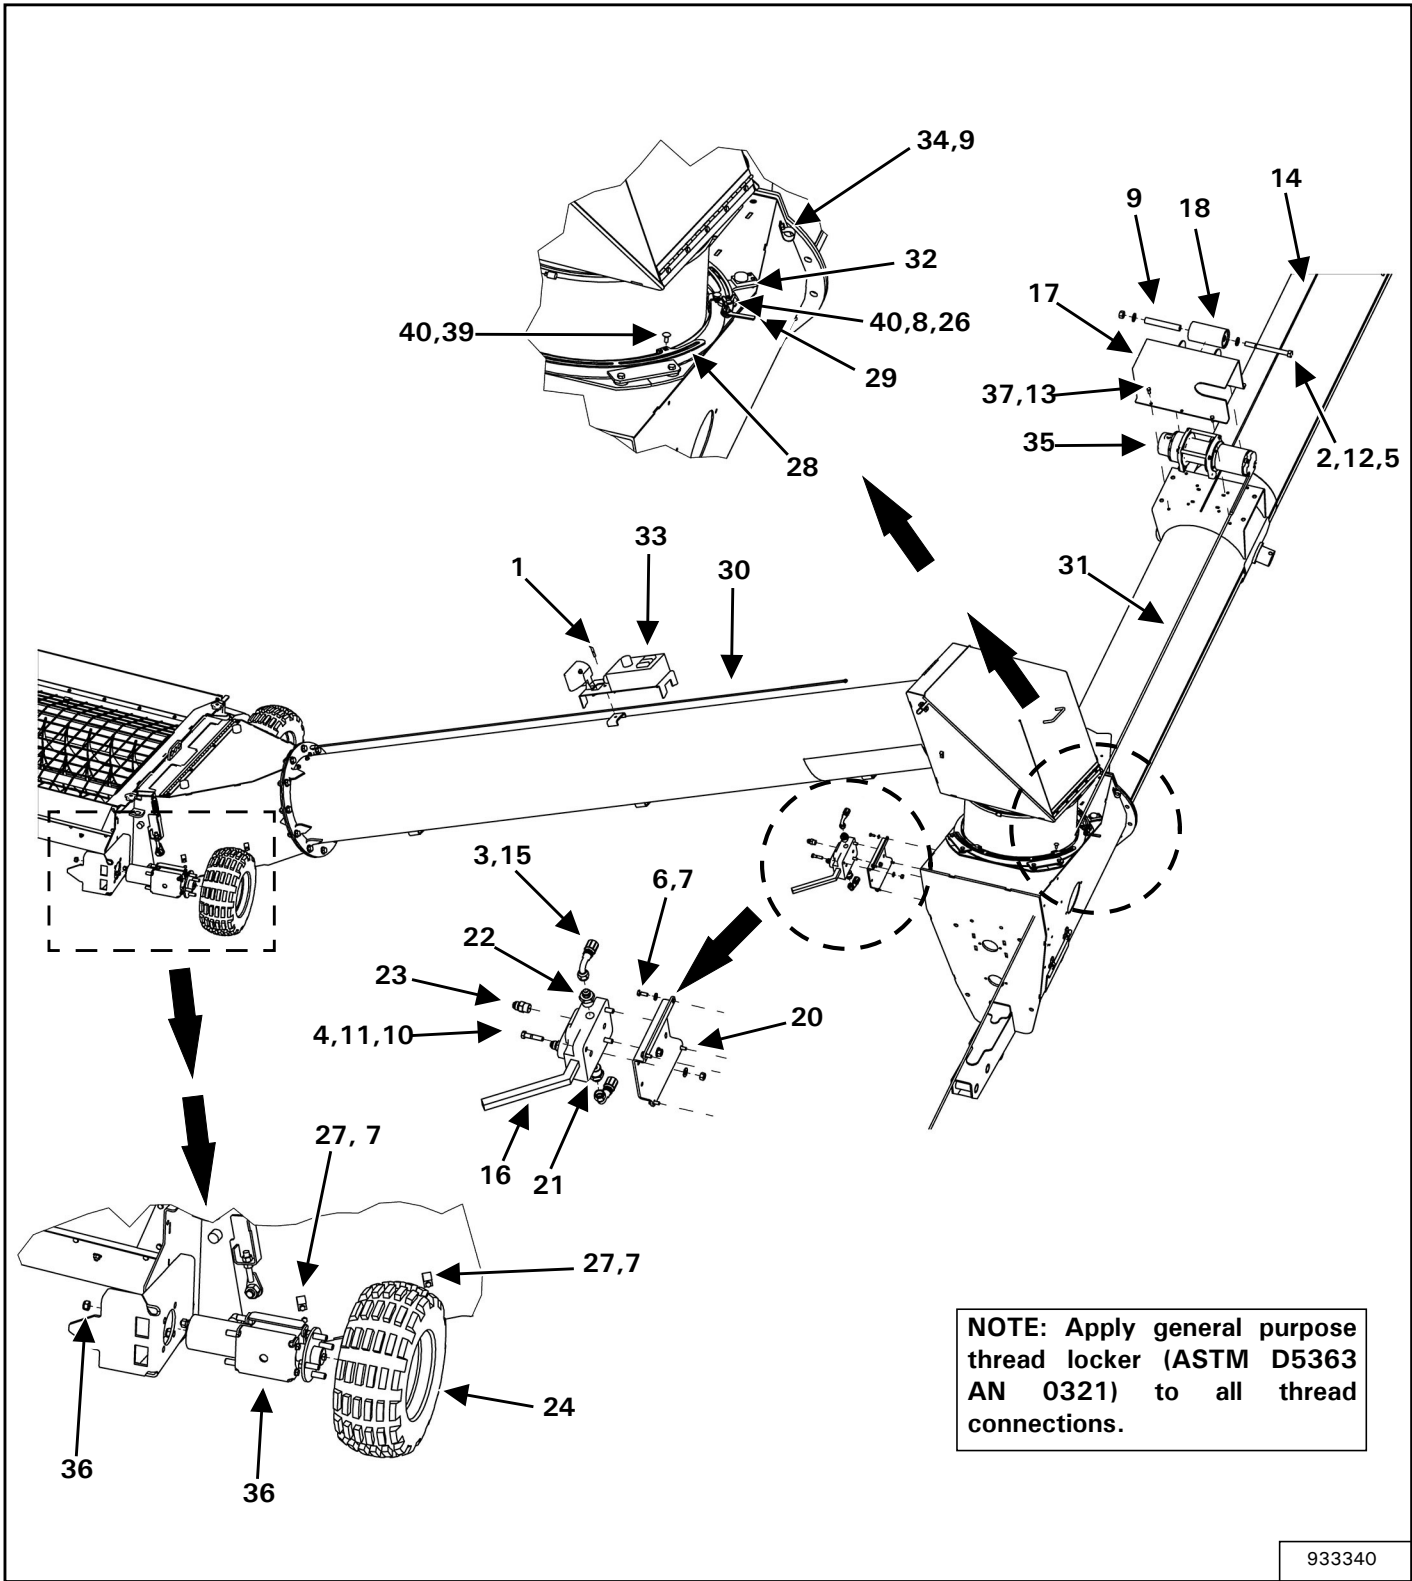

933340

ITEM	PART NUMBER	DESCRIPTION	QTY
1	810640	5/16" x 2" HEX BOLT (PL)	1
2	811908	BOLT HEX 0.750NC x 8.50 GR5PL	1
3	812208	NIPPLE 1/2" BODY 1/2"-14 NPTF QUICK CONNECT	2
4	812363	3/8" LOCK NUT (PL)	3
5	812365	3/4" LOCK NUT (PL)	1
6	812624	1/4" FLAT WASHER PL	4
7	81525	1/4" x 3/4" HEX BOLT (PL)	12
8	81546	5/16" FLAT WASHER (PL)	4
9	81549	5/16" x 3/4" HEX BOLT (PL)	1
10	81578	3/8" x 1 3/4" HEX BOLT (PL)	3
11	84039	WASHER - 3/8" SAE FLAT (PL)	3
12	84050	3/4" S.A.E. FLAT WASHER (PL) 2	2
13	86170	3/8" x 1" HEX BOLT GR.5 (PL)	4
14	910508	WINCH CABLE ASSEMBLY (1/4")	1
15	912250	HOSE 1/2" x 138 1/2" MNPT x 3/4" SWFJIC 90	2
16	914234	VALVE-CTRL 3 WAY 1 SPOOL	1
17	932132	WELDT-WINCH GUARD	1
18	932146	WELDT-ROLLER	1
19	932408	TUBE-ROLLER CORE	1
20	933332	BRKT-VALVE MOUNT	1
21	933337	ADPTR -8 MJIC X -12 MPT	1
22	933338	ADPTR CHECK VALVE -8 MJIC -12 MPT	1
23	933339	ADPTR -8 MJIC - 8 MPT R. 0.0625	2
24	960800	TIRE W/WHEEL 16/650X8	2
25	967184	14-1/2" STRAP	4
26	968601	5/16" WING NUT	4
27	SZ000566	5/16 x 0.406 HOLE VINYL DIP CLAMP	4
28	SZ000957	16" MRD PROXIMITY RAIL	2
29	SZ000968	PROXIMITY INDICATOR	2
30	SZ000998	HARNESS, ELEC MVR, WINCH	1
31	SZ000999	WINCH HARNESS	1
32	SZ001020	10/13" PROX SENSOR MNT ASMBLY	1
33	SZ001044	16" CTRL BOX MNT ASSEMBLY	1
34	SZ001055	1" x .406 HOLE VINYL DIP CLAMP	1
35	SZ001195	WARN DC2000MF ELEC HOIST	1
36	SZ001230	16" ELEC MTR ASSEMBLY	2
37	SZ125030	NUT LOCK 3/8-16UNC NYLOCK	4
38	SZ125032	NUT LOCK, 1/2" -13UNC NYLOCK	8
39	SZ125035	NUT LOCK, 5/16" -18UNC, NYLOCK G5	4
40	SZ126006	BOLT, CARRIAGE 5/16-18 UNC 3/4	8


16124 HIGH CAPACITY HYDRAULIC KIT

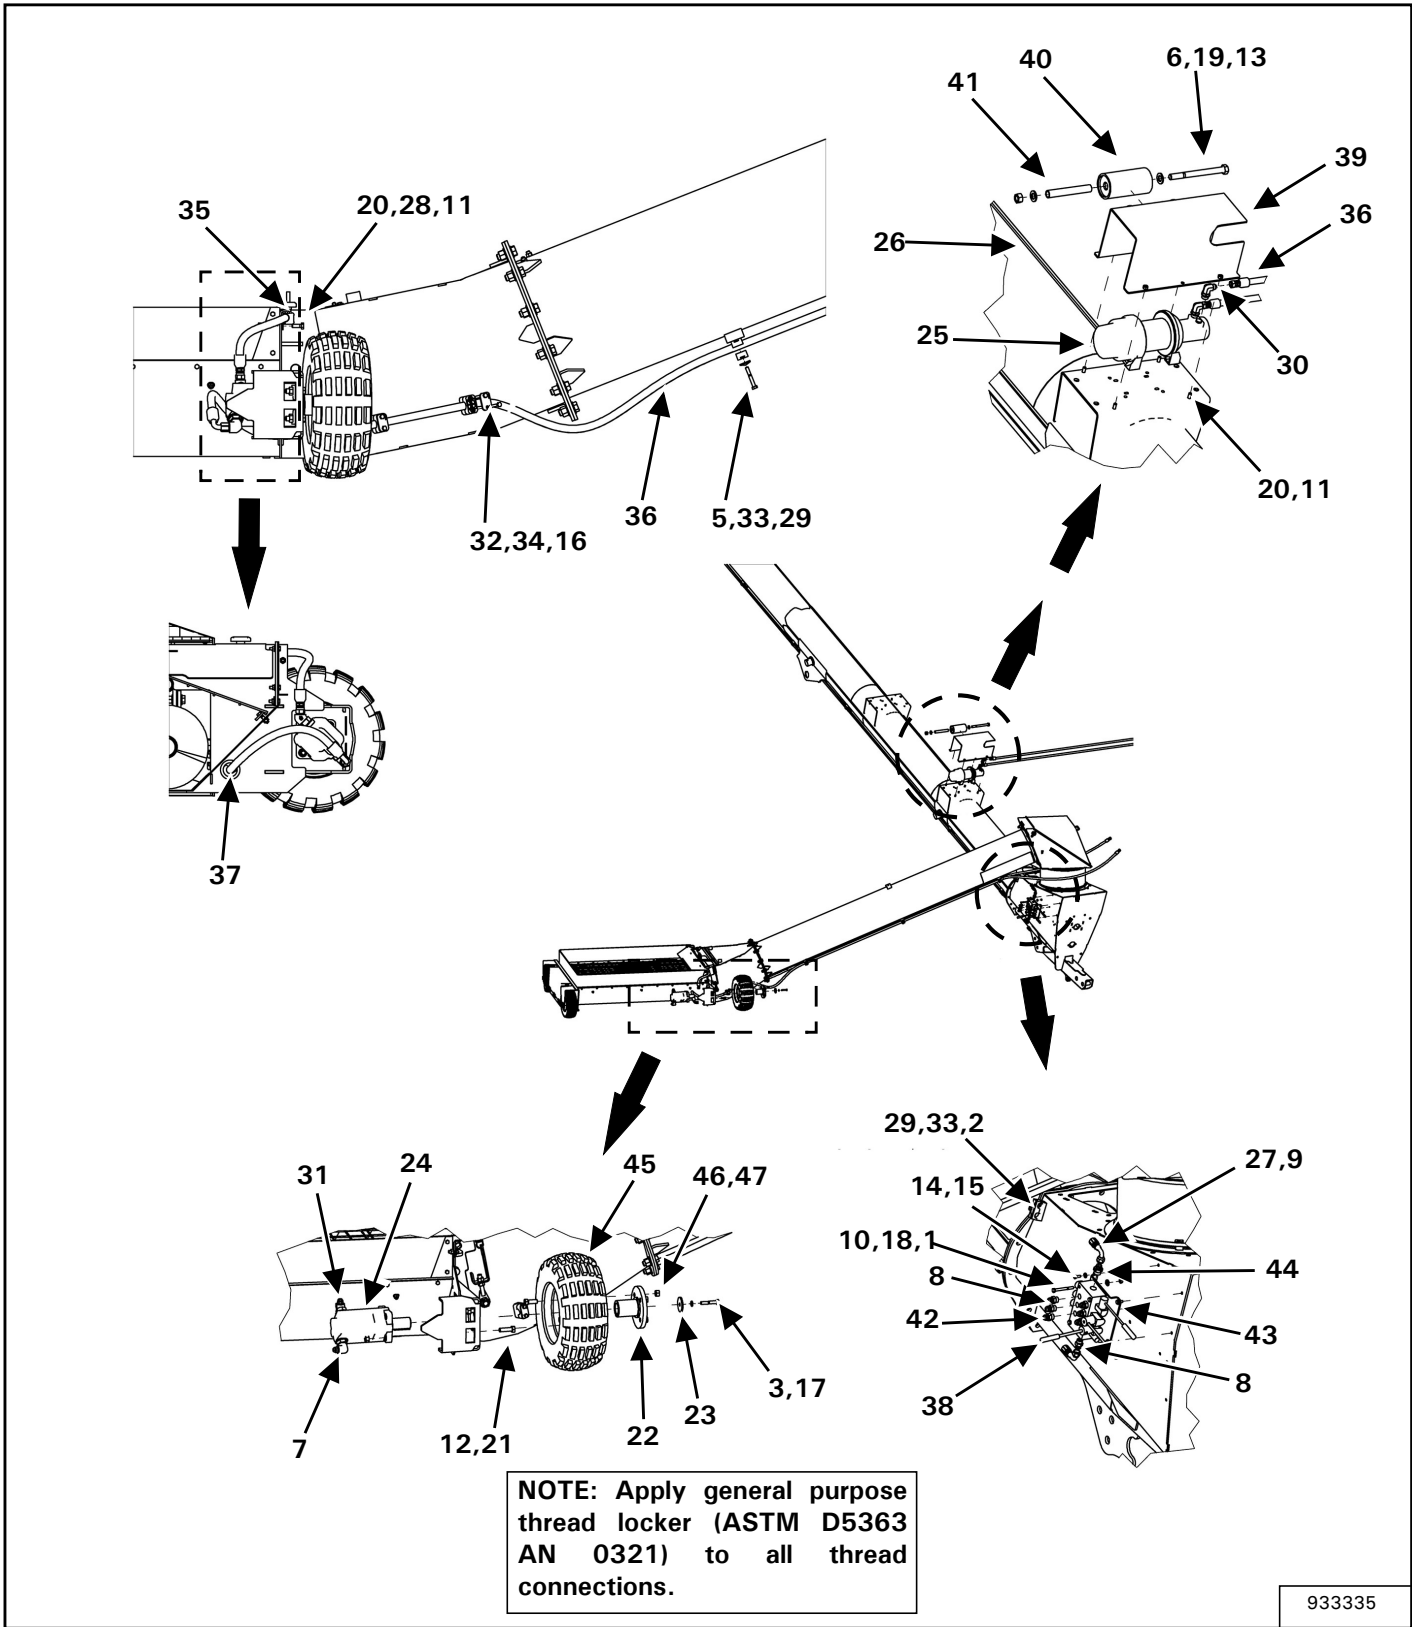

933335


ITEM	PART NUMBER	DESCRIPTION	QTY
1	810582	5/16" x 3" HEX BOLT (PL)	3
2	810761	5/16" x 2 1/2" HEX BOLT (PL)	1
3	810958	3/8" x 2 1/4" HEX BOLT (PL)	2
4	811416	ELBOW-10 MORB x -8 MJIC, 90 DEG	2
5	811688	BOLT-5/16" x 2 1/4" (PL) GR.5	3
6	811908	BOLT HEX 0.750NC X 8.50 GR5PL	1
7	811960	ELBOW -12 MORB x -8 MJIC 90	2
8	812080	ADAPTOR STR 3/4MORB x 3/4MJIC	3
9	812208	NIPPLE 1/2" BODY 1/2"-14 NPTF QUICK CONNECT	2
10	812362	5/16" LOCK NUT (PL)	3
11	812363	3/8" LOCK NUT (PL)	6
12	812364	1/2" LOCK NUT (PL)	8
13	812365	3/4" LOCK NUT (PL)	1
14	812624	1/4" FLAT WASHER PL	4
15	81525	1/4" x 3/4" HEX BOLT (PL)	4
16	81531	BOLT HEX 0.25NC x 2.00 GR5 PL	8
17	81593	3/8" LOCK WASHER (PL)	2
18	84039	WASHER - 3/8" SAE FLAT (PL)	3
19	84050	3/4" S.A.E. FLAT WASHER (PL)	2
20	86170	3/8" x1" HEX BOLT GR.5 (PL)	6
21	87553	1/2" x 1.75" HEX BOLT UNC GR5 (PL)	8
22	909179	HUB WELDT	2
23	909180L	FLAT WASHER 7GA x 13/32" ID x 2" OD	2
24	909193	HYDRAULIC MOTOR 169-0093-001	2
25	910483	WARN HYDRAULIC WINCH	1
26	910508	WINCH CABLE ASSEMBLY (1/4")	1
27	912250	HOSE 1/2" x 138 1/2" MNPT x 3/4" SWFJIC 90	2
28	913193	P-CLIP 0.75	2
29	914640	HOSE CLAMP-TWIN 0.787 DIA	4
30	914931	30 HOSE-8 x -8FJIC x-8FJIC 90 DEG	2
31	916912	ADAPTOR-08 MJIC x -12 MORB 45 DEG 2	2
32	916917	CLAMP-SINGLE 0.79	4
33	917014	COVER-TWIN CLAMP 3D	4
34	917015	COVER-SINGLE CLAMP	4
35	917021	HOSE-8 x -8 FJIC x -8 FJIC	1

16124 HIGH CAPACITY HYDRAULIC KIT (CONT)

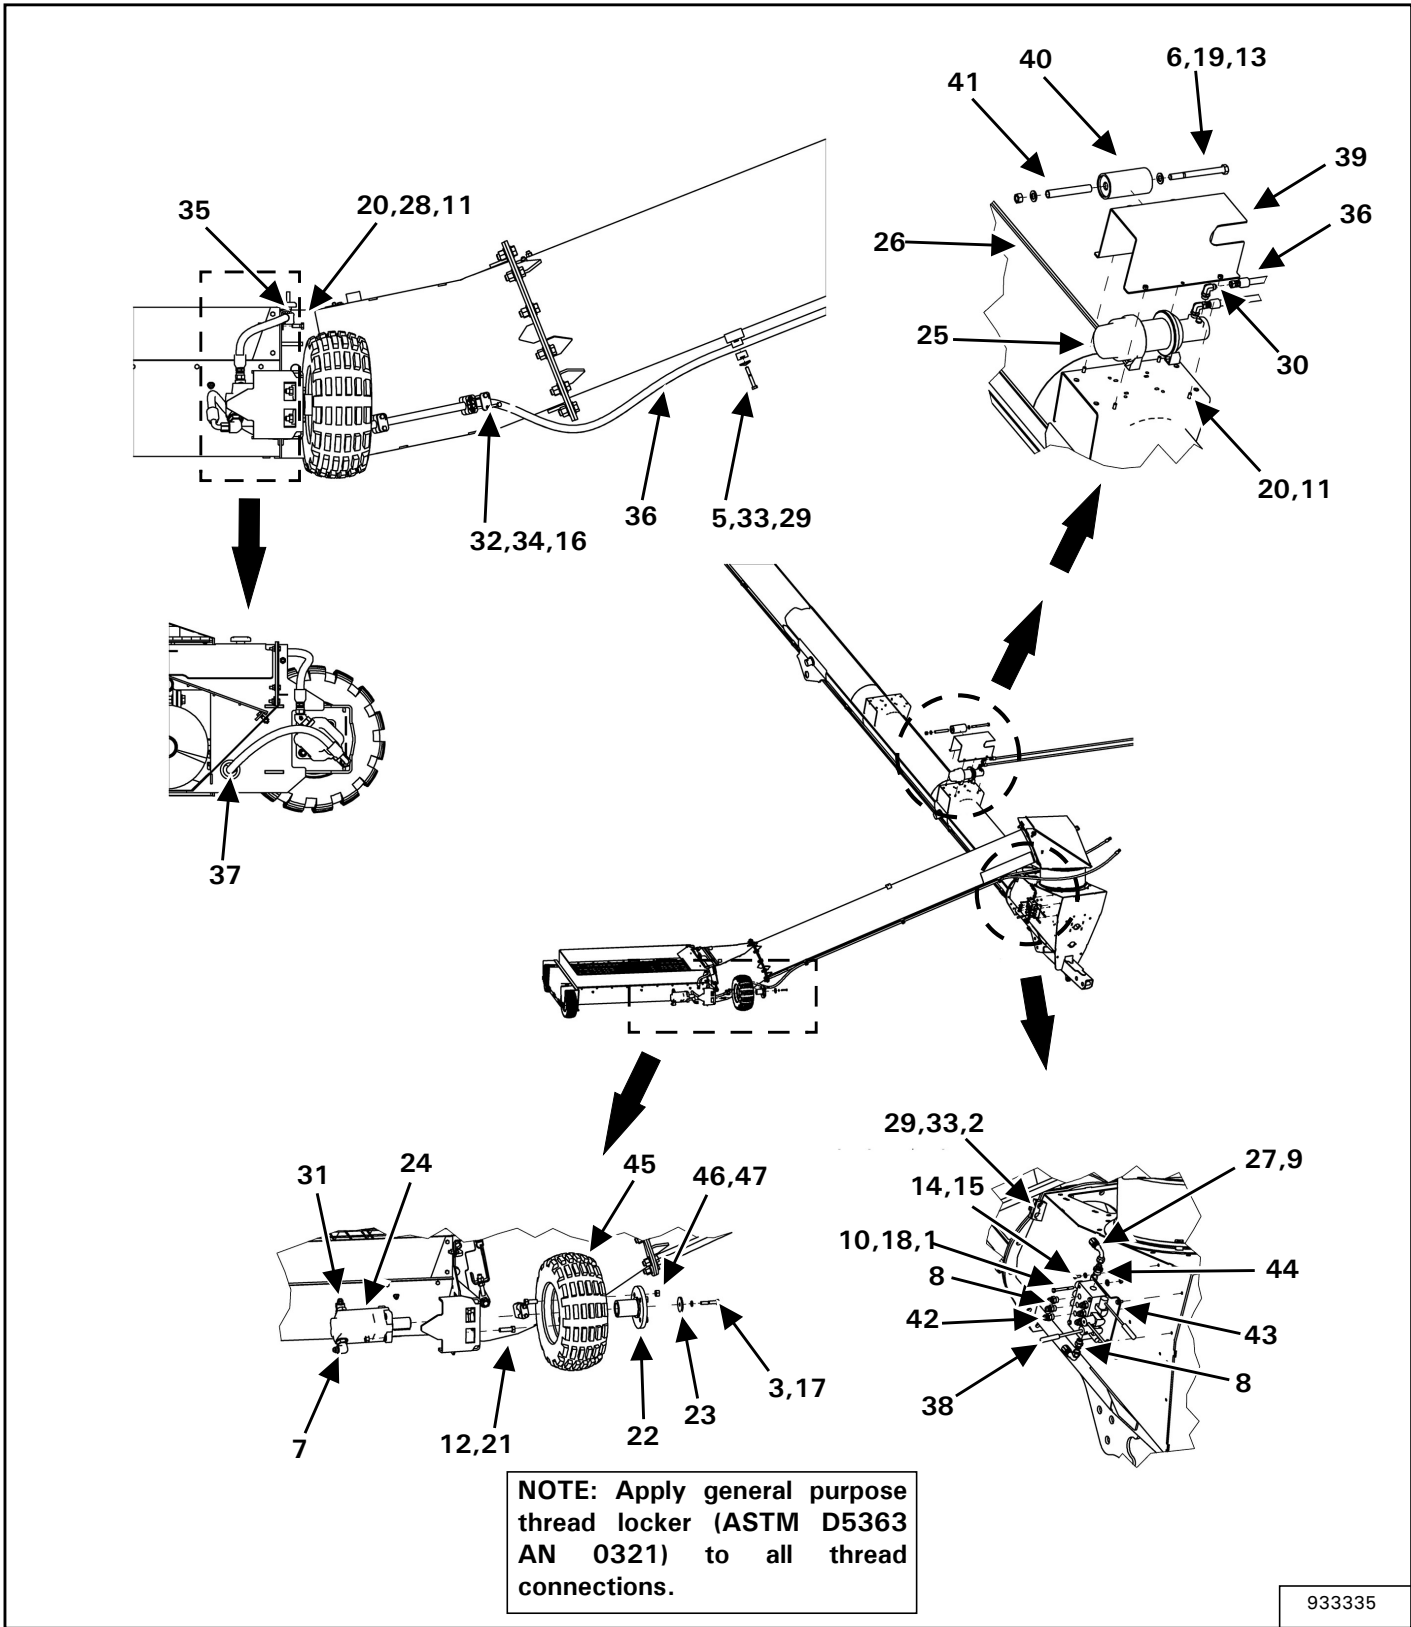


ITEM	PART NUMBER	DESCRIPTION	QTY
36	917022	HOSE-8 x -8 FJIC x -8 FJIC 90	2
37	929764	RUBBER GROMMET- 1.50" ID	2
38	932080	Q45 3 SPOOL HYDRAULIC VALVE	1
39	932132	WELDT-WINCH GUARD	1
40	932146	WELDT-ROLLER	1
41	932408	TUBE-ROLLER CORE	1
42	933064	ADPTR -8 MORB X -8 MJIC R.0625	4
43	933332	BRKT-VALVE MOUNT	1
44	933334	ADPTR CHECK VALVE -10 MORB x -8 MJIC	1
45	960800	TIRE W/WHEEL 16/650 x 8	2
46	967105	WHEEL NUT 1/2" (STEEL)	8
47	968404	WHEEL BOLT 1/2" x 1 1/4" (PL)	8



HYDRAULIC KIT ASSEMBLY

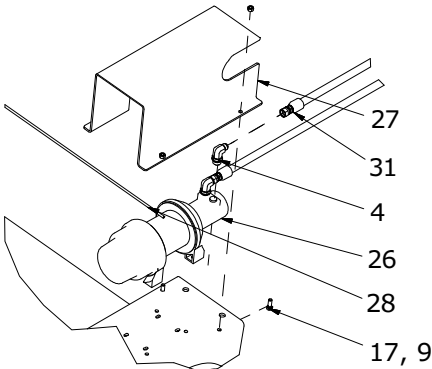


DETAIL A

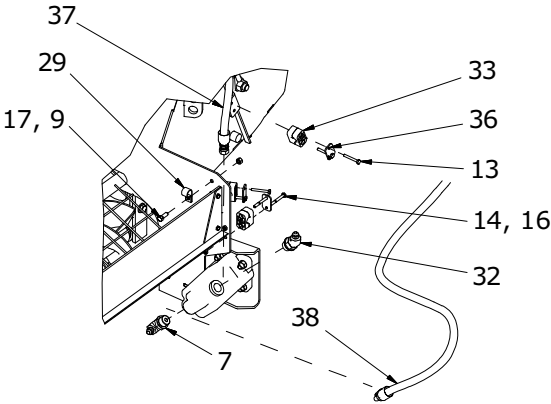

DETAIL C

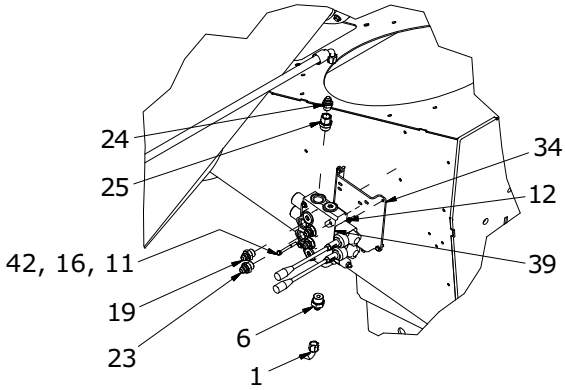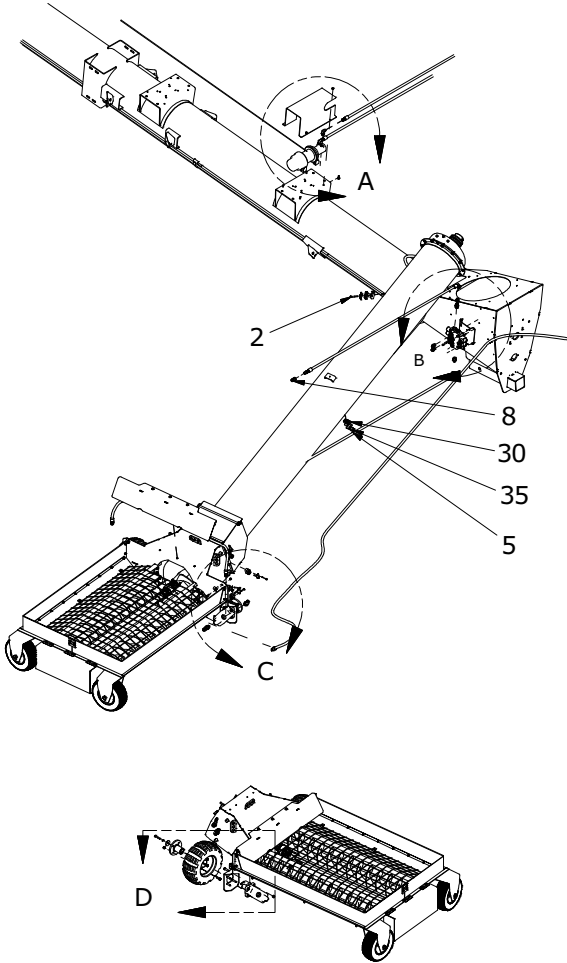


DETAIL B

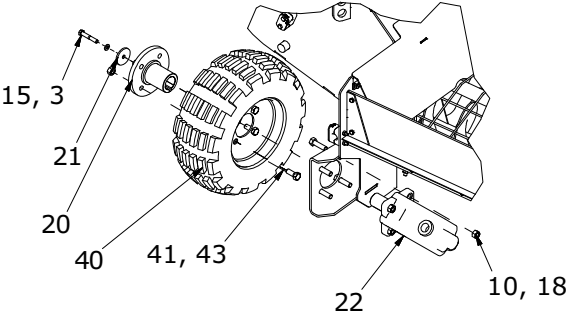


DETAIL D

ITEM	PART NUMBER	DESCRIPTION	QTY
1	116848	HOSE-8 X -8FJIC X -8MPT	2
2	810761	5/16" X 2 1/2" HEX BOLT (PL)	1
3	810958	3/8" X 2 1/4" HEX BOLT (PL)	2
4	811416	ELBOW-10 MORB X -8 MJIC, 90 DEG	2
5	811688	BOLT-5/16" X 2 1/4" (PL) GR.5	3
6	811748	ADAPTOR -12 MORB X -8 MJIC	1
7	811960	ELBOW -12 MORB X -8 MJIC 90	2
8	812208	NIPPLE 1/2" BODY 1/2"-14 NPTF QUICK CONNECT	2
9	812363	3/8" LOCK NUT (PL)	6
10	812364	1/2" LOCK NUT (PL)	8
11	812624	1/4" FLAT WASHER PL	3
12	81525	1/4" X 3/4" HEX BOLT (PL)	4
13	81531	BOLT HEX 0.25NC X 2.00 GR5 PL	8
14	81532	1/4" X 2 1/4" HEX BOLT GR5 (PL)	4
15	81593	3/8" LOCK WASHER (PL)	2
16	84498	1/4" LOCK NUT (PL)	7
17	86170	3/8" X 1" HEX BOLT GR.5 (PL)	6
18	87553	1/2" X 1.75" HEX BOLT UNC GR5 (PL)	8
19	886897	ADAPTOR STR 7/8MORB X 3/4MJIC S	2
20	909179	HUB WELDT	2
21	909180L	FLAT WASHER 7GA X 13/32"ID X 2"OD	2
22	909193	HYDRAULIC MOTOR 169-0093-001	2
23	909460	ADAPTOR STR 7/8MORB X 3/4MJIC R.0625	2
24	909935	ADAPTOR CHECK VALVE (#8 MORB - #8 MJIC)	1
25	909936	ADAPTOR STR (#12 MORB - #8 FORB)	1
26	910483	WARN HYDRAULIC WINCH	1
27	910490	HYD. WINCH SHIELD 7GA	1
28	910508	WINCH CABLE ASSEMBLY (1/4")	1
29	913193	P-CLIP 0.75	2
30	914640	HOSE CLAMP-TWIN 0.787 DIA	4
31	914931	HOSE-8 X -8FJIC X -8FJIC 90 DEG	2
32	916912	ADAPTOR-08 MJIC X -12 MORB 45 DEG	2
33	916917	CLAMP-SINGLE 0.79	6



HYDRAULIC KIT ASSEMBLY (CONT)

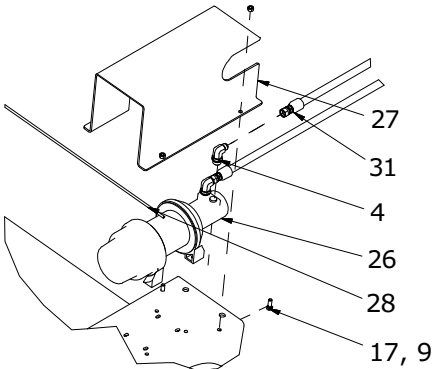


DETAIL A

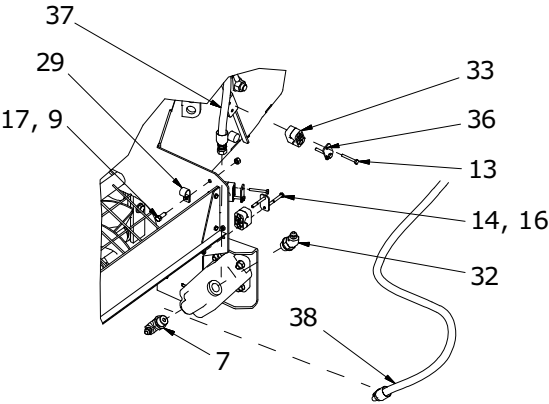

DETAIL C

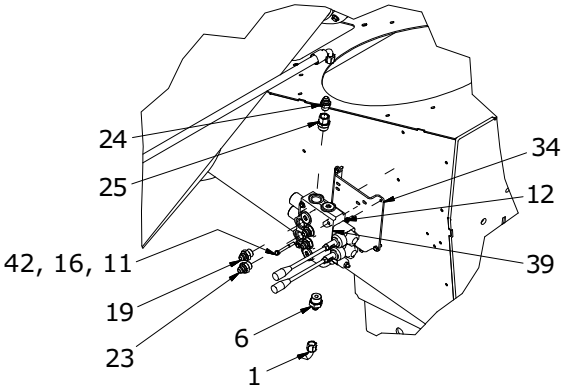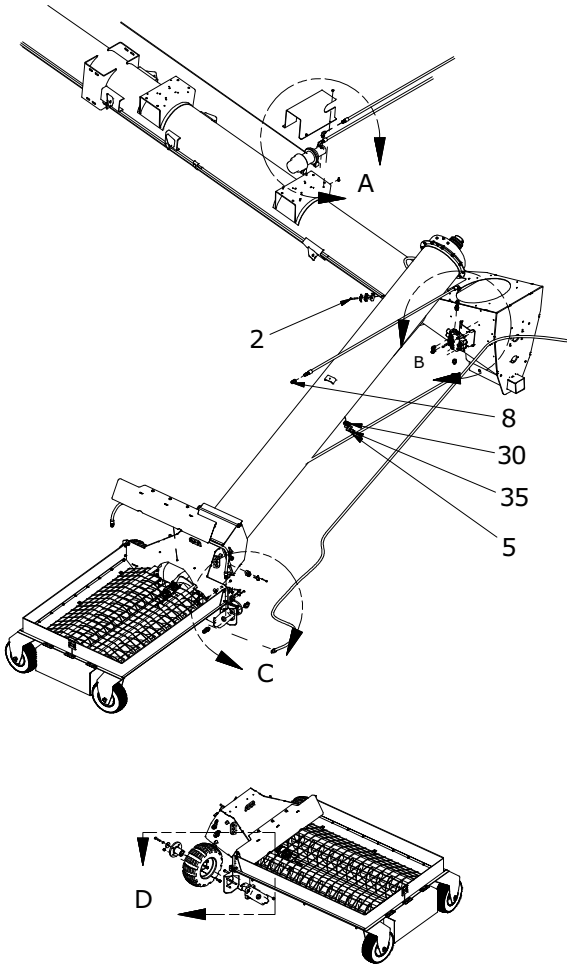


DETAIL B

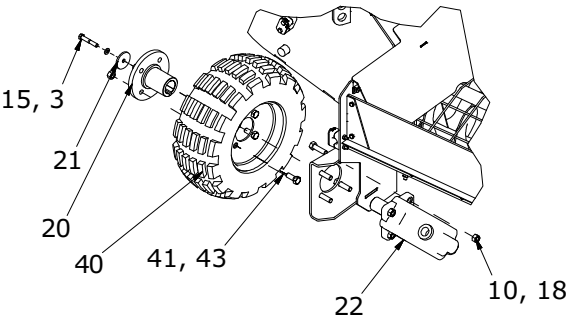

DETAIL D


ITEM	PART NUMBER	DESCRIPTION	QTY
34	916959	BRKT-VALVE MOUNT	1
35	917014	COVER-TWIN CLAMP 3D	4
36	917015	COVER-SINGLE CLAMP 3	6
37	917021	HOSE-08 X -08 SWFJIC X -08 SWFJIC	1
38	917022	HOSE-08 X -08 SWFJIC X -08 SWFJIC 90	2
39	917223	ASSEMBLY-VALVE W/HANDLEVERS	1
40	960800	TIRE W/WHEEL 16/650X8	2
41	967105	WHEEL NUT 1/2" (STEEL)	8
42	967193	1/4" X 2 1/2" HEX BOLT (PL)	3
43	968404	WHEEL BOLT 1/2" X 1 1/4" (PL)	8

M2000 HELICAL GEARBOX 910502

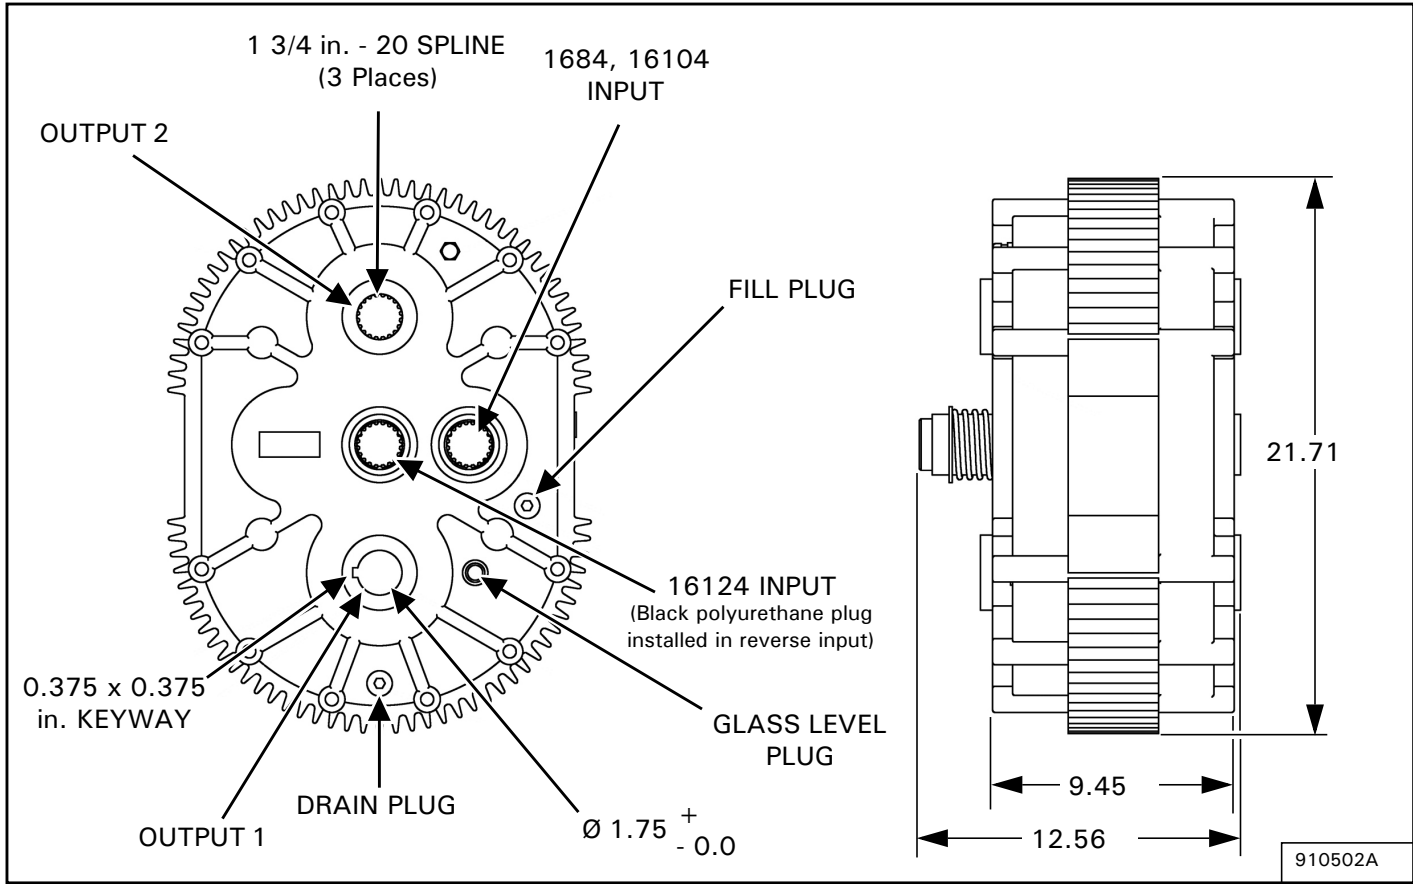


NOTE: The 16124 connects to reverse input port (use center port).

4168 LOWER GEARBOX 916945

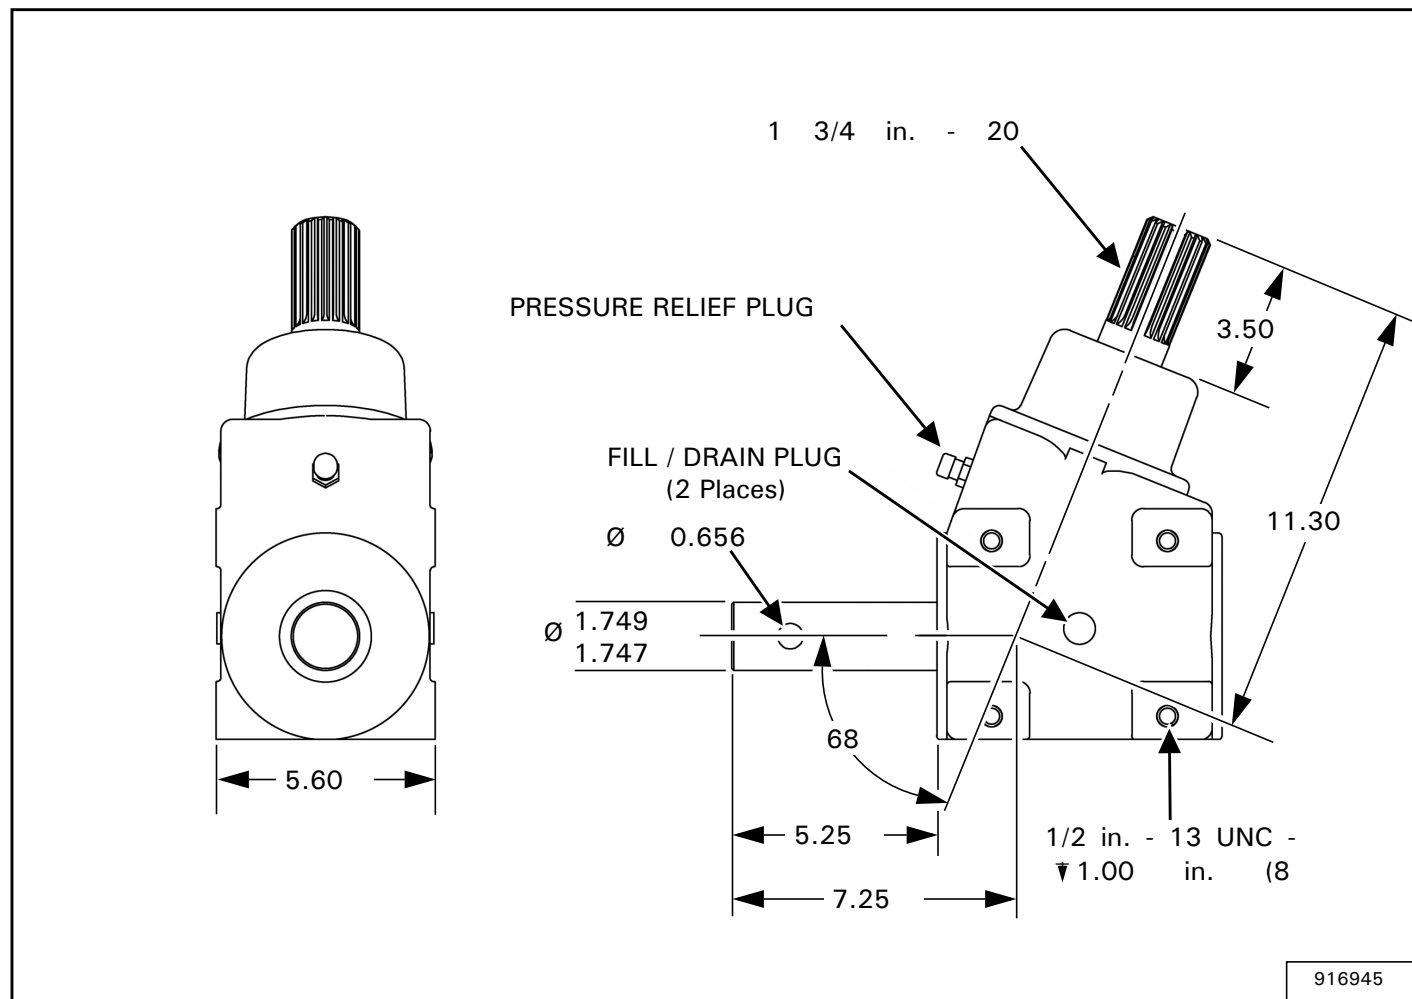

4168 UPPER GEARBOX 905881

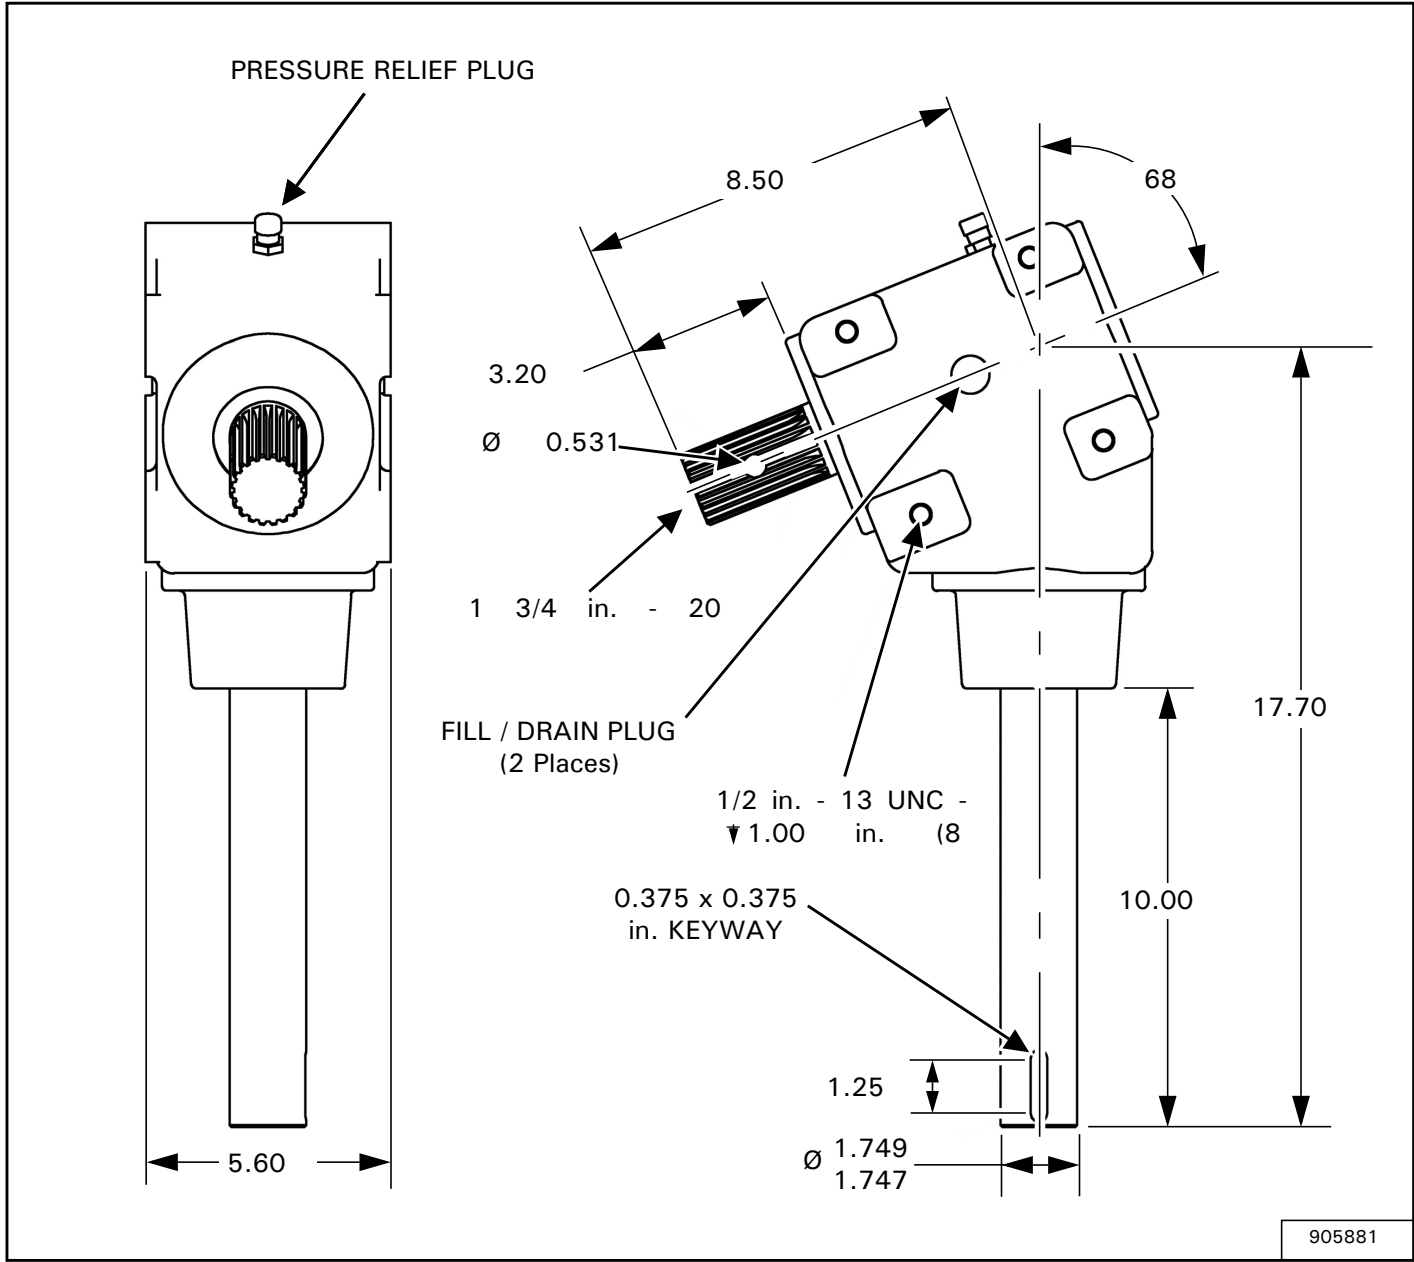


SPECIFICATIONS

1684, 16104 ELECTRICAL DIAGRAM	273
16124 ELECTRICAL DIAGRAM	274
SPECIFICATIONS	276
Dimensions (1684)	276
Dimensions (16104)	278
Dimensions (16124)	280
Performance	281
HARDWARE TORQUE VALUES	282
Metric Chart	282
Imperial Chart	283
HYDRAULIC CONNECTION SPECIFICATIONS	284
O-ring Fitting (Straight Thread)	284
O-ring Face Seal Connection	284
Flare Fitting	284
O-ring Boss Fitting	284
Hydraulic Tubes And Hoses	284


Farm King



1684, 16104 ELECTRICAL DIAGRAM

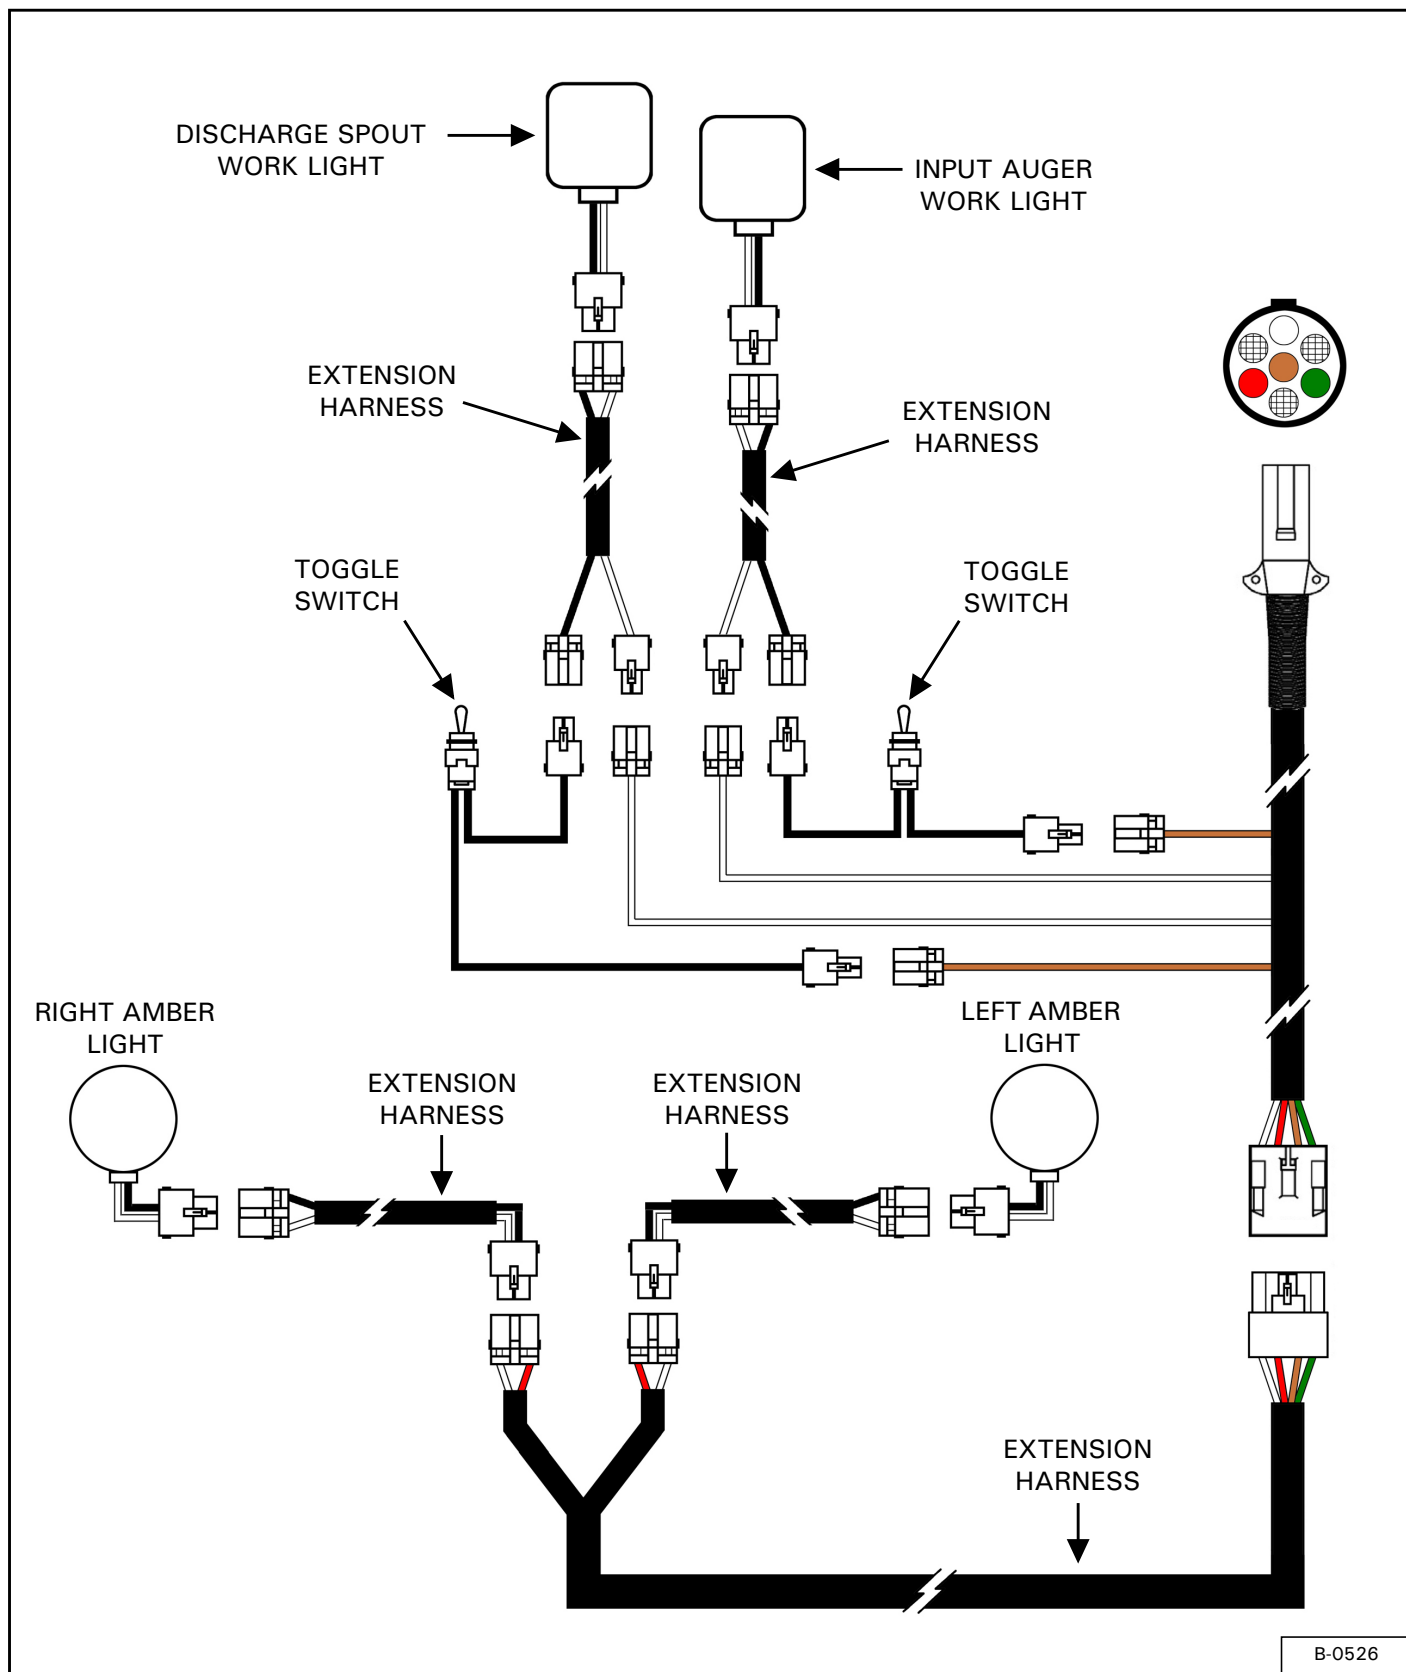

16124 ELECTRICAL DIAGRAM

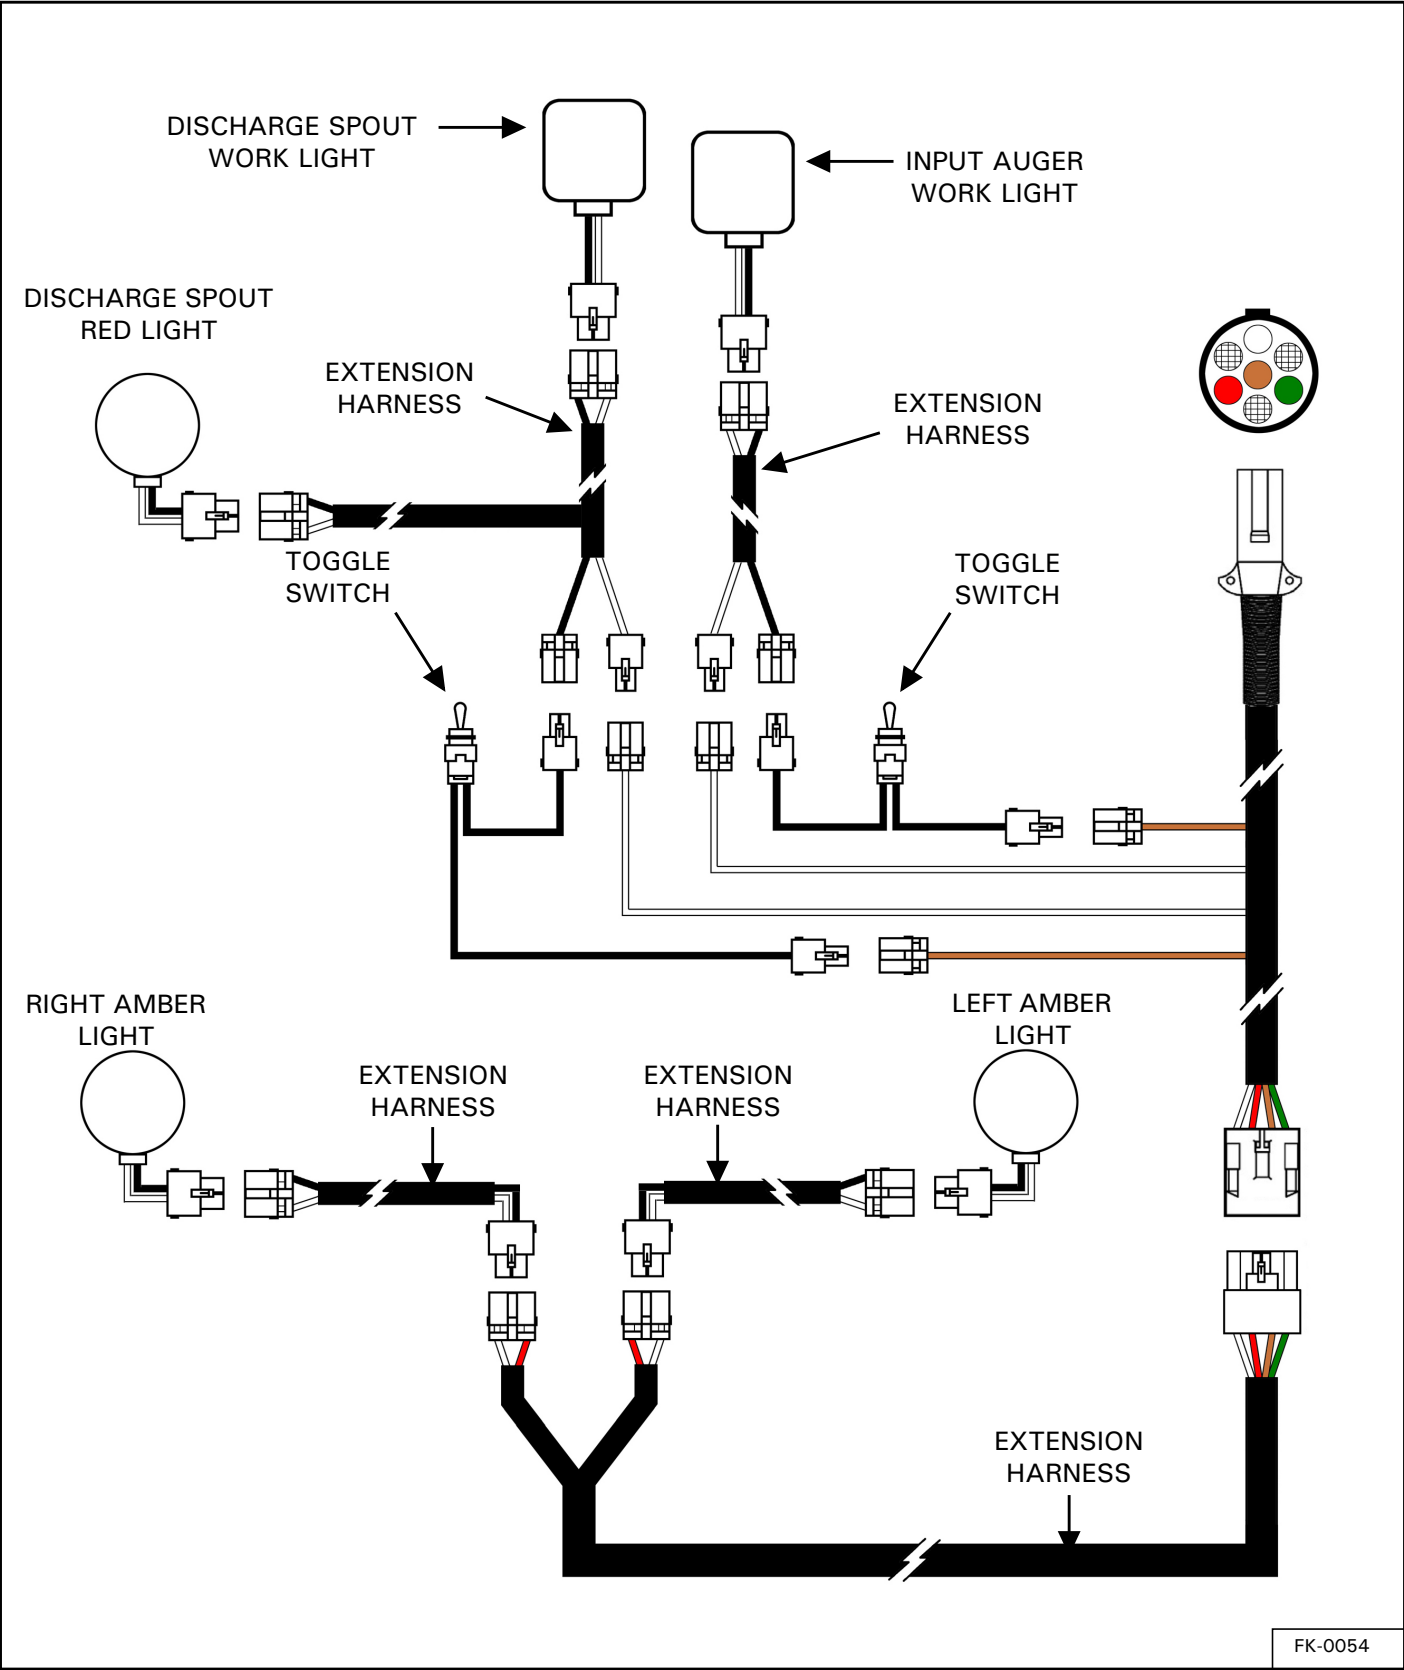


Farm King




SPECIFICATIONS

Dimensions (1684)

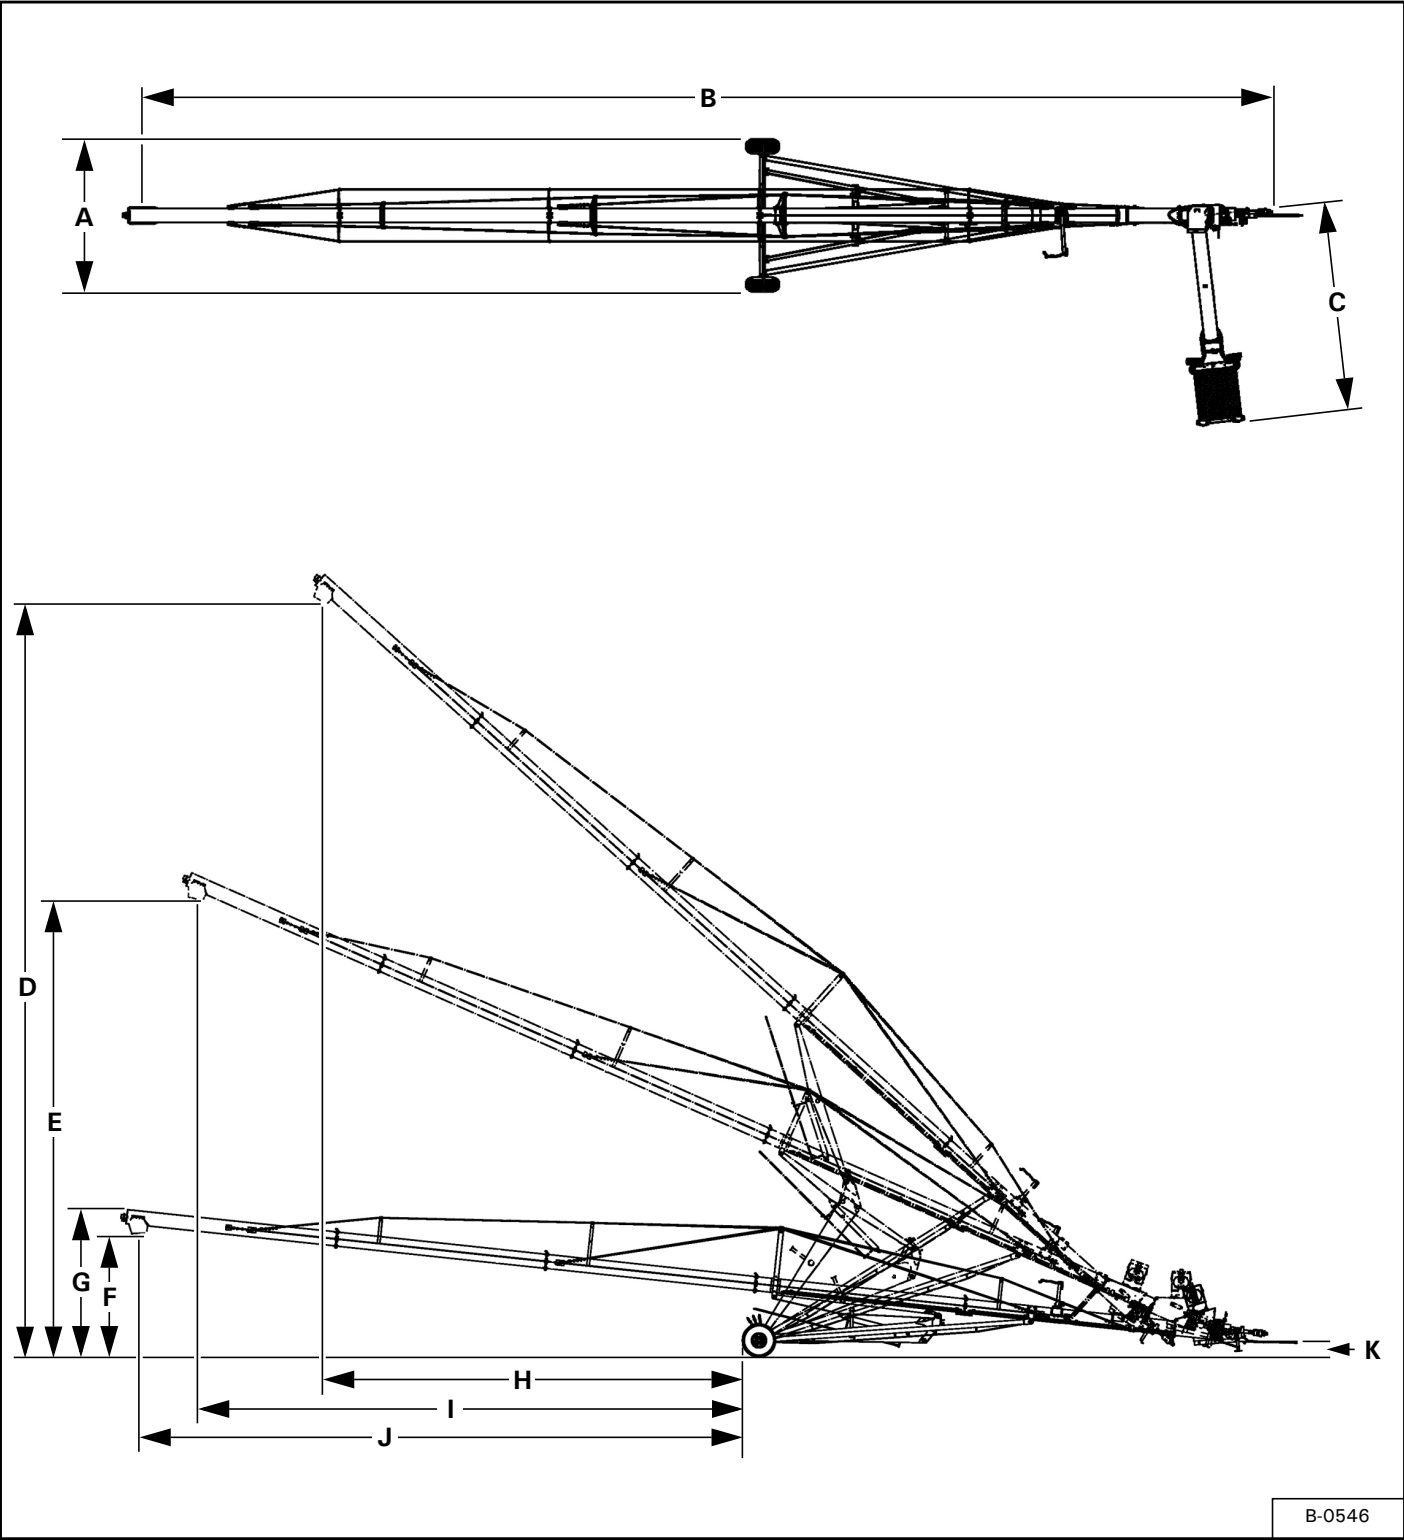


DESCRIPTION	BACKSAVER AUGER 1684
Overall Width (A)	163 in.
Overall Length (B)	1019 in.
Input Auger / Hopper Length (C)	235 in.
Discharge Spout Height @ 42° Angle (D)	679 in.
Discharge Spout Height @ 24° Angle (E)	424 in.
Discharge Spout Height @ 6° Angle (F)	135 in.
Transport Height (G)	163 in.
Discharge Spout To Wheels @ 42° Angle (H)	390 in.
Discharge Spout To Wheels @ 24° Angle (I)	481 in.
Discharge Spout To Wheels @ 6° Angle (J)	525 in.
Hitch Height (K)	18 in.

Dimensions (16104)

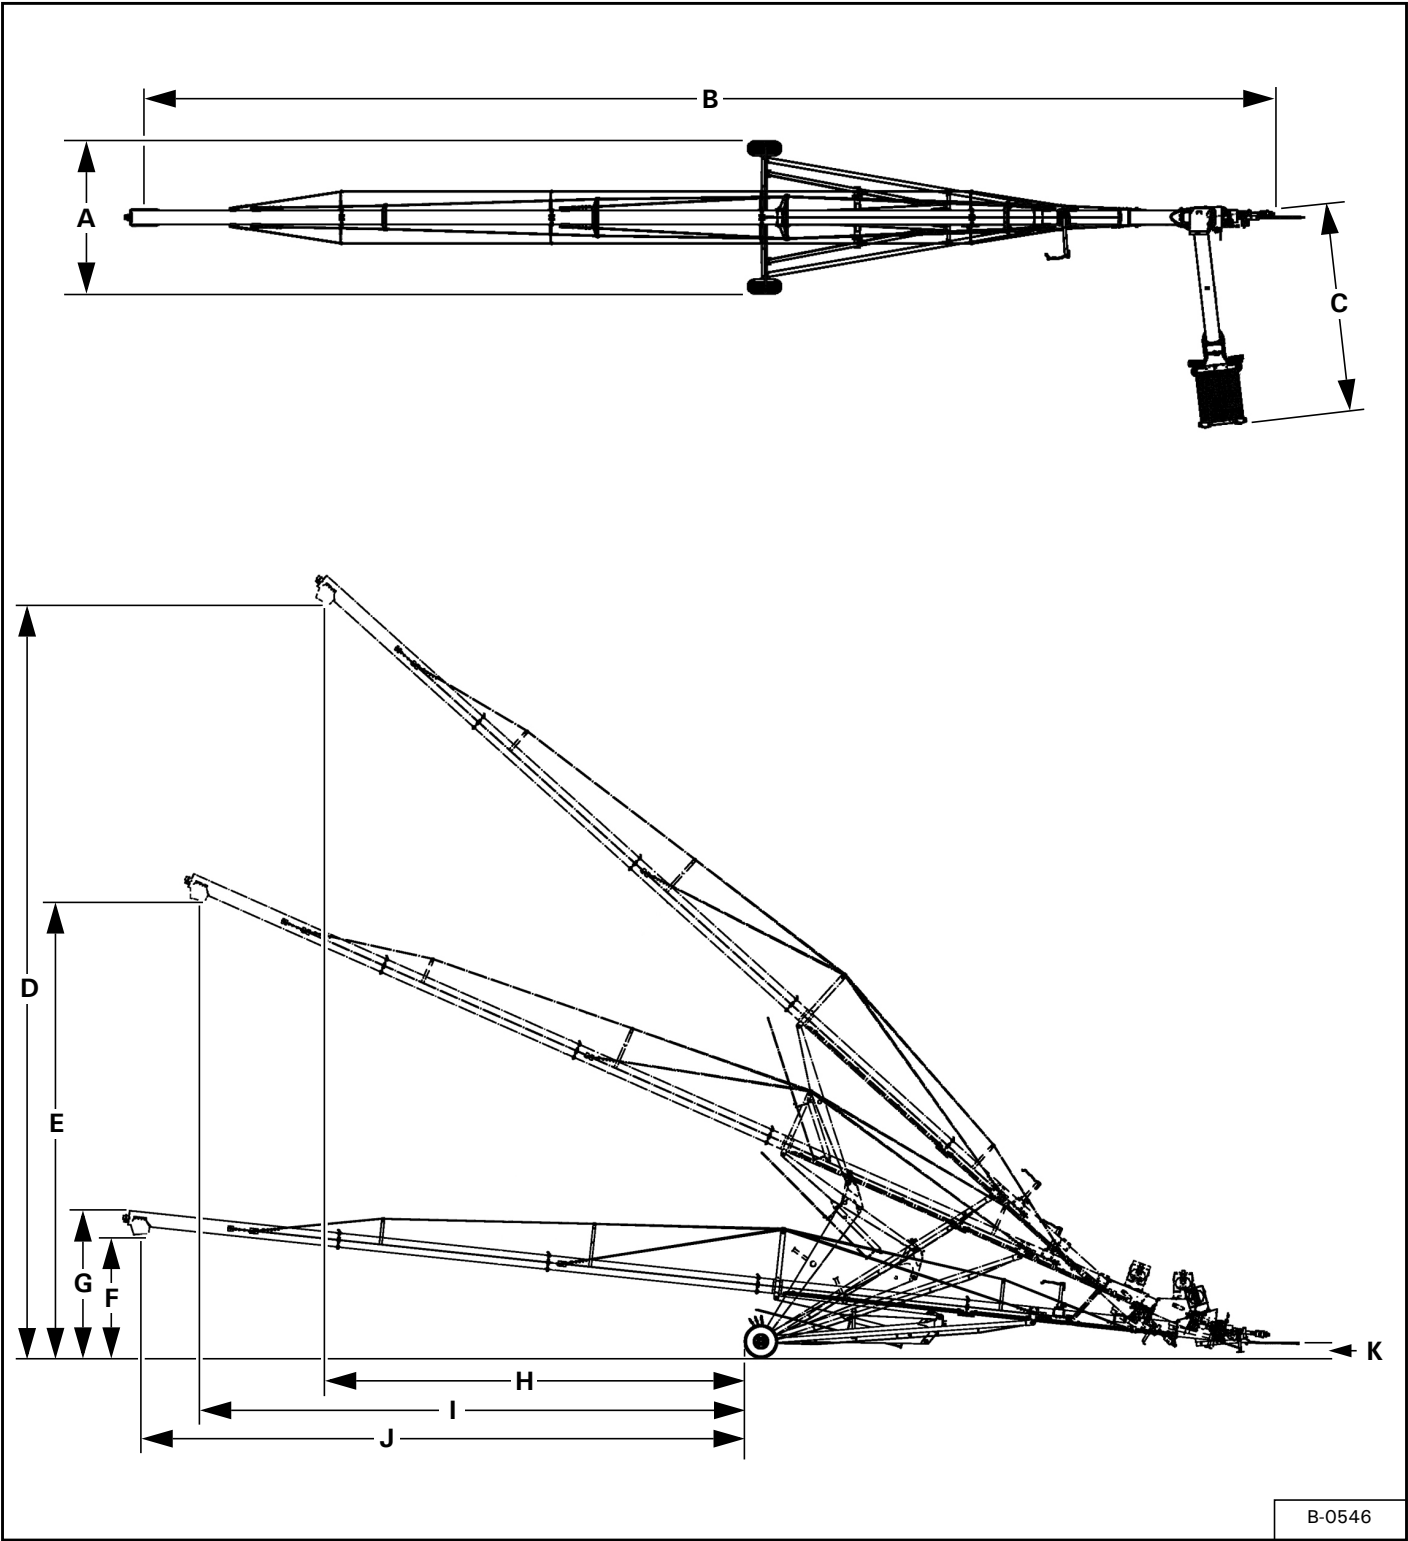

DESCRIPTION	BACKSAVER AUGER 16104
Overall Width (A)	173 in.
Overall Length (B)	1266 in.
Input Auger / Hopper Length (C)	235 in.
Discharge Spout Height @ 42° Angle (D)	857 in.
Discharge Spout Height @ 24° Angle (E)	520 in.
Discharge Spout Height @ 6° Angle (F)	141 in.
Transport Height (G)	168 in.
Discharge Spout To Wheels @ 42° Angle (H)	481 in.
Discharge Spout To Wheels @ 24° Angle (I)	623 in.
Discharge Spout To Wheels @ 6° Angle (J)	687 in.
Hitch Height (K)	18 in.

Dimensions (16124)

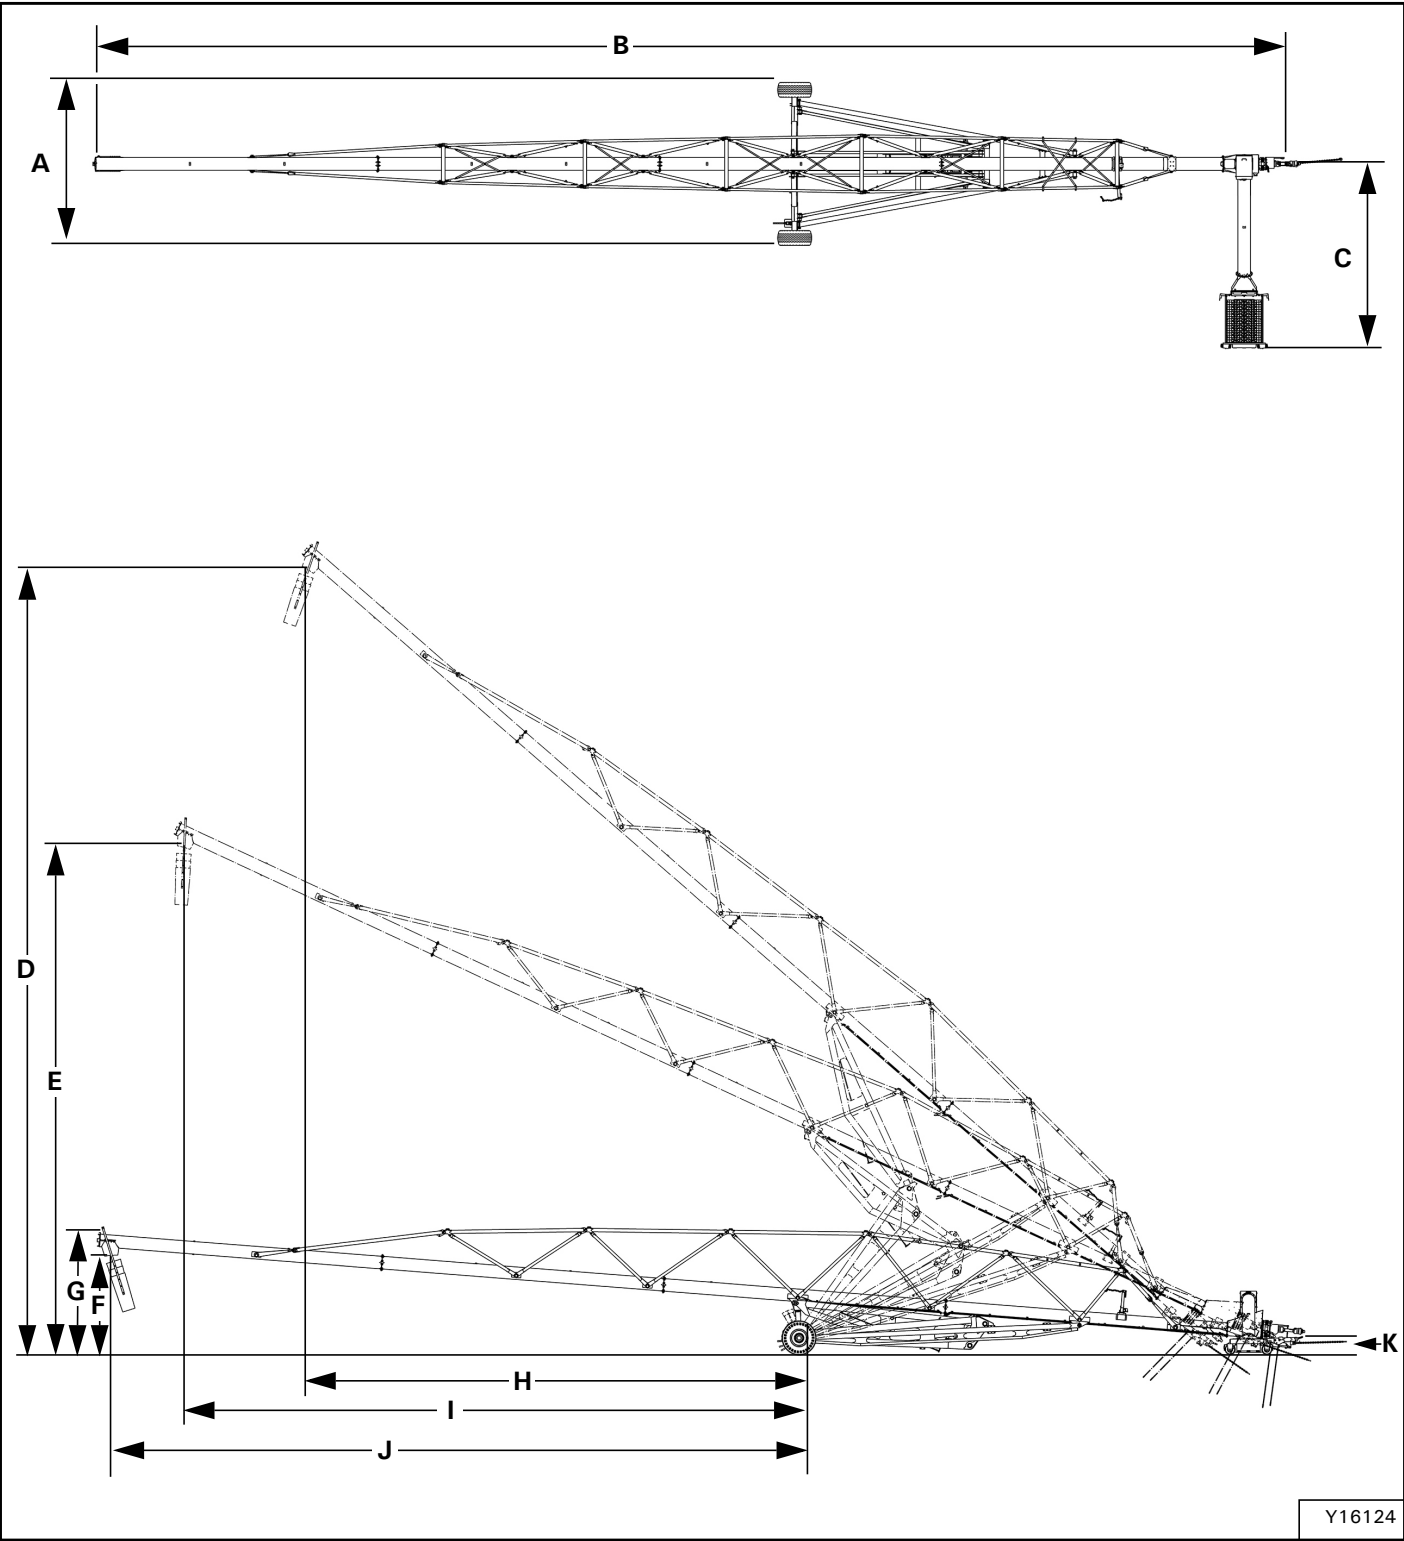

DESCRIPTION	BACKSAVER AUGER 16124
Overall Width (A)	207 in.
Overall Length (B)	1511 in.
Input Auger / Hopper Length (C)	235 in.
Discharge Spout Height @ 41° Angle (D)	998 in.
Discharge Spout Height @ 25° Angle (E)	644 in.
Discharge Spout Height @ 5° Angle (F)	125 in.
Transport Height (G)	152 in.
Discharge Spout To Wheels @ 41° Angle (H)	635 in.
Discharge Spout To Wheels @ 25° Angle (I)	793 in.
Discharge Spout To Wheels @ 5° Angle (J)	885 in.
Hitch Height (K)	20 in.

Performance

DESCRIPTION	BACKSAVER AUGER 1684	BACKSAVER AUGER 16104	BACKSAVER AUGER 16124
Maximum PTO Speed	1000 RPM		
Main Auger Tubes	16 in. Dia.		
Main Auger Size	15.25 in. OD		
Hopper	16 in. Multi Flighting		
Hopper Intake Size	55.17 in. x 45.85 in.	55.17 in. x 45.85 in.	55.17 in. x 45.85 in.
Hopper Drive Chain	80H Roller Chain	80H Roller Chain	H60 Roller Chain
Hitch Tongue Weight (Down Position)	2,300 lb.	2,460 lb.	3,810 lb.
Total Weight	11,000 lb.	13,500 lb.	23,010 lb.
Hubs And Wheels	6 Bolt Hubs / 12.5 L-15 FI	8 Bolt Hubs / 16.5 L x 16.1 x 10 Ply	10 Bolt Hubs / 480/55R22.5
Winch	Hydraulic / Optional Electrical Winch		
M2000 Helical Gearbox	75W - 90 Synthetic Gear Oil		
4168 Lower Gearbox	75W - 90 Synthetic Gear Oil		
4168 Upper Gearbox	75W - 90 Synthetic Gear Oil		

HARDWARE TORQUE VALUES

Metric Chart


NOTE: Do not use the values listed in the charts if a different torque value or tightening procedure is specified in this manual for a specific application. Torque values listed are for general use only.

Use the following charts to determine the correct torque when checking, adjusting or replacing hardware. Torque values are listed in newton-meters (inch* or foot pounds) for normal assembly applications.


Nominal Size	Class 5.8		Class 8.8		Class 10.9		Lock nuts
	Unplated	Plated W / ZnCr	Unplated	Plated W / ZnCr	Unplated	Plated W / ZnCr	CL.8 w/ CL. 8.8 Bolt
M4	1.7 (15*)	2.2 (19*)	2.6 (23*)	3.4 (30*)	3.7 (33*)	4.8 (42*)	1.8 (16*)
M6	5.8 (51*)	7.6 (67*)	8.9 (79*)	12 (102*)	13 (115*)	17 (150*)	6.3 (56*)
M8	14 (124*)	18 (159*)	22 (195*)	28 (248*)	31 (274*)	40 (354*)	15 (133*)
M10	28 (21)	36 (27)	43 (32)	56 (41)	61 (45)	79 (58)	30 (22)
M12	49 (36)	63 (46)	75 (55)	97 (72)	107 (79)	138 (102)	53 (39)
M16	121 (89)	158 (117)	186 (137)	240 (177)	266 (196)	344 (254)	131 (97)
M20	237 (175)	307 (226)	375 (277)	485 (358)	519 (383)	671 (495)	265 (195)
M24	411 (303)	531 (392)	648 (478)	839 (619)	897 (662)	1160 (855)	458 (338)

NOTE: Torque values shown with * are inch pounds.

Identification of Hex Cap Screws and Carriage Bolts - Classes 5 and up

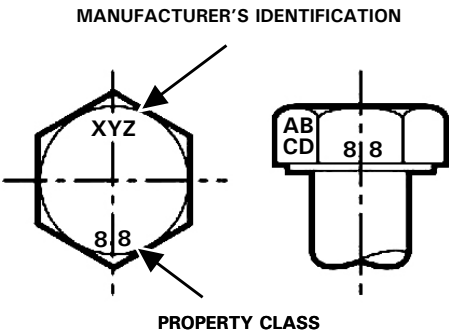

Identification of Hex Nuts and Lock Nuts - Classes 5 and up

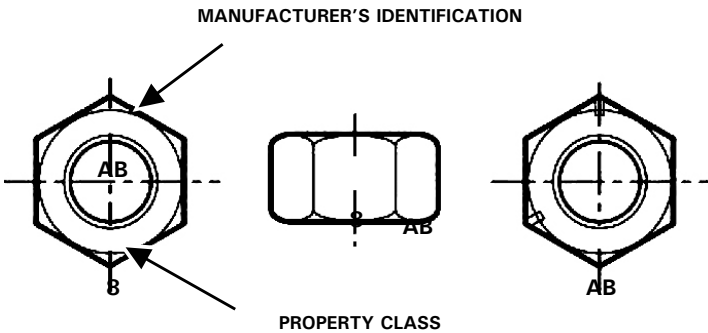


HARDWARE TORQUE VALUES (CONT'D)
Imperial Chart

NOTE: Do not use the values listed in the charts if a different torque value or tightening procedure is specified in this manual for a specific application. Torque values listed are for general use only.

Use the following charts to determine the correct torque when checking, adjusting or replacing hardware. Torque values are listed in newton-meters (inch* or foot pounds) for normal assembly applications.


Nominal Size	SAE Grade 5		SAE Grade 8		LOCK NUTS			
	Unplated or Plated Silver	Plated W / ZnCr Gold	Unplated or Plated Silver	Plated W / ZnCr Gold	Unplated or Plated Silver	Plated W / ZnCr Gold	Grade W / Gr. 5 Bolt	Grade W / Gr. 8 Bolt
1/4	6.2 (55*)	8.1 (72*)	9.7 (86*)	12.6 (112*)	13.6 (121*)	17.7 (157*)	6.9 (61*)	9.8 (86*)
5/16	13 (115*)	17 (149*)	20 (178*)	26 (229*)	28 (250*)	37 (324*)	14 (125*)	20 (176*)
3/8	23 (17)	30 (22)	35 (26)	46 (34)	50 (37)	65 (48)	26 (19)	35 (26)
7/16	37 (27)	47 (35)	57 (42)	73 (54)	80 (59)	104 (77)	41 (30)	57 (42)
1/2	57 (42)	73 (54)	87 (64)	113 (83)	123 (91)	159 (117)	61 (45)	88 (64)
9/16	81 (60)	104 (77)	125 (92)	163 (120)	176 (130)	229 (169)	88 (65)	125 (92)
5/8	112 (83)	145 (107)	174 (128)	224 (165)	244 (180)	316 (233)	122 (90)	172 (127)
3/4	198 (146)	256 (189)	306 (226)	397 (293)	432 (319)	560 (413)	217 (160)	306 (226)
7/8	193 (142)	248 (183)	495 (365)	641 (473)	698 (515)	904 (667)	350 (258)	494 (364)
1	289 (213)	373 (275)	742 (547)	960 (708)	1048 (773)	1356 (1000)	523 (386)	739 (545)

 NOTE: Torque values shown with * are inch pounds.

Identification of Hex Cap Screws and Carriage Bolts

 SAE GRADE
2 BOLTS

  SAE GRADE
5 BOLTS


 SAE GRADE
8 BOLTS

Identification of Hex Nuts and Lock Nuts


Grade A - No Notches

Grade B - One Circumferential Notch

 
Grade C - Two Circumferential Notches



Grade A - No Mark

Grade B - Letter B

 Grade C - Letter C



Grade A - No Marks

Grade B - Three Marks

Grade C - Six Marks

(Marks not always located at corners)

HYDRAULIC CONNECTION SPECIFICATIONS

O-ring Fitting (Straight Thread)

Lubricate the O-ring before installing the fitting. Loosen the jam nut and install the fitting. Tighten the jam nut until the washer is tight against the surface.

O-ring Face Seal Connection

Figure 392

O-ring Face Seal Tightening Torque		
Tube O.D.	Thread Size	N•m (ft-lb)
1/4"	9/16" - 18	13 (18)
3/8"	11/16" - 16	22 (30)
1/2"	13/16" - 16	40 (54)
5/8"	1" - 14	60 (81)
3/4"	1-3/16" - 12	84 (114)
7/8"	1-3/16" - 12	98 (133)
1"	1-7/16" - 12	118 (160)
1-1/4"	1-11/16" - 12	154 (209)
1-1/2"	2" - 12	163 (221)

When the fitting is tightened, you can feel when the fitting is tight to eliminate leakage caused by under or over torqued fittings. Use petroleum jelly to hold the O-ring in position until the fittings are assembled.

Flare Fitting

Figure 393

Flare Fitting Tightening Torque		
Tube O.D.	Thread Size	N•m (ft-lb)
1/4"	7/16" - 20	13 (18)
5/16"	1/2" - 20	17 (23)
3/8"	9/16" - 18	22 (30)
1/2"	3/4" - 16	40 (54)
5/8"	7/8" - 14	60 (81)
3/4"	1-1/16" - 12	84 (114)
7/8"	1-3/16" - 12	98 (133)
1"	1-5/16" - 12	118 (160)
1-1/4"	1-5/8" - 12	154 (209)
1-1/2"	1-7/8" - 12	163 (221)
2"	2-1/2" - 12	252 (342)

Tighten until the nut makes contact with the seat. Use the chart [Figure 393] to find the correct tightness needed.

NOTE: If the fitting leaks, disconnect and inspect the seat area for damage.

O-ring Boss Fitting

Figure 394

O-ring Boss Tightening Torque		
Tube O.D.	Thread Size	N•m (ft-lb)
1/4"	7/16" - 20	13 (18)
3/8"	9/16" - 18	22 (30)
1/2"	3/4" - 16	40 (54)
5/8"	7/8" - 14	60 (81)
3/4"	1-1/16" - 12	84 (114)
7/8"	1-3/16" - 12	98 (133)
1"	1-5/16" - 12	118 (160)
1-1/8"	1-7/16" - 12	154 (209)
1-1/4"	1-5/8" - 12	163 (221)

If a torque wrench cannot be used, use the following method.

Tighten the nut until it just makes metal to metal contact, you can feel the resistance.

Tighten the nut with a wrench no more than one hex flat maximum.

Do not over tighten the port seal fitting.

NOTE: If a torque wrench cannot be used, use the hex flat tightening method as an approximate guideline.

Hydraulic Tubes And Hoses

Replace any hydraulic tubes that are bent or flattened. They will restrict flow, which will slow hydraulic action and cause heat.

Replace hoses which show signs of wear, damage or weather cracked rubber.

Always use two wrenches when loosening and tightening hose or hydraulic tubes fittings.

WARRANTY

WARRANTY287

Farm King



WARRANTY

Farm King

Limited Warranty

BASE LIMITED WARRANTY

Farm King provides this warranty only to original retail purchasers of its products. Farm King warrants to such purchasers that all Farm King manufactured parts and components used and serviced as provided for in the Operator's Manual shall be free from defects in materials and workmanship for a period following delivery to the original retail purchaser of two (2) years. This limited warranty applies only to those parts and components manufactured by Farm King. Parts and components manufactured by others are subject to their manufacturer's warranties, if any.

Farm King will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Farm King within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Parts must be returned through the selling Farm King Dealer and the buyer must prepay transportation charges.

Farm King will not be responsible for repairs or replacements that are necessitated, in whole or part, by the use of parts not manufactured by or obtained from Farm King. Under no circumstances are component parts warranted against normal wear and tear. There is no warranty on product pump seals, product pump bearings, rubber product hoses, pressure gauges, or other components that require replacement as part of normal maintenance.

REPAIR PARTS LIMITED WARRANTY

Farm King warrants genuine Farm King replacement parts purchased after the expiration of the Farm King Limited Warranty, and used and serviced as provided for in the Operator's Manual, to be free from defects in materials or workmanship for a period of thirty (30) days from the invoice date for the parts. Farm King will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Farm King within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Such parts must be shipped to the Farm King factory at the purchaser's expense.

WHAT IS NOT COVERED

Under no circumstances does this limited warranty cover any components or parts that have been subject to the following: negligence; alteration or modification not approved by Farm King; misuse; improper storage; lack of reasonable and proper maintenance, service, or repair; normal wear; damage from failure to follow operating instructions; accident; and/or repairs that have been made with parts other than those manufactured, supplied, and or authorized by Farm King.

AUTHORIZED DEALER AND LABOR COSTS

Repairs eligible for labor under this limited warranty must be made by Farm King or an authorized Farm King dealer. Farm King retains the exclusive discretion to determine whether it will pay labor costs for warranty repairs or replacements, and the amount of such costs that it will pay and the time in which the repairs will be made. If Farm King determines that it will pay labor costs for warranty work, it will do so by issuing a credit to the dealer's or distributor's account. Farm King will not approve or pay invoices sent for repairs that Farm King has not previously approved. Warranty service does not extend the original term of this limited warranty. Payment of labor costs will only be considered on repairs made to manufactured parts and components that have been found defective during a period of one (1) year following delivery to the original retail purchaser.

Farm King

Limited Warranty

WARRANTY REQUIREMENTS

To be covered by warranty, each new product must be registered with Farm King within thirty (30) days of delivery to original retail purchaser. If the customer decides to purchase replacement components before the warranty disposition of such components is determined, Farm King will bill the customer for such components and then credit the replacement invoice for those components later determined to be covered by this limited warranty. Any such replacement components that are determined not be covered by this limited warranty will be subject to the terms of the invoice and shall be paid for by the purchaser.

EXCLUSIVE EFFECT OF WARRANTY AND LIMITATION OF LIABILITY

TO THE EXTENT PERMITTED BY LAW, FARM KING DISCLAIMS ANY WARRANTIES, REPRESENTATIONS, OR PROMISES, EXPRESS OR IMPLIED, AS TO THE QUALITY, PERFORMANCE, OR FREEDOM FROM DEFECT OF THE COMPONENTS AND PARTS COVERED BY THIS WARRANTY AND NOT SPECIFICALLY PROVIDED FOR HEREIN.

TO THE EXTENT PERMITTED BY LAW, FARM KING DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ON ITS PRODUCTS COVERED HEREIN, AND DISCLAIMS ANY RELIANCE BY THE PURCHASER ON FARM KING'S SKILL OR JUDGMENT TO SELECT OR FURNISH GOODS FOR ANY PARTICULAR PURPOSE. THE PURCHASER'S ONLY AND EXCLUSIVE REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY ON FARM KING'S PRODUCTS ARE THOSE SET FORTH HEREIN. IN NO EVENT SHALL FARM KING BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BY WAY OF EXAMPLE ONLY AND NOT LIMITATION, LOSS OF CROPS, LOSS OF PROFITS OR REVENUE, OTHER COMMERCIAL LOSSES, INCONVENIENCE, OR COST OF REPLACEMENT OF RENTAL EQUIPMENT). IN NO EVENT SHALL FARM KING'S CONTRACT OR WARRANTY LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT. (Note that some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusion may not apply to you.) This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Farm King neither assumes nor authorizes any person or entity, including its selling representatives, to assume any other obligations or liability in connections with the sale of covered equipment, or to make any other warranties, representations, or promises, express or implied, as to the quality, performance, or freedom from defect of the components and parts covered herein. No one is authorized to alter, modify, or enlarge this limited warranty, or its exclusions, limitations and reservations.

Corrections of defects and improper workmanship in the manner, and for the applicable time periods, provided for herein shall constitute fulfillment of all responsibilities of Farm King to the purchaser, and Farm King shall not be liable in negligence, contract, or on any other basis with respect to the subject equipment.

This limited warranty is subject to any existing conditions of supply which may directly affect Farm King's ability to obtain materials or manufacturer replacement parts.

Buhler Industries Inc. reserves the right to make improvements in design or changes in specifications to its products at anytime, without incurring any obligation to owners of units previously sold.

ALPHABETICAL INDEX

16" BACKSAVER AUGER	181	1684 & 16104 INPUT BOX	184
16104 BRIDGING ASSEMBLY	202	1684 & 16104 INPUT TUBE AND HOPPER ASSEMBLY	216
16104 LOWER LIFT ARM ASSEMBLY	210	1684 & 16104 INPUT TUBE ASSEMBLY	220
16104 MAIN TUBE ASSEMBLY	230	1684 & 16104 INTAKE AUGER	218
16104 TUBE #1 ASSEMBLY	237	1684 & 16104 MULTI-FLIGHTING HOPPER ASSEMBLY	243
16104 TUBE #2 ASSEMBLY	236	1684 & 16104 TUBE #3 ASSEMBLY	235
16104 TUBE #4 ASSEMBLY	235	1684 BRIDGING ASSEMBLY	200
16104 UNDERCARRIAGE	194	1684 LIFT ARM ASSEMBLY	208
16124 AXLE	196	1684 MAIN TUBE ASSEMBLY	228
16124 BOOM LIFT ASSEMBLY	242	1684 TUBE #1 ASSEMBLY	237
16124 BRIDGING ASSEMBLY	204	1684 TUBE #2 ASSEMBLY	236
16124 BRIDGING	174	1684 TUBE #4, 16104 TUBE #5 ASSEMBLY	234
16124 ELECTRIC MOVER/WINCH KIT	258	1684 UNDERCARRIAGE	192
16124 ELECTRICAL DIAGRAM	274	1684, 16104 & 16124 BASE GROUP	30
16124 HIGH CAPACITY HYDRAULIC KIT	260	1684, 16104 & 16124 ELECTRICAL ASSEMBLY	129
16124 HIGH CAPACITY INPUT TUBE ASSEMBLY	226	1684, 16104 ELECTRICAL DIAGRAM	273
16124 HOPPER HIGH CAPACITY ASSEMBLY	246	4168 LOWER GEARBOX 916945	269
16124 HYDRAULIC CYLINDERS	251	4168 UPPER GEARBOX 905881	270
16124 INPUT BOX ASSEMBLY	186	AUGER OPERATION	147
16124 INTAKE AUGER	224	AXLE	170
16124 INTAKE TUBE AND HOPPER ASSEMBLY	222	EQUIPMENT DECALS AND SIGNS	25
16124 LIGHT KIT ASSEMBLY	252	EQUIPMENT IDENTIFICATION	10
16124 LIGHT KIT	254	FIRE PREVENTION	19
16124 LOWER LIFT ARM ASSEMBLY	212	GENERAL ASSEMBLY INFORMATION	29
16124 LOWER YOKE	256	GENERAL OPERATION INFORMATION	135
16124 MAIN TUBE ASSEMBLY	232	GENERAL PARTS INFORMATION	181
16124 TUBE #1 ASSEMBLY	240	HARDWARE TORQUE VALUES	282
16124 TUBE #2 ASSEMBLY	239	HOPPER DRIVE WHEEL	250
16124 TUBE #3 ASSEMBLY	239	HYDRAULIC ASSEMBLY	118
16124 TUBE #4 ASSEMBLY	238	HYDRAULIC CONNECTION SPECIFICATIONS	284
16124 UNDERCARRIAGE	198	HYDRAULIC KIT ASSEMBLY (CONT)	266
16124 UPPER LIFT ARM ASSEMBLY	214	HYDRAULIC KIT ASSEMBLY	264
16124 UPPER YOKE	257	INITIAL SET-UP	139
1684 & 16104 BOOM LIFT ASSEMBLY	241	LUBRICATION	163
1684 & 16104 BRIDGING CABLES	171		
1684 & 16104 INPUT BOX ASSEMBLY	182		

M2000 HELICAL GEARBOX 910502 . . 268

OPERATING SAFETY ZONE 21

OWNER’S INFORMATION 9

SAFETY INSTRUCTIONS 15

SAFETY SIGN (DECAL) INSTALLATION 174

SAFETY SIGN-OFF FORM 26

SAFETY SIGNS (DECALS) 22

SERVICE SCHEDULE 162

SPECIFICATIONS 276

STORAGE AND RETURN TO SERVICE . 175

TRANSPORTING 154

TROUBLESHOOTING 161

WARRANTY REGISTRATION FORM 5

WARRANTY 287

www.farm-king.com

Farm King

301 Mountain Street South
Morden, Manitoba Canada R6M 1X7
E-mail: info@buhler.com
www.farm-king.com

Equipment shown is subject to change without notice.
©2018 Buhler Trading Inc. Printed in Canada TSX:BUI

bühler | *a division of Buhler Industries Inc.*