

Farm King

OPERATOR AND PARTS MANUAL

Round Bale Carrier

2450

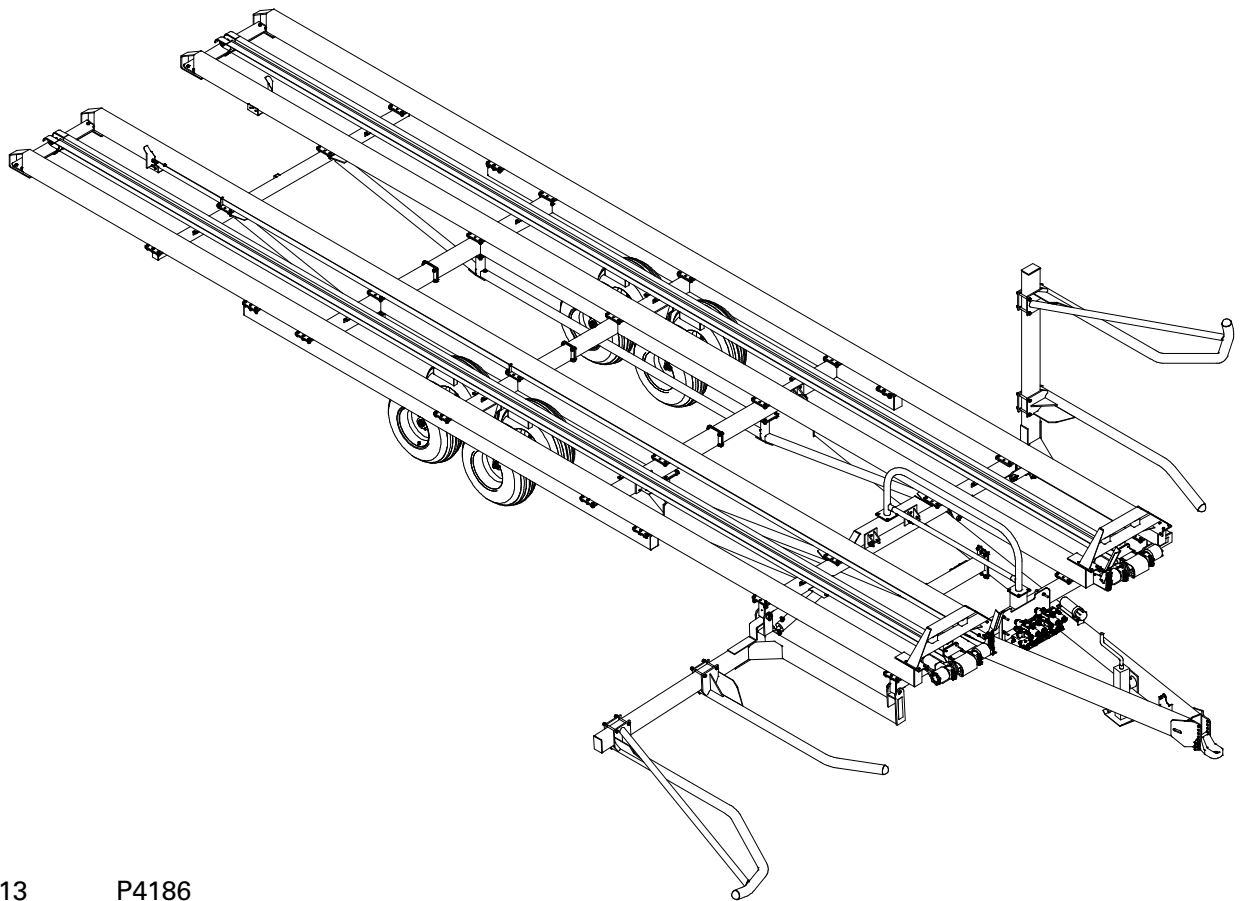


Table of Contents

General Specifications	6
Introduction	7
Safety.....	8
• Safety	8
• General Safety	9
• Start-up Safety	9
• Operation Safety	9
• Transport Safety	10
• Service and Maintenance Safety	10
• Storage Safety	10
• Safety Signs	10
• Safety Sign Installation	10
Assembly.....	13
• Tail Light Assembly	13
• Center Bale Stop	13
• Fixed Lift Arm with Deflector	13
• RPU Assembly	14
• Hydraulic Assembly	15
• Electrical Assembly	15
Start-up	
• Pre-operation Checklist.....	16
Operation	17
• Attaching Bale Carrier to Tractor	17
• Optional Clevis Hitch	17
• Attaching Bale Carrier Controls to Tractor.....	17
• Carrier Control Operation.....	18
• Loading Bales.....	18
• Optional Bale Stop.....	19
• Bale Pusher Operation.....	20
• Transporting Bale Carrier	20
• Unloading	20

• Full Indicator	21
Maintenance	22
• Fasteners	22
• Hydraulic System	22
• Chain	23
• Wheel/Tires	23
• Pivot Point Lubrication	23
• Roller Chain Lubrication	24
• Carrier Beam Lubrication	24
• Storage	24
Bolt Torque	25
• Checking Bolt Torque	25
Parts Drawings.....	28
• Electrical Assembly - Valve Drawing and Parts List.....	28
• Manifold Service Parts Drawing and Parts List	30
• Valve Bank Assembly Drawing and Parts List	31
• Hydraulic Return Line Assembly Drawing and Parts List	32
• Hydraulic Pressure Line Assembly Drawing and Parts List.....	33
• Carrier Tilt Assembly Drawing and Parts List.....	34
• Fixed Pick Up Assembly Drawing and Parts List	35
• Carrier Tilt Cylinders Hydraulic 3/8 Line Drawing and Parts List.....	36
• Pusher Motor Assembly Drawing and Parts List.....	37
• Carrier Hydraulic Assembly and Hardware Drawing and Parts List A7000-04_04....	38
• Electrical Assembly Drawing and Parts List A7004-04_05	40
• Fixed Pick Up Arm Hydraulic Assembly Drawing.....	42
• Manifold Schematic	43
• Control Handle Assembly Drawing and Parts List	44
• Center Bale Stop Drawing and Parts List.....	45
• Carrier Initial Assembly Drawing and Parts List	46
• Complete Tandem Axle Assembly Drawing and Parts List	48
• Tire Assembly Drawing and Parts List	49
• Tandem Axle Assembly Drawing and Parts List.....	50
• Hub Assembly Drawing and Parts List.....	51
• Pusher Assembly Drawing and Parts List	54
• Roller/Chain Guide Assembly Drawing and Parts List	53
• Pusher/Chain Assembly Drawing and Parts List	54
• Fixed Pick Up Arm LH Side Assembly Drawing and Parts List.....	56
• Fixed Pick Up Arm RH Side Assembly Drawing and Parts List	57
• Indicator Assembly Drawing and Parts List.....	58
• Slow Moving Vehicle Sign Assembly Drawing and Parts List.....	60
• RPU LH Side Assembly Drawing and Parts List - Optional.....	62

• RPU RH Side Assembly Drawing and Parts List - Optional	64
• Hydraulic RPU Assembly Drawing - Optional	66
• RPU Squeeze Cylinder Drawing and Parts List.....	67
• Pilot Check Valve Assembly Drawing and Parts List.....	68
• RPU Rotate Cylinder Assembly RH Drawing and Parts List	69
• RPU Rotate Cylinder Assembly LH Drawing and Parts List.....	70
• RPU Schematic.....	71
• Optional Adjustable Bale Stop Assembly Drawing and Parts List.....	72
• Optional Clevis Hitch Assembly Drawing and Parts List.....	73
• Standard Hitch Assembly Drawing and Parts List.....	74
Delivery Checklist	75
• Pre-delivery	75
• Customer Delivery	75
Warranty	76

Manufacturer's Statement: for technical reasons Buhler Industries Inc. reserves the right to modify machinery design and specifications provided herein without any preliminary notice. Information provided herein is of descriptive nature. Performance quality may depend on soil fertility, applied agricultural techniques, weather conditions and other factors.

General Specifications

Dimensions

- Length: 45' (13.7 m)
- Deck length: 37' (11.3 m)
- Width: 12' 9" (3.9 m)
- Weight (empty): 9587 lb (4349 kg)
- Drawbar vertical load (empty): 2395 lbf (10653 n)
- GVW: 37440 lb (16983 kg)

Capacity

- Total bale payload: 28065 lb (12731 kg)
- Bales 6' (1.8 m) diameter maximum to 4' (1.2 m) diameter minimum
- Hay, straw and stover bales
- Sixteen 4' (1.2 m) wide bales
- Fourteen 5' (1.52 m) wide bales

Tires

- 12.5L x 15FI - 12 ply, Load Range F, Farm Hwy Service Tire
- 6 bolt heavy-duty hubs with twine guards
- Walking beam axle design

Control Handle

- Power: 12v
- Fuse: 15 amp (surge protection provided on machine)

Hydraulics

- Two remote tractor hydraulics circuits required for operation
- Operates with either closed-center or open center/load sensing hydraulics
- Hydraulic system selectable by rocker switch
- Two Lift cylinders with restrictor
- Two Tilt cylinders with restrictor
- Four 22.2" cu. (363.79 cu cm) hydraulic motors

Tractor

- Size: 100 hp (75kW) recommended
- Weight: As per ASAE specification ASAE S365.4 the tractor must weight 25000 lb (11340 kg) to adequately handle a GVW of 37440 lb (16983 kg)
- Maximum loaded towing speed 20 mph (32 km/h)

Introduction

This manual has been provided as information regarding the specifications, safe operation and maintenance of your agricultural 2450 bale carrier. Read and understand this manual and the tractor manual prior to operating to obtain the best use of operating your 2450 bale carrier.

Your new bale carrier is designed to retrieve, transport, and unload a wide range of round bales. Sizes that can be accommodated range from 4' (1.2 m) diameter to 6' (1.8 m) diameter in a variety of hay crops as well as small grain, flax straw and stover.

Keep this manual handy for frequent reference. All new operators or owners must review the manual before using the equipment and at least annually thereafter. Contact your Farm King Dealer if you need assistance, information, or additional copies of the manual. Visit our website at www.buhlerindustries.com for a complete list of dealers in your area.

The directions left, right, front and rear, as mentioned throughout this manual, are as seen facing in the direction of travel of the implement.

Safety

Safety Instructions

Remember, YOU are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. Be certain that everyone operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

The alert symbol is used throughout this manual. It indicates attention is required and identifies hazards. Follow the recommended precautions.



The safety alert symbol means...

ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



CAUTION

The caution symbol indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



WARNING

The Warning Symbol indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



DANGER

The Danger Symbol indicates an imminently hazardous situation that, if not avoided will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.

General Safety Instructions

- Have a first-aid kit available for use and know how to use it.
- Have a fire extinguisher available, stored in a highly visible location, and know how to use it.
- Wear appropriate protective gear. This list may include but is not limited to:
 - hard hat
 - protective shoes with slip resistant soles
 - protective glasses or goggles
 - heavy gloves
 - wet weather gear
 - hearing protection
 - respirator or filter mask
- Read and understand the Operator's Manual and all safety signs before operating, servicing, adjusting, repairing, or unplugging the equipment.
- Do not attempt any unauthorized modifications to your Farm King product as this could affect function or safety, and could affect the life of the equipment.
- Inspect and clean the working area before operating.
- Keep hands, feet, clothing, and hair away from moving parts.
- Ensure bystanders are clear of the area before operating.

Start-up Safety

- Do not let inexperienced operators or children run this equipment.
- Place all tractor and machine controls in neutral before starting.
- Ensure all shields are in place and in good condition before operating.

Operation Safety

- Do not permit riders.
- Do not wear loose fitting clothing during operation.
- Do not load bales of sizes not outlined in the specifications section.
- Never operate with frayed or damaged hoses or leaking fittings.
- If for some reason you feel the tractor tipping immediately lower lift arms.
- Do not raise lift arms to extreme heights while tractor is on an incline. Be alert for terrain changes and adjust accordingly.

Transport Safety

- Review Transport Safety instructions in tractor manual before moving.
- Check with local authorities regarding transport on public roads. Obey all applicable laws and regulations.
- Make sure the SMV (Slow Moving Vehicle) emblem and all the lights and reflectors that are required by the local highway and transport authorities are in place, are clean, and can be seen clearly by all overtaking and oncoming traffic.
- Do not overload the GVW of 37440 lb (16983 kg) and when loaded keep the speed below 20 mph (32 km/h).
- Allow for bale carrier and tractor length when turning.
- Never have the equipment in operation during transport
- Always travel at a safe speed.

Service and Maintenance Safety

- Stop engine, set brake, remove ignition key, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
- Follow good shop practices including:
 - keep service area clean and dry
 - be sure electrical outlets and tools are properly grounded
 - use adequate light for the job.
- Do not attempt to clear any blockage or reach into the bale carrier with your arm or leg unless the tractor engine is stopped.
- Never work beneath a raised lift arm unless it is securely supported.
- Use only tools, jacks, and hoists of sufficient capacity for the job.
- Replace and secure all shields removed during servicing before operating.
- Use heavy leather gloves to handle sharp objects.

Storage Safety


- Store the unit in an area away from human activity.
- Do not permit children to play on or around the stored machine.
- Cover sharp or extending components to prevent injury from accidental contact.

Safety Signs

- Keep all safety signs clean and legible and replace any that are damaged or missing.
- When original parts are replaced, any safety signs affixed to those parts should be replaced as well. Replacement safety signs are available from your local dealer.

Installation

- To install safety signs, ensure the installation area is clean and dry. Decide on the exact position before you remove the backing paper. Remove the smallest portion of the split backing paper and align over the specified area. Carefully press in place.
- Slowly peel back the remaining paper and smooth the remaining portion in place. Small air pockets can be pierced with a pin and smoothed out.

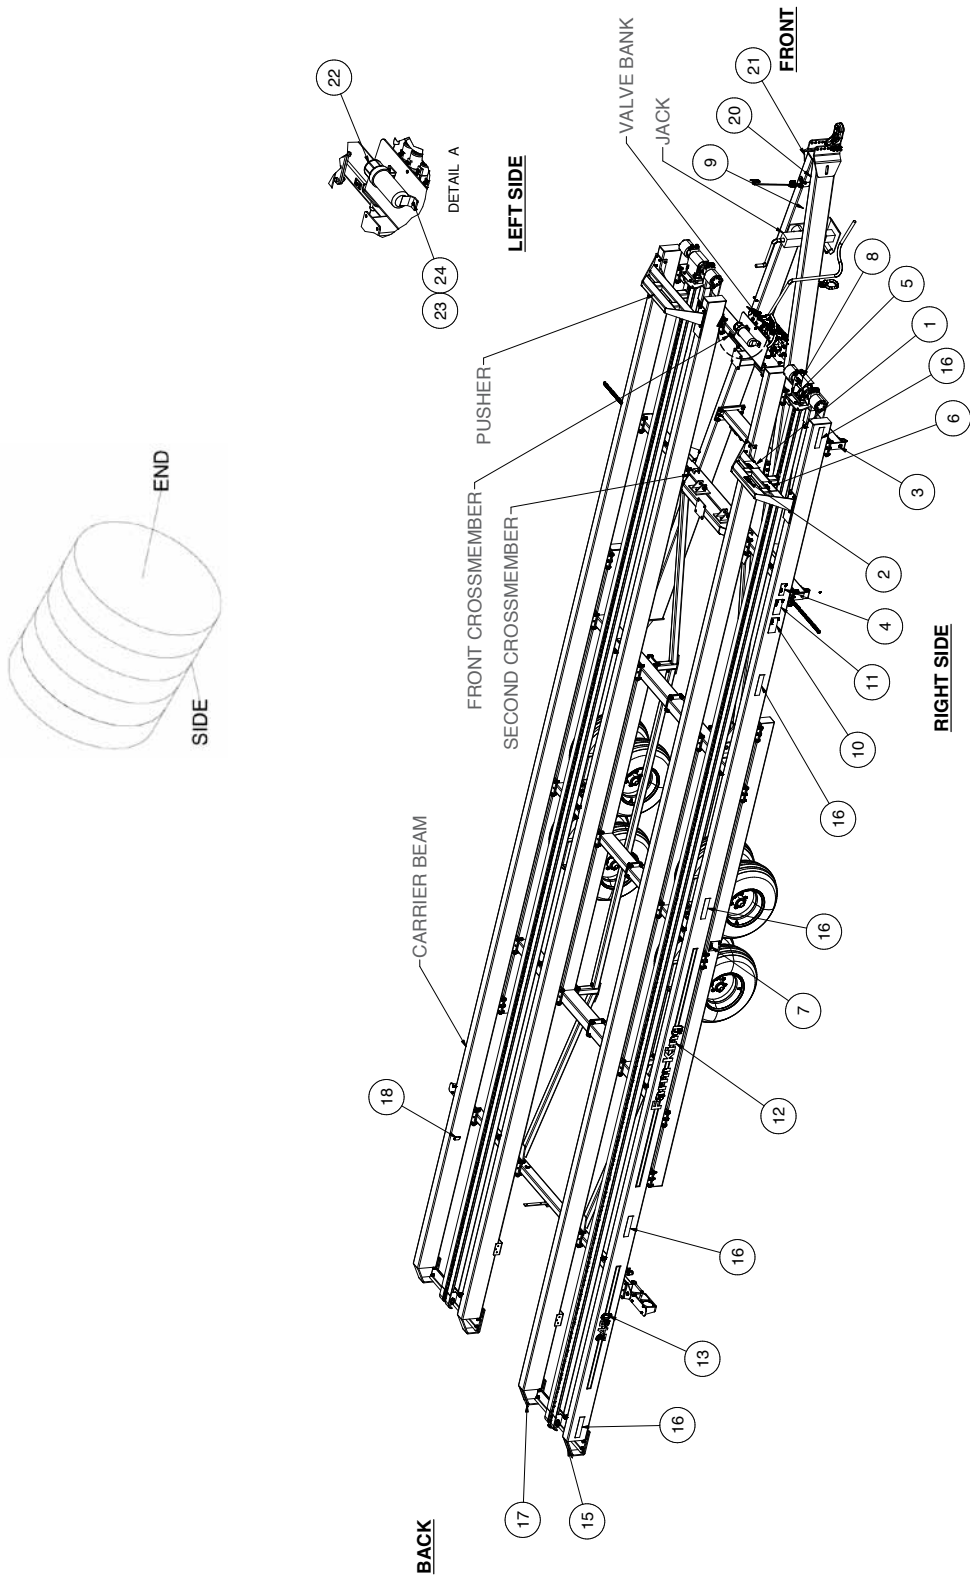

Parts List - Decals

Item	Part Number	Description	Qty
1	813624	Decal, Caution Keep Shield In Place	1
2	813625	Decal, Important - Running pusher past amber ref...	1
3	21867	Decal, Daily	1
4	813626	Decal, Caution - Liftarm Safety Chain	1
5	813627	Decal, Warning - Moving Parts Hazard	1
6	813632	Decal, Warning - Pinching Hazard	1
7	813633	Decal, Important - Max Recommended Tire Inflation	1
8	813635	Decal, Warning - High-Pressure Fluid Hazard	1
9	21975-02	Decal, Important - Gross Vehicle Weight Rating	1
10	813637	Decal, Danger - Bale Lift Arm Can Cause Injury	1
11	813636	Decal, Danger - Bale Lift Arm Can Cause Pinching	1
12	815004	Farm King	1
13	815003	2450	1
14	813952	Bale Carrier Snubber (Prior to S/N BM2450R13000015 & S/N BM2450S13000075)	1
15	967053	Red Reflective	1
16	967055	Yellow Reflective	1
17	813631	Orange Fluorescent	1
18	813628	Amber Reflective	1
19	A7017-00	SMV Sign	1
20	105420	Serial Number	1
21	SZ000560	Decal, Attention - Hitch bolts must be torqued...	1
22	909277	Manual Holder	1
23	81549	Bolt Hex 0.313NC x 0.75 Gr5 (PI)	2
24	812362	Nut Lock (Steel) 0.313NC GrB (PI)	2

Assembly



CAUTION

Make sure area is clear of obstructions, well lit, and has sufficient room for safe assembly. Do not work underneath raised assembly.




CAUTION

Ensure the carrier's tires and hitch are securely blocked. Otherwise, verify the bale carrier is properly coupled to the drawbar on a tractor with a minimum weight of 25000 lb (11340 kg).

Tail Light Assembly

(Refer to Carrier Bundled Assembly Drawing)

- Remove all required hardware from parts box.
- Ensure taillights are installed correctly, refer to illustration.
- Connect the tail light wiring harnesses to appropriate connections.
- Connect main lighting plug to tractor.
- Test by verifying correct lamps illuminate when signalling and braking.

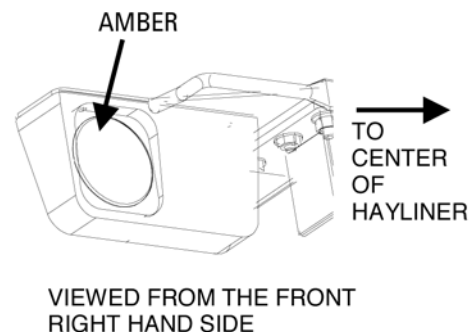

Center Bale Stop

- Place center bale stop bar on bolt plates in the position shown at the beginning of the manual. Attach the bale stop with hardware from the hardware bag in the box of parts supplied with the bale carrier. Torque the provided hardware to the specifications listed on the bolt chart. Tie wrap the hydraulic hoses that run to the lift and tilt cylinders under the roll bar.

NOTE: Hydraulic assembly methods and layouts are common to the right and left sides. Only one side of each component is shown in this manual.




CAUTION

Stay clear of the arms when testing a finished assembly. Ensure during assembly to keep your entire body out from underneath parts that are being attached to the main frame.

Fixed Lift Arm with Deflector



- Remove lift arm pivot pins that are installed on the arm.
- Thoroughly lubricate all pins involved in the assembly with a SAE multi purpose grease.
- Align arm to pivots with open end of arm facing forward and reinstall pins with hardware provided and torque to specifications called for in the bolt chart.
- Remove the lift cylinder pin from the arm

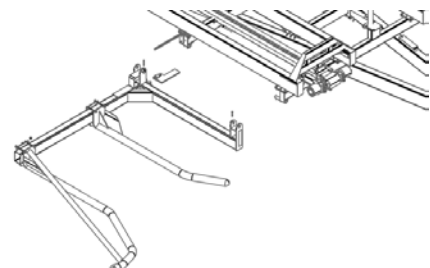

- Align the lift cylinder rod and reinstall the pin.
- Adjust the outside bale fork to be positioned at the end of the lift arm. Adjust the center to center distance between the outer and inner fork per the table below. Fine tune this adjust as required for optimum performance.
 - 6 foot dia. bales - 48" center distance
 - 5 foot dia. bales - 44" center distance
 - 4 foot dia. bales - 38" center distance
- Recheck all hardware so that every bolted connection on the lift arm is torqued according to the specifications of the bolt chart.
- For first operation, cycle the lift arm slowly with a bale and inspect just before lifting bale from ground.
- Approach the bale and inspect to ensure the spacing of the forks is accurate.
- Finish the cycle and observe how the bale transits from the forks to the carrier beam. If transition is smooth with minimum bale binding assembly is completed. If not adjust the forks to a different location and try until loading is smooth.

RPU Assembly

- Remove the lift cylinder pin from the RPU arm.
- Remove lift cylinder and install pilot check assembly.
- Reinstall cylinder at base end only.
- Lubricate all pins involved in RPU attachment with a SAE multi purpose grease.
- Align arm to pivots with open end of arm facing away from the bale carrier and reinstall pins with hardware provided and torque to specifications called for in the bolt chart.
- Align the lift cylinder rod and reinstall the pin.
- Adjust the outside bale fork to be positioned at the end of the lift arm and the inner bale fork 6" (15 cm) to 8" (20 cm) bigger than the size of bale that is being loaded.
- Install the hydraulics according to the hydraulic assembly. Hose clamp available to attach hoses to bottom of chain rail.
- Recheck all hardware so that every bolted and hydraulic connection on the lift arm is torqued according to the specifications of the torque charts.
- The RPU cycle should begin with a squeeze action, then lift and rotate. After rotation is complete the lift continues until the bale is above the carrier beams.
- Release lift arm up when bale is above the carrier beam. Depress lift arm down to release the bale and return to ground level ready for the next bale.
- For the first operation, cycle the lift arm slowly with the bale and observe the RPU operation.
- Approach the bale slowly; once the bale is captured in the forks press the lift switch. The bale is squeezed until the pressure in the sequence valve has been achieved which is preset at 1800 psi (12400 kpa).
- If bale is not held in between the forks increase the sequence valve pressure by turning the setscrew clockwise. Refer to the RPU Rotate Cylinder drawing for adjustment location of the setscrew. Verify that the fork spacing is accurate and refer to the drawing on this page for fork adjustments.

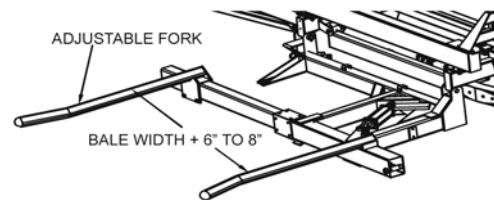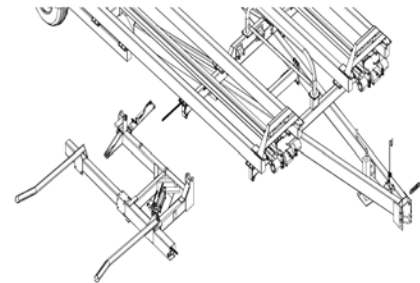

- The lift and rotate sequence won't begin until the clamp pressure is met within the sequence valve.
- When the clamp pressure is met, the lifting action should start before the rotating action to minimize bale damage from the moving ground.
- To increase lift prior to rotate turn the restrictor knob clockwise. Refer to the RPU rotate cylinder drawing for more information.
- Continue to raise the bale until it is positioned above the carrier beam.
- Release the bale by lowering the lift arm.
- Finish the cycle and observe how the bale transits from the forks to the carrier beam. If transition is smooth with minimum bale binding assembly is completed. If not adjust the forks to a different location and try until loading is smooth.

Hydraulic Assembly

NOTE: 1- Hydraulic Assembly methods and layouts are common to the right and left sides. Only one side of each component is shown in this manual. 2- Seal Kits and Service Parts are only listed in the parts lists and are not indicated on the illustrations.

Electrical Assembly



WARNING

Read and understand the safety messages listed in the bale carrier operator manual. Shut off all power to unit before inspecting, servicing, adjusting or repairing the bale carrier.

Prior to S/N BM2450R13000015 & BM2450S13000075



WARNING

For proper operation of the snubber, power must be supplied to the RED power wire from the control handle. Ensure that there is a 15-amp fuse in place to protect this circuit. Verify prior to installing snubber. Incorrect wiring will result in electrical failure.

NOTE: The snubber unit is designed to protect the momentary control switches. The snubber minimizes coil voltage discharge during the de-energizing of the valve solenoid coils. There are no serviceable parts within the unit. Ensure that all electrical connections are clean and dry. Test the bale carrier and view to see if the hydraulic system is operating correctly. If any wires are damaged or cut, the schematic on page 26 will assist in repair and maintenance. All wire is 18 gage.

Start-up

Pre-operation Checklist

To ensure safe and proper operation of the bale carrier, inspect the following items prior to operation and daily thereafter. Refer to operation, lubrication and maintenance sections for detailed instructions.

- ☐ Prior to first use verify that the bale carrier has been properly assembled and that the operator understands the safety, operating, and maintenance requirements.
- ☐ Check for missing fasteners and replace if necessary. Refer to maintenance section for details.
- ☐ Check and maintain proper tire pressure of 90 psi (620 kpa).
- ☐ Check for loose wheel bolts. Bolts must be torqued to 90 ft lb (122 Nm).
- ☐ Clean bale carrier of any foreign material that may have accumulated from previous run.
- ☐ Lubricate all points requiring daily lubrication.
- ☐ Check chain tension and adjust if necessary with front sprocket adjusting bolt (approximately 6" (15 cm) of upward slack). This is verified by raising the chain by hand.
- ☐ Ensure top surface of bale carrier beams are properly coated with a graphite coating to reduce bale friction while pushing bales back.
- ☐ Ensure that the tractor used to pull the bale carrier is in working order according to the tractor manual.
- ☐ Verify the bale carrier is properly coupled to the tractor with the safety chain.
- ☐ Inspect all safety reflective decals, slow moving vehicle decals and lights where applicable.
- ☐ Inspect the hydraulic system on the bale carrier and your tractor for leaks or any other damage.
- ☐ Ensure the control handle actions reflect the movements of the bale carrier.
- ☐ Inspect all electrical connections to ensure proper function of the machine.
- ☐ Ensure transport safety chain is disengaged from bale lift arm and stored on chain lug located on second cross member. Failure to do so may cause damage to lift arm.



CAUTION

Make sure the tractor has 100 hp (75 KW) or greater rating and a mass of 25000 lb (11340 kg). Make sure the drawbar is capable of supporting the bale carrier empty or loaded.



WARNING

The tractor must be equipped with an approved Roll Over Protection Structure (ROPS) and safety belts to help prevent personal injury or death caused by tractor roll over.

Operation Instructions



CAUTION

Prior to operation ensure the operator has read and understands the safety requirements of the bale carrier. Ensure the pre-operation checks have been completed prior to operation.

Attaching Bale Carrier to Tractor



CAUTION

Shut off tractor, engage parking brake and remove key before working around bale carrier. Refer to tractor manual for tractor parking procedures.



CAUTION

Use only the drawbar to couple the bale carrier to the tractor. Ensure drawbar is capable of handling the bale carrier load. The tractor must have a minimum mass of 25000 lb (11340 kg) and recommended 100 hp (75 kw).

- Using the tongue jack, raise tongue to align with hitch pin, adjust clevis position as necessary to level the carrier beams.
- Position tractor and secure with locking type drawbar pin (not supplied). Use an approved hitch pin with a mechanical retainer.
- Route safety chain around the hitch clevis, around drawbar support and back hook. Refer to tractor manual for further drawbar instructions.
- Do not use intermediate support on drawbar as attaching point.
- Store safety chain off the ground when not in use. If safety chain is damaged in any way, contact your dealer for a replacement.

Optional Clevis Hitch (SZ000513)

- For tractors not equipped with a clevis drawbar, a clevis hitch for the bale carrier is available. Use an approved hitch pin with a retainer.


Attaching Bale Carrier Controls to Tractor

- Bale lift and push functions are controlled by the bale carrier valve. Two hoses complete with black hydraulic tip covers supply pressure and tank. The retraction hose is designated with a check valve and ensures proper flow through the valve. Connect the return hose to the retract circuit and the extend hose to opposite extend port.
- The tilt function is controlled by the tractor's remote valve. Two hoses complete with red hydraulic tip covers supply extension and retraction.
- Connect control handle harness to the machine harness. Connection is made at the snubber unit by matching the appropriate socket and plug.
- The power required to operate the bale carrier is supplied by the tractors 12-volt electrical system. Tractors without a female power plug as standard equipment will require Tractor Harness Kit A4000-00. When using kit A4000-00, connect the red wire to the tractor positive and green to tractor ground. The 15-amp fuse must be used on the positive wire as supplied.

- Verify bale carrier operation matches bale carrier control handle decal.
- Select your hydraulic system using the switch located behind the hydraulic manifold.
 - For tractors with open-center, power beyond or load sense hydraulic systems, set the switch to open.
 - For tractors with closed-center hydraulic systems, set the switch to close.

Carrier Control Operation

- To start bale carrier operation, engage the remote hydraulic valve in the extension position. Lock valve in detent. Valve to remain constantly on during operation.
- The control handle is fitted with one rocker switch and four momentary contact rocker switches. They function as follows:
 - Pusher Speed: Select high (rabbit) to operate pusher motors in series at high speed or low (turtle) to operate in parallel at low speed. Torque is increased at low speed and pushes bales with more force.
 - RH Pusher: Depress and hold RH pusher forward to move right forward. Depress and hold RH pusher back to move right pusher back.
 - LH Pusher: Depress and hold LH pusher forward to move left pusher forward. Depress and hold LH pusher back to move left pusher back.
 - RH Lift Arm: Depress and hold RH lift arm up to raise right lift arm. Depress and hold RH lift arm down to lower right lift arm.
 - LH Lift Arm: Depress and hold LH lift arm up to raise left lift arm. Depress and hold LH lift arm down to lower left lift arm.
- To operate raise / lower tilt function engage the remote hydraulic valve in the extension position to raise the tilt deck and engage the retract position to lower the deck.

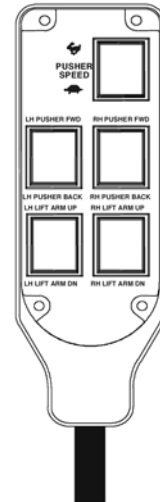


Loading Bales



WARNING

Make sure area is clear before lowering bale lift-arm. Failure to do so could result in injury or death.

- The right bale lift arm is used to load bales onto the right side of the carrier while the left bale lift arm is used to load bales onto the left side of the carrier.
- Align the tractor and bale carrier as indicated in the pictorial for pick up method used. Slowly approach the bale at 5 mph (8 km/h) while loading. When bale is properly captured, begin to lift bale.
- To balance the bale carrier, alternate bale picking sides.
- The bale carrier is designed to load bales with one of three options. Refer to the appropriate section for your option loading instructions.

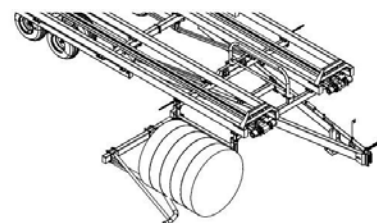

NOTE: Before loading bale the pusher must be at the front of the carrier deck.

- The fixed pick up arm with bale deflector allows the bales to be picked up from either "end on" or "side on." To pickup bales that are placed "end on," drive so the inner arm of the loading fork is against the inner edge the bale. The bale will then be loaded onto the carrier in the same direction as it was picked up.




To pick up bales that placed "side on", the deflector rotates the bale 90° before it is lifted up onto the carrier. Forward travel is used to rotate the bale. Approach the bale so that the outer end of the bale rides up on the bale deflector as the loading arm moves under the bale.

The bale is loaded onto the carrier deck by depressing and holding LH or RH lift arm up until the bale rolls off the pickup arm and onto the carrier beams.

NOTE: The bale should be contacted about 12" (30 cm) from its outer end when using the bale deflector. Contacting the bale further to the inside may result in damage to the deflector, bale lift arm or bale.


- The rotating pick up arm (RPU) loads bales "side on." The lift arm starts in the lowered position. Drive forward until the forks are positioned around the ends of the bale with the inside stationary fork as close as possible to the bale. Depress and hold lift arm up. The bale is then squeezed on end until the pressure matches the sequence valve setting that rotates and raises the bale.

When the bale is lifted above, the bale is released by depressing lift arm down. This releases the bale and returns the RPU to the ready state for the next bale. Refer to the assembly instructions for adjusting RPU's settings.

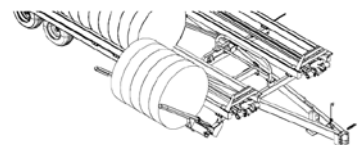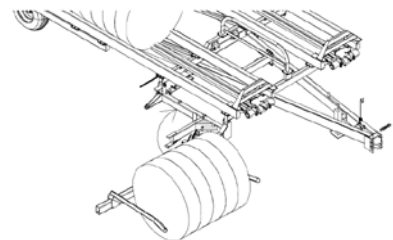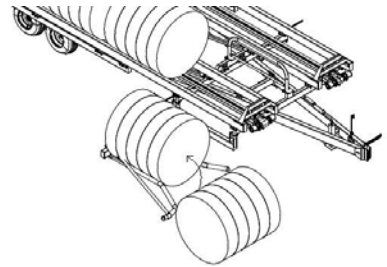

Optional Bale Stop

- When loading narrower bales (4'), an adjustable bale stop is available. Using this stop permits loading bales closer to the front of the bale carrier so a full complement of 16 bales can be loaded. This stop is bolted to the lift arm with supplied U-Bolts and is adjusted to the position desired.

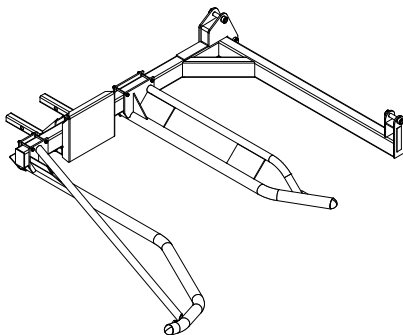

Bale Pusher Operation

NOTE: Lower loading arm before operating the pusher.



CAUTION

To avoid misbalanced loads the operator is only required to push back one bale length to prepare for the next bale.

- Depress and hold pusher back and move bales far enough to the rear to provide room to load the next bale.
- Return pusher all the way to the front by depressing and holding pusher forward.
- Hi speed / low torque mode is recommended for normal use.
- Low speed / high torque mode is for heavier payloads or situations where bales are wet or resist sliding.


Transporting Bale Carrier



WARNING

Do not tow over 20 mph (32 km/h) when loaded. Turn on flashing lights when transporting on public roadways. Obey local regulations regarding road transport. Raise bale lift arm and use the safety chain when transporting. Ensure the lift arm chain latch is used to prevent the safety chain from dislodging or loosening.

- Do not transport if end bale is overhanging beams. Beam should extend beyond last bale for a minimum of 2' (61 cm).
- Raise lift arm prior to transport. Always engage lift arm lock chains when transporting on public roadways or when not in field. Lock chain in position with latch provided.
- Monitor the condition and position of bales that are being transported
- Slow speed when transporting over bumps or rough terrain.

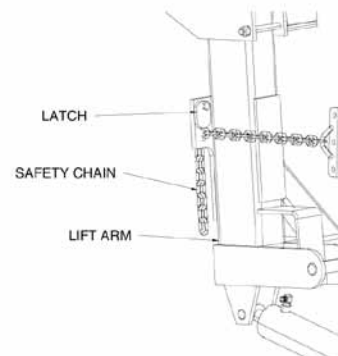

Unloading


NOTE: Left or right decks can be unloaded individually or together. However, the pusher moves faster and has more torque when operated individually. Do not run pushers all the way to the end, the resulting shock load may cause damage to chain and drive.



DANGER

Make sure area is clear before unloading. Failure to do so could result in serious injury or death.

- Extend tilt cylinder to raise carrier beam by engaging the tractor's extension hydraulics.
- Depress and hold LH and/or RH pusher back switch to push the bales off the carrier beam.
- Once the rear bale has been pushed off the carrier, slowly drive forward while pushing the bales back (unloading) to keep all bale ends in contact.
- When amber reflector on inside of the carrier beam becomes visible stop the pusher. The reflector is approximately 26" (66 cm) from the end of the beam.
- Slowly drive forward to unload the last bale. Retract the tilt cylinder to lower the beam and begin the next loading cycle.
- Return pusher to the front of the bale carrier to prepare for the next cycle.

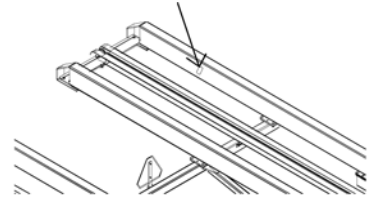

Full Indicator

The mechanism has dual-function as follows:

- When the bale carrier reaches its capacity, the rear indicator pivots backward pulling the cable so that the front indicator plate upright indicates not to load any more bales.
- At the end of the unloading process, front indicator comes down (after pushing off the last bale) warning the operator to release pusher back button, then move forward, lower beam and bring the pusher home.

Maintenance



CAUTION

Place all controls in neutral, stop engine, set parking brake and remove ignition key before inspecting, servicing, adjusting or repairing the bale carrier.



CAUTION

Ensure the bale carrier tires and hitch are securely blocked. Otherwise, verify the bale carrier is properly coupled to the drawbar on a tractor with a minimum mass of 25000 lb (11340 kg).

NOTE: Service intervals should be increased when operating in extreme or difficult conditions.

Fasteners

- Inspect all bolt torques after first use and 50 hours thereafter.
- Periodically inspect for broken or missing fasteners. Replace with fasteners of similar size and equivalent grade.

Hydraulic System



WARNING

Escaping fluid under pressure can have sufficient force to penetrate the skin, causing personal injury. Before operating, adjusting, or disconnecting lines, be sure to relieve all pressure.




WARNING

Never operate the bale carrier with frayed or damaged hoses or leaking fittings. A burst would cause the lift arm to drop suddenly and result in serious injury or death and cause damage to the loader or tractor.

- Before applying pressure to the system, be sure all connections are tight and the lines, pipes, and hoses are not damaged.
- Wear proper hand and eye protection when searching for leaks. Use a piece of wood or cardboard instead of hand to check for leaks.
- Maintain all components in good working order.
- If injured by escaping fluid, see a doctor at once. Serious infection or toxic reaction can develop if proper medical treatment is not administered immediately.
- Regularly check the fluid level in the tractor reservoir and follow the maintenance procedures in the tractor Operator's Manual.
- Regularly inspect cylinders, hoses and fittings for leaks, crimps and abrasions or other signs of wear and tear or impending failure.
- Ensure hoses do not bind or stretch during operation. Always keep hoses tied or supported to prevent rubbing against sharp areas or being pinched. We suggest using tie wraps to support hoses.
- Replacement hoses must have a working pressure of 3000 psi (20685 kpa) or higher.

Chain

- Check for proper chain tension and sprocket alignment after first use and every 50 hours thereafter.
- Turn the front sprocket-adjusting bolt clockwise until there is approximately 6" (15 cm) of upward slack in the chain at the center of the track. Clockwise increases tension and counter clockwise reduces tension.
- Proper chain tension may be verified by raising the chain by hand.
- See lubrication section for further maintenance instructions.


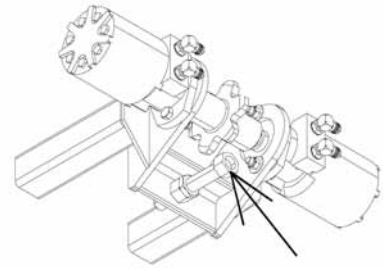


Wheels/Tires

- Inspect hub bolts after first use and 50 hrs thereafter. Hub bolts must be torqued to 90 ft-lb (122 Nm).
- Thread-locking compound such as Loctite 242 is recommended for the hub bolts.
- Ensure that dust caps are firmly in place.
- Check tires pressure regularly: 90 psi (620 kpa).
- The wheel bearings should be inspected and re-packed annually with SAE multi purpose type grease. Grease every 500hrs if hub is supplied with grease fitting.
- Air valve should face away from the hub.

Pivot Point Lubrication

- Lubricate bale carrier bushings and pivots every eight hours of average operation with high grade grease at all fitting locations. Select grease based on the expected outside temperature range. Lithium, Molybdenum and synthetic greases are preferred. Use the tractor hour meter as a guide. Increase lubrication intervals for extreme use or adverse conditions. Each pivot should be lubricated until grease is visible at pin. The fixed arm carrier has 16 lubrication points and the RPU carrier has 18 points. Refer to the illustrations below for locations.

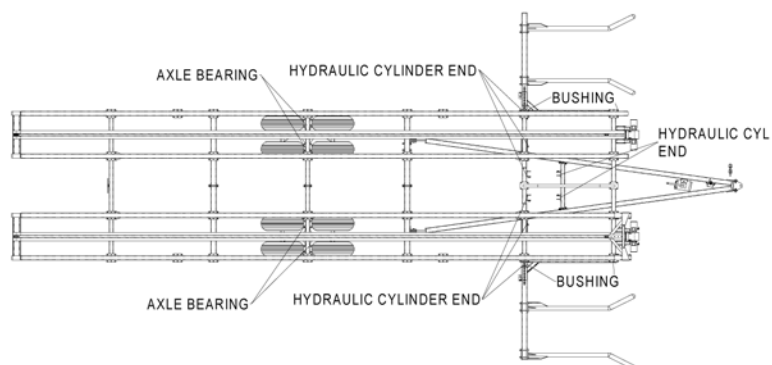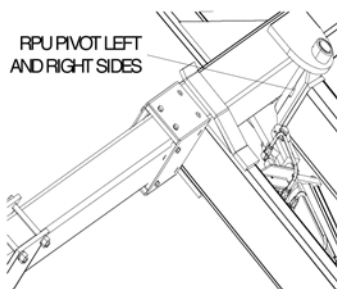

Roller Chain Lubrication

- Manually brush SAE lubricant while chain is stationary.
- Lubricate the chain every time bolt torque maintenance is performed.

Carrier Beam Lubrication

- Apply a graphite coating such as slip plate to the carrier beams as required to ensure a smooth push back operation.
- Follow application instructions as provided by the coating manufacturer.
- At the end of the season apply a coating to prevent rust on the carrier beams.

Storage

Start of season

- Clean and inspect the bale carrier when taking it out of storage. Ensuring that the bale carrier is in optimum condition at the start of the season reduces the chances of a costly breakdown during the season.
- Clean and inspect chains and chain rollers for excessive wear or stiffness. Check for proper adjustment and alignment.
- Lubricate entire bale carrier. Ensure that all grease fittings are in place and taking grease properly.
- Operate the bale carrier for a short time. Check that all moving parts are operating freely. Check for hydraulic leaks.
- Inspect and repack wheel bearings with SAE multi purpose type grease.
- Replace and secure safety shields. Review safety regulations.
- Check all bolts for tightness. Replace lost or worn bolts.
- Check that tires are properly inflated.
- Review the Operator's Manual.

During the season

- At the end of each day of operation park the bale carrier in a clean, dry, sheltered area.
- Lubricate areas requiring daily lubrication.
- Remove any build up of hay or straw.


End of season

- Replace worn or damaged parts if necessary. To avoid costly delays contact your dealer for replacement parts before the start of the next season.
- Store the bale carrier in a clean, dry, sheltered area.
- Replace all missing or broken bolts with bolts of similar size and grade.
- Clean the baler carrier thoroughly. Dirt draws moisture that rusts metal.
- Repaint chipped or worn areas. Paint is available from your dealer.
- Clean chains and brush with SAE light machine oil (or equivalent) to prevent rust.
- Repaint the top of the carrier beams with graphite paint such as slip plate to prevent rust.

Bolt Torque

Checking Bolt Torque

The tables shown below give correct torque values for various bolts and hex bolts. Tighten all bolts to the torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt.

Bolt Torque* (plated bolts)						
						
Bolt Diameter	Grade 2 Bolts		Grade 5 Bolts		Grade 8 Bolts	
(inches)	SAE 2		SAE 5		SAE 8	
"A"	(lb-ft)	(N.m)	(lb-ft)	(N.m)	(lb-ft)	(N.m)
0.25 (1/4)	3	4	6	8	9	12
0.313 (5/16)	7	9	13	18	18	24
0.375 (3/8)	12	16	23	31	35	47
0.438 (7/16)	17	23	35	47	50	68
0.5 (1/2)	31	42	55	75	80	108
0.563 (9/16)	42	57	80	108	110	149
0.625 (5/8)	78	106	110	149	160	217
.75 (3/4)	121	164	200	271	280	380
0.875 (7/8)	160	217	320	434	450	610
1	240	325	480	651	680	922
Location					(lb-ft)	(lb-ft)
Wheel Hub Bolts					90	122
All Carriage Bolts					33	45

Torque figures indicated above are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or hex bolts unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

*Torque value for bolts and hex bolts are identified by their head markings.


Hydraulic Fitting Torque					
Dash Size	Thread Size	Jam Nut or Straight		SAE 37° (JIC)	
		ORB Fitting Torque		Swivel Nut Torque	
		(lb-ft)	(N.m)	(lb-ft)	(N.m)
-04	7/16-20	14-16	20-22	10-11	13-15
-05	1/2-20	18-20	24-27	13-15	18-20
-06	9/16-18	24-26	33-35	17-19	23-26
-08	3/4-16	50-60	68-78	34-38	47-52
-10	7/8-14	72-80	98-110	50-56	69-76
-12	1-1/16-12	125-135	170-183	70-78	96-106
-14	1-3/16-12	160-180	215-245	80-90	110-122
-16	1-5/16-12	200-220	270-300	94-104	127-141
-20	1-5/8-12	210-280	285-380	124-138	169-188
-24	1-7/8-12	270-360	370-490	156-173	212-235

When Ordering Parts

Always give your dealer the Model, Color and Serial Number of your machine to assist him in ordering and obtaining the correct parts. Use the exploded view and tabular listing of the area of interest to exactly identify the required part.


Electrical Assembly - Valve

(Prior to S/N BM2450R13000015 & BM2450S13000075)

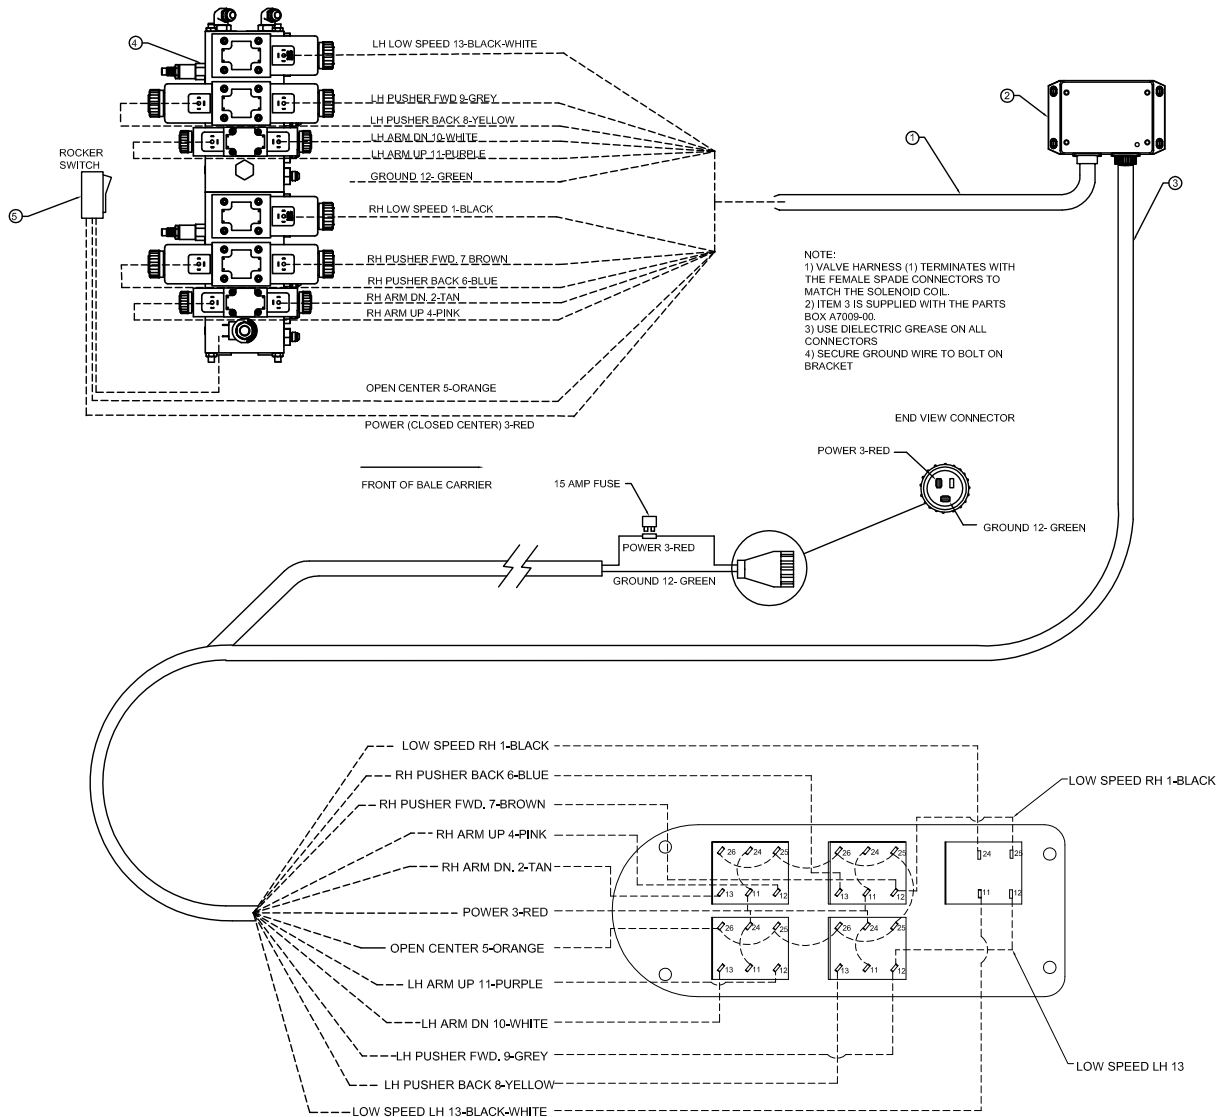


Item	Part Number	Description	Qty
1	83000058	Machine Harness 2450 Bale Carrier	1
2	813949	Snubber Unit	1
3	120055	Control Handle Harness Assembly	1
4	83000056	Valve Bank Assembly	1
5	SZ000759	Open/Close Switch	1

Electrical Assembly - Valve (S/N BM2450R13000015 & BM2450S13000075 and After)

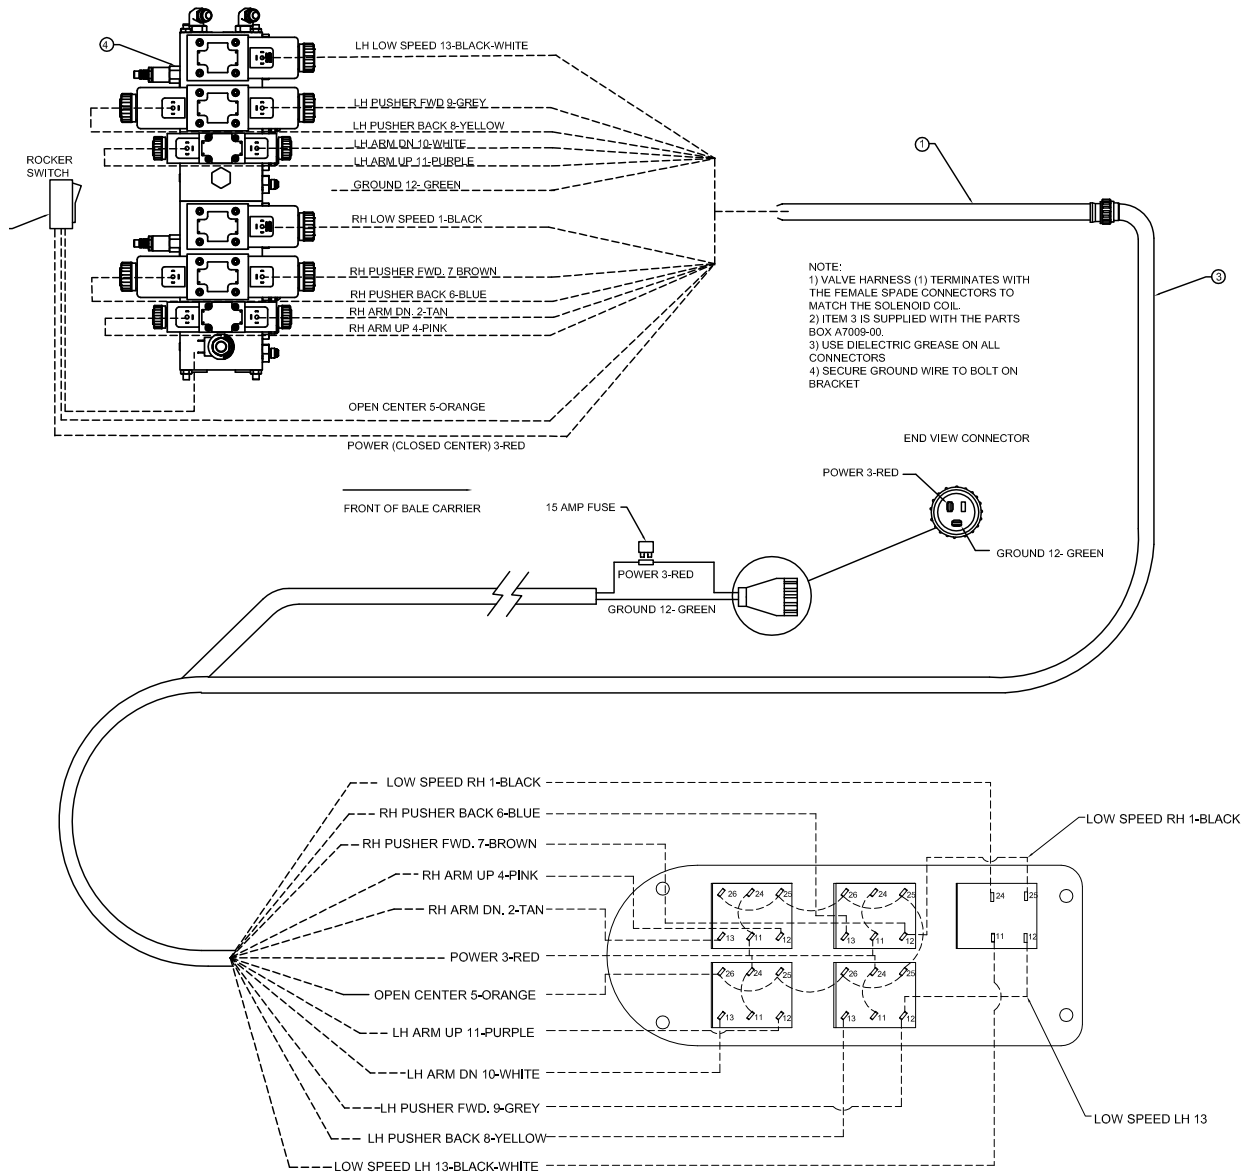


Item	Part Number	Description	Qty
1	SZ000568	2450 Valve Wiring Harness	1
2	SZ000759	Open/Close Switch	1
3	120055	Control Handle Harness Assembly	1
4	83000056	Valve Bank Assembly	1

Manifold Service Parts Drawing - A7010-00

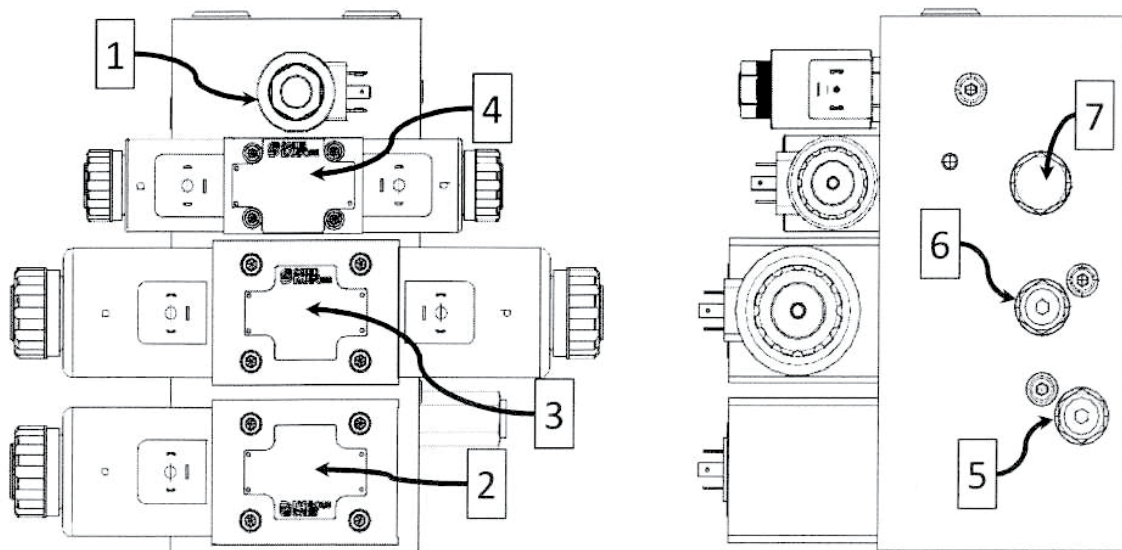


Item	Part Number	Description
1	SZ000523	Svp10-No-12-Dn-B
	SZ000524	Coil
	SZ000525	Coil Nut Kit
	SZ000516	Seal Kit
2	SZ000526	DCV05-2C11/01200E1
	SZ000527	Coil
	SZ000528	Coil Nut Kit
	SZ000515	Seal Kit
	SZ000529	Mtg Screw Kit (1/4-20 x 1.625" Shcs)
3	SZ000530	DCV05-3Y11/01200E1
	SZ000527	Coil
	SZ000528	Coil Nut Kit
	SZ000515	Seal Kit
	SZ000529	Mtg Screw Kit (1/4-20 x 1.625" Shcs)
4	SZ000531	DCV03-3Y11/01200E1
	SZ000532	Coil
	SZ000533	Coil Nut Kit
	SZ000514	Seal Kit
	SZ000534	Mtg Screw Kit (10-24Unc x 1.75" Shcs)
5	SZ000535	CP208-1-B-0-A-C-245
	SZ000536	Seal Kit
6	SZ000537	CP208-1-B-0-A-C-080
	SZ000536	Seal Kit
7	SZ000538	CV10-NP-5-B
	SZ000539	Seal Kit

Valve Bank Assembly Drawing - 83000056

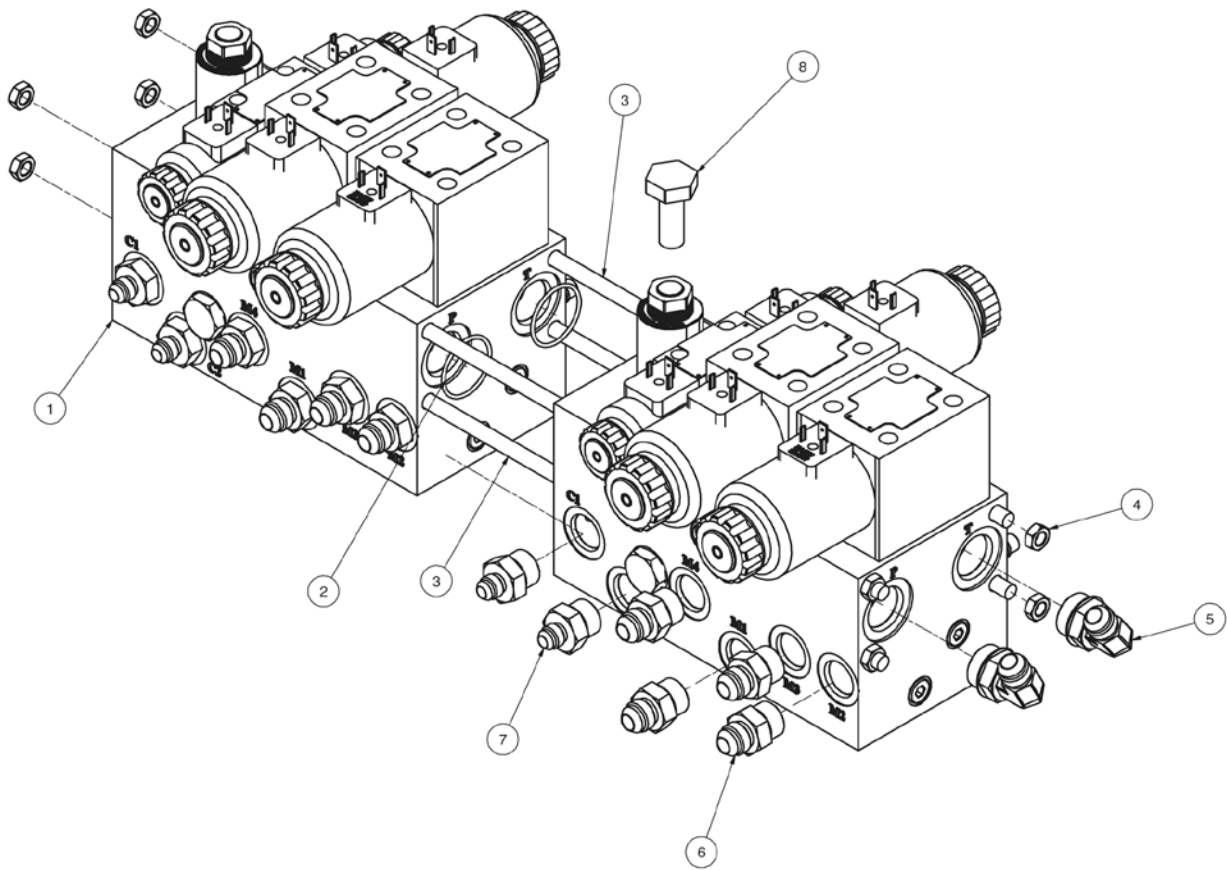


Item	Part Number	Description	Qty
1	815296	Hydraulic Manifold	2
2	83000071	O-Ring (-127) 1-7/16 ID x 1-5/8 OD	2
3	83000072	3/8" High Tensile Rod	4
4	20096	Lock Nut, 3/8"	8
5	811960	Elbow #12 MORB x #8 MJIC	2
6	886897	Adaptor Str #10 MORB x #8 MJIC	8
7	83000073	Adaptor Str #10 MORB x #6 MJIC	4
8	815298	Plug CP10-B-2-B	1

Hydraulic Return Line Assembly Drawing - A7010-00

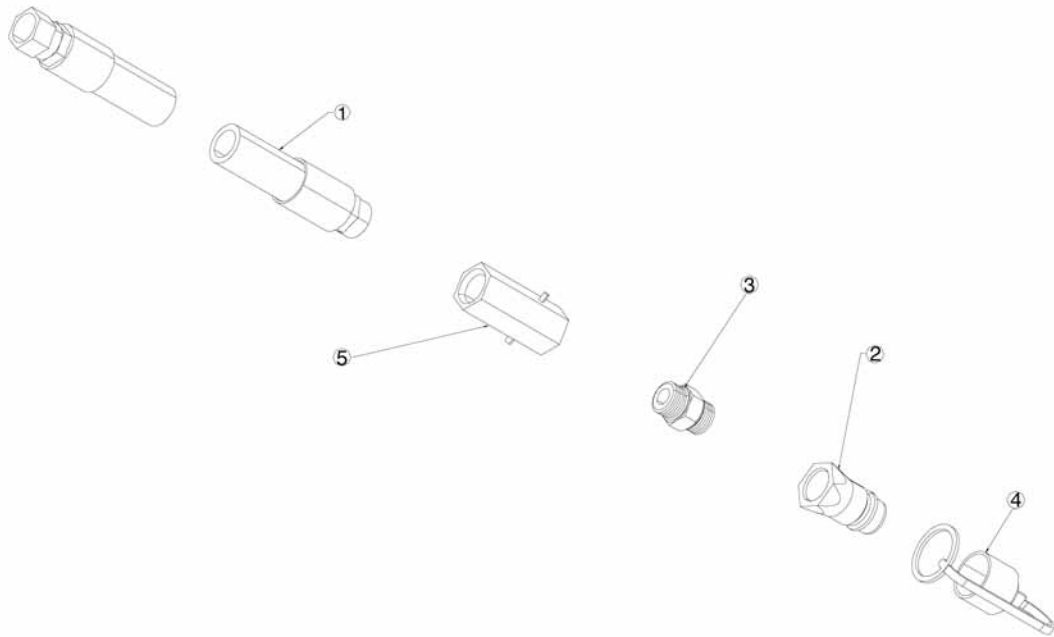


Item	Part Number	Description	Qty
1	29170	Hose 1/2 x 130 3/4 MORB x 3/4	1
2	812841	Male Tip 0.5 Body 0.75 ORB	1
3	813119	Adaptor Str 3/4 MORB x 3/4 MORB	1
4	813305	Dust Cap 0.5 Black	1
5	813666	Valve Check 3/4 ORB Line	1

Hydraulic Pressure Line Assembly Drawing - A7011-00

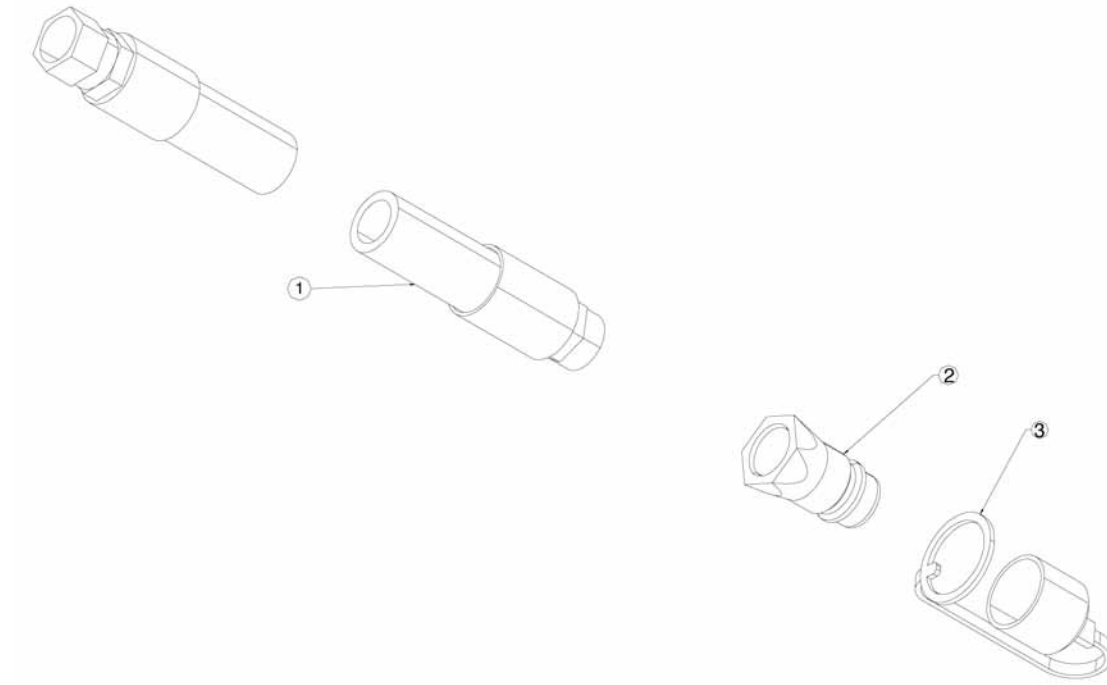

Item	Part Number	Description	Qty
1	29170	Hose 1/2 x 130 3/4 MORB x 3/4	1
2	812841	Male Tip 0.5 Body 0.75 ORB	1
3	813305	Dust Cap 0.5 Black	1

Carrier Tilt Assembly Drawing - A7012-00

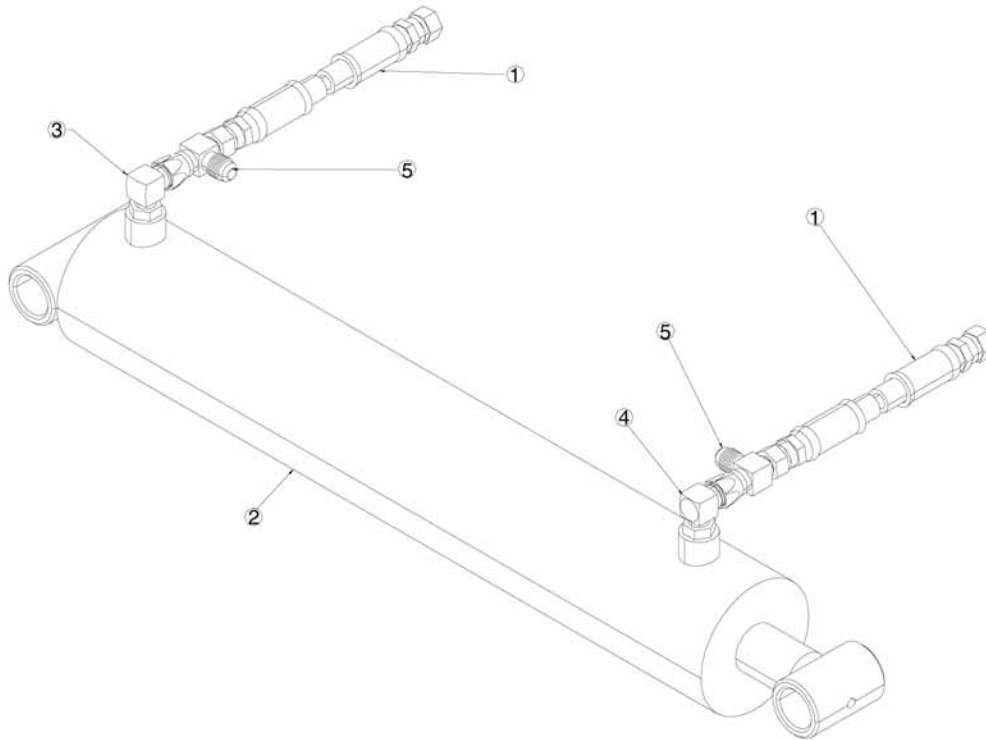


Item	Part Number	Description	Qty
1	29172	Hose 3/8 x 18 9/16 SWFJIC x SWFJIC	2
2	22510	Cylinder 3.0 Dia x 16 Inland	1
3	813640	Elbow 90 9/16 MORB Adjustable 3/8	1
4	E2872-00	Elbow Restrictor Male 90°	1
5	887572	Tee 9/16 MJIC x 9/16 SWFJIC	2

22510 Cylinder 3.0 Diameter Service Parts

	813407	Locknut 1.00 NF	1
	X2504	Seal Kit for Item 22510	1
	24957	Tube Weldment 3.0 Dia	1
	115519	Shaft Weldment 1.50 X 22.63	1
	24958	Head Plate 3.0 X 1.50	1

Fixed Pick Up Assembly Drawing - A7013-00

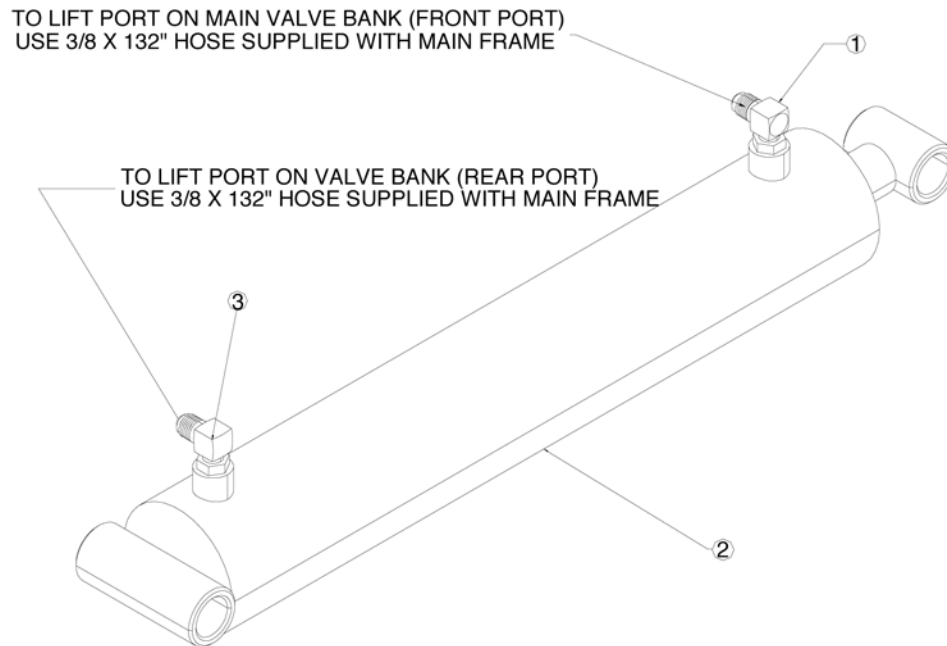


Item	Part Number	Description	Qty
1	813640	Elbow 90 9/16 MORB Adjustable x 3/8	1
2	22510	Cylinder 3.0 Dia x 16 Inland	1
3	E2872-00	Restrictor Elbow Male 90°	1

22510 Cylinder 3.0 Diameter Service Parts


	813407	Locknut 1.00 NF	1
	X2504	Seal Kit for Item 22510	1
	24957	Tube Weldment 3.0 Dia	1
	115519	Shaft Weldment 1.50 x 22.63	1
	24958	Head Plate 3.0 x 1.50	1

Carrier Tilt Cylinders Hydraulic 3/8 Line Drawing - A7014-00

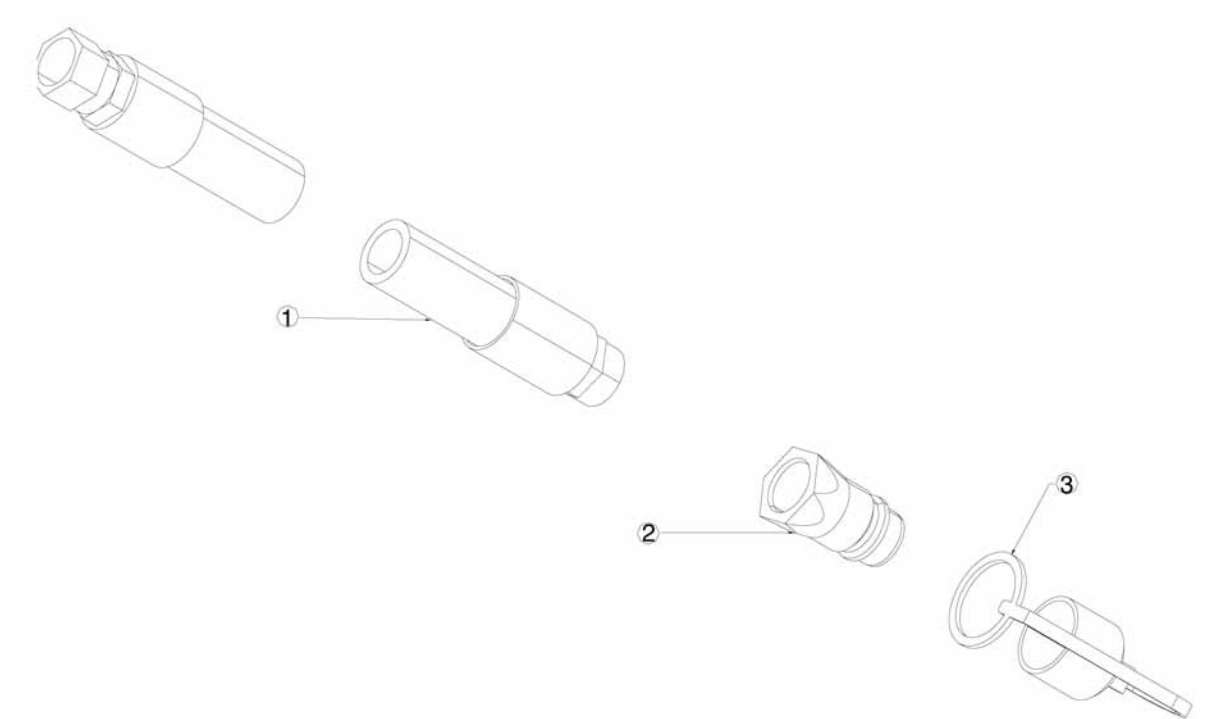

Item	Part Number	Description	Qty
1	29173	Hose 3/8 x 216 9/16 SWFJIC x 3/4 RB	1
2	812841	Male Tip 0.5 Body 0.75 ORB	1
3	813303	Dust Cap 0.5 Red	1

Pusher Motor Assembly Drawing - A7007-00

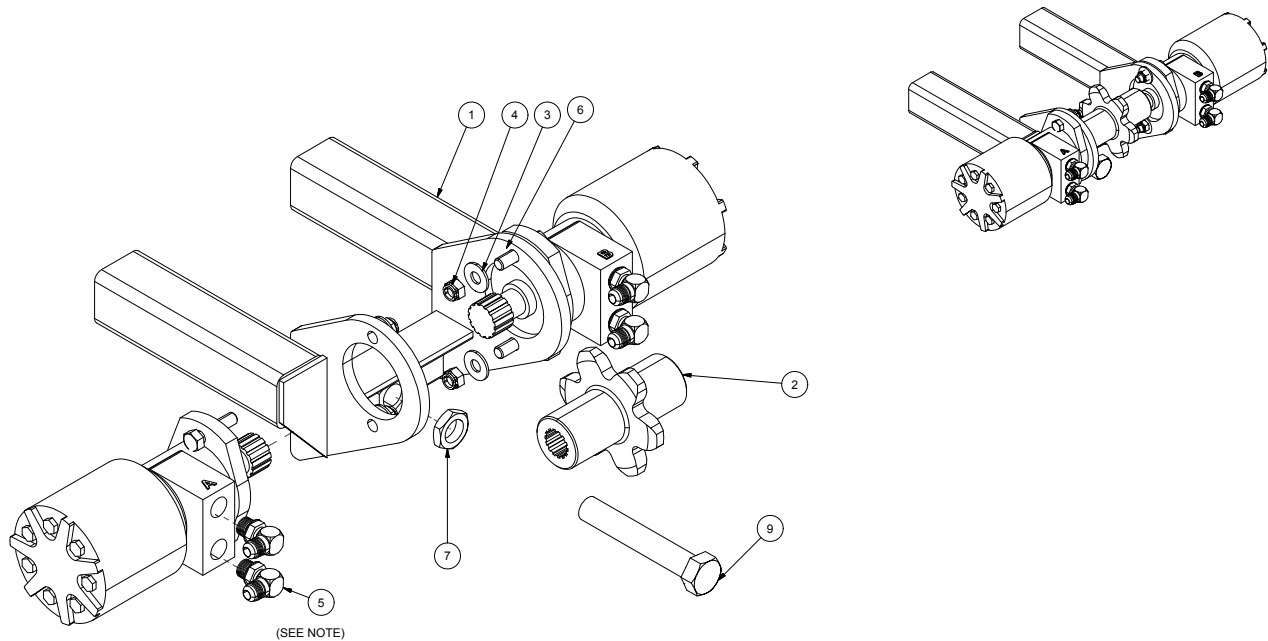


Item	Part Number	Description	Qty
1	C7030-00-26	Motor 22.2 CU MT Weldment	1
2	C7031-00-26	Sprocket Drive Weldment Hayliner	1
3	84048	Washer 0.500 Flat SAE BS PI	4
4	813663	Nut Lock (Steel) 0.500 NC Grc PI	4
5	811416	Elbow 90 7/8 MORB x 3/4 MJIC	4
6	967275	Bolt Hex 0.500 NC x 2.00 Gr8 PI	4
7	84051	Nut Hex Jam 1.00NC Gr2	1
8	813660	Motor 22.2 CU	2
9	C2768-00	1" x 6" Hex Bolt PI	1

B2799-00 Motor Service Parts


	X2725	Seal Kit for B2799-00	1
--	-------	-----------------------	---

Carrier Hydraulic Assembly and Hardware Drawing - A7000-04_04

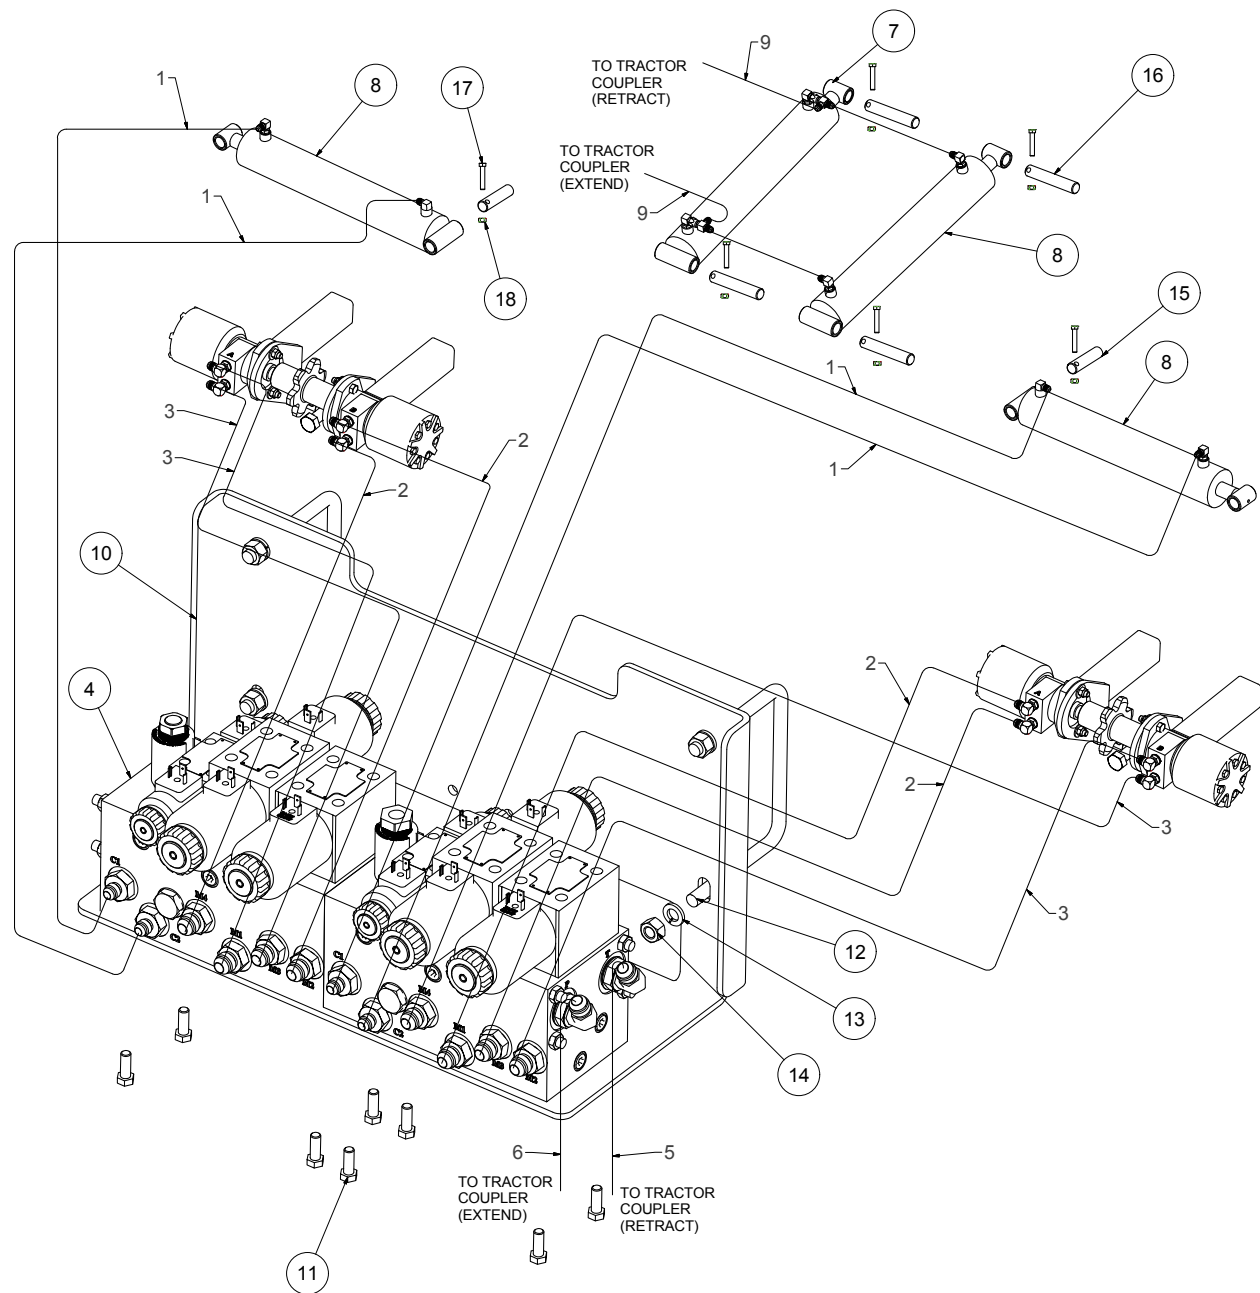


Item	Part Number	Description	Qty
1	115169	Hose 3/8 x 132 9/16 Swfjic x Swfjic	4
2	812270	Hose 1/2 x 48 3/4 Swfjic x Swfjic	4
3	811749	Hose 1/2 x 60 3/4 Swfjic x Swfjic	4
4	83000056	Valve Manifold, 2450	1
5	A7010-00	Hyd Assy 1/2 x 130 Return Line	1
6	A7011-00	Hyd Assy 1/2 x 130 Pressure Line	1
7	A7012-00	Tilt Assy 3.0 x 16.0 Cylinder	1
8	A7013-00	Tilt Assy Lift Arm Cylinder	3
9	A7014-00	Tilt Assy Cylinder 3/8 Hydraulic Line	2
10	83000061-26	Valve Manifold Mount, 2450	1
11	86170	Bolt Hex 0.375Nc x 1.00 Gr5 Pl	8
12	815416	2450 Valve Mount U-Bolt	2
13	SZ127012	Washer Lock 0.500	4
14	SZ125010	Nut Hex (Steel) 0.500Nc Grb	4
15	E2345-00	Pin Cylinder 1.00 Dia x 4.25	2
16	E1932-00	Pin Cylinder 1.00 Dia x 5 9/16	4
17	811795	Bolt Hex 0.375Nc x 2.00 Gr5 Pl	6
18	812363	Nut Lock (Steel) 0.500Nc Grb Pl	6

Carrier Hydraulic Assembly and Hardware Drawing - A7000-04_05

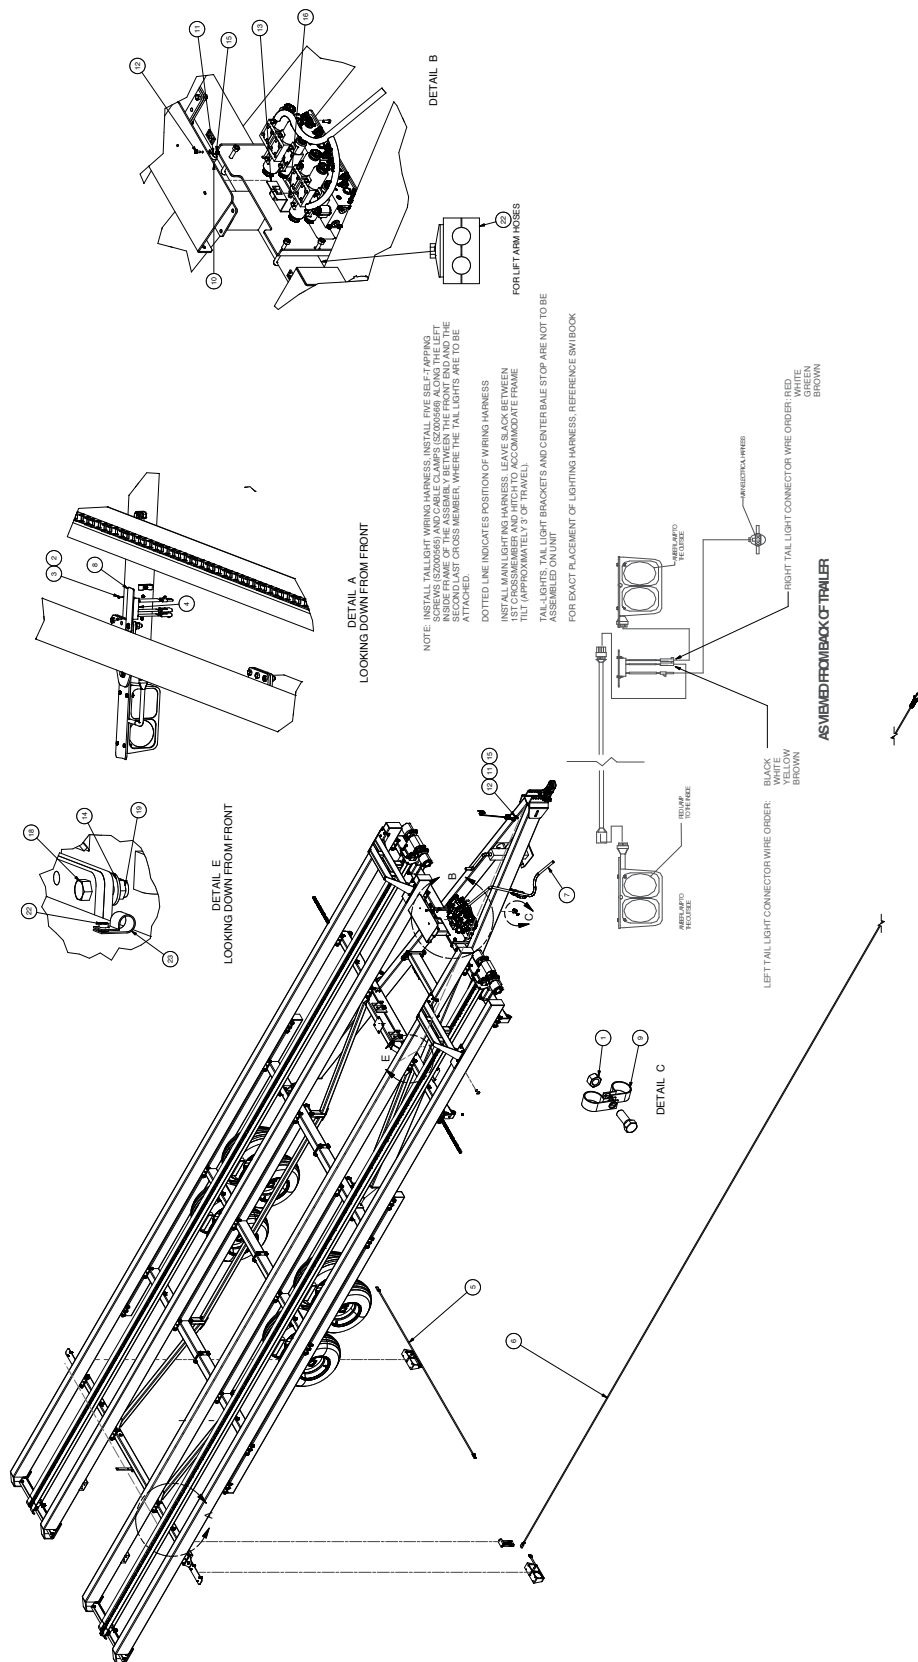


Item	Part Number	Description	Qty
1	812363	Nut Lock (Steel) 0.375 Grb (PI)	3
2	812537	Nut Lock (Nylon) 0.136 Nc Grb (PI)	2
3	813958	Screw Mach #8-32 x 0.75 Flatd	2
4	814193	Enhanced Ag Lighting Module	1
5	814197	Extension Harness 114" Lg	1
6	814198	Main Harness 48' Long 7 Pin Plug	1
7	SZ000568	Electrical Harness 2450	1
8	E2937-00-26	Plate 1500/2500 Lighting Kit	1
9	815217	P-Clamp For 7/8 Od	6
10	815297-26	Manifold Cover	1
11	814063	Clamp, Wiring Harness	2
12	81525	Bolt Hex 0.250 Nc x 0.750 Gr5 (PI)	2
13	815323	Bracket, Switch	1
14	84048	Washer 0.500 Flat Sae Bs (PI)	2
15	84498	1/4" Lock Nut (PI)	2
16	86171	Bolt Hex 0.375 Nc x 1.25	2
17	81344	Lock Nut (Nylon) 0.375 Nc	2
18	967274	Bolt Hex 0.500 Nc x 1.50 Gr8 (PI)	2
19	813663	Nut Lock (Steel) 0.500 Nc GrC (PI)	2
21	815606	3/8" Hose Line Mount Assembly	2
22	SZ000565	5/16-12 x 3/4 Stapschw #3 Pnt	9
23	SZ000566	5/16 x 0.406 Hole Vinyl Dip Clamp	11

Fixed Pick Up Arm Hydraulic Assembly Drawing - A2300-86

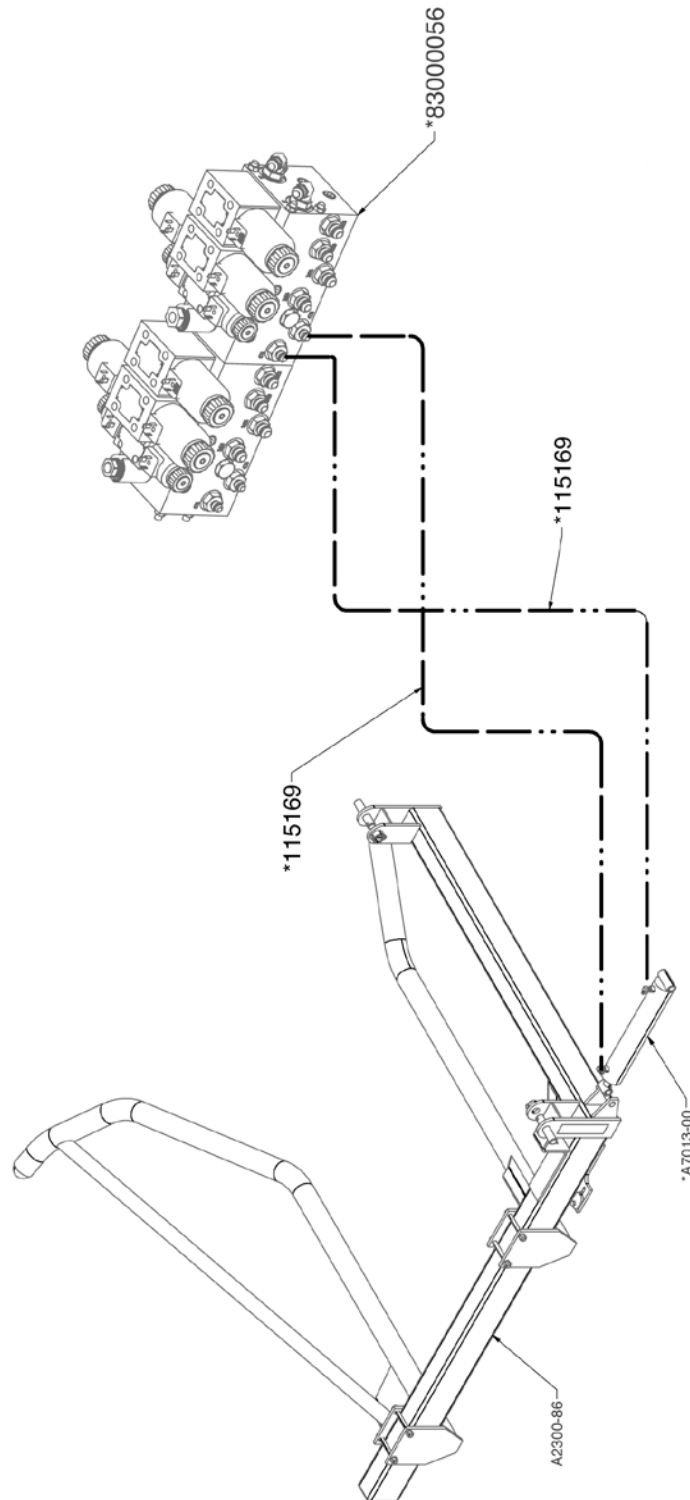


NOTES: 1) ALL ITEMS IN THE HYDRAULIC SCHEMATIC THAT ARE MARKED WITH AN ASTERISK (*) ARE SUPPLIED ON THE 2450 MAIN FRAME ASSEMBLY.
2) LOOP ALL HOSES THROUGH APPROPRIATE HOSE HOLSTERS AND TIE WRAP
3) DURING FIRST USE CHECK FOR CLEARANCE AND BINDING.

Manifold Schematic - 83000056

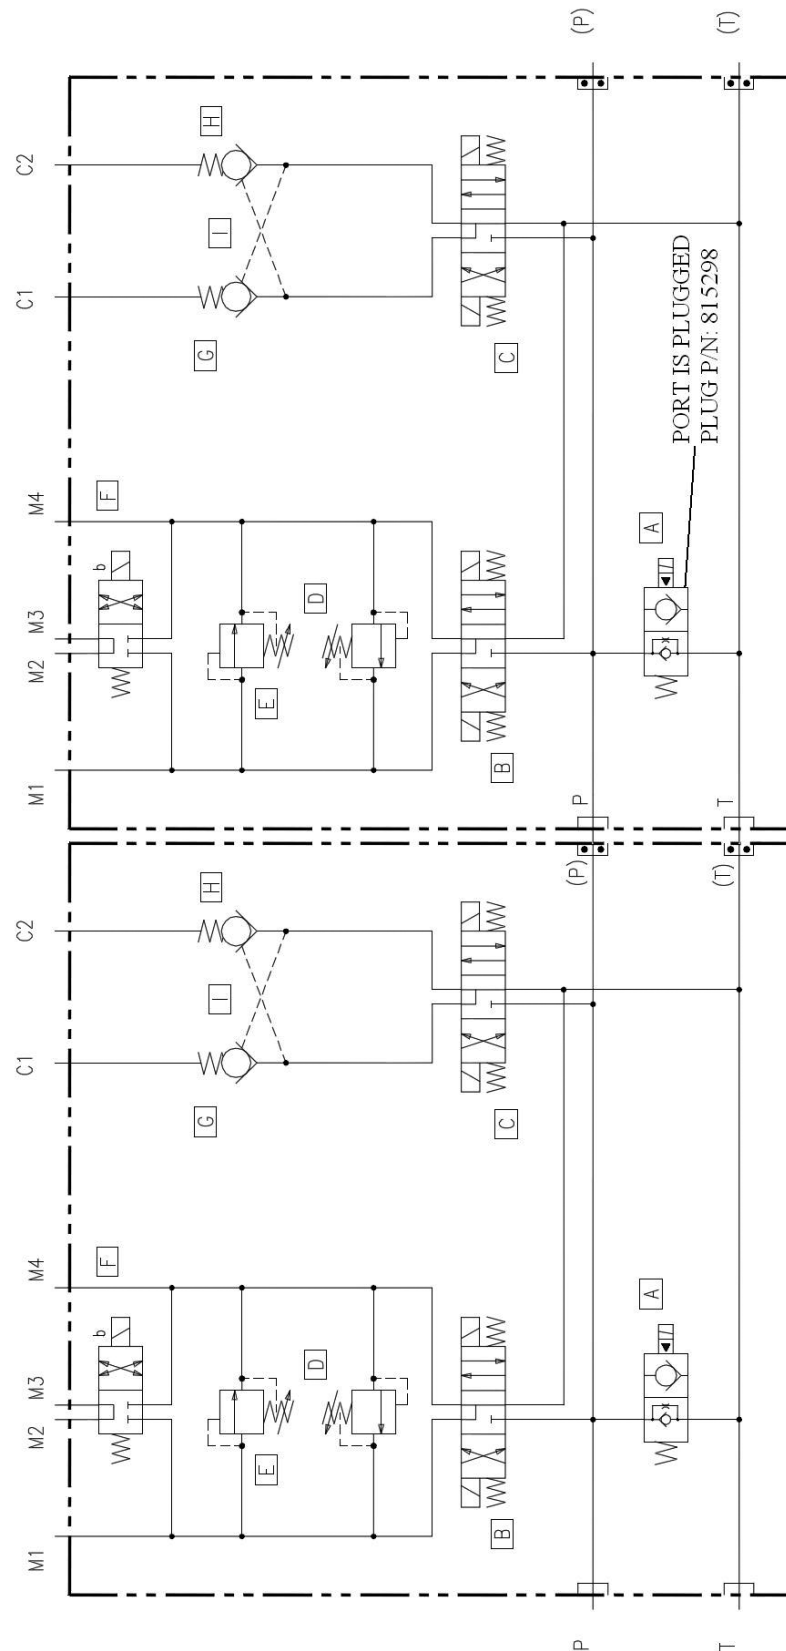


Control Handle Assembly Drawing - I20055

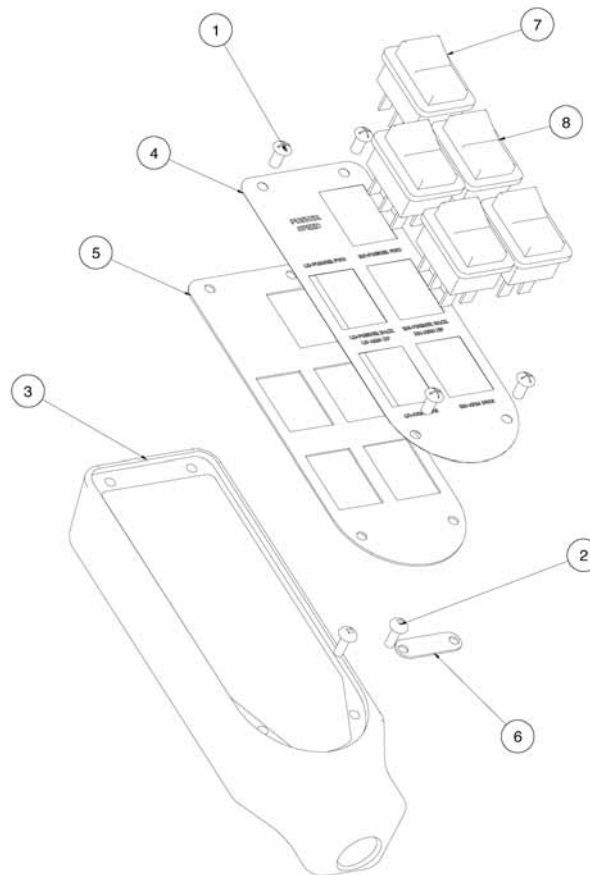


Item	Part Number	Description	Qty
1	813539	Screw MACH 8-32 x 0.375 TR HD	4
2	813540	Screw MACH 8-32 x 0.50 RD HD	2
3	22105	Control Handle	1
4	814456	Decal 2500 Control Handle	1
5	I100226	Cover Plate 2500 Control Handle	1
6	INE22105-01	Wire Clamp Plate	1
7	815382	Rocker Switch On-Off	1
8	815383	Rocker Switch (On)-Off-(On)	4

Center Bale Stop Drawing - C7048-00

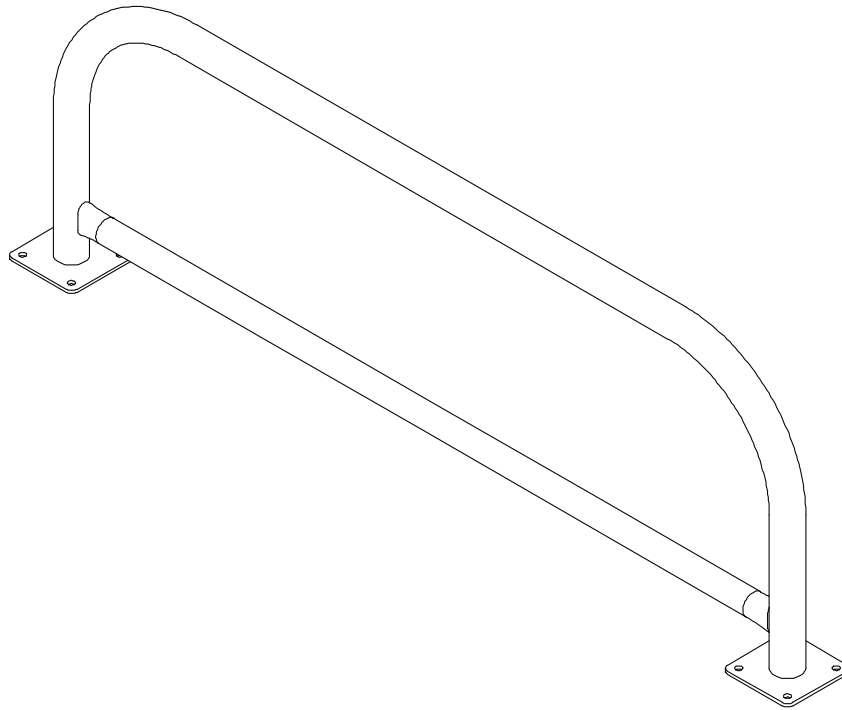


Item	Part Number	Description	Qty
	C7048-00-17	Bale Stop	1
	81620	Bolt Hex 0.500 x 1.25	8
	84048	Washer, flat 0.500	8
	812364	Nut Lock (Steel) 0.500	8

Carrier Initial Assembly Drawing - A7000-04_01

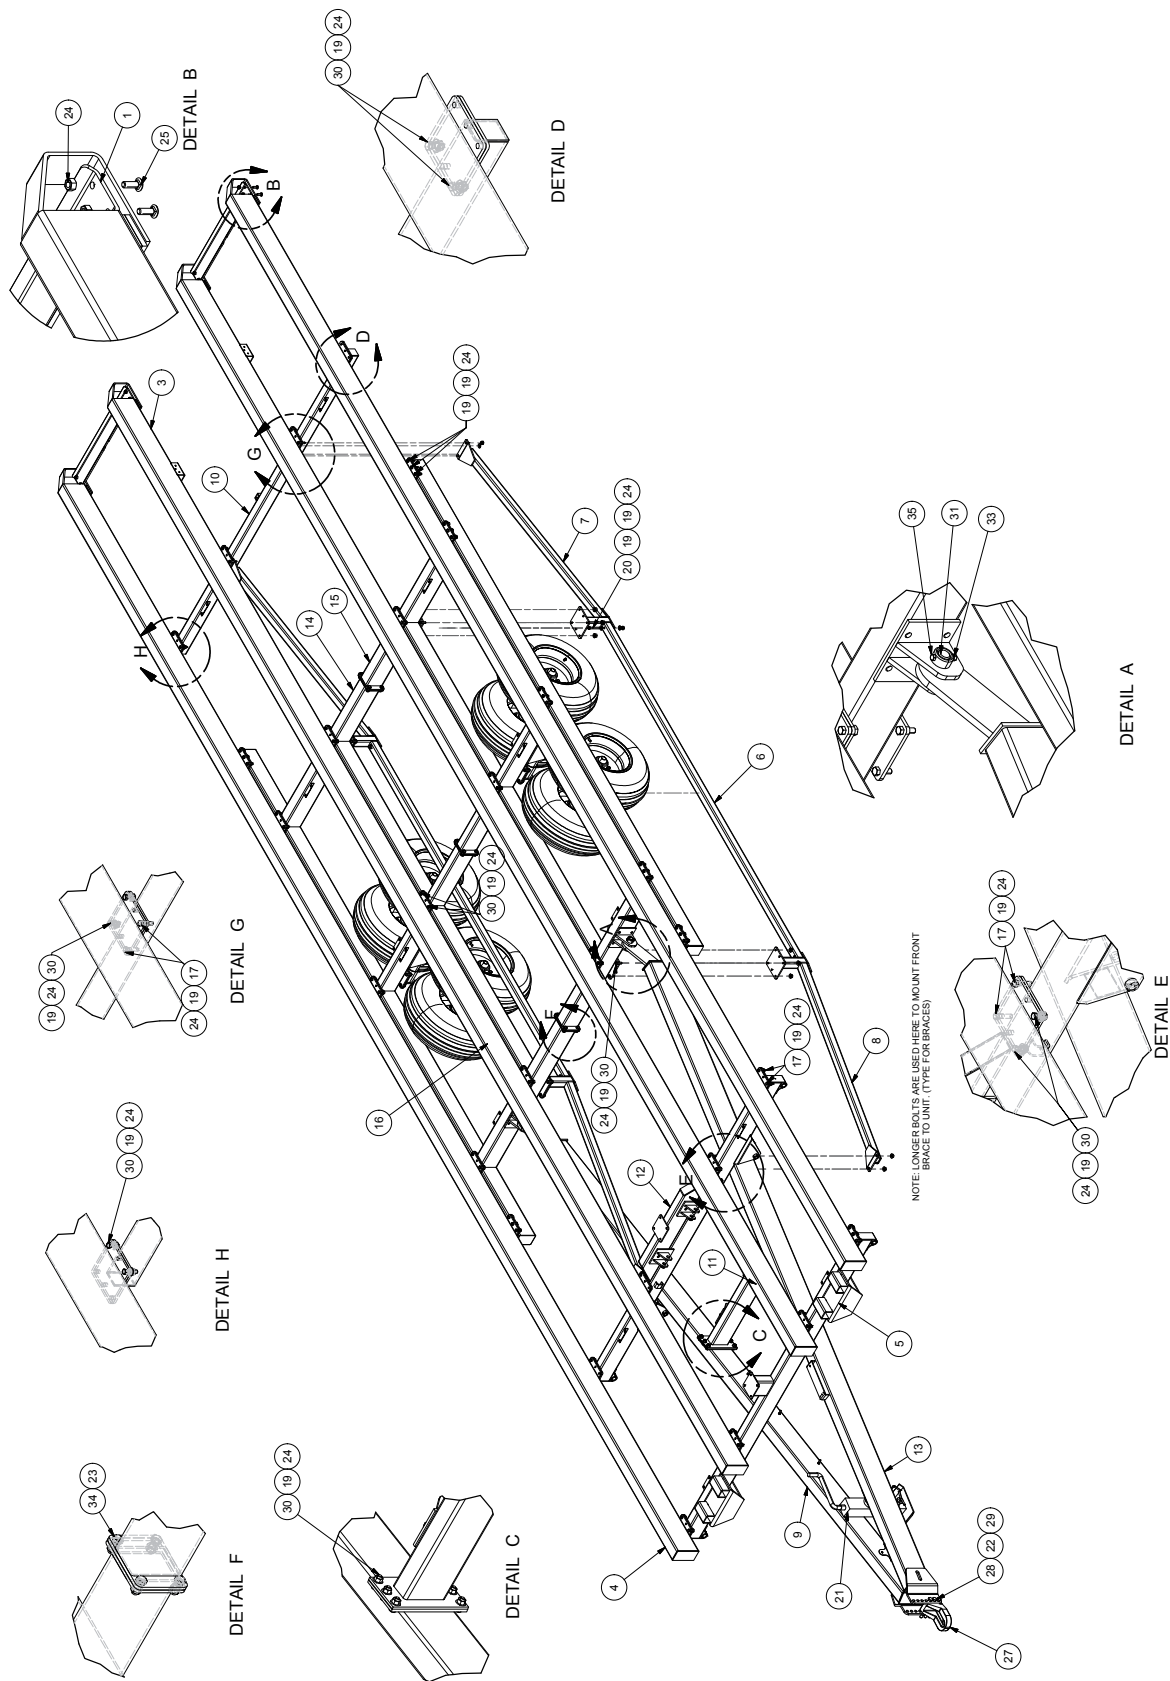


Item	Part Number	Description	Qty
1	INE7003-01-26	Chain Plate	2
3	C7056-00-26	Carrier Weldt Unit Inner Beam	2
4	C7055-00-26	Outer Carrier Beam	2
5	C7054-01-26	Crossmember Front Weld't 2500	1
6	C7036-00-26	Center Brace	2
7	C7035-00-26	Rear Brace Weld't	2
8	C7034-00-26	Front Brace Weld't	2
9	C7016-00	Hitch Weldt Right Beam	1
10	C7012-01	Crossmember Rear Weld't 2500	1
11	C7008-00	Hitch Weldt Crossmember/2500	1
12	C7007-01	Second Crossmember	1
13	C7006-00	Hitch Weldt Left Beam	1
14	C7001-01	2500 Subframe Right	1
15	C7000-01	2500 Subframe Left	1
16	A7004-00	Tandem Axle/4000-2500 Assy	2
17	967275	Bolt Hex 0.500Nc x 2.00 Gr8pl	19
19	84048	Washer 0.500 Flat Sae Bs Pl	174
20	81629	Bolt Hex 0.500Nc x 3.5 Gr5 Pl	4
21	815378	Screw Jack 5 Ton	1
22	813648	Nut Lock (Steel)0.750Nc Grc Pl	3
23	85700693	Nut Lock (Steel) 0.625Nc Grc Pl	12
24	813663	Nut Lock (Steel) 0.500Nc Grc Pl	170
25	812217	Bolt Carr 0.500Nc x 1.50Gr5 Zpl	8
27	SZ000561-26	Perfect Hitch	1
28	00047589	Bolt Hex 0.750Nc x 6Lg Gr8 Pl	3
29	84050	Washer 0.750 Sae Flat Bs Pl	3
30	967274	Bolt Hex 0.500Nc x 1.50 Gr8 Pl	147
31	815379	Pin 1.25 Dia x 3.75 Long	2
33	812363	Nut Lock (Steel) 0.375 Grb Pl	2
34	84268	Bolt Hex 0.625Nc x 1.50 Gr5 Pl	12
35	81581	Hex Bolt 0.375 x 2.50	2

Complete Tandem Axle Assembly Drawing - A7004-00

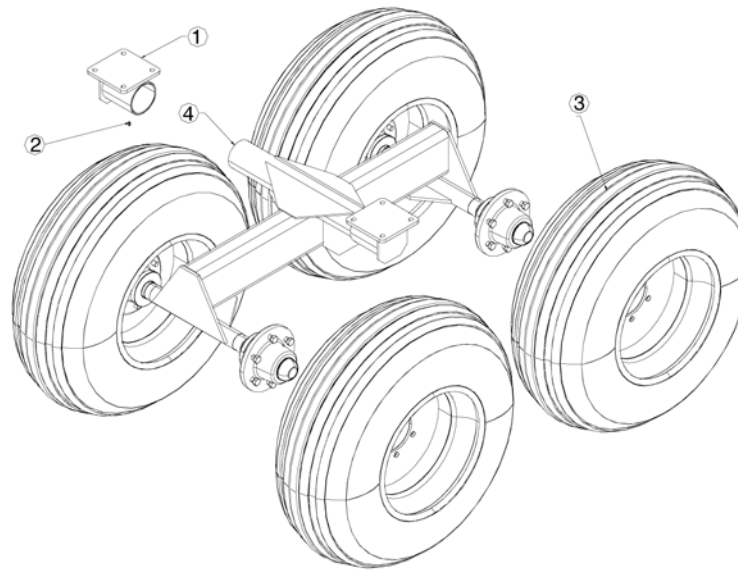


Item	Part Number	Description	Qty
1	B2722-00-26	Axle Bearing Weldment	2
2	813646	Grease Zerk 1/4" Self Tapping	2
3	B2700-03	Tire Assembly	4
4	B2722-00-26	Tandem Axle 2500/4000 Bale Carrier	1

Tire Assembly Drawing - B2700-03

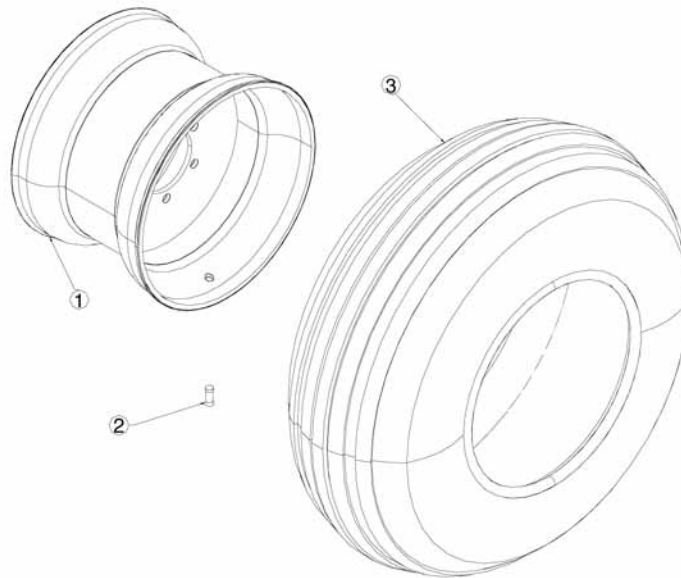


Item	Part Number	Description	Qty
1	813655	15 x 10 lb x 6 Bolt P65 Rim	4
2	813656	TR-416-MS Valve Stem w/ Cap	1
3	813657	Tire 12.5 x 15 FI 12 Ply Range F Farm Hwy Tire	1

Tandem Axle Assembly Drawing - B2722-00

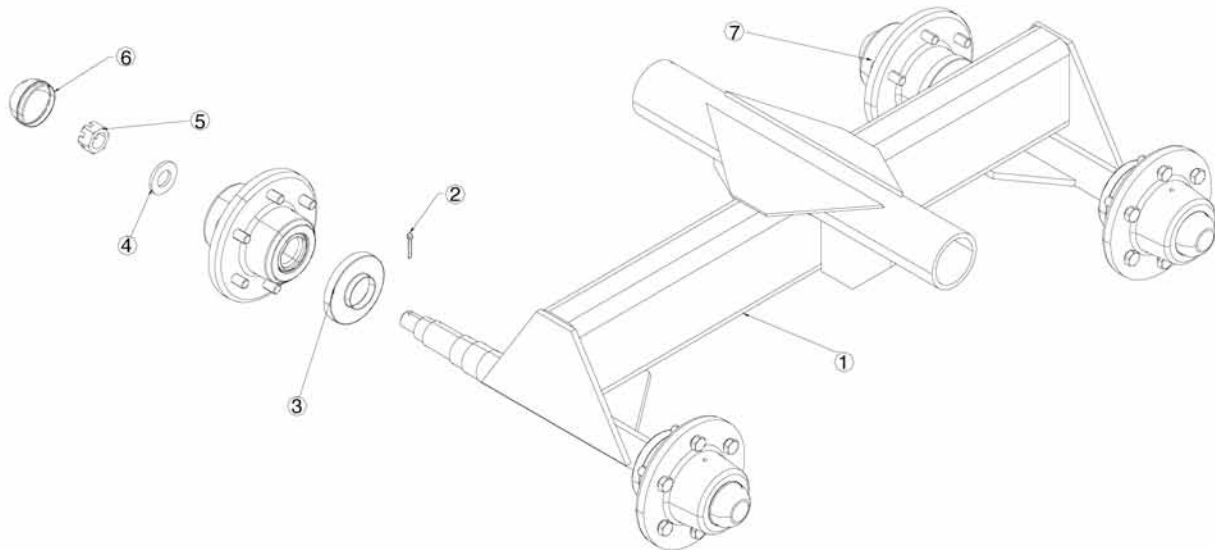


Item	Part Number	Description	Qty
1	C2722-00-26	Tandem Axle Weldment	1
2	9812433	3/16" x 1-1/2 " Cotter Pin Black	4
3	813649	Dust Shield	4
4	813651	Washer Flat 1-1/32" x 2" x .188" BLK	4
5	812871	Nut Castle 1.00 NF	4
6	813650	Dust Cap	4
7	C2339-00	Hub Assembly	4

Hub Assembly Drawing - C2339-00

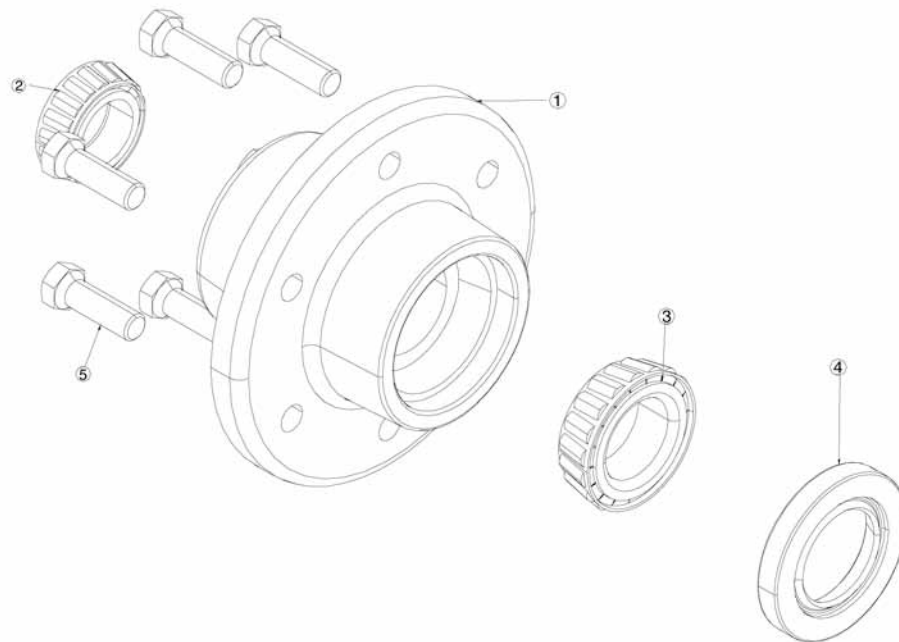


Item	Part Number	Description	Qty
1	813652	6 Bolt Wheel Hub	1
2	967205	Bearing Cone Outer	1
3	967208	Bearing Cone Inner	1
4	967204	Oil Seal SAE-30	1
5	813653	9/16" Hub Bolt	6

Pusher Assembly Drawing - A7006-00

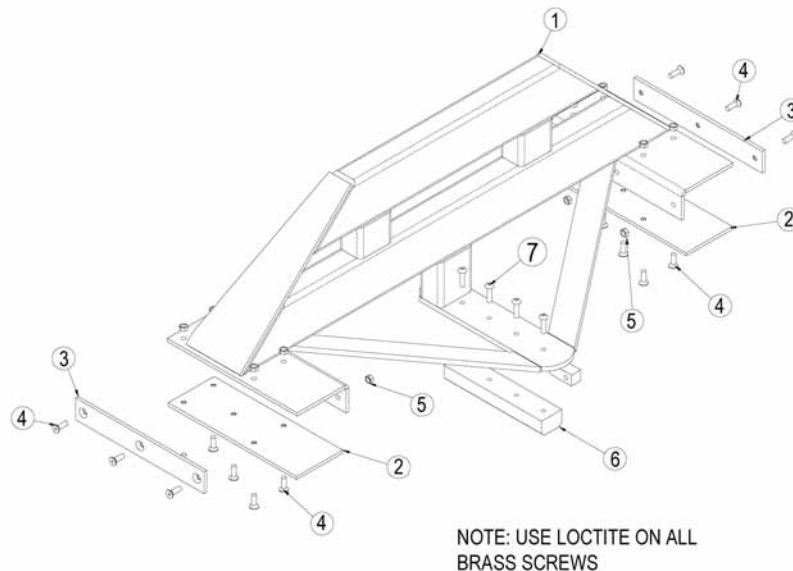


Item	Part Number	Description	Qty
1	C7027-00-17	Pusher	1
2	E2749-00	Top Slider	2
3	E2750-00	Side Slider	2
4	813558	Screw MACH M8 x 20 FLHD Brass	16
5	813561	Nut Hex M8 Brass	16
6	E7032-00	Center Slider	1
7	813644	Screw MACH 0.313 NC x 1.25 RDHD	4

Roller / Chain Guide Assembly Drawing - A7008-00

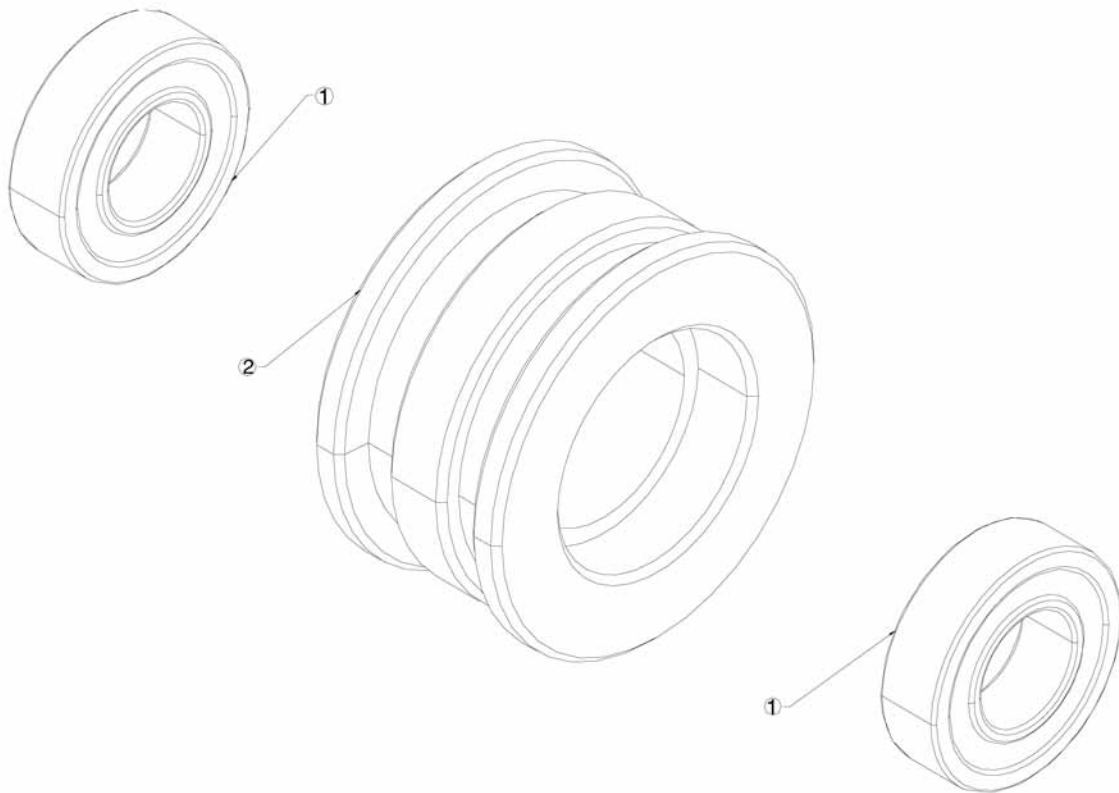


Item	Part Number	Description	Qty
1	813645	Bearing / 6205LLU/25.4/3E	2
2	INE7037-00	Roller / Chain Guide	1

Pusher/Chain Assembly Drawing - A7000-04_03

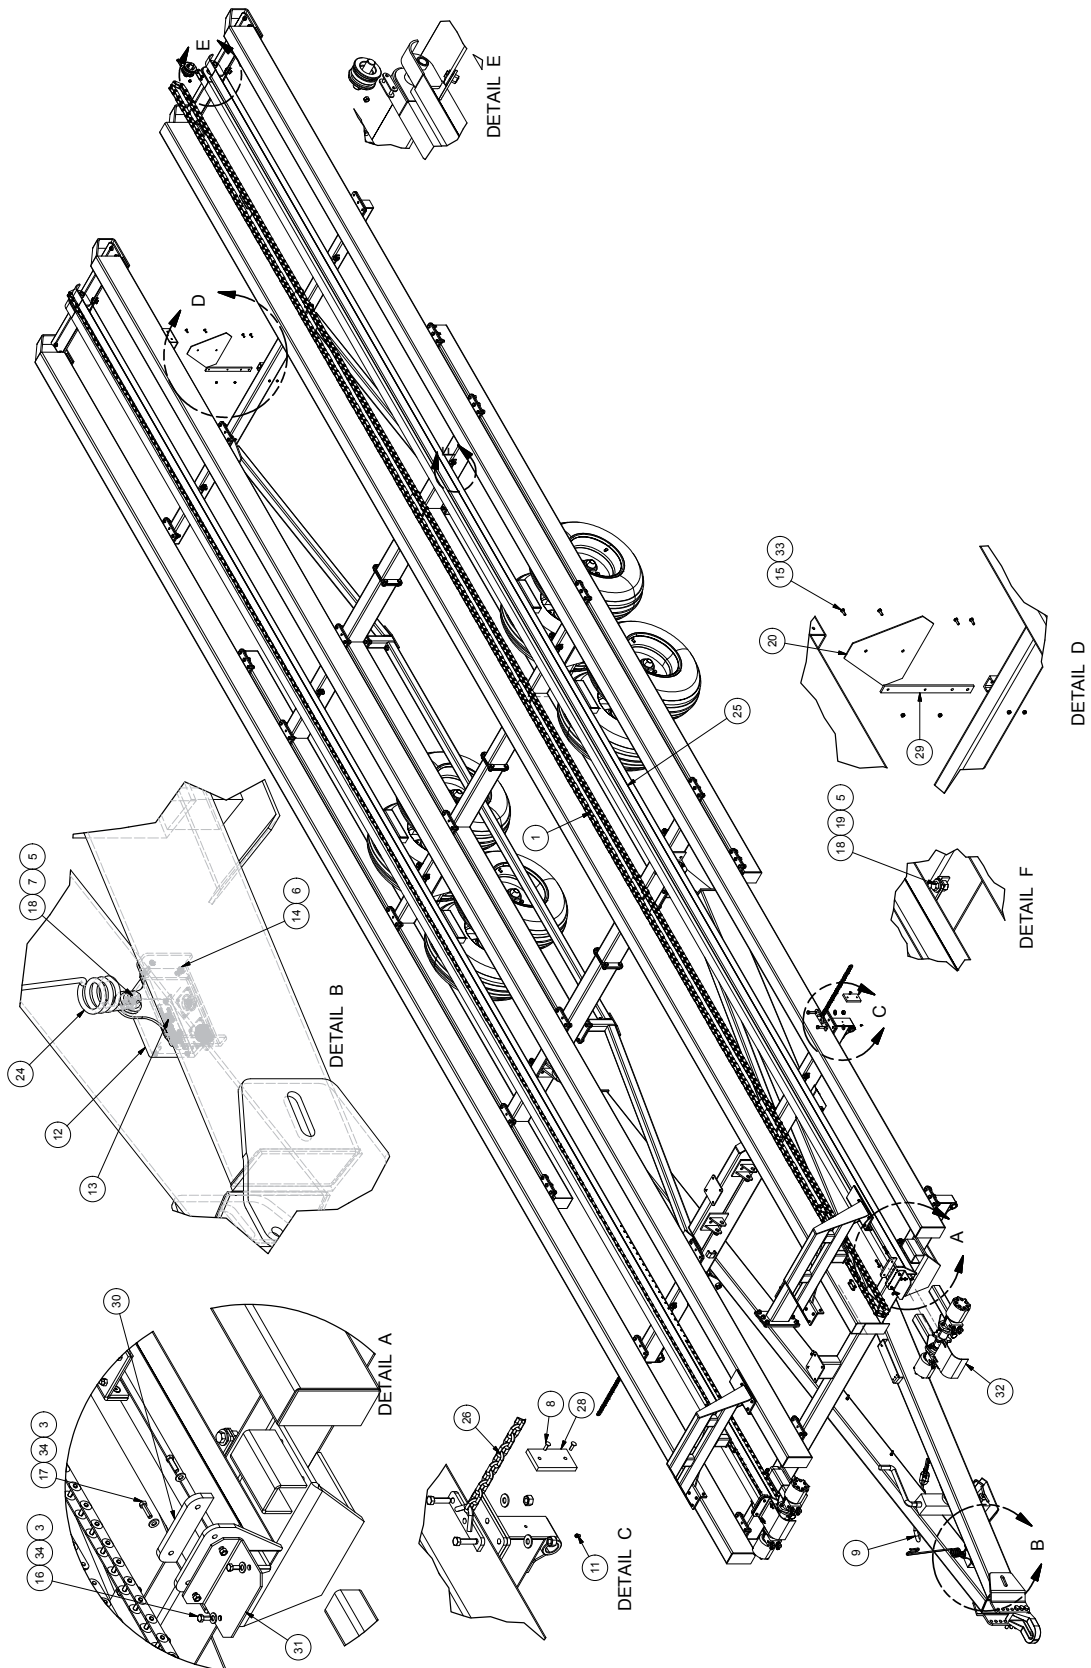


Item	Part Number	Description	Qty
1	SZ000510	C2080 HR x 225 P + O/L +2 CC/L	4
2	811795	Bolt Hex 0.375Nc x 2.00 Gr5 Pl	2
3	812362	Nut Lock (Steel) 0.313Nc Grbpl	8
4	812363	Nut Lock (Steel) 0.375 Grb Pl	2
5	813663	Nut Lock (Steel) 0.500Nc Grc Pl	33
6	812537	Nut Lock (Nylon) 0.136 Nc Grb Pl	4
7	813581	Washer Flat 1.5 x 0.531 x 0.25 Pl	1
8	813602	Rivet 1/4 x 3/4 Flathead	4
9	813641	Chain Safety 40M GVW	1
10	813643	Connector Link HD C2080	6
11	813646	Grease Fitting 1/4 NF Driven	4
12	813949	Snubber Unit (Prior to S/N BM2450R13000015 and S/N BM2450S13000075)	1
13	813952	Decal, Bale Carrier Snubber (Prior to S/N BM2450R13000015 and S/N BM2450S13000075)	1
14	813958	Screw Mach #8-32 x 0.75 Flatd	4
15	81525	Bolt Hex 0.250Nc x 0.750 Gr5 Pl	4
16	81549	Bolt Hex 0.313Nc x 0.75 Gr5pl	4
17	81552	Bolt Hex 0.313Nc x 1.25 Gr5 Pl	4
18	81620	Bolt Hex 0.500Nc x 1.25Gr5 Pl	33
19	84048	Washer 0.500 Flat Sae Bs Pl	32
20	967066	Decal Slow Moving Vehicle Sign	1
21	A7006-00	Pusher Assembly	2
22	a7007-00	Motor 22.2 Mt Assy	2
23	A7008-00-26	Chain Guide Roller Asm	2
24	813662	Hose Holder	1
25	C7057-01-26	Chain Guide Weld't	2
26	815829	Chain Weld't, Lift Arm	2
27	E2345-00	Pin Cylinder 1.0 Dia x 4.5	2
28	E2413-00	Arm Cushion Rubber Belting	2
29	E2795-00	Decal Mount SMV	1
30	E7040-00	Cushion Pusher/Stop	2
31	E7038-00-26	Mounting Bracket / Shield	2
32	E7039-00-26	Chain Drive Shield	2
33	84498	1/4" Lock Nut (Pl)	4
34	81570	Washer 0.375 Flat St Hs Pl	8

Fixed Pick Up Arm LH Side Assembly Drawing - A2300-86

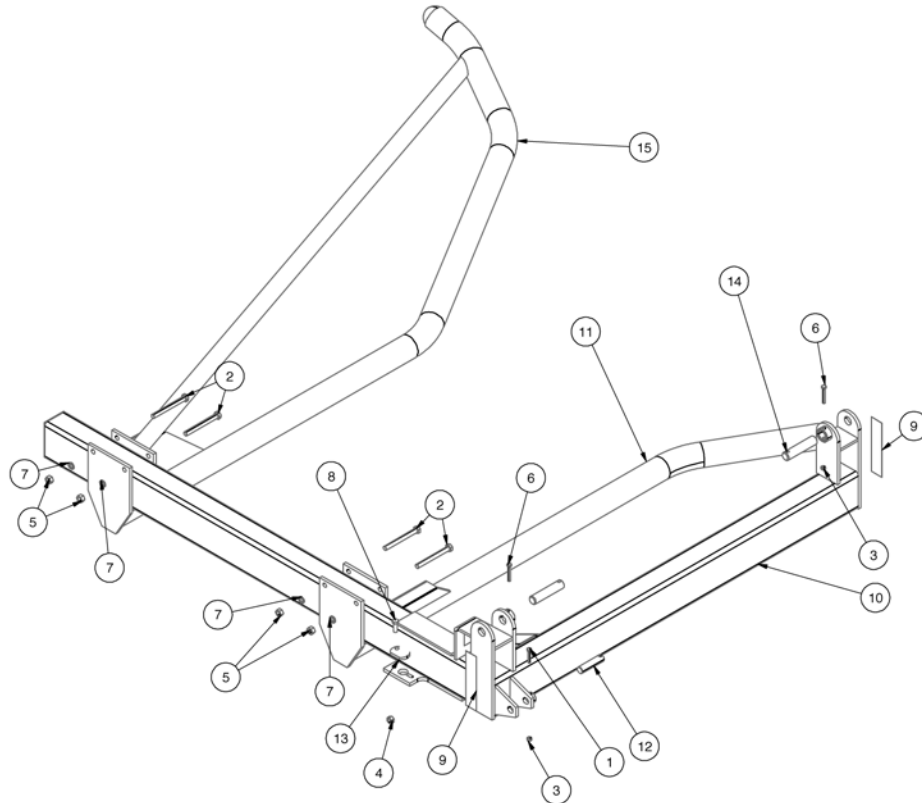


Item	Part Number	Description	Qty
1	811795	Bolt Hex 0.375 NC x 2.00 Gr5 PI	1
2	812087	Bolt Hex 0.625 NC x 6.00 Grb PI	4
3	812363	Nut Lock (Steel) 0.375 Grb PI	3
4	812364	Nut Lock (Steel) 0.500 NC Grb PI	1
5	813509	Nut Hex 0.625 NC Gr5 PI	4
6	81581	Bolt Hex 0.375 NC x 2.50 Gr5 PI	2
7	81677	Washer Lock 0.625 PI	4
8	84277	Bolt Hex 0.500 NC x 1.50 Gr5 PI	1
9	967055	Decal Reflective 2 x 9 Amber	2
10	C2315-00-26	Lift Arm Left Bale	1
11	C2330-00-17	Fork Bale Right Assembly	1
12	E2345-00	Pin Cylinder 1.0 Dia x 4.5	1
13	E2485-00-26	Chain Latch Lift Arm	1
14	E2445-00	Lift Arm Pin 1.25 Dia C1045CR	2
15	815175-17	L.H. Fork w/ Deflector	1

Fixed Pick Up Arm RH Side Assembly Drawing - A2300-87

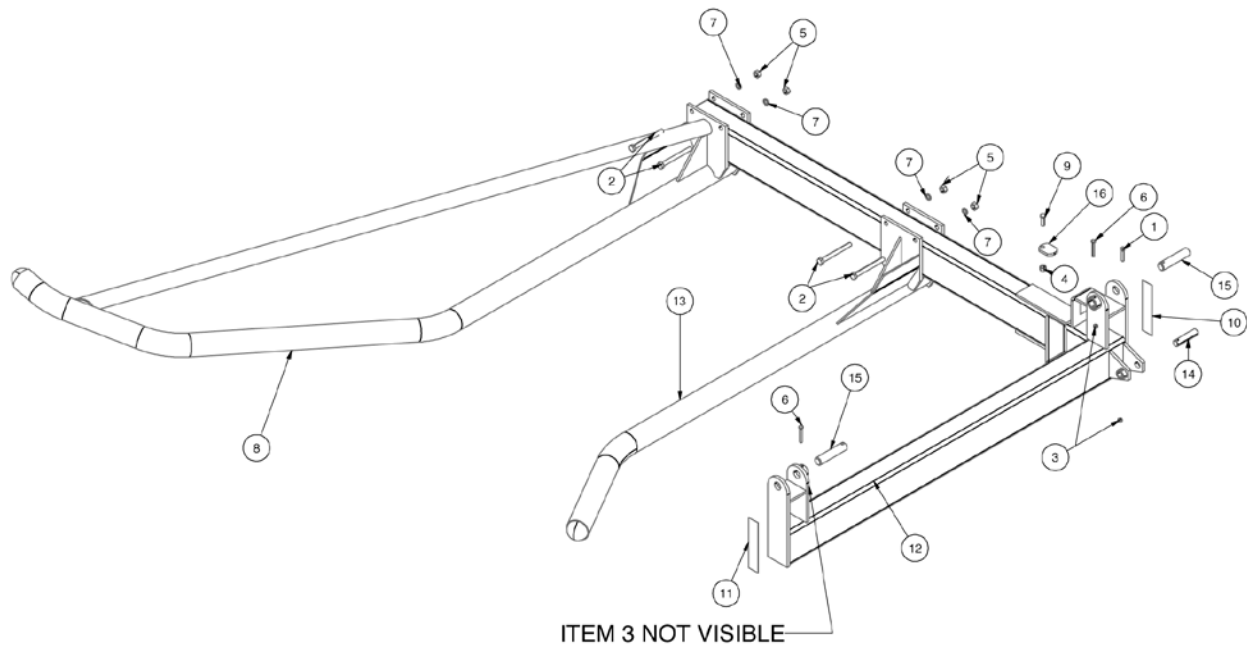


Item	Part Number	Description	Qty
1	811795	Bolt Hex 0.375 NC x 2.00 Gr5 PI	1
2	812087	Bolt Hex 0.625 NC x 6.00 Grb PI	4
3	812363	Nut Lock (Steel) 0.375 Grb PI	3
4	812364	Nut Lock (Steel) 0.500 NC Grb PI	1
5	813509	Nut Hex 0.625 NC Gr5 PI	4
6	81581	Bolt Hex 0.375 NC x 2.50 Gr5 PI	2
7	81677	Washer Lock 0.625 PI	4
8	83000050-17	R.H. Fork w/ Deflector Weldment	1
9	84277	Bolt Hex 0.500 NC x 1.50 Gr5 PI	1
10	967053	Decal Reflective 2 x 9 Red	1
11	967055	Decal Reflective 2 x 9 Amber	1
12	C2316-00-26	Lift Arm Right Bale	1
13	C2329-00-17	Fork Bale Left Assembly	1
14	E2345-00	Pin Cylinder 1.0 Dia x 4.5	1
15	E2445-00	Pin Lift Arm 1.25 Dia C1045CR	2
16	E2485-00-26	Chain Latch Lift Arm	1

Indicator Assembly - A7000-04_02

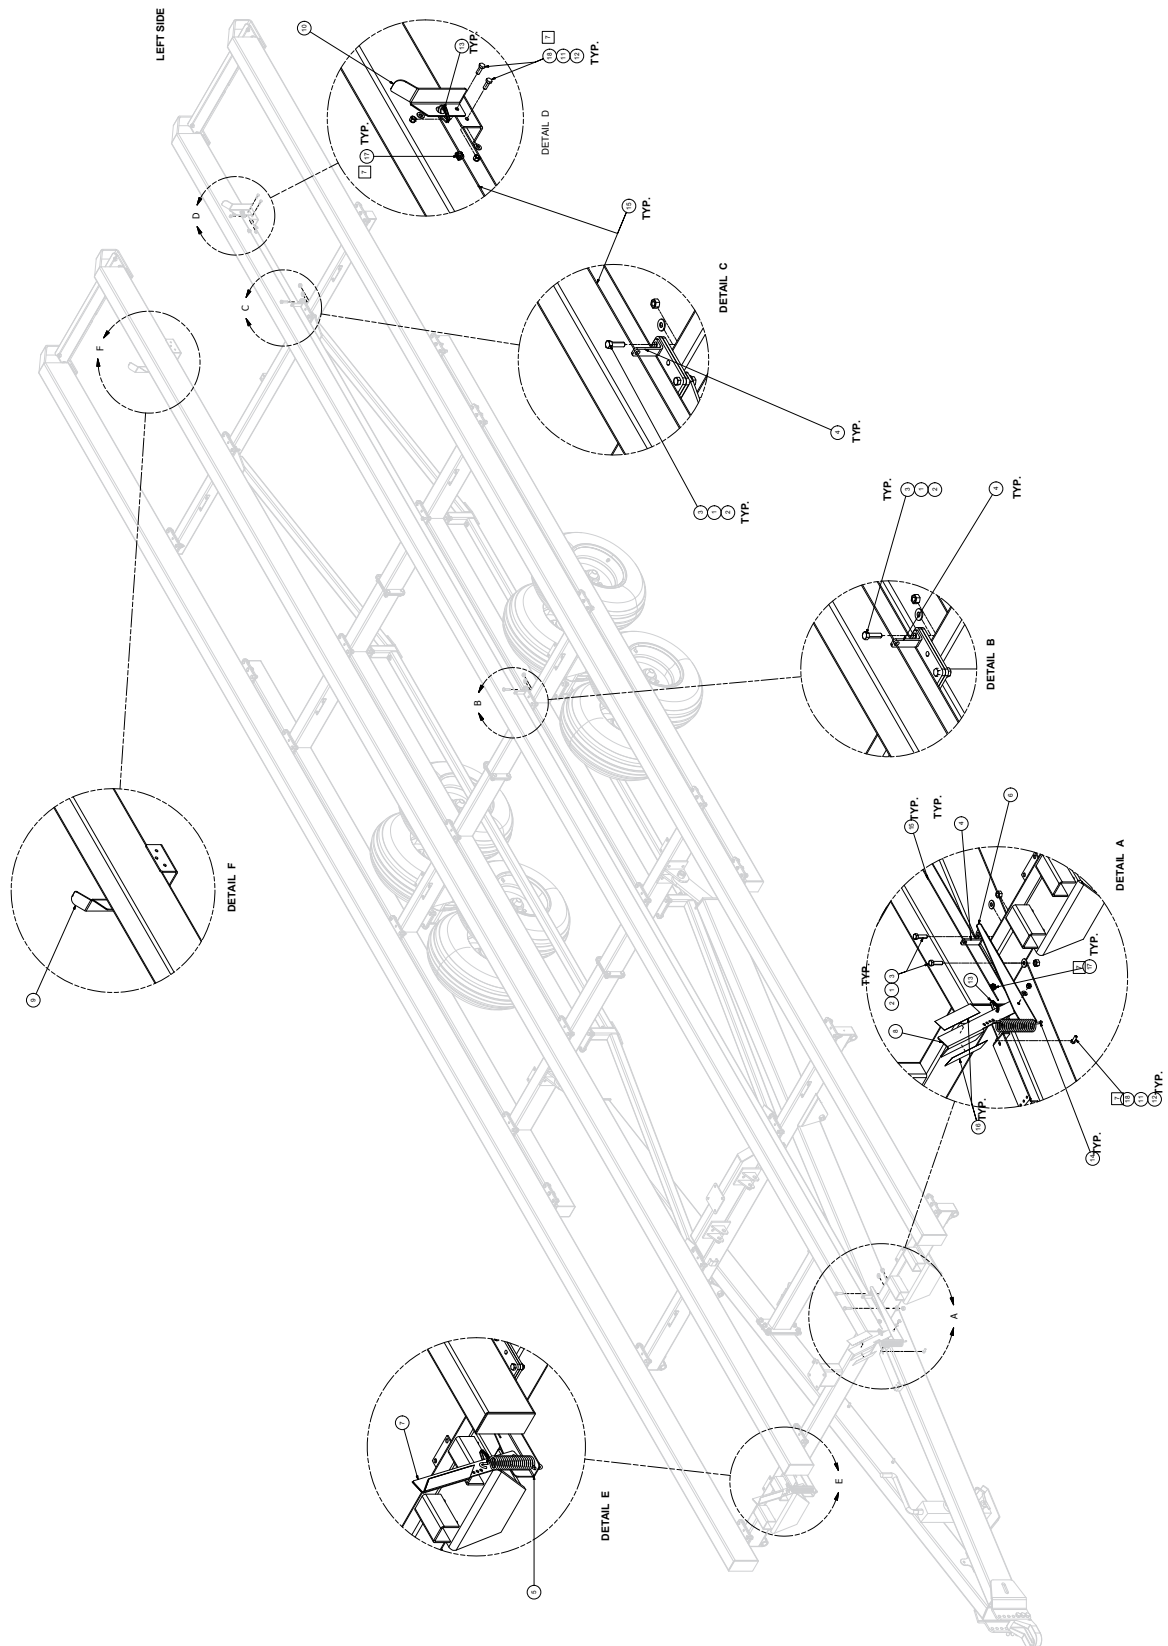


Item	Part Number	Description	Qty
1	84048	Washer 0.500 Flat SAE BS PI	181
2	812364	Nut Lock (Steel) 0.500 NC Grb PI	186
3	87553	Bolt Hex 0.500 NC x 1.75 Gr5 PI	8
4	I100236-26	Cable Holder	6
5	I100234-26	Hold Down PI RH	1
6	I100233-26	Hold Down PI LH	1
7	I100232-26	Front Indicator PI RH	1
8	I100231-26	Front Indicator PI LH	1
9	83000018-26	Rear Indicator Weldment - RH	1
10	83000020-26	Rear Indicator Weldment - LH	1
11	81570	Washer 0.375 Flat ST HS PI	6
12	81344	Nut Lock 0.375 NC Grb PI	6
13	84154	Cable Thimble 3/16	4
14	28556	Spring Safety Lock	2
15	I100237	Cable Bale Full Indicator	2
16	813631	Decal Reflective 2 x 9 Orange	4
17	21417	1/8 Cable Clamp	4
18	86170	Bolt Hex 0.375 NC x 1.00 Gr5 PI	6

Slow Moving Vehicle Sign Assembly Drawing - A7017-00

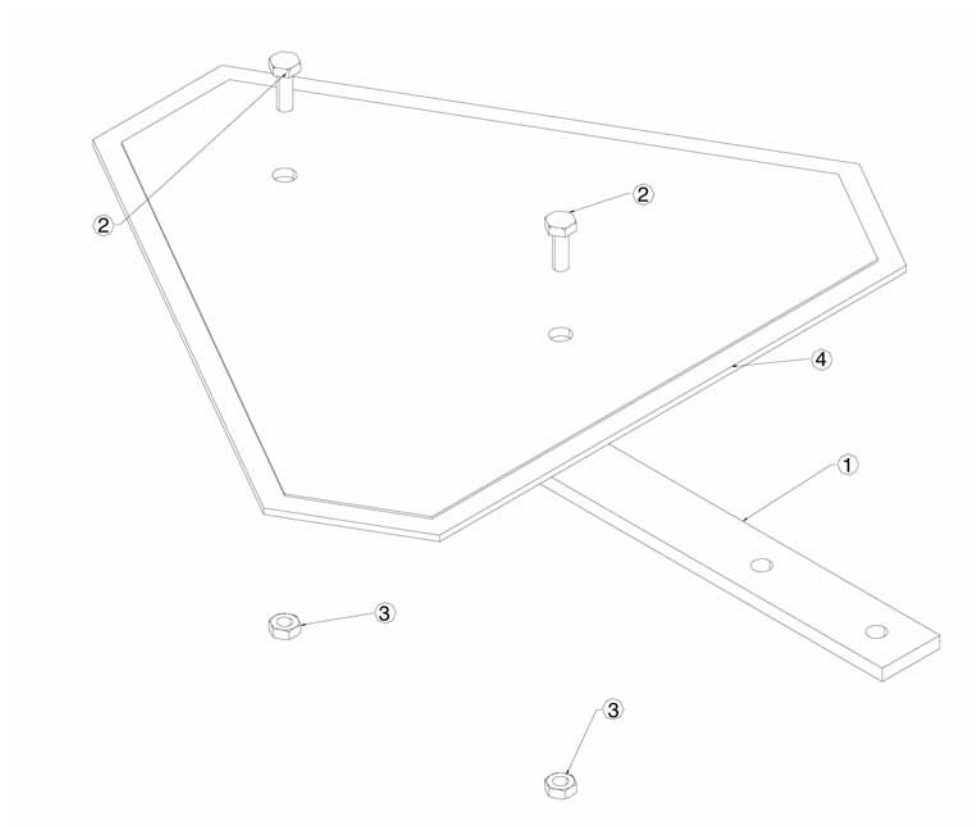

Item	Part Number	Description	Qty
1	E2795-00-26	Decal Mount Slow Moving Vehicle Sign	1
2	81525	Bolt Hex 0.25 NC x 0.75 Gr5 Pl	2
3	84498	Nut Lock (Steel) 0.25 Grb Pl	2
4	967066	Slow Moving Vehicle Decal	1


RPU LH Side Assembly Drawing - A2400-34 - Optional

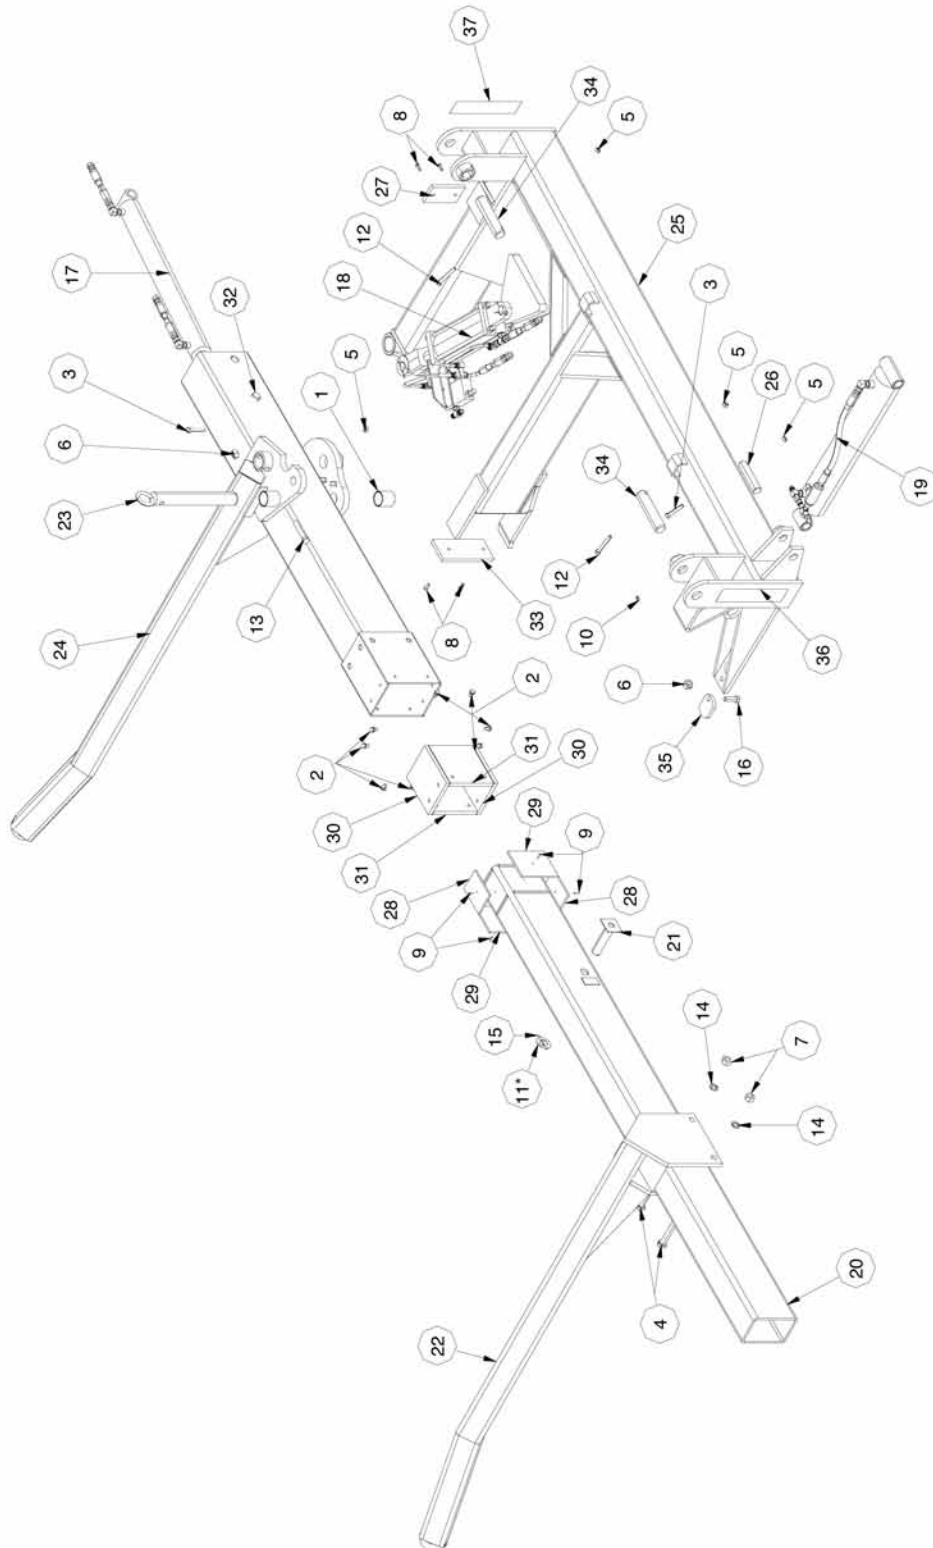

Item	Part Number	Description	Qty
1	20252	Bushing 1.75 OD x 1.5 ID x 1.75	2
2	810215	Screw SelfTap 0.313 NC x 0.50	8
3	811795	Bolt Hex 0.375 NC x 2.00 Gr 5 PI	2
4	812087	Bolt Hex 0.625 NC x 6.00 Grb PI	2
5	812363	Nut Lock (Steel) 0.375 Grb PI	4
6	812364	Nut Lock (Steel) 0.500 NC Grb PI	2
7	813509	Nut Hex 0.625 NC Gr5 PI	2
8	813602	Rivet 1/4 x 3/4 Flathead	4
9	813611	Pin Spring 0.125 Dia x 0.625 Long	4
10	813646	Grease Fitting 1/4 NF Driven	1
11*	813795	Washer Flat 1.031 x 1.75 x 0.031	1
12	81581	Bolt Hex 0.375 NC x 2.50 Gr5 PI	2
13	81626	Bolt Hex 0.500 NC x 2.75 Gr5 PI	1
14	81677	Washer Lock 0.625 PI	2
15	81978	Cotter Pin 0.125 x 2.00 POL	1
16	84277	Bolt Hex 0.500 NC x 1.50 Gr5 PI	1
17	A2400-35	Squeeze Cylinder Assembly RPU	1
18	A2400-36	Rotate Cylinder Assembly RPU	1
19		Pilot Check Valve Assembly RPU (see page 68)	
20	C2417-00-26	Sliding Arm RPU	1
21	C2423-00	Pin Squeeze Cylinder RPU	1
22	C2428-00-26	Fork Adjustable RPU LH	1
23	C2695-00	Pin Hinge RPU	1
24	C2696-00-26	LH Stationary Arm RPU	1
25	C2697-00-26	Lift Arm RPU, LH	1
26	E2345-00	Pin Cylinder 1.0 Dia x 4.5	1
27	E2413-00	Arm Cushion Rubber Belting	1
28	E2419-00	Arm Sliding Top & Bottom Pad	2
29	E2420-00	Arm Sliding Side Pad	2
30	E2421-00	Stationary Arm Top & Bottom RPU Pad	2
31	E2422-00	Arm Stationary Side RPU Pad	2
32	E2424-00	Pin Squeeze Cylinder Clevis	1
33	E2429-00	Arm Stationary Cushion RPU	1
34	E2445-00	Pin Lift Arm 1.25 Dia C1045CR	2
35	E2485-00-26	Chain Latch Lift Arm	1
36	967053	Decal Reflective 2 x 9 Red	1
37	967055	Decal Reflective 2 x 9 Amber	1

NOTE: Item #11 is used as needed.


RPU RH Side Assembly Drawing - A2400-32 - Optional

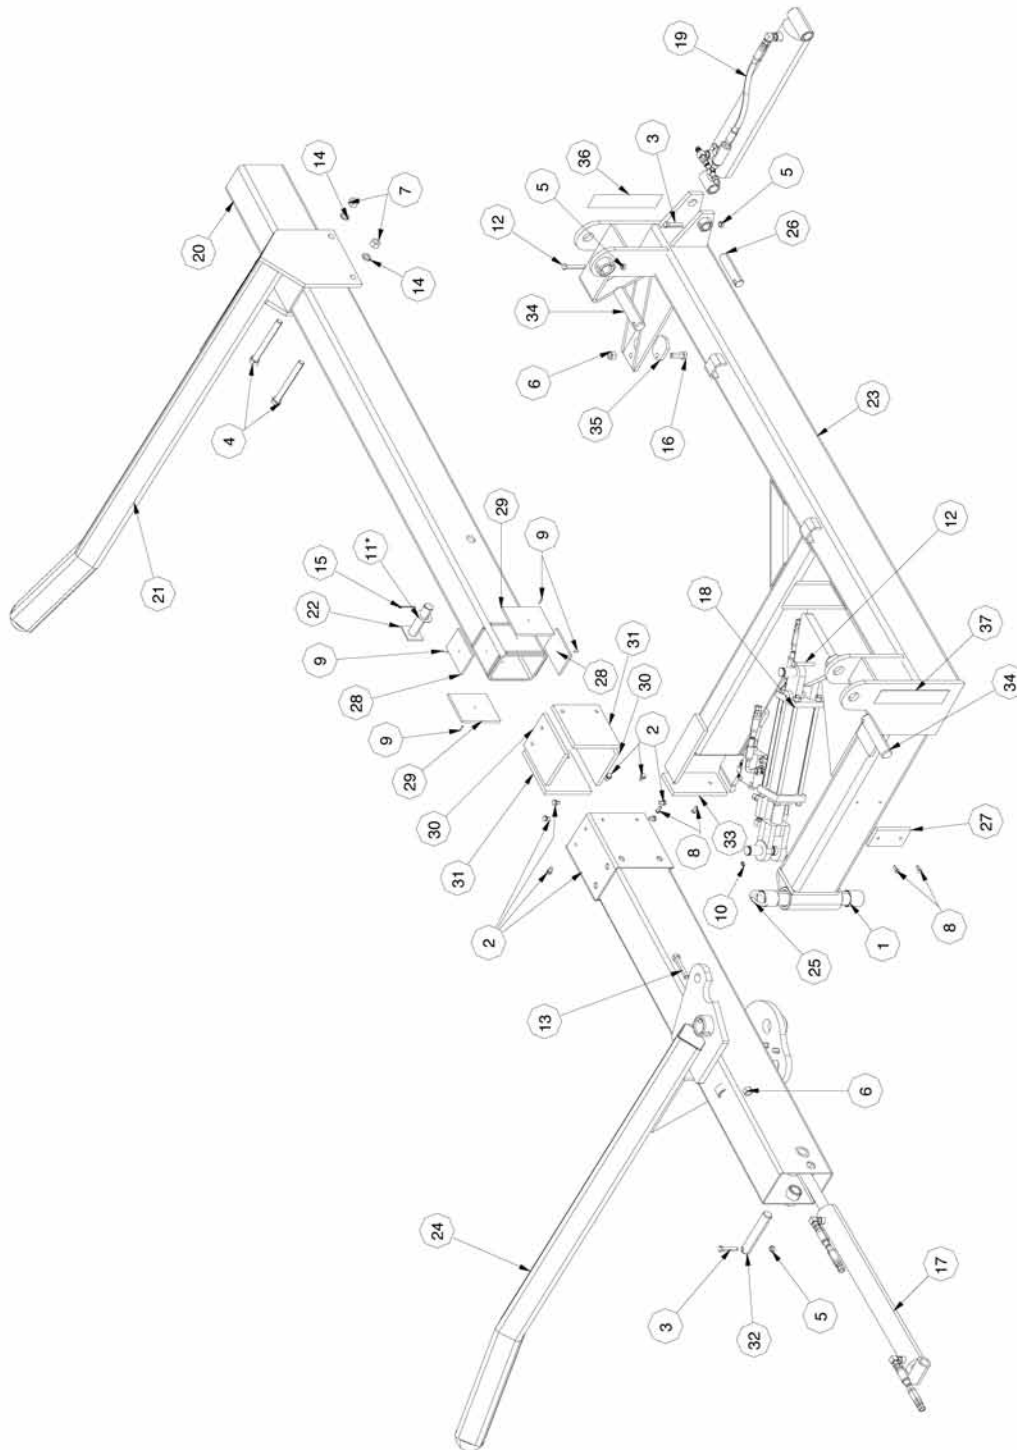

Item	Part Number	Description	Qty
1	20252	Bushing 1.75 OD x 1.5 ID x 1.75	2
2	810215	Screw SelfTap 0.313 NC x 0.50	8
3	811795	Bolt Hex 0.375 NC x 2.00 Gr5 Pl	2
4	812087	Bolt Hex 0.625 NC x 6.00 Grb Pl	2
5	812363	Nut Lock (Steel) 0.375 Grb Pl	4
6	812364	Nut Lock (Steel) 0.500 NC Grb Pl	2
7	813509	Nut Hex 0.625 NC Gr5 Pl	2
8	813602	Rivet 1/4 x 3/4 Flathead	4
9	813611	Pin Spring 0.125 Dia x 0.625 Long	4
10	813646	Grease Fitting 1/4 NF Driven	1
11*	813795	Washer Flat 1.031 x 1.75 x 0.031	1
12	81581	Bolt Hex 0.375 NC x 2.50 Gr5 Pl	2
13	81626	Bolt Hex 0.500 NC x 2.75 Gr5 Pl	1
14	81677	Washer Lock 0.625 Pl	2
15	81978	Cotter Pin 0.125 x 2.00 POL	1
16	84277	Bolt Hex 0.500 NC x 1.50 Gr5 Pl	1
17	A2400-35	Squeeze Cylinder Assembly RPU	1
18	A2400-36	Rotate Cylinder Assembly RPU	1
19		Pilot Check Valve Assembly RPU (see page 68)	
20	C2417-00-26	Sliding Arm RPU	1
21	C2418-00-26	Fork Adjustable RH RPU	1
22	C2423-00	Pin Squeeze Cylinder RPU	1
23	C2499-00-26	Lift Arm Right	1
24	C2694-00-26	Rh Stationary Arm RPU	1
25	C2695-00	Pin Hinge RPU	1
26	E2345-00	Pin Cylinder 1.0 Dia x 4.5	1
27	E2413-00	Arm Cushion Rubber Belting	1
28	E2419-00	Arm Sliding Top & Bottom Pad	2
29	E2420-00	Arm Sliding Side Pad	2
30	E2421-00	Stationary Arm Top & Bottom RPU Pad	2
31	E2422-00	Arm Stationary Side RPU Pad	2
32	E2424-00	Pin Squeeze Cylinder Clevis	1
33	E2429-00	Arm Stationary Cushion RPU	1
34	E2445-00	Pin Lift Arm 1.25 Dia C1045CR	2
35	E2485-00-26	Chain Latch Lift Arm	1
36	967053	Decal Reflective 2 x 9 Red	1
37	967055	Decal Reflective 2 x 9 Amber	1


NOTE: Item #11 is used as needed.

Hydraulic RPU Assembly Drawing - A2400-34 - Optional

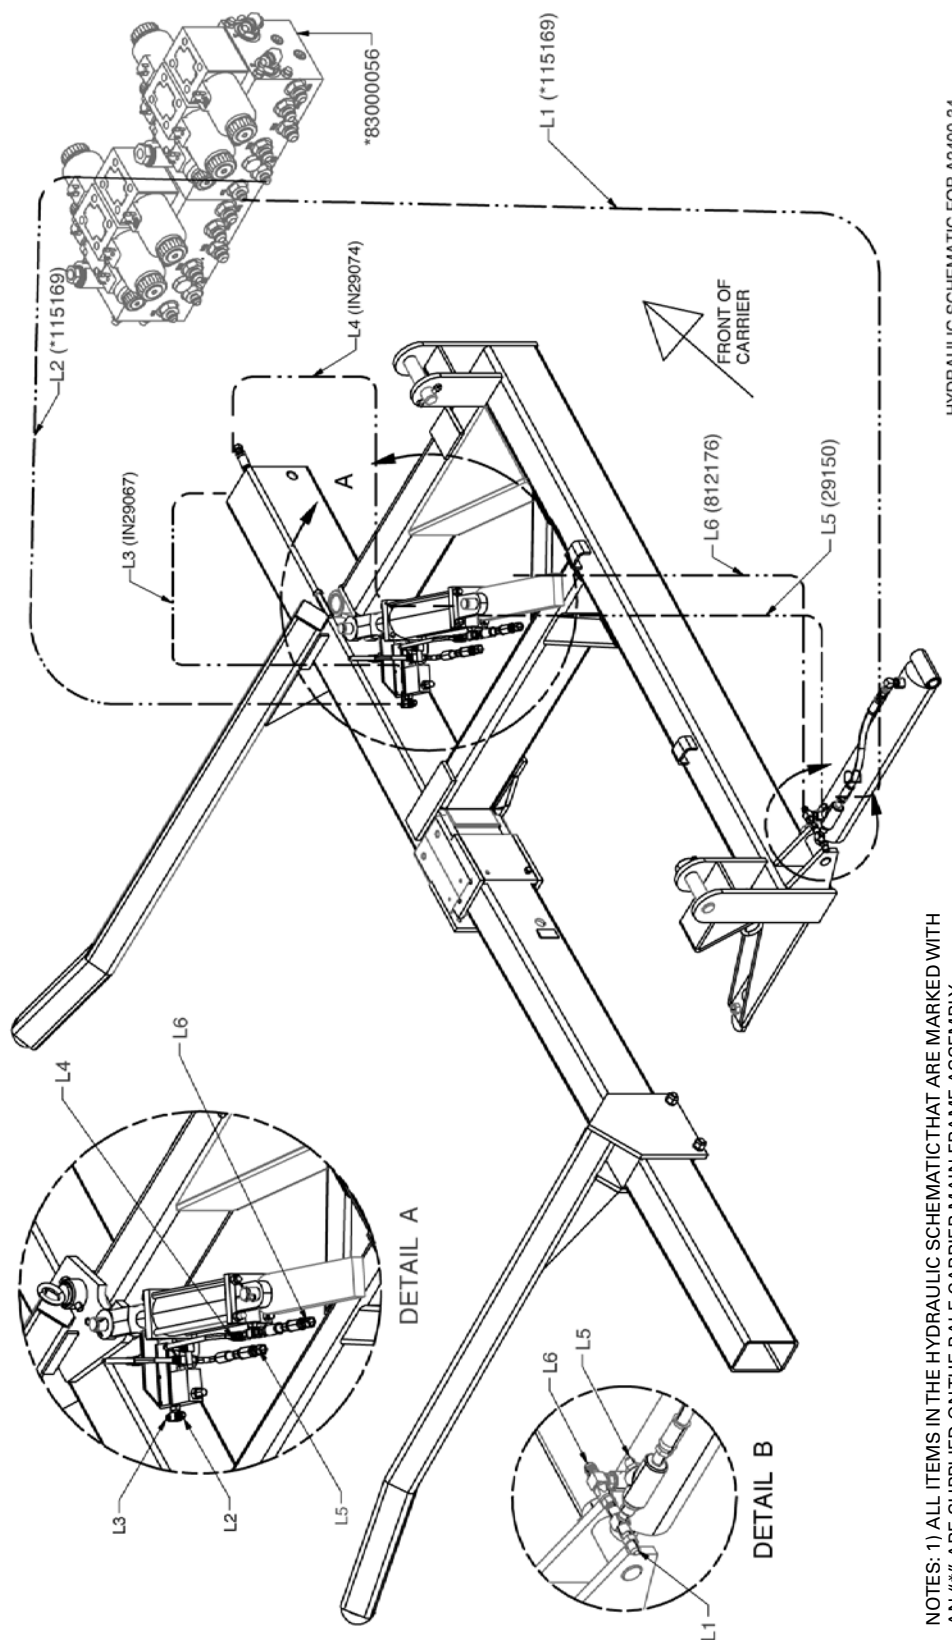

- NOTES: 1) ALL ITEMS IN THE HYDRAULIC SCHEMATIC THAT ARE MARKED WITH AN "*" ARE SUPPLIED ON THE BALE CARRIER MAIN FRAME ASSEMBLY.
- 2) HOSES L3 (IN29067) & L4 (IN29074) ARE WITH SQUEEZE CYLINDER (A2400-35). L5 (29150) & L6 (812176) ARE WITH ROTATE CYLINDER (LOOSE TO BE CONNECTED WITH PILOT CHECK VALVE).
- 3) THE LABELLED LINES IN THE SCHEMATIC CORRESPOND WITH THE PORTS IN DETAIL VIEWS A & B.
- 4) LOOP ALL HOSES THROUGH APPROPRIATE HOSE HOLSTERS AND TIE WRAP.
- 5) DURING FIRST USE CHECK FOR CLEARANCE AND BINDING.

RPU Squeeze Cylinder Drawing - A2400-35

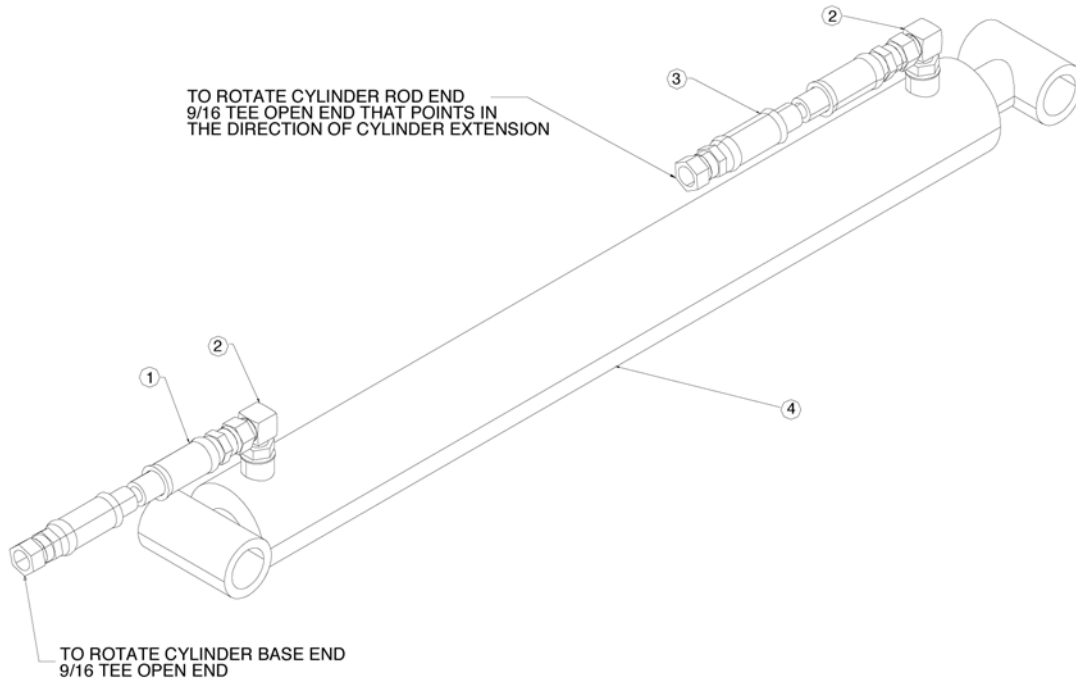


Item	Part Number	Description	Qty
1	IN29074	Hose 3/8 x 60 9/16 SWFJIC	1
2	813640	Elbow 90° 9/16 Morb Adjustable x 3/8	2
3	IN29067	Hose 3/8 x 68 9/16 SWFJIC	1
4	24367	Cylinder 2.0 x 18.0 Inland	1

24367 Cylinder 2.0 Diameter Service Parts


	811843	Not Grease Nipple 90 Degrees	1
	X1348	Seal Kit For 24367 2.0 Dia Cylinder	1
	83224	Backup Washer 1.75 ID x 2.00 OD	1
	812655	0.875 UNF Locknut	1
	144521	2.00 Dia Piston Half (Narrow)	1
	114520	2.00 Dia Piston Half (Wide)	1
	24366	2.00 Dia Tube Weldment	1
	115042	Shaft Weldment 1.25 Dia x 24.125 Lg	1
	24516	2.00 Dia Head Plate	1

Pilot Check Valve Assembly Drawing - SZ000658

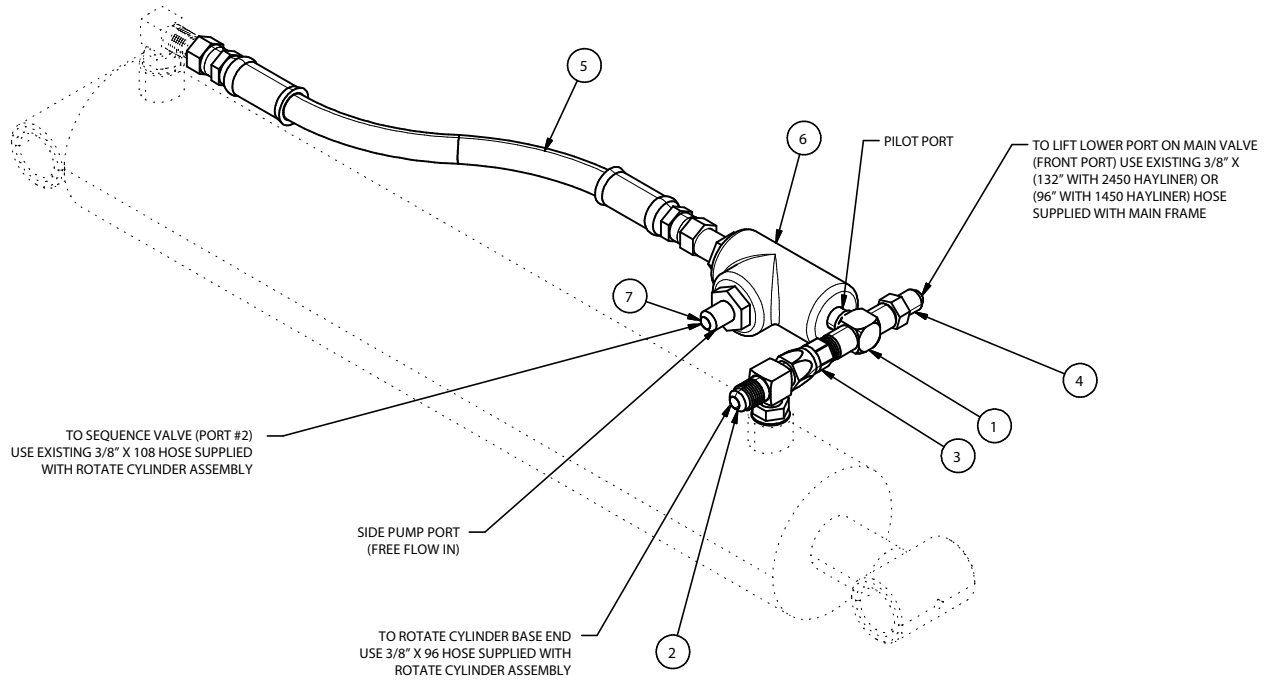


Item	Part Number	Description	Qty
1	29023	Tee 1/4" Fnpt Run x 1/4" Mnpt	1
2	29015	Tee 9/16" Mjic Run x 9/16" Morb	1
3	29039	Adaptor Str 1/4" Mnpt x 9/16" Fjic	1
4	29020	Connector 9/16" Mjic x 1/4" Mnpt	1
5	SZ000659	Hose 3/8" x 14-3/8" Fnpt x 9/16" Swfjic	1
6	SZ000661	Pilot Check Valve, PC50C	1
7	SZ000660	Adaptor Str, 3/8" Mjic x 1/2" Npt	1

RPU Rotate Cylinder Assembly RH Drawing - A2400-36

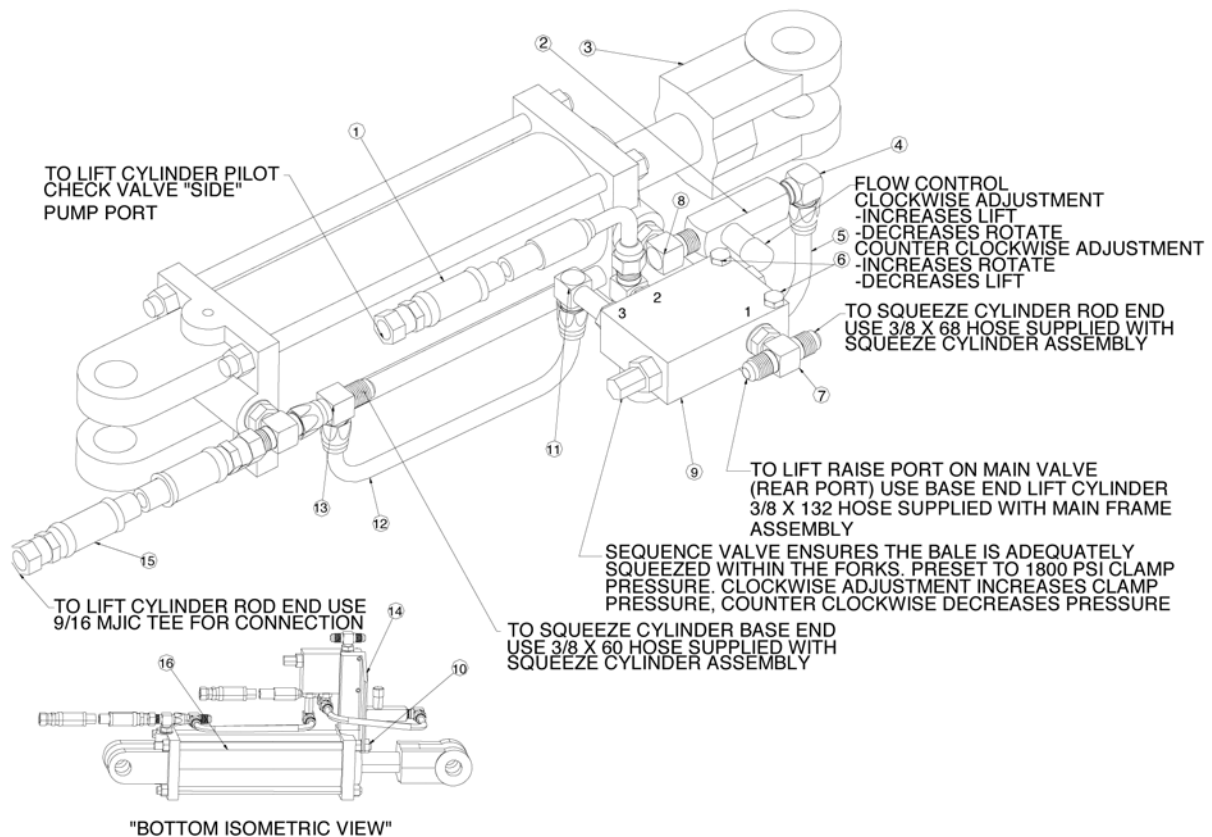


Item	Part Number	Description	Qty
1	22075	Sun Sequence Valve Set 1800 PSI	1
2	29022	Elbow 90 1/4 Mnpt x 9/16 Morb	1
3	29016	Elbow 90 1/4 Mnpt x 9/16 Mjic	1
4	29149	Restrictor One Way Adj Parker	1
5	20877	Pressure Line / Sequence Valve Tube	1
6	E2478-00	Hydraulic Cylinder Tie Rod	1
7	29015	Tee 9/16 Mjic Run x 9/16 Morb	3
8	813691	Sequence Valve Vent Tube	1
9	E2430-00-26	Sequence Valve Holder	1
10	29047	Elbow 90 9/16 Morb x 3/8 Mjic Lg	1
11	984077	Nut Hex Jam 0.500 Nc Gr2 (PI)	1
12	22060	3 x 8 Tie Rod Cylinder	1
13	887572	Tee 9/16 Mjic x 9/16 Swfjic	1
14	29150	Hose 3/8 x 108 9/16 Swfjic x 9	1
15	812176	Hose 3/8 x 96 9/16 Swfjic x 3	1
16	811631	Bolt Hex 0.25Nc x 1.50 Gr5 (PI)	2

RPU Rotate Cylinder Assembly LH Drawing - SZ000573

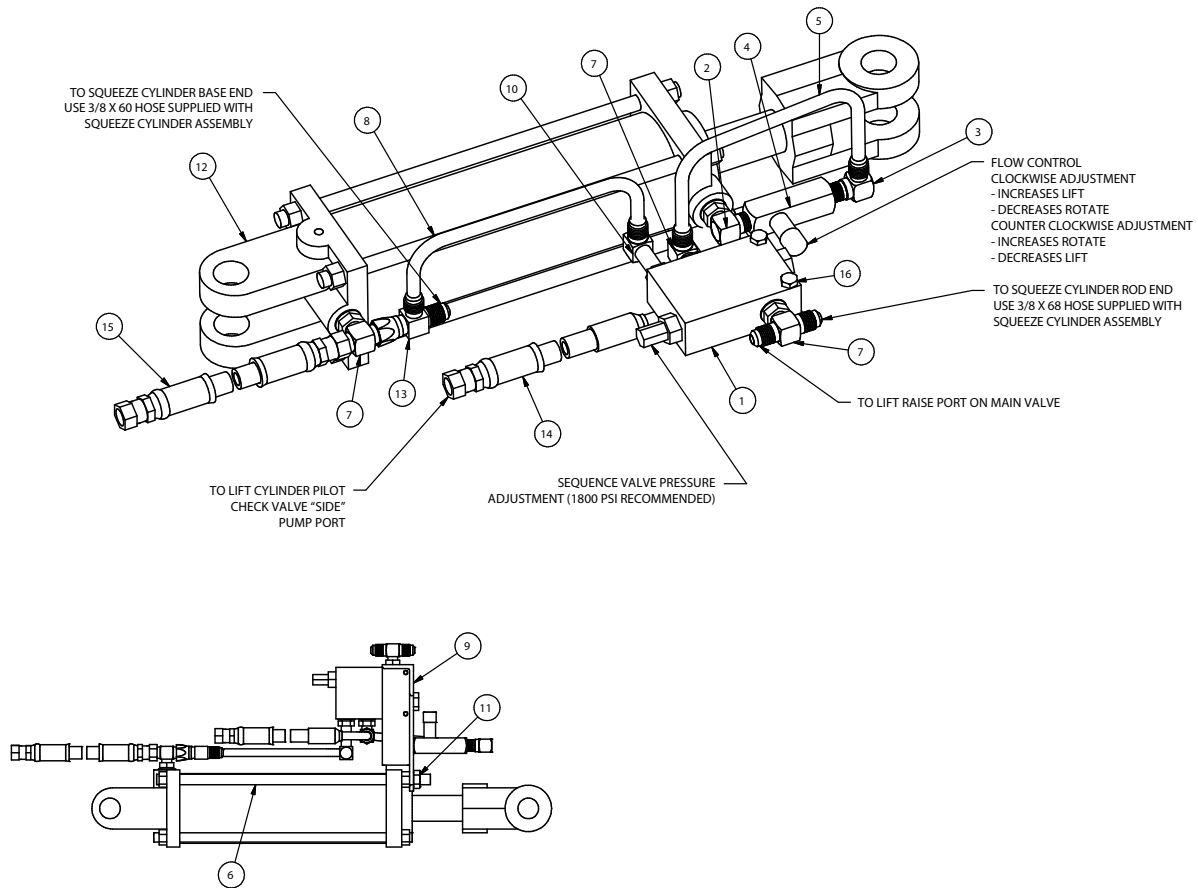


Item	Part Number	Description	Qty
1	22075	Sun Sequence Valve Set 1800 PSI	1
2	29022	Elbow 90 1/4 Mnpt x 9/16 Morb	1
3	29016	Elbow 90 1/4 Mnpt x 9/16 Mjic	1
4	29149	Restrictor One Way Adj Parker	1
5	20877	Pressure Line / Sequence Valve Tube	1
6	E2478-00	Hydraulic Cylinder Tie Rod	1
7	29015	Tee 9/16 Mjic Run x 9/16 Morb	3
8	813691	Sequence Valve Vent Tube	1
9	E2430-00-26	Sequence Valve Holder	1
10	29047	Elbow 90 9/16 Morb x 3/8 Mjic Lg	1
11	984077	Nut Hex Jam 0.500 Nc Gr2 (PI)	1
12	22060	3 x 8 Tie Rod Cylinder	1
13	887572	Tee 9/16 Mjic x 9/16 Swfjic	1
14	29150	Hose 3/8 x 108 9/16 Swfjic x 9	1
15	812176	Hose 3/8 x 96 9/16 Swfjic x 3	1
16	811631	Bolt Hex 0.25Nc x 1.50 Gr5 (PI)	2

RPU Schematic

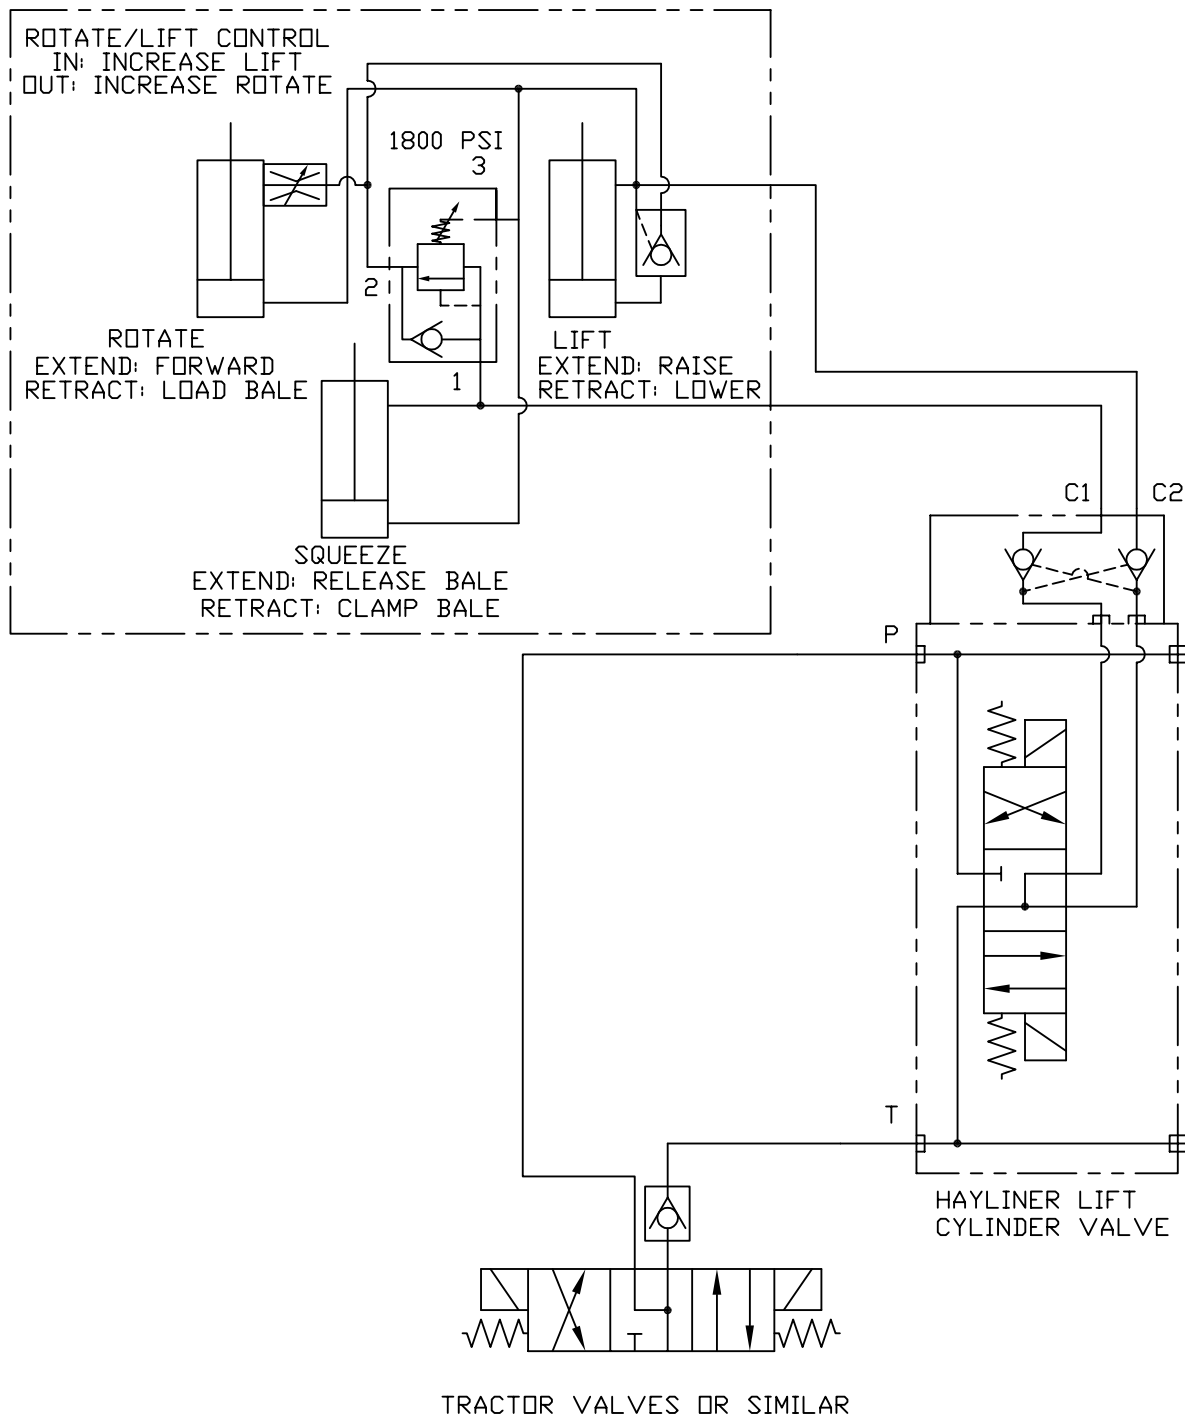


Optional Adjustable Bale Stop Assembly Drawing - 815692

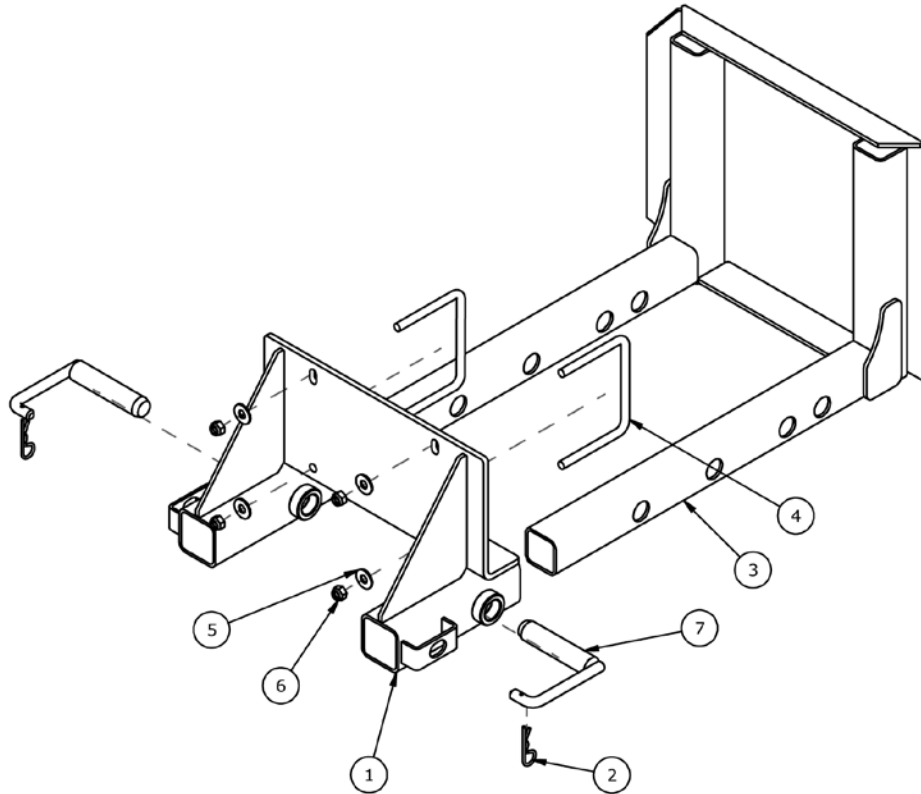


Item	Part Number	Description	Qty
1	815693-17	Bale Stop Bracket	1
2	12779	Hairpin Clip #9	2
3	815696-17	Bale Stop Weld't	1
4	815416	Valve Mount U-Bolt	2
5	84048	Washer 0.500 Flat Sae Bs Pl	4
6	813663	Nut Lock (Steel) 0.500Nc Grcpl	4
7	I20069	Locking Pin Bale Stop 4500	2

Optional Clevis Hitch Assembly Drawing - SZ000513

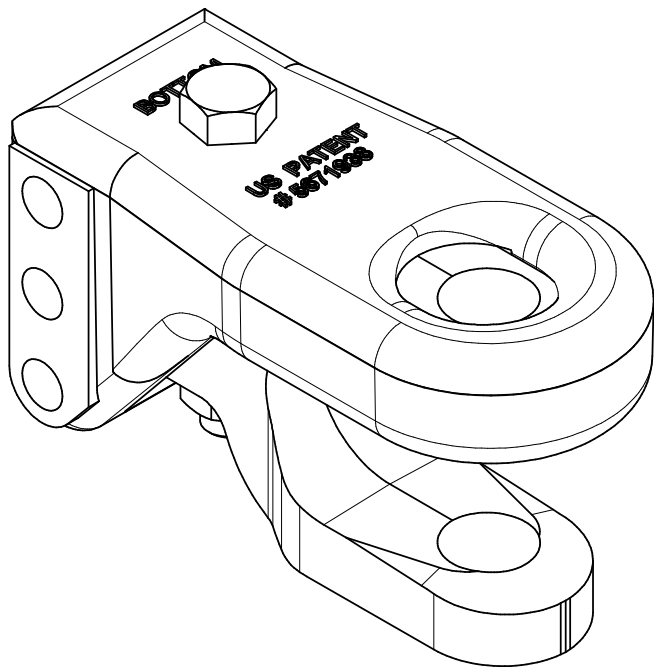

Item	Part Number	Description	Qty
1	SZ000513	Clevis Hitch Option Kit	1

Standard Hitch Assembly Drawing - SZ000561

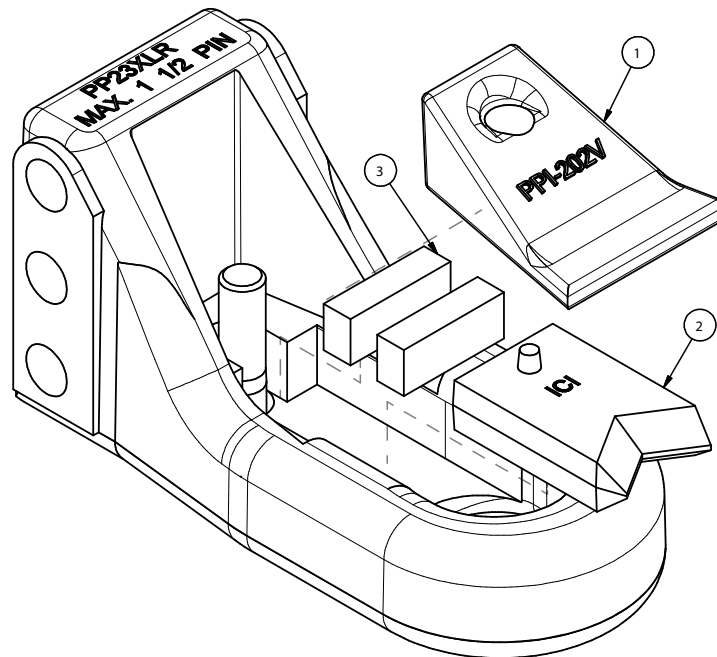

Item	Part Number	Description	Qty
1	SZ000569	Top Plate	1
2	SZ000570	V-block	1
3	SZ000571	Neoprene Cushions	2

Delivery Checklist

Pre-delivery

- ☐ Verify hardware torque.
- ☐ Verify rear wheel bolt torque
- ☐ Verify tire pressure
- ☐ Inspect bearing seals
- ☐ Inspect all lubrication points
- ☐ Inspect chain drives
- ☐ Inspect hydraulic hoses and electrical harnesses

Dealer Representative:

Date:

Customer Delivery

- ☐ Review safety procedures regarding bale carrier operation and maintenance
- ☐ Review Operator's and Part's Manual
- ☐ Review proper operating procedures
- ☐ Review general adjustment and setup procedures
- ☐ Review chain tensioning procedures
- ☐ Review importance of regular lubrication
- ☐ Discuss road and highway transportation requirements and regulations
- ☐ Review front hitch height

Dealer Representative:

Date:

Farm King Limited Warranty

This document limits your warranty rights.

Base Limited Warranty

Buhler Industries Inc. provides this warranty only to original retail purchasers of its product. Buhler Industries Inc. warrants to such purchasers that all Buhler Industries Inc. manufactured parts and components used and serviced as provided for in the Operator's Manual shall be free from defects in materials and workmanship for a period following delivery to the original retail purchaser of 12 months (80 days for commercial applications). This limited warranty applies only to those parts and components manufactured by Buhler Industries Inc. Parts and components manufactured by others are subject to their manufacturer's warranties, if any.

Buhler Industries Inc. will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Buhler Industries Inc. within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Buhler Industries Inc. reserves the right to either inspect the product at the buyer's location or have it returned to the factory for inspection. Parts must be returned through the selling representative and the buyer must prepay transportation charges.

Buhler Industries Inc. will not be responsible for repairs or replacements that are necessitated, in whole or part, by the use of parts not manufactured by or obtained from Buhler Industries Inc. Under no circumstances are component parts warranted against normal wear and tear. There is no warranty on product pump seals, product pump bearings, rubber product hoses, pressure gauges, or other components that require replacement as part of normal maintenance. Also: Buckets and Bucket Tines carry no warranty, Bent Spears carry no warranty, Snowblower Fan Shafts carry no warranty, Mower Blades carry no warranty, Portable Auger Parts Have Two (2) Year Warranty, Loader Parts Have Two (2) Year Warranty. The purchaser is solely responsible for determining suitability of goods sold. This warranty is expressly in lieu of all other warranties expressed or implied. Buhler Industries Inc. will in no event be liable for any incidental or consequential damages whatsoever. Nor for any sum in excess of the price received for the goods for which liability is claimed.

Repair Parts Limited Warranty

Buhler Industries Inc. warrants Farm King replacement parts purchased after the expiration of the Buhler Industries Inc. Limited Warranty, and used and serviced as provided for in the Operator's Manual, to be free from defects in materials or workmanship for a period of thirty (30) days from the invoice date for the parts. Buhler Industries Inc. will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Buhler Industries Inc. within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Such parts must be shipped to Buhler Industries Inc. at the purchaser's expense.

What is Not Covered

Under no circumstances does this limited warranty cover any components or parts that have been subject to the following: negligence; alteration or modification not approved by Buhler Industries Inc.; misuse; improper storage; lack of reasonable and proper maintenance, service, or repair; normal wear; damage from failure to follow operating instructions; accident; and/or repairs that have been made with parts other than those manufactured, supplied, and or authorized by Buhler Industries Inc.

Authorized Dealer and Labor Costs

Repairs eligible for labor under this limited warranty must be made by Buhler Industries Inc. or an authorized Farm King dealer. Buhler Industries Inc. retains the exclusive discretion to determine whether it will pay labor costs for warranty repairs or replacements, and the amount of such costs that it will pay and the time in which the repairs will be made. If Buhler Industries Inc. determines that it will pay labor costs for warranty work, it will do so by issuing a credit to the dealer's or distributor's account. Buhler Industries Inc. will not approve or pay invoices sent for repairs that Buhler Industries Inc. has not previously approved. Warranty service does not extend the original term of this limited warranty.

Warranty Requirements

To be covered by warranty, each Farm King new product must be registered with Buhler Industries Inc. within thirty (30) days of delivery to original retail purchaser. If the customer decides to purchase replacement components before the warranty disposition of such components is determined, Buhler Industries Inc. will bill the customer for such components and then credit the replacement invoice for those components later determined to be covered by this limited warranty. Any such replacement components that are determined not be covered by this limited warranty will be subject to the terms of the invoice and shall be paid for by the purchaser.

Warranty Claims:

Warranty requests must be prepared on Buhler Industries Inc. Warranty Claim Forms with all requested information properly completed. Warranty Claims must be submitted within a thirty (30) day period from date of failure repair.

Warranty Labor:

Any labor subject to warranty must be authorized by Buhler Industries Inc. The labor rate for replacing defective parts, where applicable, will be credited at 100% of the dealer's posted shop rate.

Exclusive Effect of Warranty and Limitation of Liability

TO THE EXTENT PERMITTED BY LAW, BUHLER INDUSTRIES INC. DISCLAIMS ANY WARRANTIES, REPRESENTATIONS, OR PROMISES, EXPRESS OR IMPLIED, AS TO THE QUALITY, PERFORMANCE, OR FREEDOM FROM DEFECT OF THE COMPONENTS AND PARTS COVERED BY THIS WARRANTY AND NOT SPECIFICALLY PROVIDED FOR HEREIN.

TO THE EXTENT PERMITTED BY LAW, BUHLER INDUSTRIES INC. DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ON ITS PRODUCTS COVERED HEREIN, AND DISCLAIMS ANY RELIANCE BY THE PURCHASER ON BUHLER INDUSTRIES INC.'S SKILL OR JUDGMENT TO SELECT OR FURNISH GOODS FOR ANY PARTICULAR PURPOSE. THE PURCHASER'S ONLY AND EXCLUSIVE REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY ON PRODUCTS MANUFACTURED BY BUHLER INDUSTRIES INC. ARE THOSE SET FORTH HEREIN. IN NO EVENT SHALL BUHLER INDUSTRIES INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BY WAY OF EXAMPLE ONLY AND NOT LIMITATION, LOSS OF CROPS, LOSS OF PROFITS OR REVENUE, OTHER COMMERCIAL LOSSES, INCONVENIENCE, OR COST OF REPLACEMENT OF RENTAL EQUIPMENT). IN NO EVENT SHALL FARM KING'S CONTRACT OR WARRANTY LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT.

(Note that some provinces or states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusion may not apply to you.) This warranty gives you specific legal rights and you may also have other rights, which vary from province to province or state to state.

Buhler Industries Inc. neither assumes nor authorizes any person or entity, including its selling representatives, to assume any other obligations or liability in connections with the sale of covered equipment, or to make any other warranties, representations, or promises, express or implied, as to the quality, performance, or freedom from defect of the components and parts covered herein. No one is authorized to alter, modify, or enlarge this limited warranty, or its exclusions, limitations and reservations.

Corrections of defects and improper workmanship in the manner, and for the applicable time periods, provided for herein shall constitute fulfillment of all responsibilities of Buhler Industries Inc. to the purchaser, and Buhler Industries Inc. shall not be liable in negligence, contract, or on any other basis with respect to the subject equipment.

This limited warranty is subject to any existing conditions of supply which may directly affect Buhler Industries Inc.'s ability to obtain materials or manufacture replacement parts.

Buhler Industries Inc. reserves the right to make improvements in design or changes in specifications to its products at anytime, without incurring any obligation to owners of units previously sold.

Government Legislation:

Warranty terms and conditions are subject to provincial or state legislation.

Important Note: This warranty does not apply to rentals.

www.farm-king.com

Farm King

1330 43rd Street NW
Fargo, ND USA 58102
Ph.: 701.282.7014 | Fax: 701.282.5865
Toll Free: 888.524.1004
E-mail: info@buhler.com
www.farm-king.com

Equipment shown is subject to change without notice.
©2013 Buhler Trading Inc. Printed in USA. TSX:BUI

bühler | a division of Buhler Industries Inc.